

## 快速指南 Quick Start Guide

OPEN NEW ENJOY



**(ZH-CN)** 开机：请长按左边和右边眼镜腿按键各3秒；眼镜停止充电时自动开机。(提示音:开机)  
关机：请长按左边或右边眼镜腿按键4秒，眼镜蓝牙关机；眼镜充电时自动关机。(提示音:关机)

**(EN)** **Power on:** please long press buttons on left and right glasses legs for 3 seconds. it start up automatically when it stop charging (remind sound"power on")  
**Power off:** please long press button on left or right glasses legs for 4 seconds when you need turn off the bluetooth. it turn off when it charging (remind sound"power off")



1



● 红蓝LED灯交替闪烁  
指正在搜索连接手机  
Red and blue LED lights flash alternately,  
it means searching the mobile phone for connecting


● 蓝牙配对成功  
Bluetooth match successfully

**(ZH-CN)** 1. 眼镜开机，打开手机蓝牙，搜索设备名称 **Smart eyewear** 并连接。  
2. 眼镜与手机配对成功，提示音：连接成功。  
3. 眼镜与手机断开连接，提示音：断开连接。

**(EN)** 1. Turn on smart glasses, open bluetooth of mobile phone and search device name"Smart eyewear"  
2. When glasses and mobile phone match successfully, remind sound: connected successfully.  
3. When glasses and mobile phone disconnected, remind sound: disconnected.




2

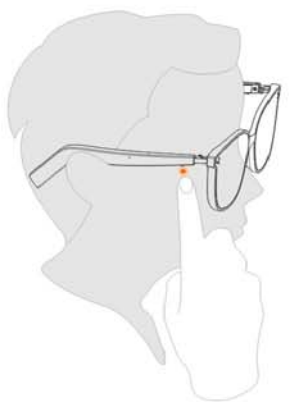

**(ZH-CN)** 1. 短按左/右镜腿接听/挂断电话。  
2. 长按左/右镜腿按键1秒拒绝来电/通话暂停切换。  
3. 短按左或右眼镜腿按键一次,三方通话中挂断当前通话,接通另一通话。

**(EN)** 1. Short press button on left/right glasses leg for answering/hanging up calls.  
2. Long press button on left/right glasses leg for 1 second for refusing calls or pause calling.  
3. Short press button on left or right glasses leg for 1 time for hanging up currently callings and answering another calls.

3

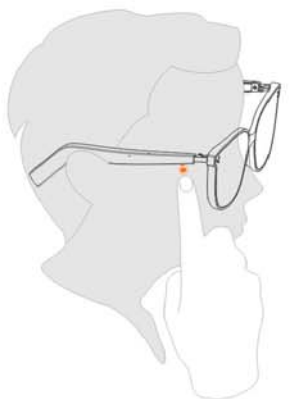

**(ZH-CN)** 1. 短按左/右镜腿按键播放/暂停音乐。  
2. 双击左镜腿按键音量减小。  
3. 三击左镜腿按键播放上一曲。  
4. 双击右镜腿按键音量增大。  
5. 三击右镜腿按键播放下一曲。

**(EN)** 1. Short press button on left/right glasses leg play/pause music.  
2. Double click button on left glasses leg for down music.  
3. Click 3 times button on left glasses leg for playing before music.  
4. Double click button on right glasses leg for higher music.  
5. Click 3 times button on right glasses leg for playing next music.


4



**(ZH-CN)** 待机或听音乐时，长按左/右镜腿按键2秒激活Siri/关闭Siri。

**(EN)** When the glasses stay in standby or listening to music. please long press button on left/right glasses leg for 2 seconds for activation siri/shut sir.

5

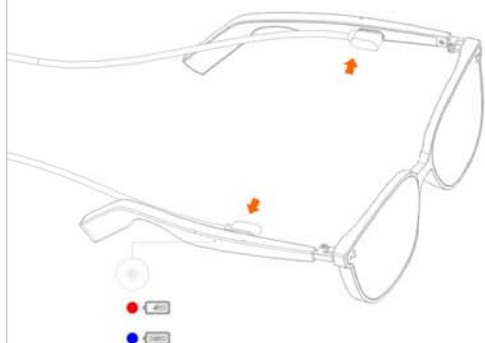

**(ZH-CN)** 1. 眼镜无操作,手机蓝牙无连接的情况下5分钟自动关机。  
2. 充电中: 红色LED灯常亮。  
3. 充满电: 蓝色LED灯亮。

**(EN)** 1. It will turn off automatically when no operate and no connect mobile phone bluetooth.  
2. When it charging, the red LED light keep light.  
3. When it full charge, the blue LED light turn on.

6

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.