

VIEWGO

MJ001


USER GUIDE

Please read the manual before using this product, and save it for future use.

Nice to meet you!

Thank you for purchasing this product. This is a multifunctional LED dot matrix mask. Download the BrightOver app, and let this mask light up your life.

/// FUNCTION OVERVIEW

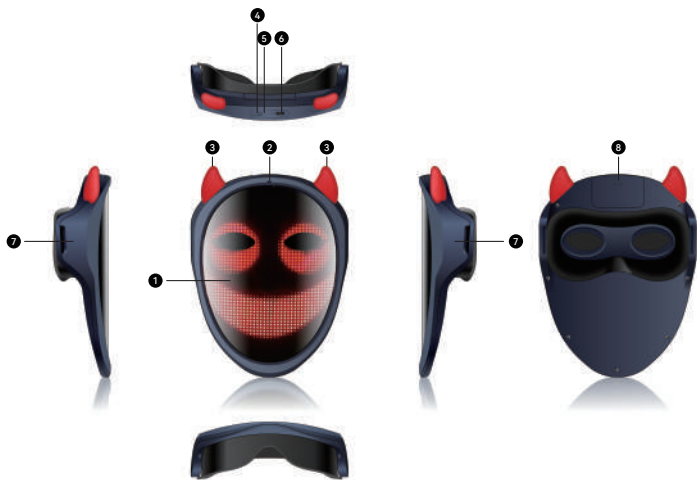

1. LED dot matrix area

2. Hand Gestures

Wave to the left/right to switch between mask designs.

3. Devil Horns

You can turn these on or off in the BrightOver app.

4. On/Off Button

1. Press and hold for 3 seconds to turn on/off
2. Press and hold for 5 seconds to reset Bluetooth
3. While the mask is on, press the button once to switch between designs

5. Hole

Restore original settings

6. Type-C

For charging

7. Touch

Show the last one


8. Battery compartment

Product parameters	
Mask Dimensions	234.6*173.7*92.7mm
Product weight	359.5g
Transmission distance	20m
Bluetooth version	5.3

/// HOW TO CONNECT TO THE APP

BrightOver is a mobile phone app customized for LED dot matrix masks. You can download the software for free on the App Store or Google Play.

1. Download and install the BrightOver App on your phone;
2. After opening the app, register an account and log in, then click the "+" icon to connect a mask;
3. Turn on the Bluetooth switch and select "BrightOver-****" Bluetooth connection.

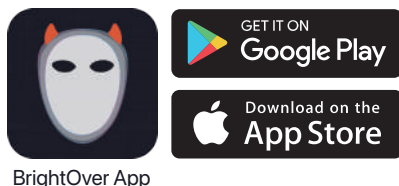

If you cannot find "BrightOver-**", we recommend trying the following solutions:**

- a) Restart the Bluetooth function of the mobile phone,
- b) Delete paired Bluetooth devices,
- c) Turn on the location function on the mobile phone,
- d) Try to connect to the mask with another mobile phone.

// INTRODUCTION TO APP FUNCTIONS

Connect mask Bluetooth

Account center. You can turn on/off gesture face changing, and turn on/off mask devil horn lights.

Mask library

The mask library provides a variety of interesting animations and pictures. Click on the picture/animation to send it to the mask for display.

AI

Use AI tools to search for the pictures you want, such as celebrity photos or anime characters, and then add your own creativity to make cool mask patterns. Then click to send to the mask display. Click the save button in the upper right corner to save to your mask library.

Draw

Use the draw tool to select your favorite color and draw in the mask frame. Click send to display on the mask after you're finished. Click the save button in the upper right corner to save to your mask library.

Rhythm

Play a song and the rhythm of the song is displayed on the mask synchronously. Slide left and right to switch the rhythm form to different color patterns.

Click the 🎧 icon in the upper right corner to pick up the live sound, and the sound rhythm will be displayed on the mask synchronously.

Text

Edit text, TEXT selects the color of the text font. You can set the text background color separately.

Mode

Select the mode of text scrolling. There are various modes: scrolling left, scrolling right, and flashing on/off.

Speed

Adjusts the speed at which the text scrolls.

My library

My personal mask library has your saved AI masks and drawing masks.

/// SAFETY GUIDELINES AND PRECAUTIONS

Please read this manual carefully before use and operate according to the instructions.

1. Please place the product in a stable and safe place to avoid damage or personal injury caused by falling;
2. Keep enough space around the product;
3. Do not insert any foreign objects into the product;
4. Do not knock hard or hit the product with external force;
5. Stay away from heat sources and do not approach open flames, microwave ovens, electric heaters and other electrical appliances that can generate high heat to ensure safety;
6. If you have any questions, please contact the original manufacturer or agent and consult professional maintenance personnel to solve the problem.

This product's warranty does not apply to the following:

1. Equipment parts have exceeded the warranty period;
2. The user fails to follow the instructions or guidelines and causes equipment failure or damage due to incorrect operation or improper storage;
3. Equipment failure or damage due to accidental factors or human factors; (including operating errors, scratches, drops, etc.)
4. Product failure or damage caused by natural disasters (such as earthquakes, fires);
5. The mask has been dismantled by repairers other than those authorized by our company.

Please dispose of used batteries properly in accordance with local regulations and do not incinerate them!

The LED lamp beads in this product can only be disassembled by qualified professionals.

/// FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Contact Us

For any inquiries, feel free to contact us. We'll be glad to help you out!

E-mail: customerserviceteam008@outlook.com

Tel: 1-888-258-1230

Manufacturer: Shenzhen Newway Industrial Co., Ltd