



Mimic GO™ User Manual

Introduction

Protect your home and your personal belongings anytime, anywhere with Mimic GO™, the world's first personal and portable security device. Thanks to Mimics small size you can easily carry it in your pocket wherever you go and stick it to any surface with a holding attachment. You can set up and arm your personal security device in seconds. Cases such as when someone walks into your personal space, anything is opened (door, window, drawer, etc.), or your personal item is moved (backpack, luggage, or laptop) are Mimic GO's expertise to detect.

It's designed to give the best possible security experience for you, the worst unexpected experience for the unwanted intruders. -no matter where you are.

What's Included

- 1 x Mimic GO (Matte Red)
- 1 x Micro USB Cable
- 2 x Surface Attachment
- 1 x User Manual

Features

- 1.8 miles LoRaWAN range
- 400 feet Bluetooth range
- Adjustable alarm
- Colorful light
- 3 Months battery life
- Outdoor resistant
- Antibacterial coating

Specifications

- | | |
|-------------------|--|
| Size: | 1.73" * 1.73" * 0.98" |
| Weight: | 0.88oz. (25g) |
| Battery: | Li-Po, 3.8V, 310mAh |
| Charging Voltage: | 5V |
| Charging Current: | 62mAh |
| Alarm Volume: | 120dB (Max.), 10cm |
| Sensors: | Accelerometer, Magnetometer, Motion Sensor (PIR), Temperature. |
| Connectivity: | Bluetooth 5.2 (2.4GHz), LoRaWAN (868 - 915 MHz) |
| Material: | ABS plastic |



Operation Guide


- When you unbox Mimic GO, it will turn on its light and play a melody to say hello.
<https://smartmimic.com/contact>
- If you do not experience the short welcoming ceremony while unboxing your Mimic GO, please charge the device.
- Download the Smart Mimic phone application from Apple Store or Google Play Store.
- Sign-up by any method you prefer to Smart Mimic App.
- Hold your Mimic GO near your phone and click the "Connect" button from the App.
- Charge the device by connecting it to a computer or a UL-listed USB wall charger; charge the device indoors only.
- To reset the device, please hold the button for more than 15 seconds.

Warranty


Smart Mimic warranty period is 1 year from the Purchase Date. Within the 1 year, some items may not be eligible for service due to misuse damage or other failures caused other than by manufacturer

defects or premature failure. Please contact us for more information and terms of service.
<https://smartmimic.com/contact>

Placements

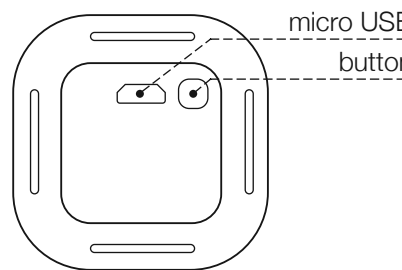

Attachment - Mimic HUGS™

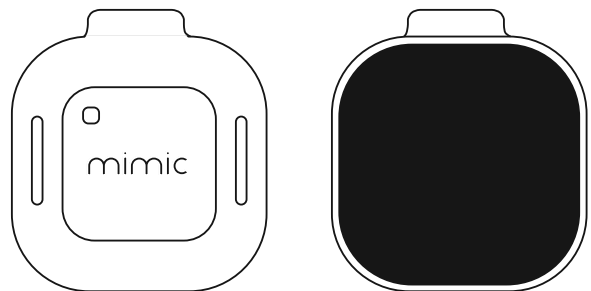

Please peel off the cover of the surface before using



the attachment.

Flat and smooth surfaces, like glass and metal, are better for attaching MimicHugs.

Always clean the surface before attaching MimicHugs to remove any dirt or dust.

Make sure the surface is dry before attaching.

Dust might accumulate on the surface. Rinse through water to clean and wait until fully dry to attach again.

Gently push Mimic GO onto MimicHugs until it fits firmly, pull it to remove your Mimic GO.

You can always remove and reuse MimicHugs.

FCC Compliance Statement

FCC ID: 2AXOE-MIMICGO

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: The grantee is not responsible for any changes or modifications not expressly approved by

Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



– Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and all persons. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Canadian Compliance Statement

IC: 26501-MIMICGO

This device contains license-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR

d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: This equipment complies with RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

REMARQUE: Cet équipement est conforme aux limites d'exposition aux radiations RSS-102 établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.



E-Labeling Information

Please follow the instructions to access the e-labeling information from the Mimic App:

1. Click on the settings icon (⚙️) in the upper right corner of the main screen.
2. Click **Regulatory Certification**

Smart Mimic, Inc.

353 Sacramento St. Suite 1812, CA, 94111, USA

hello@smartmimic.com