# OVICX

Operation Manual of Heart Rate Bracelet T1




Please read the Manual carefully before using this product, and keep the Manual properly.

# Product Introduction

## **Bracelet Host**





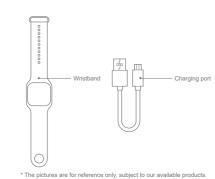

# Wearing Method

- 1. Put one end of the bracelet host in the slot on the wristband from the back of
- 2. Press the other end hard by the thumb, to make the entire bracelet host into the wristband slot and clamp firmly.



1. Wear the bracelet about one finger breadth wide away from the carpal bone, and adjust the tightness of the wristband to the comfortable position.



2. To enable the heart rate sensor to achieve the best measurement result, the back of the bracelet needs touching the skin. Wear the bracelet correctly. neither too tight nor too loose, and meanwhile allow the skin to breathe. Tighten the bracelet wristband during exercise, and release properly after exercise.



arm or the sensor fails to read the heart rate, try to tighten the wristband a little.

# Bluetooth pairing

Reborn Fit heart rate bracelet needs connecting Reborn Fit APP. Scan the following QR code or search "Reborn Fit" in the APP store, and download and

2. Log in the account in Reborn Fit APP, open any course, enter the course,

rate mark, choose connecting "heart rate device", find out the corresponding Bluetooth name (see the back of bracelet) for pairing, and show the pairing

long press the dial touch button for 3s, keep the bracelet power on (the heart-shaped indicator light is on), click the connecting device below the heart

Attention: Please make sure that the mobile phone Bluetooth is on. The

bracelet should be near the mobile phone in the process of connecti

Notes: The connection mode of the display end is opening "Setting" - "Heart rate device" - "Connecting" corresponding device - connection success.



Connection



# Disassembly

Connection

situation with the start of the course.

Read the relevant data via APP.

Take off the bracelet, hold both ends of the wristband by both hands and pull hard, to make the bracelet host and wristband slot have a small amount of clearance. Push the bracelet host out of the front of the wristband by the

After binding the bracelet successfully, record and analyze your exercise

After start-up, the yellow light flashing turns to be the green light flashing, to enter the heart rate monitoring mode. The green light on shows the successful monitoring. View the relevant data via APP.



# Charging

In the case of the bracelet no-operation and red breathing light warning, it shows the low battery. Please charge in time.



# Notice

• The bracelet can be used only with Reborn products. Other brands of devices

• The bracelet can be used only in Reborn sports scenes, so the waterproof grade is limited. It is not suitable for swimming and other sports. Pay attention

This product and its accessories are not toys. Please put in the place that the

I his product and its accessories are not toys. Please but in the piace that the
children can not touch, for avoidance of danger.
 Please do not plug or unplug the power line (USB cable) with wet hands, in
order to avoid gluing to the liquid.
 Please make sure that the machine body and charging line are dry. Please do

not use in the bathroom.

This product contains the built-in rechargeable batteries. Please do not put the batteries into the fire, or charge, use or prevent at high temperature.

• Please do not use if the power line is damaged or the interface fit is loose.

# Warning

Please keep the power line and the product dry. Please do not rinse the

Please make sure that the charging voltage of the product conforms to the

 If the power line is damaged or lost, please purchase the matched power line • Please use and store the product at the temperature between 0°C and 50°C.

# **Basic Parameters**

Product model: T1 Connection mode: Bluetooth 4.0

Net weight of host: 30g Charging time: About 1h Battery specification: 3.7V/ 100mAh Battery type: Lithium polymer battery Executive standard: GB4943.1-2011

Support system: IOS9.0 or above / Android 5.0 or above Product size: 240mm (Length) × 35mm (Width) × 11mm (Height)

# Function Features

After the user enters the basic information involving height, weight, age and gender on APP side, you can be provided with the diversified exercise suggestion in accordance with the exercise data monitored by the bracelet. You can also set the maximum personal heart rate value and customize the training plan suitable for you depending on your own circumstances.

Resting heart rate monitoring: After the bracelet is connected to APP, the resting heart rate value can be measured by APP under the state of human lying flat for about 3 minutes.

cise heart rate monitoring: After the bracelet is connected to APP, the heart rate value can be analyzed by APP intelligent algorithm under the state of 3. 30-day data storage

For the exercise data recorded with the human activities, the 30-day data can be read by APP, to master the monthly fitness record. At the same time, it supports the data storage of multiple devices.

4. Auto sleep After the heart rate value is measured under the static state of human body, it will sleep automatically in the case of no operation for an hour. If the heart rate value is not measured or it is not worn, it will sleep automatically after 30

5. Long battery life
Turn off the Bluetooth and 3D sensor automatically under dormant state, and

connect the power or long press power-on to activate, to extend the battery life.

Adopt Bluetooth 4.2, and support 10m extra long distance real-time transmission, with high efficiency and stability.

# **FCC Statement**

compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

Changes or modifications not expressly approved by the party responsible for

the following measures: -- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help This device complies with part 15 of the FCC rules. Operation is subject to the

following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



# Troubleshooting

blet PC sont Turn on the Bluetooth.  Dened. Long press the touch button for opening.
own. Connect the power line for charging.
Change the charging line.
t is Contact the after-sales service.
ged. Contact the after-sales service.
dard. Correct wearing.
aged. Contact the after-sales service.
pired. Contact the after-sales
service.

# Care and Maintenance

- \* The touch button and screen of the bracelet do not support the water-involved operation. After the bracelet is wet, please dry the surface with the soft cloth before operation.
- The bracelet should be avoided from wearing tightly in daily use.
- Please wipe the bracelet host with the paper towel or soft cloth. Do not use the corrosive or abrasion detergent, in order to avoid damaging the product.
- Please keep the bracelet contact part dry, and clean the wristband with clear water regularly. In the case of redness and other symptoms in the contact part, please stop using immediately and consult the doctor.



JINHUA XIAOQIAO SPORTS GOODS CO..LTD No.655, Xianyuan Road, Wucheng District, Jinhua City, Zhejiang Province