

WR114R Remote Control Instructions

1. Product Overview


Product Name: Remote Control
Product Model No.: WR114R
FCC ID: 2BA76WR114MNT004

2. Environment requirement

Operation temperature: 0°C~ +40°C.
Storage temperature: -10°C~65°C.
Operating Humidity: 10%~80%RH, non-condensing.
Storage Humidity: 10%~ 85%RH, non-condensing.


3. Directions for Operation

3.1 Pairing Remote

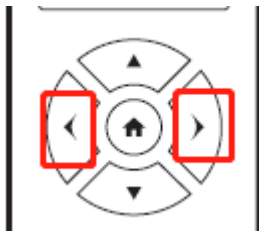

Press these two button to select
Head/Foot/Neck/Lumbar zone.

3.2 ADJUST:

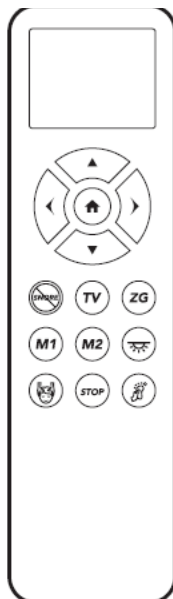



This button lifts the Head/Foot/Neck/
Lumbar section of the foundation.



This button lowers the Head/Foot/
Neck/Lumbar section of the foundation.

3.3 ONE TOUCH BUTTON:



One-touch ANTI-SNORE preset
position.



One-touch flat position.



One-touch TV preset position.



One-touch ZERO G preset position.
ZERO G adjusts your legs to a higher
level than your heart, helping to relieve
pressure of the lower back and
promote circulation.

3.4 UNDERNEATH LED LIGHTING



Under bed LED lighting on/off.

3.5 SETTING PROGRAMMABLE POSITION



One-touch programmable positions.

3.6 MASSAGE FEATURES



Turn on the head massage. Cycle
through 3 massage intensities.



Turn on the foot massage. Cycle
through 3 massage intensities.

STOP Turn off the head/foot massage.

4. Matters needing attention:

- 4.1 The function will only work normally in proper working power conditions.
- 4.2 Remote Control needs three AAA batteries.
- 4.3 The control box is needed for proper control.
- 4.4 If problems are identified, they must be treated by professional personnel.

5. Additional attention for user:

5.1 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

5.2 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

5.3 For Intentional and unintentional radiators the manual shall caution the user and manufacturer that changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.