

Email

Example@senquip.com

Password

.....

Log In

[Forgot Password?](#)

2. Browse to the device page


Georges Test Devices

Name	Device ID	Events	Last Contact	Internal Temperature	Atmospheric Pressure	Tank Level	Supply Voltage	System Voltage
Senquip test C1	QF7BKHS31	1	a few seconds ago					
Norman ORB Test 2	EUBD75173	2	an hour ago				0	
Norman QUAD Test 2	WCTDXJ2GE	2	an hour ago				0	3.96
Norman ORB Test 1	ED7C37BK2	2	an hour ago				0	
Norman QUAD Test 3	WHTDM291E	2	an hour ago				0	
Norman QUAD Test 1	GS3DC369C	3	an hour ago				0	
Water Tank	HN1AHGA32		3 hours ago	15.74		19.7		
Norman ORB Test 3	UP8D709G3	2	2 days ago					
Senquip Day Night Controller	BW4BX2PM2	2	4 months ago					
Batt Test	XW89IBA92	2	4 months ago	3.6	101.79			

Map Satellite

Copyright ©2021 Senquip Pty Ltd. Terms of Use

3. On the *Device Info* widget, select *Regulatory Information*

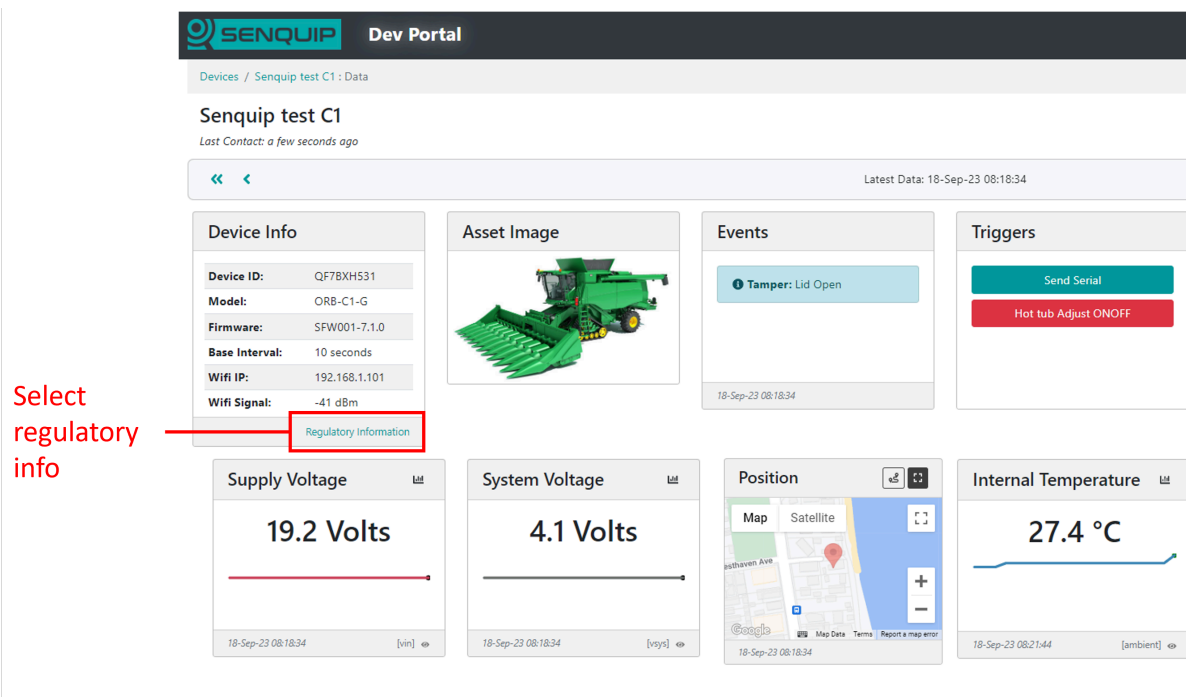

The following regulatory information will be shown.

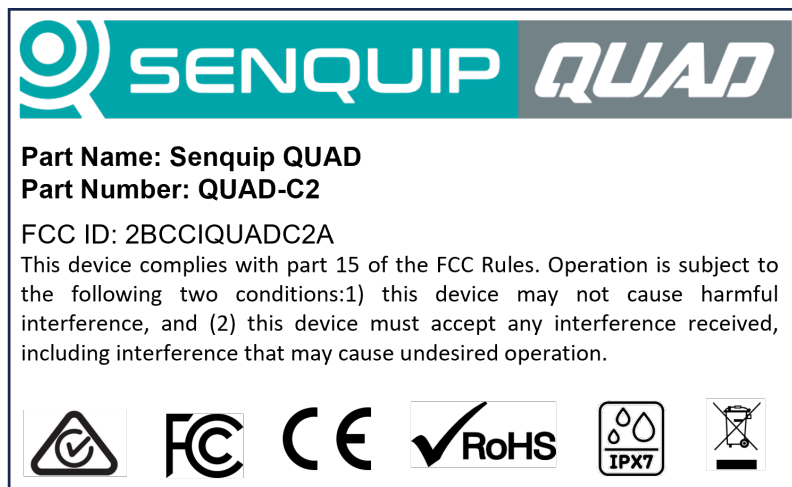


Figure 1.6. Regulatory information including FCC ID

---

## Getting Started

---

### 2.1 Opening the Box

The Senquip QUAD is shipped in a box with a security seal that ensures that the packaging has not been opened. If this seal is compromised, the box may have been opened, in which case, a non-authorised party could have had access to the device password. If the device is to be used in a critical application, please ensure that the seal is intact upon receipt and remember to change your password as soon as possible.



Figure 2.1. Senquip QUAD packaging with intact security seal