



User Manual



Product Overview:

EQ-R0826-401



- Before using this product, please read this manual carefully.
- This is a serial of three-motor controller with wireless remote control and APP control, standard includes three-motor remote controller 1 pcs, control box 1 pcs, accessories 1 bag, power 1 pcs (optional).

Applications:

This product is a multi-functional integrated three-motor control system, including motor control, wireless remote control and other functions with simple installation and connection, support APP control. It's suitable for all kinds of sofa control systems, and can be equipped with related functional products.

Using Instructions:

- Pairing: Long press the all open and all retract two buttons 3--5s at the same time, the indicator keep blinking to enter pairing mode and power on the control box, after 2s the buzzer rings 2 times and the indicator stops blinking, then it is successful pairing.
- Long press the headrest open button to open the headrest motor, release to stop.
- Long press the headrest retract button to retract the headrest motor, release to stop.
- Long press the backrest open button to open the backrest motor, release to stop.
- Long press the backrest retract button to retract the backrest motor, release to stop.
- Long press the footrest open button to open the footrest motor, release to stop.
- Long press the footrest retract button to retract the footrest motor, release to stop.
- Long press the all open button to open all motors, release to stop.
- Long press the memory button 1 or 2 for 3 seconds to remember the current position of the motor, and when the motor runs to another position, click the memory button, the motor automatically runs to the previous memory position.
- Click the footlight function button to turn on the footlight function, and turn on the footlight when the footlight sensor senses the person and delay for 10s to automatically turn off the footlight, click again to turn off the footlight function.
- Click the headrest massage function button to turn on the headrest massage function, click again to switch the second gear headrest massage function, then click to close the headrest massage function.
- Click massage frequency conversion switch the second gear frequency massage.
- Click the footrest massage function button to open the footrest massage function, click again to switch the second gear footrest press massage function, then click to turn off the footrest massage function.


Product Parameters:

- Control box supply voltage: 29V/3A
- Motor output: 29V/2A
- Remote control battery: 1.5V AAA x3PCS 4.5V


Attentions:

- Do not overload the power supply. If there is smoke, sparks, burnt odor, etc., the power should be turned off immediately.
- Do not disassemble or modify this product by yourself.
- Do not store this product in a humid environment.
- Do not put the product close to heat source or charge close to heat source.
- Do not pour water or other liquids into the product, which may damage the product.
- Do not dispose of electronic products as household waste.
- Waste electronic products will be disposed in accordance with local laws and regulations.

Connection Diagram:

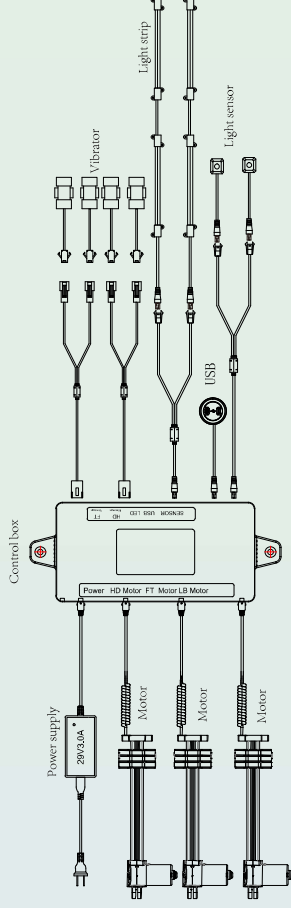


Specification Diagram:

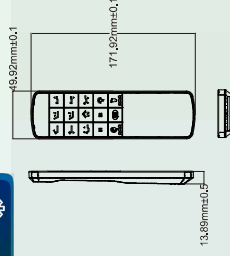

Installation Diagram:

For the dimensions of installation holes, pls refer to the installation diagram.

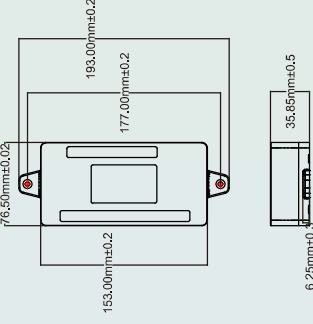

Troubleshooting

1. No power: The current situation can not connect to the APP and remote control has no effect; Check the power supply line, first of all, you need to check whether the socket or power supply contact to power; if there is no power, you need to check whether the socket or power supply is normal; Check again to see if the circuit or connection is crushed or damaged.
2. The remote control has no effect: The current situation that remote control has no effect but the APP has effect; Check whether the battery need to replace, a bad battery could cause the controller to fail, if after replacing battery still no work, and then use the remote control to pair with the host can match the code operation.
3. Motors do not move: Check if the motor is normal, if abnormal then replace the product.

Other:

Company: SHENZHEN YIKONGDI INTELLIGENT HOME FURNISHING TECHNOLOGY CO., LTD
Add.: 2F, Building 5, Rongqiajia Industrial Park, Lisonggang, Gongming Town, Shenzhen, China. 518106
Phone #: +86 755 2910 9923
Fax #: +86 755 2916 8231
Email: Info@easy-ctrl.com
Web: www.neweasy-ctrl.com





APP Operational Guidelines



Software Download:

- Download the software by scanning the QR code.
- The APP can be downloaded for iPhones through the Apple Store APP, called “cheersleep”




ios

Enter Software:


- Click on the icon “ ” to go to cheersleep software.




Search interface

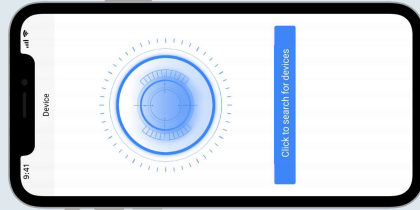


Select connection device

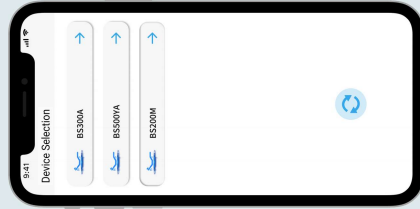

Click the refresh button to refresh nearby devices

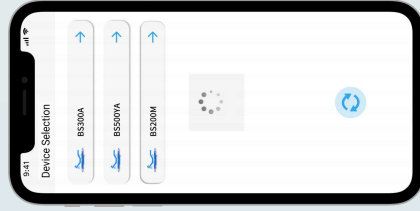

Interface Description:

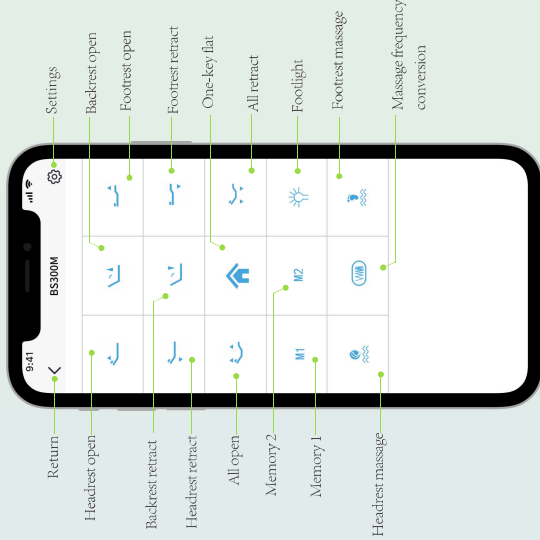

FCC COMPLIANCE STATEMENT:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:
Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.


- Long press the headrest open button to open the headrest motor, release to stop.
- Long press the backrest open button to open the backrest motor, release to stop.
- Long press the footrest open button to open the footrest motor, release to stop.
- Long press the all open button to open all motors, release to stop.
- Long press the memory button 1 or 2 for 3 seconds to remember the current position of the motor, and when the motor runs to another position, click the memory button, the motor automatically runs to the previous memory position.

- Click the footlight function button to turn on the footlight function, and turn on the footlight when the footlight sensor senses the person and delay for 10s to automatically turn off the footlight, click again to turn off the footlight function.


- Click the headrest massage function button to turn on the headrest massage function, click again to switch the second gear headrest massage function, then click to close the headrest massage function.

- Click the massage frequency conversion switch the second gear footrest massage function, click again to switch the second gear footrest massage function, then click to turn off the footrest massage function.

Setting interface

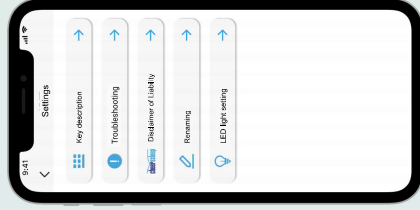

Button description

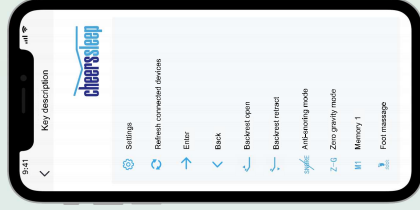

Troubleshooting



LED light setting

