
2024/10/07

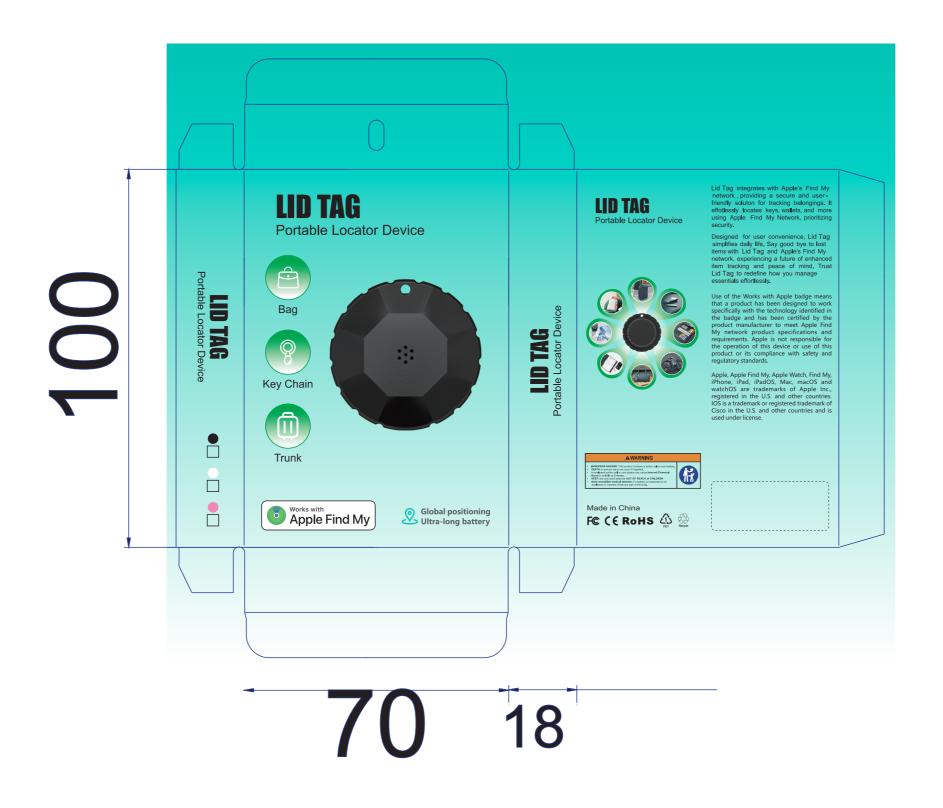

128g双铜 双面4色印刷 风琴5折 成品尺寸67*67mm 20240902



1.5在"查找"应用程序中,单击"添加物品-其他支持物品"。如图

1.7命名你的 Lid Tag ,然后点击"继续"。如图3所示 1.8选择表情符号。 1.9点击"继续",再点击"完成"即可。

Lid Tag 包含一个硬币形状的电池。在产品使用寿命期间,可能需 要更换电池。通过观察正确的负极和正极连接,只能更换相同型号 (CR2032)和额定值的电池。

电池更换: 2.1拧开后盖。 2.3拧紧后盖。

3.1从活动模式切换到禁用模式(飞行模式),只需取出电池。

Lid Tag 将在此之后成功配对。 3.3长按该键,听到1声提示音,然后连续听到2声提示音,然后连续听 到3声指示音。继续按压5秒。当听到长提示音时,松开按钮,设备恢

3.4要从你的苹果设备上删除 Lid Tag , 打开"查找"应用程序, 选 择"物品",找到设备,然后向下滚动点击"移除此设备"。 3.5如果 Lid Tag 无法连接到"查找"应用程序,请按照3.3中的说 明进行重置, 然后重新启动配对过程。

Lid Tag 包含精密的电子部件,包括电池。为避免损坏、功能丧失 或潜在危害,请避免跌落、撞击、刺穿、压碎、拆卸、暴露在高温或 液体中,或放置在工业化学品浓度高的地方。

存在化学灼伤危险

Lid Tag 、电池舱门、电池本身和外壳可能会造成窒息危险或对幼 儿造成伤害。请将这些物品放在幼儿接触不到的地方。

医疗器械干扰 Lid Tag 包含发射电磁场的组件和无线电。这些元件可能会干扰起

部电池端子接触处。

搏器、除颤器或其他医疗设备。为确保安全,请在您的医疗器械和 Lid Tag 之间保持安全距离。我们强烈建议您咨询您的医生和医疗 器械制造商,以获取针对您具体情况。如果您怀疑 Lid Tag 会干扰 您的起搏器、除颤器或任何其他医疗设备,请立即停止使用。 重要处理指南

请勿让湿气进入任何开口,或使用喷雾、溶剂或清洁磨料设备。

Lid Tag 在经常使用时出现变色是正常的。要清洁它,请使用柔

软、干燥、无绒的布。避免应用用尖锐物体压在橡胶密封圈或设备内

使用带有Apple徽标的作品意味着该产品已被设计为专门用于徽标中所

标识的技术配合使用,并已通过产品制造商的认证,以满足Apple Find My 网络产品规格和要求。Apple不对本设备的操作或本产品的 使用或其是否符合安全和监管标准负责。

Apple、Apple Find My、Apple Watch、Find My、iPhone、iPad、iPadOS、Mac、macOS和watchOS是苹果公 司在美国和其他国家注册的商标。IOS是思科在美国和其他国家/地区 的商标或注册商标,并在许可下使用。



Lid Tag integrates with Apple's Find My network, providing a secure and user-friendly solution for tracking belongings. It effortlessly locates keys, wallets, and more using Apple Find My

Designed for user convenience, Lid Tag simplifies daily life. Say goodbye to lost items with Lid Tag and Apple's Find My network, experiencing a future of enhanced item tracking and peace of mind. Trust Lid Tag to redefine how you manage



shown in Figure 1 1.6 Click 'Continue'. As shown in Figure 2 1.7 Name your Finder and click 'Continue'. As shown in Figure 3 1.9 Click 'Continue', then click 'Finish' to complete.

Lid Tag Contains a coin shaped battery. During the product's lifespan, it may be necessary to replace the battery. By observing the correct negative and positive connections, only replace batteries of the same type (CR2032) and rating.

1.5 In 'Find My' app, click on Add Item - Other Support Items. As

Battery replacement: 2.1Twist to open the back cover. 2.3Twist to close the back cover

1.4 Open the 'Find My' app

ADDITIONAL TIPS $\mathsf{simpl} \mathsf{y} \ \mathsf{remove} \ \mathsf{the} \ \mathsf{battery}.$ 3.2 To switch from Disable mode (Airplane mode) to working mode, reinstall the battery. The Lid Tag will be successfully

3.3 Press and hold the button until you hear 1 prompt tone, followed by 2 consecutive prompt tones, and then 3 consecutive indicator tones. Continue to press for 5 seconds. When you hear a long indicator tone, release the button to restore the device to its factory settings.. 3.4 To remove the Lid Tag from your Apple devices, open the

Find My app, select 'items,' find the device, and scroll down to click on 'Remove this device.
3.5 If the fails to connect to the Find My app, follow

the instructions in section 3.3 to perform a factory reset, and then restart the pairing process.

The Lid Tag Finder contains delicate electronic parts, including a battery. To avoid damage, loss of function, or potential harm, please refrain from dropping, hitting, puncturing, crushing, disassembling, exposing it to extreme heat or liquids, or placing $% \left(1\right) =\left(1\right) \left(1\right) \left$ it in areas with a high concentration of industrial chemicals.



WARNING: Do not swallow the battery;there is a chemical bum hazard

Choking Hazard Warning

The Lid Tag, its battery compartment door, the battery itself, and the case may pose a choking hazard or cause injury to small children. Please keep these items out of reach of young children Medical Device Interference

The Lid Tag contains components and radios that emit electromagnetic fields, as well as magnets. These elements may potentially interfere with pacemakers, defibrillators, or other medical devices. To ensure safety, maintain a safe distance between your medical device and the $\,{\rm Lid}\,\,{\rm Tag}\,$. We strongly advise consulting your physician and the manufacturer of your medical device for information that is specific to your situation. If you suspect that the Lid Tag is interfering with your pacemaker, defibrillator, or any other medical device, discontinue its use immediately

Important Handling Guidelines It's normal for the Lid Tag to show discoloration with regular use. To clean it, use a soft, dry, lint-free cloth. Avoid applying

pressure with sharp objects on the rubber seal or the battery terminal contacts inside the device.

Do not allow moisture to enter any openings or use aerosol sprays, solvents, or abrasive materials to clean the device.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.