



AROMASOUL



Machine




Power cord



Essential oil

Products and accessories

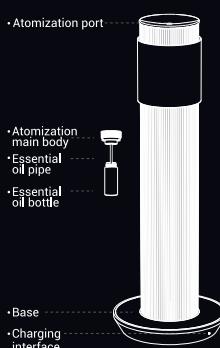

- Atomization port
- Atomization main body
- Essential oil pipe
- Essential oil bottle
- Base
- Charging interface

Operation Description

(1) Mode function
Click the power button  to turn on the machine. Click the  button to switch between low, medium and high gears.
Low gear (15 seconds on, 200 seconds pause)
Mid gear (30 seconds on, 120 seconds pause)
High gear (60 seconds on, 60 seconds pause)
Input and output power supply is 5V, power supply 2A

(2) Timing function
Click the time button  to set the time, you can set 1 hour, 2 hours, 4 hours, 8 hours

(3) Bluetooth function
Long press the  button for 3 seconds to switch to Bluetooth mode, press the  button again for 3 seconds to switch back to standalone mode

(4) Charging display
Cyclic display of gear light while charging

Product Parameters

Product Name: Aromatherapy Diffuser
Model: A800
Coverage: 1000 Sq.ft
Essential Oil Volume: 100ml
Input Power: 10W
Input: DC 5V-2A(type-C)
Battery Capacity: 8800mA
Product Size: φ19*360mm
N.Weight: 1.48kg

Equipment maintenance


In order to ensure that the best -scent effect is achieved, customers are requested to check and maintain the equipment every six months. When the new incense or extension effect needs to be replaced, the equipment must also be maintained:

1. Turn off the use of the essential oil bottle.
2. Pour the appropriate amount of alcohol into the essential oil bottle and clean it.
3. After cleaning, pour a small amount of alcohol, install the essential oil bottle on the equipment, and start the equipment for 5 minutes to 8 minutes.
4. After the equipment is cleaned, turn off the power.

Products and accessories

Fault	Maintenance
The equipment does not work	<ul style="list-style-type: none"> • Please check whether the electric source adapter is DCSV-2A and the DC side has been properly inserted • Whether the working program for equipment setting is currently in working hours
No atomization Or small	<ul style="list-style-type: none"> • Whether the air pump is working, and whether there is an airflow at the top mouth • Whether the atomization core, the oil absorption pipe is loose or blocked • Whether the gas mouth sealing ring is damaged and falls off
Oil leakage	<ul style="list-style-type: none"> • Whether the essential oil bottle and atomizer tighten • Whether the atomized head sealing ring is deformed or damaged • Whether the atomized head is broken
Abnormal noise	<ul style="list-style-type: none"> • The air pump is loose, re-fix the air pump • The air pump is damaged, replace the new air pump

AROMATHERAPY DIFFUSER Instruction

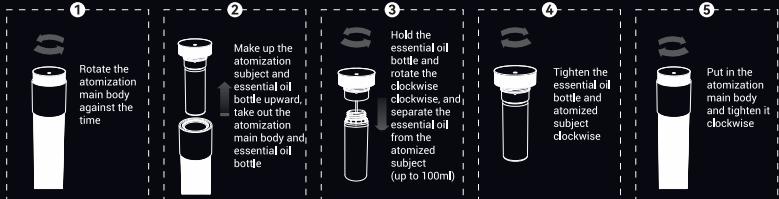

⚠️WARNING:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Precautions

- ① Do not use overloaded power sockets, damaged power connection cables or adapters, otherwise it may endanger your safety.
- ② If you are not technicians, please do not try to modify, disassemble, and repair equipment to avoid damage to the device. If the device is abnormal, please check whether it is operated according to the requirements of the normal use.
- ③ During the use of equipment, you must not be inverted or tilted to avoid damage to the equipment for essential oils.

Precautions for use



Manufacturer : Fen Fen technology (Shenzhen) Co. , Ltd.
Address:1901D1, Qiancheng Commercial Center, No. 5 Haicheng Road, Mabu Community, Xixiang Street, Baoan District, Shenzhen