


## User Manual Information Agreement

The information informing the user of his rights and obligations is outlined on the following pages.  
This information will be included in the final version of the manual.

Confirmed by:

	Signature
<u>Jørn B. Rasmussen/Quality Engineer</u>	Name/Title
<u>GN Netcom as</u>	Company
<u>September 03, 2002</u>	Date



**GN Netcom as**  
Metalbuen 66  
P.O. Box 201  
DK-2750 Ballerup  
Denmark  
Telephone: +45 72 11 86 86  
Telefax: +45 72 11 87 39  
CVR: DK 15 06 95 11  
[www.gnnetcom.com](http://www.gnnetcom.com)

Quality, Approvals &  
Standards:  
Direct: +45 72 11 87 62  
E-mail: [jbr@gnnetcom.dk](mailto:jbr@gnnetcom.dk)



Text in blue is for references only.

## EUROPE

EU: This product is CE marked according to the provisions of the R & TTE Directive (99/5/EC). Hereby, GN Netcom, declares that this this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.  
For further information please consult <http://www.gnnetcom.com>.



Please note that this product uses radio frequency bands not harmonised within EU.

Within the EU this product is intended to be used in Austria, Belgium, Denmark, Finland, France, Germany, Greece, Ireland, Italy, Luxembourg, The Netherlands, Portugal, Spain, Sweden, United Kingdom and within EFTA in Iceland, Norway and Switzerland.

**R&TTE directive 1999/5/EU**

## USA FCC part15

### FCC Notice to Users/Product Statements

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. **Ref 47CFR Sec. 15.19(a)(3)**

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by GN Netcom will void the user's authority to operate the equipment. **Ref 47CFR Sec. 15.21**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help. **Ref 47CFR Sec. 15.105(b)**

## Canada IC

### IC Notice to Users/Product Statements

Operation is subject to the following two conditions:

(1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

**Ref IC RSS-210 Sec. 5.11 (Same statement as under FCC)**

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

**Ref IC RSS-210 Sec. 6.2.2(o)(d1)**

The term "IC:" before the certification/registration number only signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that industry Canada approved the equipment. **Ref IC Self-Marking 6(f).**

Front Cover

Back of Front Cover

## Welcome to FreeSpeakä

Enjoy safe and secure mobile communications. With FreeSpeak™, talk anywhere. Work, play, exercise, even drive.

Experience complete freedom— *everywhere!*

English .....	1
Francais .....	17
Deutsch .....	18
Italiano .....	19
Nederlands .....	20
Expanol .....	21
Danish .....	22
Finnish .....	23
Swedish .....	24



## **u** FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- u** This device may not cause harmful interference.
- v** This device must accept any interference received, including interference that may cause undesired operation.

## **Safety Information**

Safety summary here

## Table of Contents

Welcome to FreeSpeak .....	2
FCC Notice .....	2
Safety Information .....	2
What's in this Package? .....	4
What is FreeSpeak? .....	5
FreeSpeak Features and Specifications .....	6
Using FreeSpeak with a Mobile Phone .....	7
Using FreeSpeak with non-Bluetooth Phones .....	12
Keeping FreeSpeak Operational .....	13
Storing FreeSpeak .....	14
If You Need Help .....	15

## What's in this Package?

Your product package includes everything you need to start using FreeSpeak™ right away. Inside, you'll find the following items:

- One JABRA FreeSpeak™ headset with custom ear gels for your ears
- One adapter unit that is also a charger and holder
- Cable to connect the adapter unit to non-Bluetooth™ phones
- The FreeSpeak User Guide



## What is FreeSpeakä ?


FreeSpeak™ is a Bluetooth™– enabled headset for your mobile phone. It fits over your left or right ear and connects to your phone without a cable. The physical connection from FreeSpeak to your phone is *radio waves*.

Bluetooth technology enables wireless connections. Devices interconnect using radio waves. Bluetooth devices operate in the 2.4 GHz spectrum—the same spectrum at which the microwave in your home operates.

Stay in touch. Listen and talk on the phone using FreeSpeak wherever you are. While:

- Driving, rest the phone on the passenger seat and keep your focus on driving.
- Working, keep the phone out of the way. Leave it in your briefcase or desk draw.
- Exercising, place the phone someplace nearby while sweating it out.

## FreeSpeakä Features

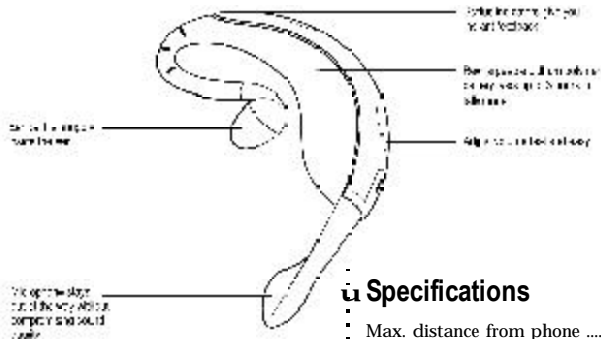

### Specifications

- Max. distance from phone ..... 30 ft.
- Weight ..... .8 oz or 23g
- Battery (Lithium polymer):
  - Talk time ..... 3 hours
  - Standby ..... 96 hours
  - Charge time ..... 1 to 2 hours
- Operating environment .....

## Using FreeSpeakä with a Mobile Phone

FreeSpeak works with all Bluetooth-enabled phones. For the latest information regarding supported phones, access the Jabra web site at [www.jabra.com](http://www.jabra.com).

If you don' t have a Bluetooth-enabled phone, you can still use FreeSpeak. You will need to connect the adapter unit to the mobile phone before using the headset. For details, see *Using FreeSpeak with non-Bluetooth Phones*.

### **y** FastStart

To get started right away, perform these steps:

- 1 Charge the headset.
- 2 Pair FreeSpeak to the phone.
- 3 Place FreeSpeak over your left or right ear.
- 4 Adjust speaker volume.
- 5 Make the call.

## Charging the Battery


The first time you use FreeSpeak, you need to charge the battery. A full charge takes up to two hours. After you charge the battery, pair the headset with the phone, and then engage in conversations.

---

### To charge the battery

- 1 Place the headset in the adapter unit.
- 2 Connect the adapter unit to your AC connector.
- 3 Plug the AC connector to the wall.

Adapter unit also functions  
as a charger and holder

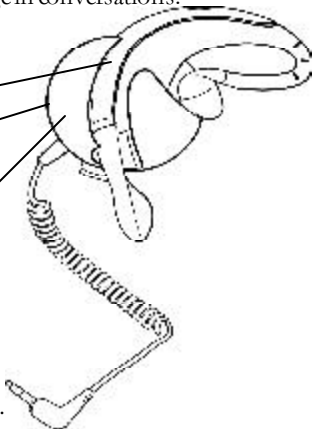

**Note:** The built-in lifetime battery is not replaceable. If you experience problems with the battery, return FreeSpeak to the place of purchase.

## Pairing FreeSpeakä with a Mobile Phone

Pairing the headset with the mobile phone enables the phone to identify the headset as a device with which to communicate wirelessly. You need to individually pair the headset with all mobile phones you plan to use.

Use the headset with one phone at a time. The pairing code assigned to your phone is fixed at **0000**. The combination of unique identification assigned to the phone, along with the pairing code, secures your phone conversations.

---

### To pair the headset

- 1 Make sure the phone is ON/OFF?
- 2 Press and hold WHAT BUTTON ON THE PHONE? for 10 seconds.
- 3 Observe the following action on the headset' s LED:
  - The LED will glow steadily and then flash Off and then On.
- 4 On the mobile phone, DO WHAT?

Would be nice to show a picture of the the GUI here


## Wearing FreeSpeakä

FreeSpeak fits on either ear. Simply rotate the ear gel to fit into your left or right ear.

---

### To wear the headset

- 1 Hold the headset in your right or left hand.
- 2 Place it over and behind the ear as shown in the illustration.
- 3 Make any fine adjustments.

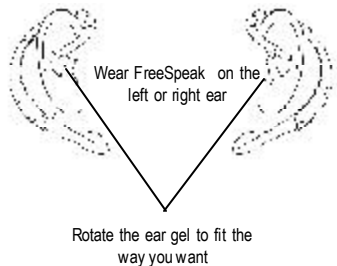

**Note:** You can change the ear gel by removing and replacing it with the new gel. Your package includes three ear gels. The notch on the ear gel and on the ear piece indicates proper alignment.

## **Making the Call**

Use your mobile phone as usual. If your phone supports voice-activated dialing and voice recognition, FreeSpeak initiates calls when you speak into the microphone.

---

### **To make calls using the headset**

- 1 Speak the information into the headset's microphone.
- 2 Engage in conversations as usual.

---

### **To end a call**

- 1 Use your phone's features for ending a call.
- 2 DO THEY TURN OFF FREESPEAK?

## Using FreeSpeakä with Non-Bluetooth Phones


Use FreeSpeak with non-Bluetooth mobile phones. Your FreeSpeak package includes an additional adapter to fit your phone—allowing it to become Bluetooth-aware.

Once you connect the special adapter to your phone, and then connect the phone to the headset's adapter unit, you are ready to use the headset as described earlier.

---

### To use the headset with non-Bluetooth phones

- 1 Connect the cable from the FreeSpeak adapter unit to the special adapter for your phone.
- 2 Connect the special adapter to your phone.
- 3 Use the headset as usual.

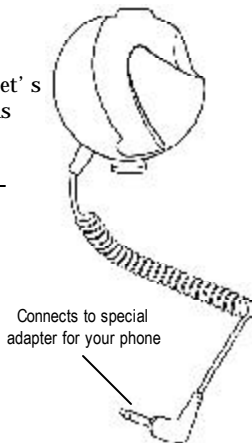



## Keeping FreeSpeak Operational

FreeSpeak is very easy to use and even easier to maintain. There's very little you need to do to keep the headset maintenance free. All components are built according to best practices, and no component is user-replaceable.

To keep the headset working consistently, follow these general guidelines:

- 1 Keep the headset away from water. If you need to clean it, use a clean, damp cloth.
- 2 Turn the headset off when not in use to preserve the battery' s life.
- 3 Charge the battery after each long periods of use.
- 4 Handle the headset with care. Although it is designed for durability, exercise care in handling.
- 5 ANYTHING ELSE?

## Storing FreeSpeakä

The adapter unit also functions as charger and holder. When you are not using the headset, place it in the adapter unit. For details on charging, see *Charging the Battery*.


---

### To store the headset

- 1 Place the headset in the adapter unit.
- 2 Slide it into place until it locks.

**Note:** The adapter unit comes with a clip that allows it to be worn on a belt or waistband.

Adapter unit

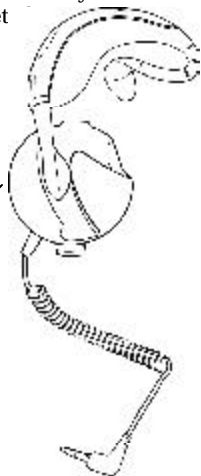

## If You Need Help

Help for your product is available when you need it. Use any of the following support systems when you need help or require additional information:

**Customer Support:** Phone:  
Hours of operation:

**Sales:** Phone:  
Hours of operation:

**Web Site:** [www.jabra.com](http://www.jabra.com)

**General Information:** Phone:  
Hours of operation:

Blank page. Can be used to  
hold the TOC of next  
language

Beginning of next  
language