
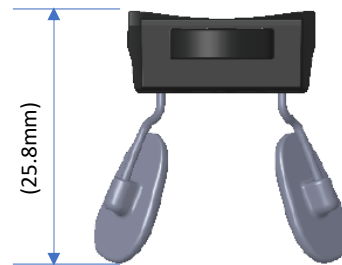
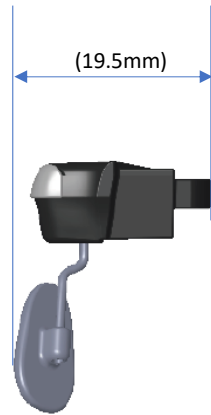


The label is not put because of a micro Products.

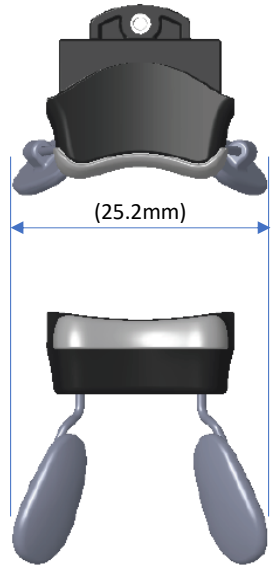

The authentication mark is an indication in the manual.

JINS MEME Precautions for Use

Introduction

Thank you for purchasing JINS MEME. "JINS MEME Precautions for Use" contains instructions on how to use JINS MEME and other important information. For information on how to take care of the device and what to do in the event of any problems, please visit the JINS MEME website support page at the URL given below.

The unauthorized duplication or transcription of part or all of this manual is prohibited. While we have made every effort to ensure the integrity of the content of this manual, should you notice any errors or other problems, please feel free to contact the JINS Customer Support Center. The contents of this manual are subject to change without prior notice. If the product is used in a way that is not described in the manual, the product may be damaged, with possible personal injury or damage to property. If you give JINS MEME to someone else, please be sure to give them this manual as well.

Trademarks: Google Play, the Google Play logo and Android are trademarks or registered trademarks of Google Inc. Apple and the Apple Logo are trademarks or registered trademarks of Apple Inc. in the US and other countries. App Store is a service mark of Apple Inc. iOS is a trademark or registered trademark of Apple Inc. in the US and in other countries, and is used under license. Bluetooth is a trademark or registered trademark of Bluetooth SIG Inc. in the US. Other company names and manufacturing names are the trademarks or registered trademarks of the respective companies. The symbols "⚠" and "⚡" are not used alongside company trademarks or registered trademarks in this manual.

Safety precautions

JINS MEME is designed so that it can be used as an ordinary pair of glasses when JINS MEME Core is correctly mounted on a JINS MEME compatible frame. However, as JINS MEME Core contains electronic components, if it is used incorrectly, it may be damaged in ways that are different from the use of ordinary glasses. Please read the following safety information carefully to understand how to use the device correctly and safely. JINS MEME is not a medical device. Neither JINS MEME nor any related apps can be used for the diagnosis, treatment or prevention of any illness, condition or injury. In the event of any abnormality, cease using the device immediately and contact JINS Customer Support Center. If you continue to use a defective device, there may be adverse effects on your health. Statements in the manual regarding safety are divided into "Warnings" and "Cautions", in order to indicate clearly the level and urgency of possible harm and injury.

- Warnings: Failure to follow the instructions could result in death or serious injury. Cautions: Failure to follow the instructions could result in personal injury or damage to property. Indicators: Indicates an action that must not be performed. Indicates an action that must be performed. Indicates the possibility of electric shock or other injury if the product is dismantled. Indicates the possibility of electric shock. Indicates the possibility of explosion.

Warnings: If you have an implanted cardiac pacemaker or an implanted defibrillator, do not bring these devices any closer than 15cm to JINS MEME Core. The electromagnetic waves from JINS MEME Core may affect the operation of implanted cardiac pacemakers or defibrillators. Do not use JINS MEME Core in crowded places such as packed trains. If there are people nearby with implanted cardiac pacemakers or implanted defibrillators, the electromagnetic waves from the device may affect the operation of their implanted cardiac pacemakers or defibrillators. Do not tamper with JINS MEME Core or the charging clip or any other accessories, or carry out any of the following actions, as they may result in injury, damage or malfunction. Do not drop, bump, excessively bend, warp, drill holes in or paint the device. Do not place JINS MEME or its accessories close to or above the carting in an automatic. Serious accidents could occur if the carting is deployed.

- Please do not disassemble or modify JINS MEME Core or accessories such as the charging clip. Do not attempt to repair the device by yourself. There are no customer-replaceable parts in the device, and any attempt to do so may result in an unexpected accident. If JINS MEME suffers a device failure, please contact JINS Customer Support Center. Do not allow JINS MEME Core or the charging clip or other accessories to get wet during charging, or expose them to moisture or rain. Exposure to moisture during charging may lead to electric shock, short circuit or fire. Charge the device out of the reach of small children. Failure to do so could lead to unexpected accidents or electric shock. Do not place JINS MEME Core or the charging clip or other accessories near to an open flame, such as a gas burner, candle or air the hot air of a hair drier, etc. Doing so may cause warping, damage, overheating, fire or device failure should be stored in its case. Please be sure to disconnect the Bluetooth connection and your smartphone when you are in an area where prohibited, for example in airplanes or hospital. adverse effects on electronic equipment and malfunction. The lenses may crack if subjected playing sports in which there is strong physical contact. Broken lenses could cause blindness, or serious injury, suffer from allergies or have a sensitive skin condition you could suffer some kind of attack, or that will experience any kind of physical discomfort, etc. and consult your doctor.

- Precautions to be observed when handling: Warnings: Do not use or charge JINS MEME Core in extremely high or low temperatures (sauna, etc.) or extremely low temperatures, or in humid conditions, or in conditions of overheating, fire and malfunction. The operating device is 0°C to 40°C. Always use the necessary charging clip to charge so could lead to electric shock, short circuit, fire, never attempt to use JINS MEME during charging, burns and electric shock. Also, immediately stop may become very hot. Do not wear the device if you clean JINS MEME Core during charging, such as before cleaning JINS MEME Core, always be sure. Failure to do so could lead to electric shock, etc. the JINS MEME Core charging terminal or charging if they have dirt or foreign objects sticking to the could lead to electric shock, short circuit or fire, sure to properly open and close the charging clip could result in damage to the charging terminal, removing the USB cable from the USB terminal or pull it out by grasping the plug and not the wire hands. This could lead to electric shock, short circuit or fire. Follow the procedures given in the JINS Guide in order to charge the JINS MEME Core to result in electric shock, overheating or device failure. Never put JINS MEME Core into fire, subject to fire could explode or catch fire.

- Cautions: JINS MEME Core is waterproofed against daily life situations, such as exposure to rain or perspiration. However, do not take JINS MEME Core into situations where it would be directly exposed to water, such as a bathroom, sauna or pool, etc. This could cause a short circuit or device failure. Never use abrasives, alcohol, thinner, benzene or remover, etc., to clean JINS MEME Core or the charging clip. Also, never wash them with water. This could lead to discoloration and warping as well as damage or device failure. Unless specified in this Manual, never insert anything into the terminal. This could lead to damage of the internal components. Do not store JINS MEME Core or the charging clip together with hard objects made of metal, etc., which may scratch them. Keep the device out of the reach of small children. Failure to do so could lead to unexpected accident or injury, such as the swallowing of small parts.

Precautions when handling the three electro-oculography sensors (JINS MEME Core nose pad, sensors between the eyebrows)

- Cautions: Do not push, bend or apply force to any of the three electro-oculography sensors. This could cause damage or device failure. Adjustment of the nose pad should only be carried out at JINS MEME stores. If you attempt to adjust the pad by yourself, you may damage the pad or render it unable to make correct measurements. Before using when the sensors gently with a soft cloth, such as a lens cloth. Careless handling of the sensors may result in malfunctions or device failure. All the three electro-oculography sensors are rubber with covers, they always in moisture, they gently wipe them when it gets wet or messy, if they are not able to measure correctly, it could fail on subsequent contact of lens, the JINS MEME Core charging terminal may become damaged with.

This device complies with part 15 of FCC Rules and Part 67 of Canadian, Telecommunications Canada's International Radio Equipment (IRE) Regulations. The device may not cause harmful interference, and it is required that any interference received, including interference that may cause undesired operation. In Canada, this device complies with Part 67 of the Radio Regulations of the Canadian Radio-television and Telecommunications Commission (CRTC). The device may not cause harmful interference, and it is required that any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Standards certified R 011-190020 For details on the standards certified, please visit the JINS MEME website. MODEL : JINS MEME CORE FCC ID: CWTCVASW0A IC : 1788F-CVASW0A

Standards certified R 011-190020 For details on the standards certified, please visit the JINS MEME website. MODEL : JINS MEME CORE FCC ID : CWTCVASW0A IC : 1788F-CVASW0A