
**User's manual** VM344/VM344-2

Safe & Sound Pan & Tilt Full Color **Video Monitor** 

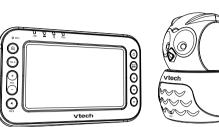







on purchasing your new VTech product. Before using this product, please read Important safety instructions

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com

Register online to get an additional 3-month warranty!

Visit www.vtechphones.com.



Register your product online for enhanced warranty support

Product news


earn about the latest VTech products.

### Vhat's in the box







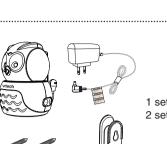

1 set for VM344 2 sets for VM344-2

Make sure the label THIS SIDE UP is facing up while inserting the battery.

nstall the battery

Install the battery as shown below.

case of a power outage.

You can power up the parent unit by connecting

provided. Even if the parent unit is connected to

AC power, we recommend you also install the

battery. This guarantees continual operation in

it to AC power or to the rechargeable battery




- The operating time for using the rechargeable battery is short. If you want to monitor your baby for a long time, we recommend you connect the parent
- If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.


Current view status

# Connect and charge the

- Use only the battery supplied with this product.
- Use only the power adapters supplied with this • Make sure the electrical outlets are not controlled
- by wall switches. The power adapters are intended to be correctly. oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if they are plugged into a ceiling, under-the-table or
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.

### Connect the baby monitor

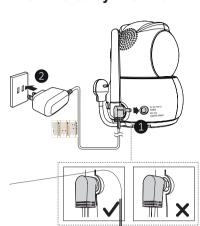

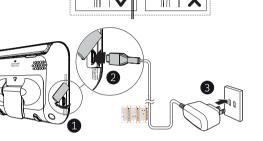

# Before use

Charge the parent unit battery

When you have connected the parent unit

and installed its battery for the first time or

battery status (see the following table).

3 hours of continuous charging

**⊘**NOTES

Battery

indicators

The battery

icon is off

and 🖏

displays.

The screen

**Battery low** 

Unit and □. | for only a

The **light** short time.

displays

at Parent

flashes.

becomes

solid 📖.

The battery

automatically. The battery icon indicates the

The parent unit battery is fully charged after

It takes longer to charge the battery when the

time, turn the parent unit off while charging.

The standby time varies depending on the

Battery

No battery

is installed

using AC

incorrectly.

The battery

has very little

may be used

The battery is

fully charged.

charge and

but operates

power, or the battery has

status

parent unit is turned on. To shorten the charging

sensitivity level you set, your actual use and the age of the battery.

Action

Install the

parent unit

interruption

(at least

been installed 30 minutes).

Charge withou

Charge without

interruption

30 minutes).

(about

To keep

the battery

charged,

connect it to


when not in

AC power


You may test the baby monitor before initial use, after power outage, the parent unit powers on and at regular times thereafter.

### To test your baby monitor:

- 1. Place the parent unit and the baby unit in the same room to test the product. Make sure the baby unit is at least 1 meter / 3 feet away from the parent unit.
- 2. Slide  $\odot$  on the baby unit to turn it on.

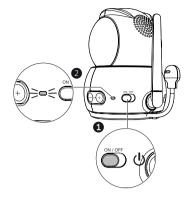

3. Upon initial use, the parent unit powers on automatically after connecting to AC power. The screen shows **vtech** and **Powering** 

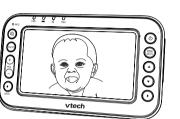

**⊘**NOTE


If both units are not connected, the parent unit displays and then No link to CAM # (# represents the selected baby unit number) on the screen. The LINK ight first flashes and then turns off. Move the parent unit closer to the baby unit

# Positioning the baby monitor


### This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such.

()CAUTION Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's

1. Place the baby unit at least 1 meter / 3 feet away from your baby. Adjust the angle of the camera to aim at your baby.

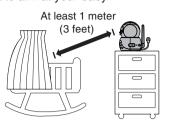

2. Place parent unit at least 1 meter / 3 feet away from the baby unit.

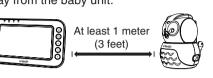

If you experience audio feedback on either the parent unit or baby unit, move the parent unit further away until there is no more audio feedback

### 


If you cannot hear the sounds transmitted from the baby unit, you can choose a higher sound sensitivity level and increase the speaker volume of the parent


# Operating range


The operating range of the baby monitor is up to 300 meters (1.000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions

# Overview

### Baby unit overview

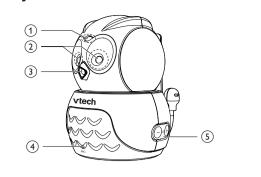

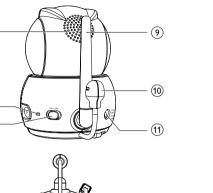

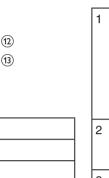

### Light sensor Infrared LEDs Camera Microphone -/VOL/+ Press to adjust the listening volume Speaker ON/OFF LED light On when the baby unit is turned on

and is paired to the parent unit. Flashes when the baby unit is pairing to the parent unit.

background noises) from

The parent unit speaker

turns on for soft babbling

and louder sounds from your

baby. It remains quiet when

your baby sleeps soundly.

The parent unit speaker

and louder sounds from

The parent unit speaker

sounds.

turns on for loud babbling

your baby. It remains quiet

when your baby makes soft

turns on for crying and louder

sounds from your baby. It

emains quiet when vour

baby makes soft sounds.

turns on for loud crying or

your baby. It remains quiet

when your baby makes soft

The parent unit speaker

screeching sounds from

your baby's room.

### **Temperature sensor** Power jack **Threaded socket** For wall mount installation use. Press and hold to pair to the parent unit when a desired baby unit slot is


chosen at the parent unit

Slide to turn on or off the baby unit.

ON/OFF switch

Antenna

### Parent unit overview

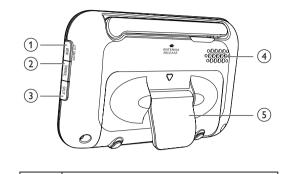

1	LCD ON/OFF
	<ul> <li>Press and hold to turn off the parer unit screen.</li> </ul>
	VIEW
	<ul> <li>Press to view the image of the next baby unit in SINGLE-CAM or PATROL mode.</li> </ul>
2	PATROL
	Press to turn on or off the PATROL mode.
3	SPLIT
	Press to turn on or off the SPLIT-VIEW mode.
4	Speaker
5	Stand

6	Antenna		
7	Indicate the different statuses of the parent unit. For details, refer to Parent unit lights.		
8	Microphone		
9	⊕ Zoom		
	While viewing image, press to zoom in or out.		
10	TALK		
	While viewing image, <u>press and hold</u> to talk to the selected baby unit.		
11	+/VOL/-		
	Press to adjust the speaker volume.		
12	Power jack		
13	<ul><li>◆BACK</li><li>• While in a menu, press to return to</li></ul>		
	the main menu or idle screen.		
	<ul> <li>While viewing image, press and hold to move the image leftward.</li> </ul>		
14	<b>்</b> On/off		
	Press and hold to power on.		
	Press and hold again to power off.		
15	MENU/SELECT		
	<ul> <li>Press to enter the menu.</li> </ul>		

While in a menu, press to choose an

item, or save a setting.

# While in a menu, press to scroll up While viewing image, press and ho to move the image upward. While in a menu, press to scroll While viewing image, press and ho to move the image downward. While in a menu, press to select a While viewing image, press and ho to move the image rightward. LCD display

ı	Parent unit lights					
	LINK	On when the parent unit is linked to the baby unit.				
		Flashes when the link to a baby unit is lost.				
	-	On when the parent unit is connected to AC power, or the battery is charging.				
		Flashes when the parent unit battery is low and needs charging.				
		Off when the parent unit is disconnected from AC power.				
	TALK	On when the parent unit is talking to the baby unit.				
	A	On when the speaker volume of the parent unit is turned off.				

# Parent unit display icons

]

### **Connection status** displays when strong signal strength is detected between the

- baby unit and the parent unit. or in displays when moderate or low signal strength is detected between the baby unit and the parent unit.
- T displays when the link between the baby unit and the parent unit is lost.

o. old	©2 or ©3 or ©4	<ul> <li>Displays the number of the baby unit that is being viewed when in SINGLE-CAM mode.</li> <li>Displays the highlighted baby unit when in SPLIT-VIEW mode.</li> </ul>
<u>old</u>		Patrol mode  • Displays when the parent unit is in PATROL mode.
	88	Split-view mode  • Displays when the parent unit is in SPLIT-VIEW mode.
<u>old</u>	2)	Night viewing  • Displays when the camera has activated the night viewing feature
	Q	Displays when the camera at the baby unit has zoomed in.
		Temperature alert  • Displays when the temperature alert is set on.
t	57°F or	Real-time temperature     Displays the real-time temperature of the selected baby unit.
ed	14 °C	
ed ng. / is	14 °C	Mute alert  Displays when the speaker volume is set to off.  Displays when SPLIT-VIEW mode is turned on.
ng.		Mute alert  Displays when the speaker volume is set to off.  Displays when SPLIT-VIEW mode
ng. y is	or	Mute alert Displays when the speaker volume is set to off. Displays when SPLIT-VIEW mode is turned on.  Sound level indicators Displays the sound level according to the scales of loudness when there is sound transmitted from
ng. y is	or	Mute alert Displays when the speaker volume is set to off. Displays when SPLIT-VIEW mode is turned on.  Sound level indicators Displays the sound level according to the scales of loudness when there is sound transmitted from the baby unit.  Speaker volume Displays the speaker volume level

displays solid when the battery

displays when the battery is

Displays when the parent unit is

connected to AC power without

low and needs charging.

is fully charged.

AC power

the battery

### Parent unit main menu icons Language



You can select a language (English, French or Spanish) to be used in all screen displays.



**Alert Tone** You can set the parent unit to beep



the parent unit operates in low battery condition;

the link between the parent unit and the baby unit is lost; or the baby unit detects sounds while in SPLIT-VIEW mode.




Sensitivity With this feature, you can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level the more sensitive the baby unit is in detecting sounds for transmitting to



**Temperature** You can turn on the temperature alert feature so that the parent unit beeps whenever the room temperature detected by the baby unit falls out of the desired temperature range. Vibration



You can turn on the vibration alert so that the parent unit vibrates when it receives Low battery tone. No link alert, Sound alert in split-view or **Temperature alert** after these alert Sound-ac Automatic

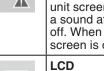

LCD You can change the brightness of the parent unit screen, or turn on the Dim Mode to save power.

for the baby unit from a pre-defined name list.



Pair/Unpair The baby unit and parent unit provided are already paired. You can add or replace baby units (VM314, ourchased separately) to your baby monitor system.

### Parent unit display messages

	CAM # (# represer the selected baby unit number).	out of range or is turned off.
	Battery low at Parent Unit	The battery level of the parent unit is very low and needs to be recharged.
	Battery empty. Powering off	The battery is empty and needs to be recharged.
	Sound detected at CAM (# represents the selected baby unit number).	The sound level exceeds the threshold at CAM # in SPLIT-VIEW mode.
	Temperature	The temperature detected

number).			
Temperature too low at CAM # (# represents the selected baby unit number).	The temperature detected from the selected baby unit is below the selected minimum temperature.		
Temperature too high at CAM #	The temperature detecte from the selected baby		

turned on.		unit is above the selected maximum temperature.
ctivated Screen cally turns on the parent en when a baby unit detects after the screen is turned n no sound is detected, the off to save power.	number).	
	Powering on	The parent unit is turning on.
	*	The parent unit is searching for baby units.

### Using the baby monitor You can choose a specific name

### Slide Φ upward to turn on the baby unit. The ON/OFF LED light turns on.

### Slide $\Phi$ downward to turn off the baby unit. The **ON/OFF** LED light turns off.

### Power on or off the parent unit • Press and hold $\Phi$ to turn on the parent unit.

- The screen turns on. Press and hold  $\odot$  again to turn off the
- parent unit. The screen turns off.

# Turn on or off the parent unit You can turn on or off the parent unit screen

without powering off the parent unit. You can still hear sound from the baby unit. Press and hold VIEW on the parent unit to

- turn off the screen. Press any key on the parent unit to turn on the screen again.

### Adjust speaker volume For parent unit:

 Press VOL+ or VOL- on the parent unit at any time when viewing images. **Ø**NOTE

When the parent unit speaker volume is set to zero,

) appears on the screen and the | light turns on.

# • Press **VOL+** or **VOL-** on the baby unit at

any time.

# Set the language

You can select a language (English, French or Spanish) to be used in all screen displays. 1. Press **MENU** when the parent unit is not in

- 2. Press ▼ or ▲ to choose Language, then press SELECT.
- 3. Press ▼ or ▲ to choose English, Français or Español, then press SELECT to confirm your selection.

### Adjust screen brightness You can change the brightness of the parent unit

2. Press ▼ or ▲ to choose LCD, then press

brightness, then press **SELECT** to confirm

The dim mode is preset to on to help you save

### screen from Level 1 to Level 5. Power on or off the baby unit 1. Press **MENU** when the parent unit is not in use.

SELECT. Press SELECT again to choose Brightness. 4. Press ▼ or ▲ to choose the desired level of

# your selection.

the parent unit power. Whenever the parent unit has been left idle for 10 minutes while the screen is still on, the screen will be dimmed automatically to save power. You can turn on or off the dim mode by the following steps.

Turn on or off the dim mode

- 1. Press **MENU** when the parent unit is not in
- 2. Press ▼ or ▲ to choose **LCD**, then press SELECT. 3. Press ▼ or ▲ to choose **Dim Mode**, then
- press **SELECT**. 4. Press ▼ or ▲ to choose **On** or **Off**, then press **SELECT** to confirm your selection.

### $\boldsymbol{\mathscr{G}}$ NOTE While the screen is dimmed, any keypress or alert

message will trigger the screen to return to the preset brightness level. After 10 minutes of idle, it will be dimmed again.

### Adjust the sound sensitivity of the baby unit You can choose to hear sounds from the baby

unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit from **Lowest** to **Highest**. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The sound sensitivity is preset

### Sound sensitivity table for reference Level Sensitivity Description

High

sensitivity

Highest

High

sound is detected within 50 seconds, the The parent unit speaker is parent unit screen will turn off automatically to constantly on, and you will hear all sounds (including When your baby detects a sound, the sound activation triggers the parent unit screen to turn

Turn on or off the sound activation

When sound activation is on, as long as no

on automatically. When no sound is detected within 50 seconds, the screen will be off again. . Press **MENU** when the parent unit is not in

- . Press ▼ or ▲ to choose
- SOUND-ACTIVATED SCREEN. then press SELECT. Press ▼ or ▲ to choose **On** or **Off**, then

If you mute the speaker while sound activation is on, then you hear a beep sound whenever the screen

To save your parent unit's power, you can press and hold VIEW to turn off the screen after you make any changes to your parent unit.

### If you need to turn on the parent unit screen for a long period of time, we reco to AC power.

### Monitoring mode 2. Press ▼ or ▲ to choose Sensitivity, then

press **SELECT**. If you have more than one baby unit, the system prompts you to choose the desired baby unit or all baby units, press ▼ or ▲ to choose ALL CAM or CAM #, then press SELECT.

3. Press ▼ or ▲ to choose the desired sensitivity level, then press **SELECT** to confirm your selection.

sensitivity sounds.

1. Press **MENU** when the parent unit is not in

You can adjust the baby unit placement to improve the sound detection.

Every time the parent unit is turned on, it displays a baby unit in SINGLE-CAM mode. If there are more than one baby units in your system, you can also monitor your baby in PATROL or SPLIT-VIEW mode.

**SINGLE-CAM** - The screen displays a single baby unit in full screen

**PATROL** — - A single cam view that transits to a different baby unit every 7 seconds. **SPLIT-VIEW** R- The screen displays all baby units (up to 4) on one screen.

### In SINGLE-CAM or PATROL mode:

- Press VIEW to view the next baby unit. • Press **PATROL** to switch between
- SINGLE-CAM mode and PATROL mode.
- Press SPLIT to enter the SPLIT-VIEW mode.

press SELECT to confirm your selection. The screen returns to main menu.

 Press ▲, ▼, ◀ or ▶ to select a baby unit. • Press 
or VIEW key to view the selected

Press PATROL to enter the PATROL mode.

- baby unit temporarily in **SINGLE-CAM** mode. It returns to SPLIT-VIEW mode after 10 seconds.
- Press **SPLIT** to return to **SINGLE-CAM** or PATROL mode
- **⊘**NOTE

The parent unit is muted while in SPLIT-VIEW mode.

### Zoom

You can zoom in or out while viewing image from baby unit in **SINGLE-CAM** mode.

- Press 

  to zoom in.
- Press and hold ▲, ▼, ◀ or ▶ to move the zoomed image upward, downward, leftward or rightward correspondingly.
- Press 
   ⊕ again to zoom out.

You can use the TALK function of the parent unit to comfort your baby in **SINGLE-CAM** mode.

- 1. Press and hold TALK on the parent unit. The TALK light turns on.
- 2. Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit.
- 3. Release the **TALK** key to stop the broadcast. The TALK light goes off.

# Set alert tone

### Low battery tone

You can set the parent unit to beep when the parent unit operates in low battery condition.

- 1. Press **MENU** when the parent unit is not in 2. Press ▼ or ▲ to choose Alert Tone, then
- press **SELECT**. 3. Press ▼ or ▲ choose Low Battery Tone,
- then press **SELECT** 4. Press ▼ or ▲ to choose On or Off, then press
- **SELECT** to confirm your selection.

### No link alert

You can set the parent unit to beep when the link between the parent unit and the baby unit is lost. 1. Press **MENU** when the parent unit is not in

- 2. Press ▼ or ▲ to choose Alert Tone, then 1. Press **MENU** when the parent unit is not in
- press **SELECT**
- 3. Press ▼ or ▲ to choose No Link Alert, then 4. Press ▼ or ▲ to choose **On** or **Off**, then press
- **SELECT** to confirm your selection.

### Sound alert in split-view

You can turn on the sound alert feature so that. while in SPLIT-VIEW mode, the parent unit beeps and displays Sound detected at CAM # whenever the baby unit detects sounds.

- 1. Press **MENU** when the parent unit is not in
- 2. Press ▼ or ▲ to choose Alert Tone, then press **SELECT** to select. 3. Press ▼ or ▲ to choose Sound alert in
- split-view, then press SELECT 4. Press ▼ or ▲ to choose On or Off, then press
- **SELECT** to confirm your selection.

# Monitor the temperature

To monitor the temperature of your baby's room, you can turn on the temperature alert feature on the parent unit. It beeps whenever the temperature detected by the baby unit falls out of the desired temperature range.

### Minimum temperature You can set the desired minimum room

temperature of the room temperature alert range. The minimum temperature can be set between 52 °F (11 °C) and 69 °F (20 °C).

- 1. Press **MENU** when the parent unit is not in 2. Press ▼ or ▲ to choose **Temperature**, then
- press **SELECT**. 3. Press ▼ or ▲ to choose Minimum, then press **SELECT**.
- If you have more than one baby unit. the system prompts you to choose the desired baby unit or all baby units, press ▼ or ▲ to choose ALL CAM or CAM #.
- then press **SELECT** 4. Press ▼ or ▲ to choose the desired temperature, then press **SELECT** to confirm

### Maximum temperature

You can set the desired maximum room temperature of the temperature alert range. The maximum temperature can be set between 70 °F (21 °C) and 86 °F (30 °C).

- 2. Press ▼ or ▲ to choose **Temperature**, then press **SELECT**
- 3. Press ▼ or ▲ to choose Maximum, then press **SELECT**
- If you have more than one baby unit. the system prompts you to choose the desired baby unit or all baby units, press

▼ or ▲ to choose ALL CAM or CAM #,

then press SELECT. Press ▼ or ▲ to choose the desired temperature, then press **SELECT** to confirm your selection.

### **Temperature alert**

You can set the parent unit to beep when the temperature is out of the preset temperature

- 1. Press **MENU** when the parent unit is not in 2. Press ▼ or ▲ to choose **Temperature**, then
- press SELECT 3. Press ▼ or ▲ to choose Alert Tone, then press **SELECT**
- If you have more than one baby unit, the system prompts you to choose the desired baby unit or all baby units, press ▼ or ▲ to choose ALL CAM or CAM #, then press **SELECT**
- 4. Press ▼ or ▲ to choose **On** or **Off**, then press **SELECT** to confirm your selection.

### **Temperature format**

You can choose to display the temperature in Fahrenheit (°F) or Celcius (°C).

- 1. Press **MENU** when the parent unit is not in
- 2. Press **▼** or **△** to choose **Temperature**, then press **SELECT**. 3. Press ▼ or ▲ to choose **Format**, then press
- Press ▼ or ▲ to choose Fahrenheit or Celsius, then press SELECT to confirm your selection.

You can turn on the vibration feature so that the parent unit vibrates when it receives **Low** battery tone. No link alert. Sound alert in split-view or Temperature alert after turning on these alert tones.

- 1. Press **MENU** when the parent unit is not in
- 2. Press ▼ or ▲ to choose Vibration, then press **SELECT**
- 3. Press ▼ or ▲ to choose Always on or Off.
- Always on The parent unit vibrates regardless of the speaker volume setting.
- Off The parent unit will not vibrate at all instance 4. Press **SELECT** to confirm your selection.

### Rename the baby unit

You can rename each baby unit. Once the baby unit is renamed, its new name together with the baby unit number will appear in the sub-menu of below options:

 Sensitivity Temperature

Vibration

- Rename Pair/Unpair
- 1. Press **MENU** when the parent unit is not in use.
- 2. Press ▼ or ▲ to choose **Rename**, then press SELECT. 3. Press ▼ or ▲ to choose the desired baby unit,
- then press **SELECT**.
- 4. Press ▼ or ▲ to choose the desired name for the baby unit, then press SELECT to confirm your selection.

# Night vision

The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit detects low light levels, the infrared LEDs are switched on automatically

### When the infrared LEDs are on, the image is in black and white. This is normal due to external light

aui suivent

sources.

Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds the display resolution may vary. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display

For cETL compliance only

Lorsque vous utilisez votre appareil, vous devriez

toujours suivre certaines mesures de précaution

d'électrocution et de blessures corporelles, dont ceux

Ce produit a été concu pour être un dispositif

Observez toutes les instructions et mises en garde

d'appoint seulement. Il n'est pas le remplacement

d'une supervision responsable et adéquate par un

adulte et ne devrait pas être utilisé comme telle.

4. Ce produit n'est pas conçu pour être utilisé en tant

5. N'utilisez pas cet appareil près de l'eau ni de toute

MISE EN GARDE: Il peut y avoir un risque

autre source d'humidité, par exemple, près d'une

baignoire, cuve à lessive, évier de cuisine, dans

un sous-sol humide ni près d'une piscine, dans un

pour l'unité du parent. N'utilisez que le bloc-piles

rechargeable inclus ou le bloc-piles de rechange

(BT198555/BT298555). N'incinérez pas les piles.

usées selon les renseignements suivant le sceau

Celles-ci risqueraient d'exploser. Jetez les piles

N'utilisez que les adaptateurs inclus avec ce

produit. L'utilisation d'un adaptateur dont la

polarité ou la tension serait inadéquate risque

d'endommager sérieusement le produit et mettre

Adaptateur de l'unité du bébé : Entrée 100-240V

Adaptateur de l'unité du parent : Entrée 100-240V

CA 300mA 50/60 Hz; Sortie: 5V CC 1000mA

CA 300mA 50/60 Hz; Sortie: 5V CC 1000mA

PRISE DE COURANT, la prise de courant doit

être installée près du produit, afin d'assurer une

les adaptateurs secteur ont été concus pour être

orientés correctement, soit à la verticale ou au

pour supporter le poids du bloc d'alimentation et

le maintenir en place si celuici est branché dans

une prise au plafond, sous une table ou dans un

Ne coupez pas les cordons d'alimentation pour

remplacer les fiches, car ceci peut présenter un

plancher. Les broches n'ont pas été conçues

Débranchez ce produit de la prise de courant

accessibilité sécuritaire à la prise de courant.

Pour les PRODUITS À BRANCHER À UNE

de base afin de réduire les risques d'incendie.

L'installation par un adulte est requise

soussol humide ou une douche.

du RBRC®

votre sécurité en péril

danger potentiel.

Mesures de sécurité importantes

inscrites sur l'appareil

# Add new baby unit (VM314)

The baby units and parent unit provided are already paired. You can add or replace any baby units (VM314 purchased separately) to your video and audio monitor system. You can pair a maximum of four baby units to your parent unit.

comes with your VM314 new baby unit.

follow these guidelines:

- fluorescent lamps). • DO NOT expose it to direct sunlight or moisture.
- DO NOT immerse the parent unit and the baby unit
- in water and do not clean them under the tap. DO NOT use cleaning spray or liquid cleaners.
- before you connect them to the mains again.

# Storage

some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

### The ON/OFF Frequently asked questions

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your question, visit our website at www.vtechphones.com or contact 1 (800) 595-9511 for customer service.

baby monitor

Why does the Try the following (in the order listed)

for common sure:

not respond normally?	<ol> <li>Disconnect the power to the baby units and the parent unit.</li> <li>Remove the batteries in the parent unit. Then install the batteries again.</li> <li>Wait a few minutes before connecting power back to the baby units and the parent unit.</li> <li>Turn on the baby units and the parent unit.</li> <li>Wait for the parent unit to synchronize with the baby units. Allow up to one minute for this to take place.</li> </ol>			CAM, then press SELECT.  4. Press ▼ or ▲ to choose an empty baby unit slot, then press SELECT. The parent unit screen displays Press and hold the pair button at the CAM for 5 seconds until the power indicator flashes  5. Immediately press and hold PAIR on the bottom of the baby unit with a narrow pointed object such as a pencil. The LED light flashes quickly.  When pairing is successful, the
Why don't the power-on light of the baby unit and parent unit go on when I switch on the	Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press O to switch on the parent unit and to establish connection with the baby unit.			screen displays the view of newly paired baby unit in SINGLE-CAM mode. The LED light on the new baby unit remains on.  If pairing fails, the screen displays Pairing failed. Try the pairing process again.  Only one baby unit can be paired
units?	Perhaps the baby unit is not connected to the mains. Connect the baby unit to the mains. Then set the O switch to ON to switch on the baby unit and to establish		Why does the parent unit beep?	at a time.  The baby units may be out of range.  Move the parent unit closer to the baby units (but not less than 3 feet).
Why doesn't my parent unit charge while connected to	connection with the parent unit.  Make sure the power is not controlled by a wall switch.  You may have used the battery for			If the parent unit is powered by the provided battery, it may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit for up to
AC power? Why is my screen in black and	a long time. Replace a new battery.  The screen is in black and white during nighttime or in a dark room. This is normal due to external light sources.  The screen is in black and white during nighttime or in a dark room, the surroundings and other interfering factors, like lightings, en objects, colors and backgrounds may affect the image quality on			3 hours.  If your parent unit is in <b>SPLIT-VIEW</b> mode, some of your baby units may detect sounds.
white? Why do I get				The temperature of your baby's room may be too high or too low.
glare or blurry display on my screen when viewing my baby at night?			Why does the parent unit beep/vibrate frequently in SPLIT-VIEW mode?	You may have set the sound sensitivity level to level 5 when the sound alert (and vibration) feature are turned on. The parent unit notifies you of all sounds including background noise with beeps (or vibrations). Adjust the sound sensitivity to a lower level.
Why does the baby monitor produce a high-pitched noise?	The units may be too close to each other. Make sure the parent unit and the baby unit at least 1 meter/3 feet away from each other.		Why does the parent unit react too quickly to other sounds?	The baby unit also picks up other sounds than those of your baby. Adjust the sensitivity level to a lower level or adjust the speaker volume on the parent unit.
			1	1

# light on the aby unit lashes and the parent un lisplays T.

- The baby unit is unpaired from the parent unit Make sure both parent unit and
- paby unit are on before pairing. Press **MENU** when the parent unit is not in use. Press ▼ or ▲ to choose
- Pair/Unpair CAM, then press SELECT Press ▼ or ▲ to choose Pair CAM, then press SELECT. ▼ or ▲ to choose an
- unit slot, then SELECT. The parent unit displays Press and hold air button at the CAM econds until the powe tor flashes.. diately press and hold
- on the bottom of the unit with a narrow pointe such as a pencil. The ght flashes quickly. ring is successful, the splays the view of nev by unit in SINGLE-CAM

- g fails, the screer s Pairing failed. Try the product. process again.
  - This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
    - This product is not intended for use as a medical
    - basement or shower. CAUTION: Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the parent unit. Use only the supplied rechargeable battery or replacement battery pack (BT198555/BT298555)
    - Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product. Baby unit power adapter: Input 100-240V AC 300mA 50/60 Hz; output: 5V DC 1000mA Parent unit power adapter: Input 100-240V AC
    - The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
    - be installed near the equipment and shall be easily accessible.

have been removed, altered or rendered illegible; or

. Product purchased, used, serviced, or shipped for

7. Product returned without a valid proof of purchase

- 10. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. Unplug the power cords before replacing batteries.
- 12. Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.
- Do not allow anything to rest on the power cords. Do not install this product where the cords may be
- walked on or crimped 14. This product should be operated only from the type of power source indicated on the marking label.
- If you are not sure of the type of power supply in your home, consult your dealer or local power company.
- Do not overload wall outlets or use an extension cord. 16. Do not place this product on an unstable table,
- shelf, stand or other unstable surfaces.
- 17. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. 18. Never push objects of any kind into this product
- through the slots because they may touch dangerous voltage points or create a short circuit Never spill liquid of any kind on the product. 19. To reduce the risk of electric shock, do not
- disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently 20. You should test the sound reception every
- time you turn on the units or move one of the components 21. Periodically examine all components for damage.
- 22. Be aware of possible loss of privacy while using public airwaves. Conversations may be picked up by other nursery monitors, cordless phones scanners, etc.
- do not play with the product.
- 24. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

# SAVE THESE INSTRUCTIONS

- Cautions I. Use and store the product at a temperature between 32°F and 104°F.
- or direct sunlight. Do not put the product close to a heating source 3. Batteries should not be exposed to excessive heat such as bright sunshine or fire.

4. Make sure the baby unit(s) and the adapter cord(s)

2. Do not expose the product to extreme cold, heat

- are always out of reach of the baby, at least 3 feet away from the baby or crib, to avoid a possible strangulation hazard. 5. Never place the baby unit(s) inside the baby's crib
- or playpen. Never cover the baby unit(s) or parent unit with anything such as a towel or a blanket. 6. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms,

room monitors, televisions, personal computers,

kitchen appliances and cordless telephones.

### Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

- Should keep wireless devices at least six inches from the pacemaker Should NOT place wireless devices directly over the
- WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

pacemaker, such as in a breast pocket, when it is

### Electromagnetic fields (EMF) This VTech product complies with all standards

regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

# The RBRC® seal

your selection

The RBRC® seal on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives when taken out of service within the United States and

to placing used lithium-ion batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY® for information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and



# FCC and IC regulations

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception. which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and
- circuit different from that to which the receiver is
- **WARNING:** Changes or modifications to this equipment not expressly approved by the party authority to operate the equipment.

The RBRC® program provides a convenient alternative



RBRC® and 1 (800) 8 BATTERY® are registered trademarks of the Rechargeable Battery Recycling Corporation

- Connect the equipment into an outlet on a
- Consult the dealer or an experienced radio/TV technician for help.

responsible for compliance could void the user's

conserving natural resources.

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumption. 9. Your baby monitor is set up to comply with the energyconserving standards right out of the box.

while charging. Even if the parent unit is paired to baby units, the CEC battery charging testing mode is activated while it is powered off and charging.

this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the

FCC criteria. The baby unit shall be installed and used

such that parts of all persons' body are maintained at

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions: (1)

a distance of approximately 8 in (20 cm) or more. The transmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from your face. This Class B digital apparatus complies with Canadian

### CAN ICES-3 (B)/NMB-3(B)

**Industry Canada** This device complies with Industry Canada licence-

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation. The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada

The baby unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with a minimum distance of 8 in (20 cm) between the baby unit and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

# California Energy Commission ittery charging testing mode

Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated

10. Débranchez les cordons d'alimentation avant de emplacer le bloc-piles.

### Ne laissez aucun objet reposer ni appuver sur le cordon d'alimentation. N'installez pas cet appareil d'alimentation ou de le piétiner

- marchand ou votre compagnie locale d'électricité. 14. Ne surchargez pas les prises de courant murales
- trépied, support de montage ni table chancelants. de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et n'empêchez pas l'aération adéquate de l'appareil en le plaçant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni au-dessus d'une source de chaleur ou d'un calorifère. De plus, ne placez pas
- de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits aui peuvent dégénérer en incendies ou en risques d'électrocution. Ne renversez jamais de liquide dans ce produit.
- 18. Afin de réduire les risques d'électrocution, ne in centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contient cet appareil, à l'exception de l'accès autorisé à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter des risques d'électrocution.
- celles-ci ne sont pas endommagées. 21. Sovez avisé de la perte de la confidentialité 8. Lorsqu'ils sont branchés dans une prise de courant, conversations peuvent être entendues par d'autres moniteurs de bébé, des téléphones sans fil, des

20. Examinez les composantes afin de vérifier si

vous mettez l'appareil en fonction.

23. Le produit n'est pas concu pour être utilisé par des à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

For more details, refer to the user's manual that

# General product care

To keep this product working well and looking good, Avoid putting it near heating appliances and devices

- that generate electrical noise (for example, motors or
- Avoid dropping the product or treating it roughly. Clean with a soft cloth.
- Make sure the baby unit and parent unit are dry

When you are not going to use the baby monitor for

### Mises en garde

- Utilisez et entreposez le produit à une température entre 0° C (32°F) et 40°C (104° F).
- du soleil. Ne l'installez pas près d'une source de Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au feu. Assurez-vous que le moniteur et le cordon

N'exposez pas cet appareil à des froids ou des

chaleurs extrêmes, ainsi qu'à la lumière directe

l'enfant ou du berceau, pour éviter tout risque de strangulation Ne jamais placer le moniteur à l'intérieur du

de l'adaptateur sont toujours hors de portée

des enfants, à au moins 1 mètre (3 pieds) de

une serviette ou une couverture. D'autres équipements électroniques peuvent produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre électroniques tels que des routeurs sans fil, radios, téléphones cellulaires, interphones. moniteurs, téléphones, ordinateurs personnels,

# l'organisme

Wireless Technology Research, LLO (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins:

### Avis aux détenteurs de stimulateurs cardiaques Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque.

• Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en

identifié de risque pour les détenteurs de simulateurs

cardiaques causés par les gens qui utilisent dispositifs

# Champs électromagnétiques (EMF)

sans fil à proximité de ceux-ci.

standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant de nombreuses années, **CONSERVEZ CES INSTRUCTIONS** disposons aujourd'hui.

What does this limited warranty cover?

service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement

### How long is the limited warranty period? The limited warranty period for the Product extends

to take approximately 30 days.

warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

### What is not covered by this limited warranty? This limited warranty does not cover

- 2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
- cable or antenna systems; or 4. Product to the extent that the problem is caused by

increase the volume. You may have set a low sound ensitivity level. See Adjust the sound sensitivity of the baby unit to change the setting. Why can't I he baby units may be out of range. Move the parent unit closer to the onnection paby units (but not less than 3 feet) Why is the Other electronic products may ost every nov ause interference with your baby

The parent unit speaker volume

monitor. Try installing your baby

nonitor as far away from these

electronic devices as possible.

nay be too low or off. Press VOL+

# nportant safety structions

Why don't I

and then?

here sound

nterruptions?

near a sound

should always be followed to reduce the risk of fire, electric shock and injury, including the following: Follow all warnings and instructions marked on the

Adult setup is required.

When using your equipment, basic safety precautions

- Do not use this product near water. For example do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet
- for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used battery 23. Children should be supervised to ensure that they according to the information in The RBRC® seal.
- For pluggable equipment, the socket-outlet shall
  - fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) ndirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or

Limitations: Implied warranties, including those of

# To obtain warranty service in the USA, please visit

user's manual - a check of the Product's controls and features may save you a service call.	rechnical specifications		
Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges	Frequency control	Crystal controlled PLL synthe	
incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation,	Transmit frequency	Baby unit: 2406 - 2475 MHz Parent unit: 2406 - 2475 MHz	
delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product	Channels	24	
in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you	LCD	4.3" Color LCD (WQVGA 480x272 pixel)	
and will request that you authorize the cost of repair	Nominal	Maximum power allowed by	

are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an mplied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or imitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Transmit frequency	Baby unit: 2406 - 2475 MHz Parent unit: 2406 - 2475 MHz
Channels	24
LCD	4.3" Color LCD (WQVGA 480x272 pixel)
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirements	Parent unit: 3.7V Li-polymer battery Baby unit power adapter: Input: 100-240V AC 300mA 50/60Hz Output: 5V DC @ 1000mA

Parent unit power adapter

Output: 5V DC @ 1000mA

Input: 100-240V AC 300mA 50/60Hz

Specifications are subject to change without notice.

© 2015 for VTech Communications, Inc. All rights reserved. 11/15. VM344-X\_CIB\_V1.0

### avant de procéder au nettoyage. N'utilisez pas de nettoyants en aérosols. Utilisez un chiffon humide pour le nettoyer.

scanneurs, etc.

dans un endroit où l'on risque d'écraser le cordon 13. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquette. Si vous

ne connaissez pas le type d'alimentation que

vous possédez à votre domicile, consultez votre

- ni les rallonges électriques. 15. Ne placez pas cet appareil sur un chariot, meuble, 16. Les trous et ouvertures du boîtier, situés à l'arrière
- l'appareil dans un endroit avant de vous assurer qu'il y ait une bonne circulation d'air 17. N'enfoncez jamais d'objets à travers les ouvertures d'explosion si vous utilisez le mauvais type de piles
  - démontez pas cet appareil, mais apportez-le dans

19. Vous devriez tester la réception chaque fois que

lorsque vous utilisez les ondes publiques. Les

22. Les enfants devraient être supervisés afin de vous

assurer qu'ils ne jouent pas avec l'appareil.

personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances,

berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portative avec un article tel moniteur vidéo ou audio à l'écart des appareils

# Stimulateurs cardiaques implantés dans

électroménagers et téléphones sans fil.

Les simulateurs cardiaques (ne s'applique qu'aux

# L'étude effectuée par l'organisme WRS n'a pas

Ce produit de VTech est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) selon les meilleures évidences scientifiques dont nous

# <u>Limited warranty</u>

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating

### United States of America and Canada. What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective

# During the limited warranty period, VTech's authorized

### for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited

1. Product that has been subjected to misuse accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion: or

3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or

use with non-VTech accessories; or 5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers

ne baby unit can be paired units may be out of range parent unit closer to the (but not less than 3 feet ent unit is powered by the pattery, it may not have narge for the parent unit to ormally. Charge the the parent unit for up to rent unit is in SPLIT-VIEW

300mA 50/60 Hz; output: 5V DC 1000mA.

repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or

### 8. Charges for installation or set up, adjustment of istomer controls, and installation or repair of systems outside the unit. instructions. This limited warranty extends only to the How do you get warranty service? Consumer for Products purchased and used in the

our website at www.vtechphones.com or

www.vtechcanada.com or call 1 (800) 267-7377

1. Return the entire original package and contents

along with a description of the malfunction or

including the Product to the VTech service location

prior to any further repair activity. You must pay for the

call 1 (800) 595-9511. In Canada, go to

(see item 2 on the next page); or

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume th risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replace Product under this limited warranty. Transportation delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this

### cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty. What must you return with the Product to get

2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing

address, and telephone number.

### This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product.

Other limitation

difficulty; and

The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

VTech provides no other warranties for this Product.

# Please retain your original sales receipt as proof of purchase