
# vtech

User's manual VM343

## Safe & Sound Pan & Tilt Full Color Video monitor



## Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com.


Register online to get an additional 3-month warranty!

Visit www.vtechphones.com.



Registration Register your product online for enhanced warranty support. فلل .

Product news Learn about the latest VTech products.

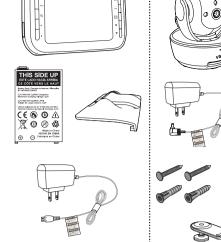


## istall the battery

You can power up the parent unit by connecting it to AC power or to the rechargeable battery provided. Even if the parent unit is connected to AC power, we recommend you also install the battery. This guarantees continual operation in case of a power outage Install the battery as shown below.


1. Press down on the large tab of the battery

compartment cover and pull it out.

With the label THIS SIDE UP facing up, insert the small tabs of the battery into the slots inside the battery compartment. Make sure the metallic contact is correctly oriented as shown below. Push the battery into the battery compartment until it clicks securely into place.



3. Align the battery compartment cover flat against the battery compartment, then slide it towards the center of the parent unit until it clicks into place.

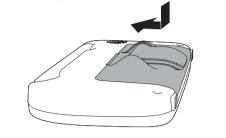

## **Replace the battery**

To replace the battery, press down on the large tab of the battery compartment cover and pull it out, then follow the steps above to install the batterv

## **O**NOTES


- The operating time for using the rechargeable battery is short. If you want to monitor your baby for a long time, we recommend you connect the parent unit to AC power.
- If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.


## Connect and charge the oattery

## **P**NOTES

- Use only the battery supplied with this product. • Use only the power adapters supplied with this
- product.
- Make sure the electrical outlets are not controlled by wall switches.
- The power adapter are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if they are plugged into a ceiling, under-the-table or cabinet outlet
- Make sure the parent unit, the baby unit and the power adapter cord are out of reach of children.


## Connect the baby monitor

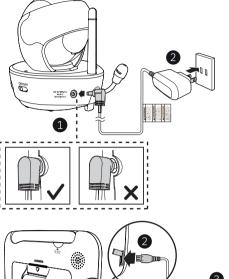

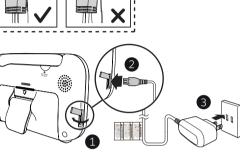

off to save power.

10		Parer	nt unit lights		Night viewing	Parent	unit main menu icons	Brig
	While in a menu, press to select a feature.	LINK	On when moderate or high signal strength is detected between the	÷	<ul> <li>Displays when the camera has activated the night viewing feature.</li> </ul>		Language You can select a language (English,	You the
	• While viewing image, <u>press and hold</u> to move the image rightward.		parent unit and the selected baby unit. Flashes when low signal strength is	2	Zoom		French or Spanish) to be used in all screen displays.	Rer
11	<ul> <li>While in a menu, press to return to</li> </ul>		detected between the parent unit and the selected baby unit.		<ul> <li>Displays when the camera at the baby unit has zoomed in.</li> </ul>		Alert tone	for t
	<ul> <li>While in a menu, pless to retain to the main menu or idle screen.</li> <li>While viewing image, <u>press and hold</u> to move the image leftward.</li> </ul>		Off when the parent unit is turned off, or the link to the selected baby unit is lost.	<b>B</b> W	<ul><li>Temperature alert</li><li>Displays when the temperature alert is set on.</li></ul>		<ul> <li>You can set the parent unit to beep when</li> <li>the parent unit operates in low battery condition;</li> </ul>	nan Pair The
12	VIEW	-	On when the parent unit battery is	57 °F	Real-time temperature		• the link between the parent unit	add
	Press to view the image of the next registered baby unit in SINGLE-CAM mode.		charging. Flashes when the parent unit battery is low and needs charging.	or 14 °C	Displays the real-time temperature of the selected baby unit.		<ul> <li>and the baby unit is lost; or</li> <li>the baby unit detects sounds while in SPLIT-VIEW mode.</li> </ul>	pure mor
	<ul> <li><u>Press and hold</u> to turn off the parent unit screen.</li> <li>PATROL</li> </ul>		Off when the parent unit is turned off, charged without battery, or when the battery inserted is fully charged or not	<b>₩</b> \$	<ul> <li>Mute alert</li> <li>Displays when the speaker volume is set to off.</li> </ul>		Sensitivity With this feature, you can choose	Parent uni
	Press to turn on or off the <b>PATROL</b>		being charged.		• Displays when <b>SPLIT-VIEW</b> mode		to hear sounds from the baby unit all the time, or to hear sounds that	Ro link to
	function. SPLIT	TALK	On when the parent unit is talking to the baby unit.		is turned on.		exceed a certain level. You can use the parent unit to adjust the	CAM # (# repre
	Press to turn on or off the     SPLIT-VIEW mode.	×	On when the speaker volume of the parent unit is turned off.	or	<ul> <li>Sound level indicators</li> <li>Displays the sound level according to the scales of loudness when</li> </ul>		microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in	the selected ba unit number).
13	+/VOL			للنس	there is sound transmitted from the baby unit.		detecting sounds for transmitting to the parent unit.	I Battery Io Parent Unit
	Press to increase the speaker volume.	Parer	nt unit display icons		Speaker volume		Temperature	
14	-/VOL	Til	<ul> <li>Connection status</li> <li>Till displays when strong signal</li> </ul>		<ul> <li>Displays the speaker volume level while adjusting.</li> </ul>		You can turn on the temperature	Battery empty.
	Press to decrease the speaker volume.		strength is detected between the baby unit and the parent unit.	0	ECO mode <ul> <li>Displays when there is only one</li> </ul>		alert feature so that the parent unit beeps whenever the room temperature detected by the	Powering off
15	• Press to enter the menu.		<ul> <li>T<sub>I</sub> or T<sub>I</sub> displays when moderate or low signal strength is detected between the baby unit and the</li> </ul>		paired baby unit and the low radiation mode is in use.		baby unit falls out of the desired temperature range.	detected at CA (# represents th
	• While in a menu, press to choose an item, or save a setting.		parent unit. • ▼ displays when the link between		Batterv status		Vibration You can turn on the vibration alert so	selected baby u number).
16			the baby unit and the parent unit is lost.		•		that the parent unit vibrates when	
	<ul> <li>While in a menu, press to scroll up.</li> <li>While viewing image, press and hold</li> </ul>				<ul> <li>Imm displays solid when the battery is fully charged.</li> </ul>		<ul> <li>the baby unit detects sounds while in SPLIT-VIEW mode;</li> </ul>	Temperatu too low at CAM
	to move the image upward.	01 or 2 or 3 or 04	<ul><li>Current view status</li><li>Displays the number of the baby</li></ul>		<ul> <li>Implays when the battery is</li> </ul>		• the link between the parent unit	(# represents the selected baby
17	▼	a or	unit that is being viewed when in <b>SINGLE-CAM</b> mode.		low and needs charging.		<ul><li>and the baby unit is lost; or</li><li>the temperature detected by the</li></ul>	number).
	<ul> <li>While in a menu, press to scroll down.</li> <li>While viewing image, press and hold</li> </ul>		<ul> <li>Displays the highlighted baby unit when in SPLIT-VIEW mode.</li> </ul>	Чо	<ul> <li>AC power</li> <li>Displays when the parent unit is connected to AC power without</li> </ul>		baby unit falls out of the preset temperature range.	Temperatu
	to move the image downward.	Pot	Patrol mode		the battery.		Sound-activated screen	too high at CAN (# represents t
			Displays when the parent unit is in	L			Automatically turns on the parent unit screen when a sound is	selected baby number).
			PATROL mode.				detected in your baby's room. When	Powering on
							no sound is detected, the screen is	

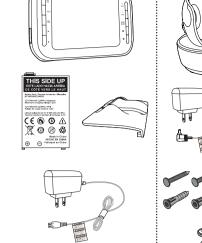

What's in the box

## Charge the parent unit battery

Once you have connected the parent unit and installed its battery, the parent unit powers on automatically. The battery icon indicates the battery status (see the following table).

### The parent unit battery is fully charged after 12 hours of continuous charging.

**O**NOTES

 It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging. The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery

Battery indicators	Battery status	Action
The battery icon is off and to displays.	No battery is installed but operates using AC power, or the battery has been installed incorrectly.	Install the parent unit battery. Charge without interruption (at least 30 minutes).
The screen displays Battery low at Parent Unit and I The Iight flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid IIII.	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

## efore use

You may test the baby monitor before initial use, and at regular times thereafter. To test your baby monitor:

### 1. Place the parent unit and the baby unit in the same room to test the product. Make sure the baby unit is at least 1 meter / 3 feet away from the parent unit.

2. Slide **ON/OFF** on the baby unit to turn it on.



3. Upon initial use, the parent unit powers on automatically after connecting to AC power. The screen shows **vtech**<sup>®</sup> and **Powering** on...



**O**NOTE

Linking...


If both units are not connected, the parent unit displays No link to CAM # (# represents the selected baby unit number) and Linking ... on the screen. The LÍNK light first flashes and then turns off. Move the parent unit closer to the baby unit.

## Positioning the baby monitor


This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such. ()CAUTION

Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's crib or playpen.

1. Place the baby unit at least 1 meter / 3 feet away from your baby.

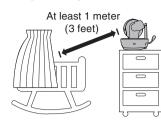

2. Place parent unit at least 1 meter / 3 feet away from the baby unit.



### **O**NOTE

If you experience audio feedback on either the parent unit or baby unit, move the parent unit further away until there is no more audio feedback.

## 


You can increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the baby unit.

## **Operating range**

The operating range of the baby monitor is up to 300 meters (1,000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.


## Overview

## Baby unit overview

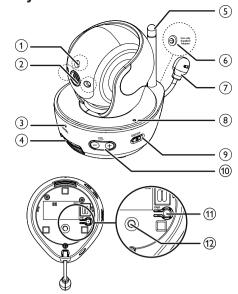

1	Infrared LEDs
2	Camera
3	Microphone
4	Speaker
5	Antenna
6	Power jack
7	Temperature sensor
8	<ul> <li>ON/OFF LED light</li> <li>On when the baby unit is turned on and is paired to the parent unit.</li> <li>Flashes when the baby unit is pairing to the parent unit.</li> </ul>
9	<ul><li>ON/OFF switch</li><li>Slide to turn on or off the baby unit.</li></ul>
10	<ul><li>-/VOL/+</li><li>Press to adjust the listening volume.</li></ul>
11	<ul> <li>PAIR</li> <li>Press and hold to pair to the parent unit when a desired baby unit slot is chosen at the parent unit.</li> </ul>
12	<ul><li>Threaded socket</li><li>For wall mount installation use.</li></ul>

## Parent unit overview

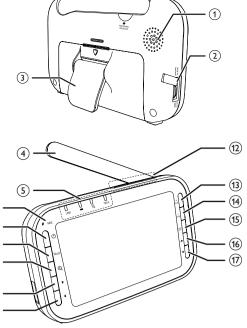

1	Speaker
2	Power jack
3	Stand
4	Antenna
5	<ul> <li>LED lights</li> <li>Indicate the different the parent unit. For de Parent unit lights.</li> </ul>
6	Microphone
7	<ul> <li>On/off</li> <li>Press to power on.</li> <li>Press and hold to po</li> </ul>
8	<ul> <li>TALK</li> <li>While viewing image to talk to the selected</li> </ul>
9	<ul> <li>Zoom</li> <li>While viewing image in or out.</li> </ul>

## **Brightness**

You can change the brightness of the parent unit screen.

## Rename

You can choose a specific name for the baby unit from a pre-defined name list.

## Pair/unpair

The baby unit and parent unit provided are already paired. You can add or replace baby units (VM305, purchased separately) to your baby monitor system.

## nt unit display messages

o link to (# represents ected baby mber).The selected baby unit is out of range or is turned off.attery low at UnitThe battery level of the parent unit is very low and needs to be recharged.y empty. ing offThe battery is empty and needs to be recharged.Sound ed at CAM # esents the id baby unit r).The sound level exceeds the threshold at CAM # in SPLIT-VIEW mode.mperature v at CAM # esents the id baby unit r).The temperature detected from the selected baby unit is below the selected minimum temperature.mperature h at CAM # esents the id baby unit r).The temperature detected from the selected baby unit is above the selected maximum temperature.mperature h at CAM # of baby unit r).The temperature detected from the selected baby unit is above the selected maximum temperature.mperature n.The temperature detected from the selected baby unit is above the selected maximum temperature.		
Altery low at Unitthe parent unit is very low and needs to be recharged.V empty. ing offThe battery is empty and needs to be recharged.Sound ed at CAM # esents the d baby unitThe sound level exceeds the threshold at CAM # in SPLIT-VIEW mode.mperature v at CAM # esents the d baby unit r).The temperature detected from the selected baby unit is below the selected minimum temperature.mperature h at CAM # esents the d baby unit r).The temperature detected minimum temperature.mperature h at CAM # esents the d baby unit r).The temperature detected minimum temperature.mperature h at CAM # cl baby unit r).The temperature detected from the selected baby unit is above the selected maximum temperature.mperature h at CAM # cl baby unitThe temperature detected from the selected baby unit is above the selected maximum temperature.mperature from the selected baby unit is above the selected maximum temperature.	(# represents ected baby	out of range or is turned
ing offThe battery is ompty and needs to be recharged.Sound ed at CAM # esents the 		the parent unit is very low and needs to be
ed at CAM #The sound level exceedsthe threshold at CAM # inSPLIT-VIEW mode.The temperature detectedthe temperature detectedd baby unitThe temperature detectedmperatureThe temperature detectedmperatureThe temperature detectedmperatureThe temperature detectedminimum temperaturethe parent unit is turning		
Imperature r at CAM # (r at CAM # esents the 	ed at CAM # esents the ed baby unit	the threshold at CAM # in
from the selected baby unit is above the selected d baby unit r). ing on The parent unit is turning	at CAM # esents the d baby unit	from the selected baby unit is below the selected
	h at CAM # esents the ed baby unit	from the selected baby unit is above the selected
	ing on	

## Using the baby monitor

Power on or off the baby unit

The parent unit is

when the link is lost.

searching for baby units

- Slide **ON/OFF** to the left to turn on the baby
- unit. The ON/OFF LED light turns on.
- Slide **ON/OFF** to the right to turn off the baby unit. The **ON/OFF** LED light turns off.

## Power on or off the parent unit

- Press 0 to turn on the parent unit. The **LINK** liaht turns on
- <u>Press and hold</u>  ${f U}$  again to turn off the parent unit. The **LINK** light turns off.

## Turn on or off the parent unit screen

You can turn on or off the parent unit screen without powering off the parent unit. You can still hear sound from the baby unit.

- Press and hold **VIEW** on the parent unit to turn off the screen.
- Press any key on the parent unit to turn on the screen again.

## Adjust speaker volume

For parent unit: • Press VOL+ or VOL- on the parent unit at any time when viewing images.

## **B**NOTE

When the parent unit speaker volume is set to zero,  $\mathbf{M}$  appears on the screen and the  $\mathbf{M}$  light turns on.

## For baby unit:

• Press VOL+ or VOL- on the baby unit at any time.

## Set the language

You can select a language (English, French or Spanish) to be used in all screen displays.

- 1. Press **MENU** when the parent unit is not in
- 2. Press ▼ or ▲ to choose LANGUAGE, then press SELECT.
- 3. Press ▼ or ▲ to choose English, Français or **Español**, then press **SELECT** to confirm your selection.


## Adjust screen brightness

You can change the brightness of the parent unit screen from Level 1 to Level 5.

- Press **MENU** when the parent unit is not in use. 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **BRIGHTNESS**, then
- press SELECT. 3. Press ▼ or ▲ to choose the desired level of brightness, then press **SELECT** to confirm your selection.

## Adjust the sound sensitivity of the baby unit

You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit from Level 1 to Level 5. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The sound sensitivity is preset to Level 3.

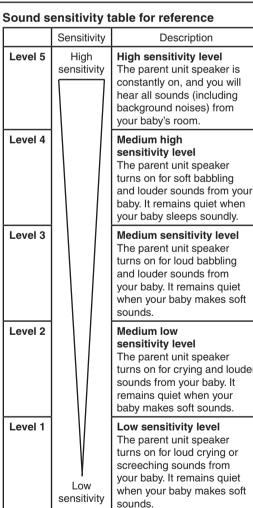

1. Press **MENU** when the parent unit is not in

- 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **SENSITIVITY**, then press SELECT.
- If you have more than one baby unit, the system prompts you to choose the desired baby unit or all baby units, press ▼ or ▲ to choose All CAM or CAM #, then press SELECT.
- 3. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose the desired sensitivity level, then press **SELECT** to confirm your selection.

## 

You can adjust the baby unit placement to improve the sound detection

## Turn on or off the sound activation

The parent unit continuously me level in your baby's room. Whe activation mode is on, the pare turns on when the baby unit de

As long as no sound is detecte 50 seconds, the parent unit scr save power. When your baby s sound activation triggers the pa automatically turns on.

- . Press MENU when the parent unit is not in
- Press ▼ or ▲ to choose SOUND-ACTIVATED SCREEN, then press SELECT
- 3. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **On** or **Off**, then press SELECT to confirm your selection. **O**NOTES
- If you mute the speaker while sound activation is on, then you hear a beep sound whenever the screen turns on.
- If you want to turn on the parent unit screen continuously while the sound activation is on, then set the sound sensitivity to Level 5.

## Monitoring mode


Every time you turn on the parent unit, you enter the SINGLE-CAM mode. The screen displays image of a particular baby unit in full screen. If there are more than one baby units in your system, you can also monitor in the **SPLIT-VIEW** mode, where the screen displays a maximum of four baby units in one screen.

## In SINGLE-CAM mode:

- Press VIEW repeatedly to view images of other baby units.
- Press **PATROL** to display images from different baby units in every 7 seconds. Press again to turn off the patrolling function.
- Press SPLIT key to enter the SPLIT-VIEW

## In SPLIT-VIEW mode:

- Press ▲, ▼, ◀ or ► to select a baby unit.
- Press ( or VIEW key to view images from the selected baby unit temporarily in SINGLE-CAM mode. It returns to SPLIT-VIEW mode after 10 seconds.



nonitors the sound en the sound ent unit screen etects a sound.
ed within reen is off to starts to cry, the arent unit screen

- Press **PATROL** key to display images from different baby units in every 7 seconds.
- Press SPLIT key again to return to SINGLE-CAM mode.

## **B**NOTES

- · Monitoring mode is not applicable when there is only one baby unit
- The parent unit is muted while in **SPLIT-VIEW** mode.

## Zoom

You can zoom in or out while viewing image from baby unit in SINGLE-CAM mode.

- <u>Press and hold</u>  $\blacktriangle$ ,  $\triangledown$ ,  $\triangleleft$  or  $\triangleright$  to move the zoomed image upward, downward, leftward or rightward correspondingly.
- Press ⊕ again to zoom out.

### Talk

You can use the TALK function of the parent unit to comfort your baby in SINGLE-CAM mode

- 1. Press and hold TALK on the parent unit. The TALK light turns on.
- 2. Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit. 3. Release the **TALK** key to stop the broadcast.
- The TALK light goes off.

## Set alert tone

## Low battery tone

You can set the parent unit to beep when the parent unit operates in low battery condition.

- 1. Press **MENU** when the parent unit is not in
- 2. Press  $\triangledown$  or  $\blacktriangle$  to choose **ALERT TONE**, then press SELECT
- 3. Press  $\triangledown$  or  $\blacktriangle$  choose Low Battery Tone, then press SELECT
- 4. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **On** or **Off**, then press **SELECT** to confirm your selection.

### No link alert

You can set the parent unit to beeps when the link between the parent unit and the baby unit is lost

away from the baby or crib, to avoid a possible strangulation hazard.

- . Never place the baby unit(s) inside the baby's crib or playpen. Never cover the baby unit(s) or parent unit with anything such as a towel or a blanket.
- 6. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

### Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable vireless devices and implanted cardiac pacemakers Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

### Pacemaker patients

- Should keep wireless devices at least six inches from the pacemaker
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

### Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

## The RBRC<sup>®</sup> seal

The RBRC<sup>®</sup> seal on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives when taken out of service within the United States and Canada.

The RBRC<sup>®</sup> program provides a convenient alternative to placing used lithium-ion batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation in RBRC<sup>®</sup> makes it easy for you to drop off the spent battery at local retailers participating in the RBRC<sup>®</sup> program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY® for information on Li-ion battery ecycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

- 1. Press MENU when the parent unit is not in
- 2. Press ▼ or ▲ to choose ALERT TONE, then press SELECT. 3. Press ▼ or ▲ to choose No Link Alert, then
- press SELECT. 4. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **On** or **Off**, then press
- **SELECT** to confirm your selection. Sound aler

You can turn on the sound alert feature so that. while in **SPLIT-VIEW** mode, the parent unit beeps and displays Sound detected at CAM # whenever the baby unit detects sounds.

- 1. Press **MENU** when the parent unit is not in
- 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **ALERT TONE**, then press **SELECT** to select.
- 3. Press ▼ or ▲ to choose Sound Alert, then press SELECT
- 4. Press  $\nabla$  or  $\blacktriangle$  to choose **On** or **Off**, then press SELECT to confirm your selection.

## Monitor the temperature

To monitor the temperature of your baby's room, you can turn on the temperature alert feature on the parent unit. It beeps whenever the temperature detected by the baby unit falls out of the desired temperature range.

### Minimum temperature

You can set the desired minimum room temperature of the room temperature alert range. The minimum temperature can be set

- between **52** °F (**11** °C) and **69** °F (**20** °C). 1. Press MENU when the parent unit is not in
- 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **TEMPERATURE**, then press SELECT.
- 3. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Minimum**, then press SELECT.
  - If you have more than one baby unit, the system prompts you to choose the desired baby unit or all baby units, press ▼ or ▲ to choose All CAM or CAM #,
- then press SELECT. 4. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose the desired temperature, then press **SELECT** to confirm

RBRC<sup>®</sup> and 1 (800) 8 BATTERY<sup>®</sup> are registered

FCC and IC regulations

This equipment has been tested and found to comply

with the requirements for a Class B digital device

Commission (FCC) rules. These requirements are

intended to provide reasonable protection against

equipment generates, uses and can radiate radio

frequency energy and, if not installed and used in

is no guarantee that interference will not occur in a

particular installation. If this equipment does cause

harmful interference to radio or television reception.

and on, the user is encouraged to try to correct the

Reorient or relocate the receiving antenna.

Connect the equipment into an outlet on a

which can be determined by turning the equipment of

interference by one or more of the following measures:

Increase the separation between the equipment and

circuit different from that to which the receiver is

• Consult the dealer or an experienced radio/TV

Changes or modifications to this equipment not

expressly approved by the party responsible for

compliance could void the user's authority to operate

This device complies with Part 15 of the FCC rules.

this device may not cause harmful interference, and

(2) this device must accept any interference received.

To ensure safety of users, the FCC has established

including interference that may cause undesired

criteria for the amount of radio frequency energy

that can be safely absorbed by a user or bystander

according to the intended usage of the product. This

product has been tested and found to comply with the

such that parts of all persons' body are maintained at

transmitter and antenna shall be held at least 1 in

a distance of approximately 8 in (20 cm) or more. The

FCC criteria. The baby unit shall be installed and used

accordance with the instructions, may cause harmful

interference to radio communications. However, there

harmful interference in a residential installation. This

under Part 15 of the Federal Communications

Corporation.

- (3)

Eli-ion St. 822

FCC Part 15

receiver.

connected.

the equipment.

operation

echnician for help.

(2.5 cm) from your face.

trademarks of the Rechargeable Battery Recycling

your selection

Maximum temperature

You can set the desired maximum room temperature of the temperature alert range. The maximum temperature can be set between

- 70 °F (21 °C) and 86 °F (30 °C). 1. Press **MENU** when the parent unit is not in
- Press ▼ or ▲ to choose TEMPERATURE,
- then press **SELECT**.
- 3. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Maximum**, then press SELECT
- If you have more than one baby unit, the system prompts you to choose the desired baby unit or all baby units, press  $\checkmark$  or  $\blacktriangle$  to choose All CAM or CAM #, then press SELECT
- 4. Press  $\nabla$  or  $\blacktriangle$  to choose the desired temperature, then press SELECT to confirm your selection.

### Temperature alert

You can set the parent unit to beep when the temperature is out of the preset temperature range.

- 1. Press **MENU** when the parent unit is not in
- 2. Press ▼ or ▲ to choose TEMPERATURE, then press SELECT.
- 3. Press  $\triangledown$  or  $\blacktriangle$  to choose **Alert**, then press SELECT.
- If you have more than one baby unit, the system prompts you to choose the desired baby unit or all baby units, press  $\checkmark$  or  $\blacktriangle$  to choose All CAM or CAM #, then press SELECT.
- 4. Press  $\nabla$  or  $\blacktriangle$  to choose **On** or **Off**, then press Sensitivity **SELECT** to confirm your selection.

### Temperature format

You can choose to display the temperature in Fahrenheit (°F) or Celcius (°C).

- 1. Press **MENU** when the parent unit is not in
- 2. Press ▼ or ▲ to choose TEMPERATURE. then press **SELECT**.
- 3. Press ▼ or ▲ to choose Format, then press SELECT.
- 4. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Fahrenheit** or Celsius, then press SELECT to confirm your selection.

This Class B digital apparatus complies with Canadian requirement CAN ICES-3 (B)/NMB-3(B)

### **Industry Canada**

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation. Privacy of communications may not be ensured when

using this product. The term "IC:" before the certification/registration number only signifies that the Industry Canada

technical specifications were met. This product meets the applicable Industry Canada technical specifications.

### RF radiation exposure statement

The baby unit complies with ECC BE radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with a minimum distance of 8 in (20 cm) between the baby unit and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

## ifornia Energy Commissior attery charging testing mode

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumption. Your baby monitor is set up to comply with the energy-conserving standards right out of the

Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated while charging.

Even if the parent unit is paired to baby units, the CEC Operation is subject to the following two conditions: (1) battery charging testing mode is activated while it is powered off and charging.

## Vibration

**O**NOTE

work properly.

below options

Temperature

Pair/unpair

SELECT

then press SELECT.

your selection

aui suivent

Rename

You can turn on the vibration feature so that the parent unit vibrates when the baby unit detects sounds in SPLIT-VIEW

- mode: • the link between the parent unit and the baby unit is lost: or
- the temperature detected by the baby unit falls out of the preset temperature range.
- 1. Press **MENU** when the parent unit is not in
- 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **VIBRATION**, then press SELECT
- Press ▼ or ▲ to choose On if speaker is off, Always on or Off.
- On if speaker is off The parent unit vibrates only when the speaker of the parent unit is turned off.

4. Press SELECT to confirm your selection.

If you set the sensitivity level to Level 5, the baby unit

will be very sensitive and detect any sounds including

disrupt the silence and prevent the vibration feature to

You can rename each baby unit. Once the baby

unit is renamed, its new name together with the

baby unit number will appear in the sub-menu of

1. Press **MENU** when the parent unit is not in use.

2. Press  $\triangledown$  or  $\blacktriangle$  to choose **RENAME**, then press

3. Press  $\nabla$  or  $\blacktriangle$  to choose the desired baby unit,

4. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose the desired name for

For cETL compliance only

Lorsque vous utilisez votre appareil, vous devriez

toujours suivre certaines mesures de précaution

d'électrocution et de blessures corporelles, dont ceux

Observez toutes les instructions et mises en garde

d'appoint seulement. Il n'est pas le remplacement

d'une supervision responsable et adéquate par un

adulte et ne devrait pas être utilisé comme telle.

4. Ce produit n'est pas conçu pour être utilisé en tant

5. N'utilisez pas cet appareil près de l'eau ni de toute

MISE EN GARDE: Il peut y avoir un risque

autre source d'humidité, par exemple, près d'une

baignoire, cuve à lessive, évier de cuisine, dans

un sous-sol humide ni près d'une piscine, dans un

d'explosion si vous utilisez le mauvais type de piles

pour l'unité du parent. N'utilisez que le bloc-piles

rechargeable inclus ou le bloc-piles de rechange

(BT198555/BT298555). N'incinérez pas les piles

Celles-ci risqueraient d'exploser. Jetez les piles

N'utilisez que les adaptateurs inclus avec ce

polarité ou la tension serait inadéquate risque

d'endommager sérieusement le produit et mettre

Entrée 100-240V CA 50/60 Hz; Sortie : 6 V CC 1A

Entrée 100-120V CA 50/60 Hz; Sortie : 5 V CC 1A

Lorsqu'ils sont branchés dans une prise de courant,

les adaptateurs secteur ont été conçus pour être

pour supporter le poids du bloc d'alimentation et

le maintenir en place si celuici est branché dans

une prise au plafond, sous une table ou dans un

avant de procéder au nettovage. N'utilisez pas de

nettoyants en aérosols. Utilisez un chiffon humide

orientés correctement, soit à la verticale ou au

plancher. Les broches n'ont pas été conçues

9. Débranchez ce produit de la prise de courant

10. Débranchez les cordons d'alimentation avant de

11. Ne coupez pas les cordons d'alimentation pour

remplacer les fiches, car ceci peut présenter un

Pour les PRODUITS À BRANCHER À UNE

PRISE DE COURANT. la prise de courant doit

être installée près du produit, afin d'assurer une

accessibilité sécuritaire à la prise de courant.

produit. L'utilisation d'un adaptateur dont la

usées selon les renseignements suivant le sceau

de base afin de réduire les risques d'incendie.

2. L'installation par un adulte est requise

soussol humide ou une douche.

3. Ce produit a été concu pour être un dispositif

Mesures de sécurité importantes

inscrites sur l'apparei

que moniteur médical

du RBRC<sup>®</sup>.

meuble.

pour le nettoyer.

danger potentiel

remplacer le bloc-piles.

votre sécurité en péril

Adaptateur de l'unité du bébé :

Adaptateur de l'unité du parent :

the baby unit, then press **SELECT** to confirm

background noises. These background noises may

Rename the baby unit

- Always on The parent unit vibrates
- regardless of the speaker volume setting. • Off - The parent unit will not vibrate at all instance

Niaht	vision
ingit	191011

**O**NOTE

sources.

C>TIP

The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit detects low light levels, the infrared LEDs are switched on automatically

When the infrared LEDs are on, the image is in black and white. This is normal due to external light

Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds the display resolution may vary. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.

## Add new baby unit (VM305)

The baby units and parent unit provided are already paired. You can add or replace any baby units (VM305 purchased separately) to your video and audio monitor system. You can pair a maximum of four baby units to your parent unit.

For more details, refer to the user's manual that comes with your VM305 new baby unit.

## General product care

To keep this product working well and looking good, ollow these guidelines

 Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps). • DO NOT expose it to direct sunlight or moisture.

• Avoid dropping the product or treating it roughly. • Clean with a soft cloth.

• DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap. • DO NOT use cleaning spray or liquid cleaners. • Make sure the baby unit and parent unit are dry before you connect them to the mains again

## storage

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

Ne laissez aucun objet reposer ni appuver sur le cordon d'alimentation. N'installez pas cet appareil dans un endroit où l'on risque d'écraser le cordon d'alimentation ou de le piétiner

13. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquette. Si vous ne connaissez pas le type d'alimentation que vous possédez à votre domicile, consultez votre

marchand ou votre compagnie locale d'électricité. 14. Ne surchargez pas les prises de courant murales ni les rallonges électriques. 15. Ne placez pas cet appareil sur un chariot, meuble,

trépied, support de montage ni table chancelants. 16. Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et n'empêchez pas l'aération adéquate de l'appareil en le placant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez

pas à proximité ni au-dessus d'une source de chaleur ou d'un calorifère. De plus, ne placez pas l'appareil dans un endroit avant de vous assurer qu'il y ait une bonne circulation d'air 17. N'enfoncez jamais d'objets à travers les ouvertures

de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits aui peuvent dégénérer en incendies ou en risques d'électrocution. Ne renversez jamais de liquide dans ce produit. 18. Afin de réduire les risques d'électrocution, ne démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contient cet appareil, à l'exception de l'accès autorisé à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter des risques d'électrocution. 19. Vous devriez tester la réception chaque fois que

vous mettez l'appareil en fonction. 20. Examinez les composantes afin de vérifier si

celles-ci ne sont pas endommagées. 21. Sovez avisé de la perte de la confidentialité lorsque vous utilisez les ondes publiques. Les conversations peuvent être entendues par d'autres

moniteurs de bébé, des téléphones sans fil, des scanneurs, etc. 22. Les enfants devraient être supervisés afin de vous

assurer qu'ils ne jouent pas avec l'appareil. 23. Le produit n'est pas concu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances, à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

## **CONSERVEZ CES INSTRUCTIONS**

N	lises	en	gard

Utilisez et entreposez le produit à une température entre 0° C (32°F) et 40°C (104° F).

Frequently asked questions

Below are the questions most frequently asked about

the baby monitor. If you cannot find the answer to your

or contact 1 (800) 595-9511 for customer service.

Why does the

baby monitor

not respond

normally

Why don't

light of the

the power-or

baby unit and

parent unit

ao on when

units?

Why is my

creen in

black and

Why do I get

glare or blurry

display on my

screen wher

ewing my

baby at night?

Why does the

baby monitor

high-pitched

produce a

white?

switch on the

question, visit our website at **www.vtechphones.com**,

for common sure:

batteries again.

parent unit.

take place.

oaby unit.

sources.

othei

Try the following (in the order listed)

1. Disconnect the power to the baby

units and the parent unit.

Remove the batteries in the

parent unit. Then install the

connecting power back to the

baby units and the parent unit

4. Turn on the baby units and the

synchronize with the baby units

Allow up to one minute for this to

Perhaps the rechargeable battery

of the parent unit is empty and th

parent unit is not connected to the

nto the parent unit and put the

ains. Insert the appliance plug

idapter in a wall socket. Then pre

U to switch on the parent unit and

o establish connection with the

connected to the mains. Connect

he baby unit to the mains. Then se

ON/OFF switch to ON to switch on

Perhaps the baby unit is not

the baby unit and to establish

During nighttime or in a dark

connection with the parent unit.

The screen is in black and white

luring nighttime or in a dark room

This is normal due to external ligh

oom, the surroundings and othe

terfering factors, like lightings

bjects, colors and backgrounds

your parent unit screen. Adjust the

baby unit's angle or place the baby

The units may be too close to each

other. Make sure the parent unit

1 meter/3 feet away from each

unit at a higher level to prevent

glare and blurry display.

and the baby unit at least

may affect the image quality on

Wait a few minutes before

5. Wait for the parent unit to

- N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de chauffage
- Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au feu.
- Assurez-vous que le moniteur et le cordon de l'adaptateur sont toujours hors de portée des enfants, à au moins 1 mètre (3 pieds) de l'enfant ou du berceau, pour éviter tout risque de strangulation
- Ne jamais placer le moniteur à l'intérieur du berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portative avec un article tel une serviette ou une couverture.
- D'autres équipements électroniques peuvent produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques tels que des routeurs sans fil, radios, téléphones cellulaires, interphones, moniteurs, téléphones, ordinateurs personnels, électroménagers et téléphones sans fil.

### Stimulateurs cardiaques implantés dans l'organisme

Les simulateurs cardiaques (ne s'applique qu'aux dispositifs numériques sans fil

me 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuvée par l'Administration des aliments et droques (FDA) des États-Unis, la firme WTR recommande aux médecins:

## Avis aux détenteurs de stimulateurs cardiaques

- Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent dispositifs sans fil à proximité de ceux-ci.

### Champs électromagnétiques (EMF)

Ce produit de VTech est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant de nombreuses années, selon les meilleures évidences scientifiques dont nous disposons aujourd'hui.

The <b>ON/OFF</b> light on the baby unit flashes and the parent unit displays <b>Y</b> .	<ul> <li>The baby unit is unpaired from the parent unit.</li> <li>Make sure both parent unit and baby unit are on before pairing.</li> <li>Press MENU when the parent unit is not in use.</li> <li>Press ▼ or ▲ to choose PAIR/UNPAIR CAM, then press SELECT.</li> <li>Press ▼ or ▲ to choose Pair CAM, then press SELECT.</li> <li>Press ▼ or ▲ to choose an empty baby unit slot, then press SELECT. The parent unit screen displays Press and hold the pair button at the CAM for 5 seconds until the power indicator flashes</li> <li>Immediately press and hold PAIR on the bottom of the baby unit. The LED light flashes quickly.</li> <li>When pairing is successful, the screen displays the view of newly paired baby unit in SINGLE-CAM mode. The LED light on the new baby unit remains on.</li> <li>If pairing fails, the screen displays Pairing failed. Try the pairing process again.</li> <li>Only one baby unit can be paired at a time.</li> </ul>	V S e 1 2 3 3 4 5
Why does the parent unit react too quickly to other sounds?	The baby unit also picks up other sounds than those of your baby. Adjust the sensitivity level to a lower level or adjust the speaker volume on the parent unit.	6
Why don't I hear a sound/ Why can't I hear my baby cry?	The parent unit speaker volume may be too low or off. Press VOL+ to increase the volume. You may have set a low sound sensitivity level. See Adjust the sound sensitivity of the baby	7
Why does the parent unit beep?	unit to change the setting. The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 3 feet).	
·	If the parent unit is powered by the provided battery, it may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit for up to 12 hours.	8
	If your parent unit is in <b>SPLIT-VIEW</b>	

## imited warranty

detect sounds

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

mode, some of your baby units may

The temperature of your baby's

room may be too high or too low.

### What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

### How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer

### What is not covered by this limited warranty? This limited warranty does not cover

- 1. Product that has been subjected to misuse accident, shipping or other physical damage improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or
- 2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
- 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
- 4. Product to the extent that the problem is caused by use with non-VTech accessories; or
- 5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or

Why can't I The baby units may be out of range. establish a Nove the parent unit closer to the connection paby units (but not less than 3 feet) Why is the Other electronic products may connection cause interference with your baby lost every nov monitor. Try installing your baby monitor as far away from these and then? Why are there electronic devices as possible. sound

## mportant safety nstructions

interruptions?

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1. Follow all warnings and instructions marked on the product.
- 2. Adult setup is required. 3. This product is intended as an aid. It is not a substitute for responsible and proper adult
- supervision and should not be used as such. 4. This product is not intended for use as a medical monitor
- 5. Do not use this product near water. For example do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower

6. CAUTION: Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the parent unit. Use only the supplied rechargeable battery or replacement battery pack (BT198555/BT298555) for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used batter

according to the information in The RBRC® seal. Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product.

Baby unit power adapter: Input 100-240V AC 50/60 Hz; output: 6V DC 1A Parent unit power adapter: Input 100-120V AC

50/60 Hz; output: 5V DC 1A. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible

- 8. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outle
- 9. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning
- 10. Unplug the power cords before replacing batteries 11. Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation
- . Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- 7. Product returned without a valid proof of purchase (see item 2 on the next page); or
- 8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

### How do you get warranty service?

To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to

www.vtechcanada.com or call 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech ssumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this imited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair o Products that are not covered by this limited warranty.

### What must you return with the Product to get warranty service?

- 1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
- 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
- 3. Provide your name, complete and correct mailing address, and telephone number.

### Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other vritten or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights. which vary from state to state or province to province.

- 12. Do not allow anything to rest on the power cords Do not install this product where the cords may be walked on or crimped
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company
- 14. Do not overload wall outlets or use an extension
- 15. Do not place this product on an unstable table. shelf, stand or other unstable surfaces. This product should not be placed in any area
- where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.
- 17. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- 18. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently
- 19. You should test the sound reception every time you turn on the units or move one of the components
- 20. Periodically examine all components for damage 21. Be aware of possible loss of privacy while using public airwaves. Conversations may be picked up by other nursery monitors, cordless phones, scanners, etc
- 22. Children should be supervised to ensure that they do not play with the product.
- 23. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety SAVE THESE INSTRUCTIONS

## Cautions

- 1. Use and store the product at a temperature between 32°F and 104°F. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a
- heating source. Batteries should not be exposed to excessive heat such as bright sunshine or fire.
- Make sure the baby unit(s) and the adapter cord(s) are always out of reach of the baby, at least 3 feet

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

### Please retain your original sales receipt as proof of purchase.

24

4.3" Color LCD

Designed to fit your home

And your life.

VTech Communications, Inc.

(WQVGA 480x272 pixel)

Frequency

Transmit

frequency

Channels

Nominal

Power

requirements

LCD

control

XX)

A member of THE VTECH GROUP OF COMPANIES. VTech is the registered trademark of VTech Holdings Limited.

Specifications are subject to change without notice.

© 2015 for VTech Communications. Inc. All rights reserved. 02/15. VM343\_CIB\_V1.0

### Parent unit: 3.7V Li-polymer battery Baby unit power adapter: Input: 100-240V AC 50/60Hz Output: 6V DC @ 1A Parent unit power adapter: Input: 100-120V AC 50/60Hz Output: 5V DC @ 1A

Maximum power allowed by FCC effective range and IC. Actual operating range may vary according to environmental conditions at the time of use.

Parent unit: 2406 -2475 MHz

Baby unit: 2406 - 2475 MHz

Crystal controlled PLL synthesizer

echnical specifications