


TruSens™

Z-2500


Welcome to clean air with TruSens. Thank you for allowing us to join you on your journey towards wellness.

The air you breathe should be clean, no matter where you are in the room. TruSens SensorPod™, PureDirect™ Technology & DuPont™ Filtration ensure the whole room benefits from cleaner air.

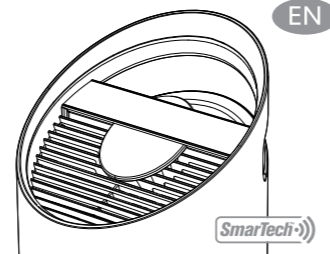


IMPORTANT: Before operation of purifier, follow the steps and read our TruSens Owner's Guide at www.trusens.com/z-2500

Included in your box

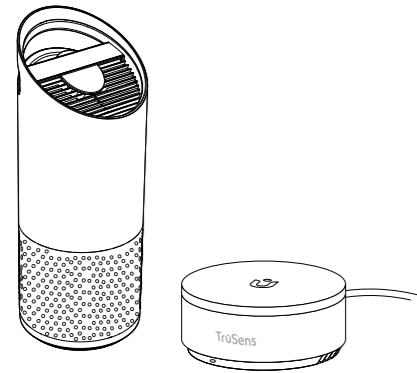


- 1 Air Purifier + Power Cord
- 1 SensorPod™ + Adapter

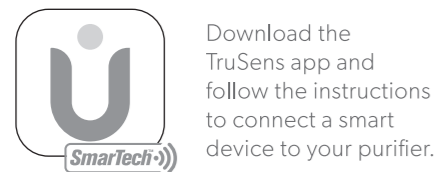


©2020 ACCO Brands. All rights reserved. DuPont™ & the Oval logo are trademarks or registered trademarks of E.I. du Pont de Nemours and Company used under license.

1) Remove plastic bag from filter

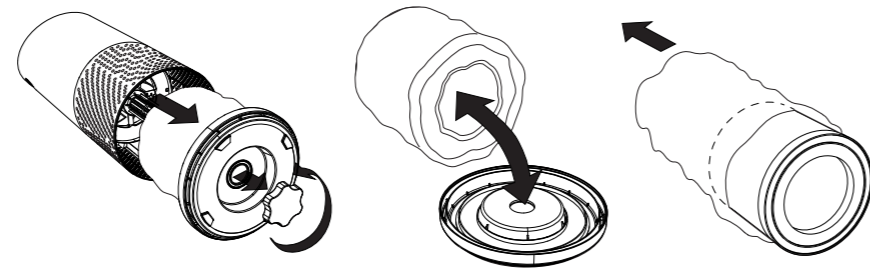


Unscrew bottom cover and remove plastic bag from filter.

2) Re-attach filter

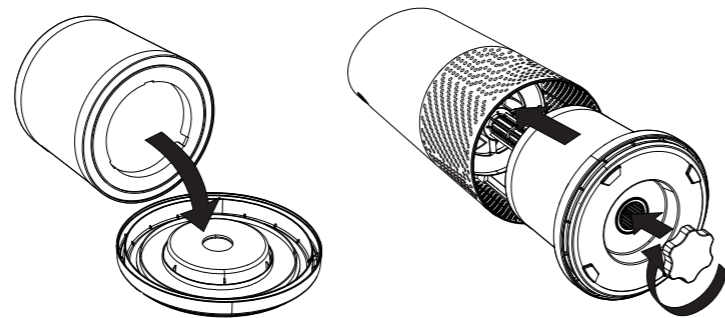

Secure filter on bottom cover and replace inside the purifier.

3) Set up

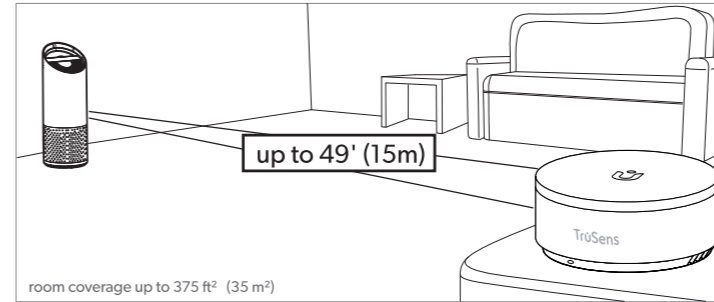

Plug-in your air purifier unit and power on.

Plug-in your SensorPod™.


For optimal results, place SensorPod™ on tabletop or counter across the room, within line of sight of the purifier.

Signal strength may vary by location.



Download the TruSens app to connect a smart device to your purifier.

Filter Replacement

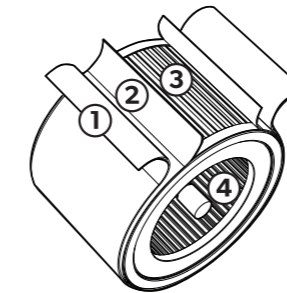


Filter Type	Suggested Replacement/Cleaning	Item Number
① Washable Prefilter	Hand wash as needed with water	Not sold separately, see HEPA Drum Filter
② Carbon Filter	Every 3 - 4 months*	AFC-Z2000-01 (3-pack)
③ HEPA Drum Filter	Every 12 - 15 months*	AFH-Z2000-01 (includes ① ② and ③)
④ UV Bulb	Every 2 - 3 years*	UVL-Z2000-01

*Replacement indicator will glow red on control panel to notify you to change

Control Panel

- ⏻ | Power on/off
- ⚙️ | Fan speed : Auto/Whisper/1/2/Turbo
- 🌙 | Dimmer on/off
- 🕒 | Timer : 2h/4h/8h/12h
- UV | UV mode on/off
- Reset | Carbon/HEPA/UV replacements

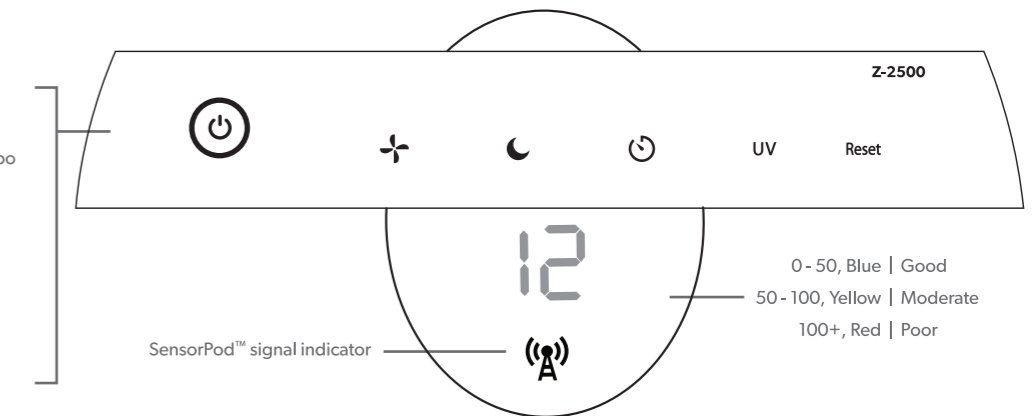

support@trusens.com | 1-833-TRUSENS (1-833-878-7367)
Support and Warranty Terms at www.trusens.com

Two-Year Warranty
27230P004