

Fellows®



Fellows 1789 Norwood Avenue Itasca, Illinois 60143-1095 630-893-1600 <http://www.fellows.com>
Australia Benelux Canada France Deutschland Italia Japan Korea Polska Singapore United Kingdom

© 2005 Fellows, Inc. Part No. 862992

Bluetooth® Adapter

FOR MOBILE PHONES WITH 2.5MM UNIVERSAL JACK—USER'S GUIDE

Copyright © 2005 Fellowes, Inc. All rights reserved.

This Users Guide provides directions on how to use your Body Glove® Bluetooth® Adapter with your mobile phone. The Bluetooth® Adapter only works with mobile phones that have a 2.5mm Universal jack found on Sanyo, most Samsung, Motorola, Kyocera, LG, and other phones. Just pair the adapter to your Bluetooth® Headset (see page 4 for pairing instructions), plug the adapter into your mobile phone, and then use your headset to talk. Now, you can keep your hands free for other tasks at the office or in the car.

IMPORTANT: If you cannot get your Body Glove® Bluetooth® Adapter to work properly, do **NOT** return it to the place of purchase. Contact Customer Service directly by dialing 1-800-945-4545 in the U.S. or 008 001 810 1810 in Europe or via email at www.fellows.com/techsupport/bluetooth.aspx. Please also contact customer service if you need any replacement parts.

Throughout this manual, you will find FAQs or Frequently Asked Questions in each section to help guide you through adapter operation. You can also find an expanded list of FAQs at www.fellowes.com/bluetooth. If you have a question that has not been answered in this manual, please contact Customer Service directly by dialing 1-800-945-4545 in the U.S. or 008 001 810 1810 in Europe or via email at www.fellowes.com/techsupport/bluetooth.aspx.

[illegible]

NOTE: In the event that you purchase a Bluetooth® enabled mobile phone, you will no longer need your Bluetooth® Adapter. Simply pair your headset to your new Bluetooth® enabled phone to operate your headset as before. For pairing instructions, consult your headset and mobile phone's users manual.

Pairing FAQs:

- Q:** What does the pin number have to be on my Bluetooth® headset for it to successfully pair to my Body Glove® Bluetooth® Adapter?
- A:** You can only pair a Body Glove® Bluetooth® Adapter with a headset pin number of 0000. If your headset has another pin number, consult your headset users manual for instructions on how to change it.
- Q:** How do I get the Bluetooth® Adapter to work with my mobile phone?
- A:** Simply plug the adapter into the connector on your phone. This makes your non-Bluetooth phone Bluetooth-enabled.

Making and Receiving Calls

Once you have set up the Bluetooth® Adapter to work with your mobile phone, you can make and receive calls using the headset as long as both are turned on and within range of each other (up to 10m. /30 ft.).

NOTE: The LED Indicator Light flashes green during calls to indicate phone communication.


Limited Warranty

Fellowes warrants this product to be free from defects in manufacturing for one year from the date of original retail purchase. This warranty extends only to the original retail purchaser, and does not apply if the product has been damaged or fails to function properly as a result of misuse, abuse, alteration, or improper cleaning or maintenance. ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE. Fellowes' sole obligation under this warranty or any implied warranty, and the purchaser's sole remedy, is limited to the repair or replacement, at Fellowes' option, of the product or any defective part. IN NO EVENT SHALL FELLOWES, ITS AFFILIATES, SUBSIDIARIES, RELATED ENTITIES OR THEIR RESPECTIVE OFFICERS, DIRECTORS, OR EMPLOYEES, BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY, OR SPECIAL DAMAGES. To make a claim, write to WARRANTY CLAIMS, Fellowes, Inc., 1789 Norwood Ave., Itasca, IL 60143.

Technical Specifications

Bluetooth® Profile	GAP, SPP
Range	Up to 10 meters
Frequency Range	2.4 - 2.4835 GHz
RF Transmit Power	0 dbm
Receiver Sensitivity	-79 dBm
Operating Temperature	-20° to +70°C

Bluetooth® Adapter Controls

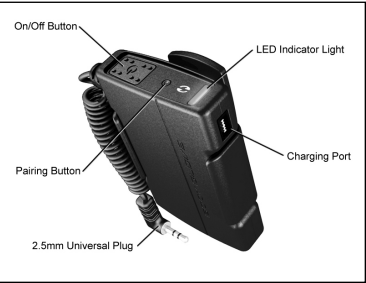

Attaching and Detaching the Belt Clip

To attach Belt Clip:

1. Position belt clip onto corresponding side of adapter (Figure 1).
2. Push other side of belt clip towards adapter until it snaps into position (Figure 2).



Figure 1



Figure 2

To detach Belt Clip:


1. Apply light pressure to one side of belt clip, away from the adapter, until belt clip detaches. Only one side needs to be unclipped to detach the belt clip.




Figure 3

Getting Started


It Only Takes 4 Easy Steps to Use Your Body Glove® Bluetooth Adapter:

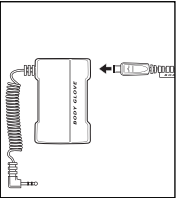

1. Charge Adapter

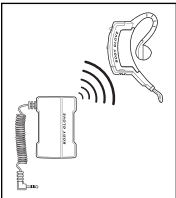

2. Pair Adapter to Headset

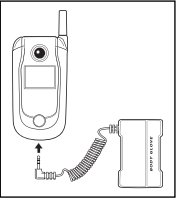

3. Plug Adapter into Mobile Phone



4. Use Headset to Talk

Charging Your Adapter

The Body Glove® Bluetooth® Adapter uses a rechargeable Lithium-Polymer Battery that must be fully charged before you use the adapter for the first time.

- Use only the charger supplied with the adapter. (Other chargers may damage unit and void the warranty)
- Use the table below as your reference for charging status

LED Light Color	Battery or Charging Status
Solid Red	Battery charging while Bluetooth® Adapter is off
Solid Green	When Bluetooth® Adapter is off and fully charged, LED light glows green
2 Red Flashes	Low battery power (LED light will flash until the battery runs out or is charged)

Connecting the Adapter to the Charger

The plug configuration of the power supply is appropriate to the country where your Bluetooth® Adapter was purchased. If you travel to foreign countries and wish to charge your Bluetooth® Adapter, you will need to purchase the appropriate plug adapter for the country you are visiting. Your charger has a cable approx. 23cm (9 inches) long.

Please refer to the Illustration below before charging your adapter.

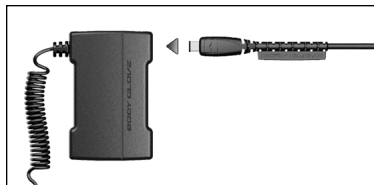


Figure 4

IMPORTANT NOTE: The charger is 'keyed' to fit only ONE WAY into your Bluetooth® Adapter. **Do not force** the charger cable into the connecting port of the Bluetooth® Adapter as this may damage the unit and void your warranty.

Charging FAQs:

Q: How do I know when my adapter is fully charged?

A: The LED Indicator Light will turn from red to green when headset is fully charged.

Q: My adapter won't charge. What should I do?

A: Your adapter is not charging if there is no light shown on the LED. Try taking your adapter off the charger and reconnecting it until you see the red light.

General Adapter Operation

To turn Bluetooth® Adapter on: Press and hold on/off button briefly. The LED Indicator Light will flash green, then at intervals to show unit is on.

To turn Bluetooth® Adapter off: Press and hold on/off button briefly. The LED Indicator Light will flash green once and then stay off. The unit is now off.



Figure 5

Pairing

What is Pairing?

"Pairing" creates the wireless connection between your Body Glove® Bluetooth® Adapter and your Bluetooth® Headset. When the adapter and headset are paired to each other, they will only communicate with each other, until you choose to pair them with a different device

NOTE: If your Bluetooth® Adapter is not paired with the headset, you will be unable to use your Bluetooth® Headset with your mobile phone.

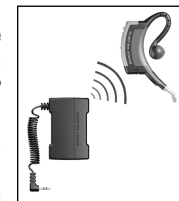


Figure 6

Pairing the Adapter to Your Bluetooth® Headset

1. Put your Body Glove® Bluetooth® Headset into pairing mode as described by your headset's users manual.
2. Now, put the Bluetooth® Adapter in pairing mode as well. Simply press the pairing button on the Bluetooth® Adapter until the LED Indicator Light flashes red and green.
3. When both the Bluetooth® Adapter and Bluetooth® Headset are in pairing mode, they will search for each other. After 8-10 seconds, they will pair to each other. **NOTE:** Make sure that there are no other active Bluetooth® devices in the area as it can disrupt the pairing process.
4. If pairing between the headset and the Bluetooth® Adapter is successful, the Bluetooth® Adapter's LED Indicator Light will flash solid green for 2 seconds and then return to standby mode. Your headset should also go into standby mode. You can now plug your Bluetooth® Adapter into the headset jack of your phone and use your Bluetooth® Headset.
5. If the Bluetooth® Adapter finds no devices or finds more than one device, it will flash red for 2 seconds to indicate an error and then return to standby mode.
6. If pairing is unsuccessful, repeat the entire pairing process. Make sure that both the Bluetooth® Adapter and your Bluetooth® Headset are in pairing mode at the same time.