


Front View

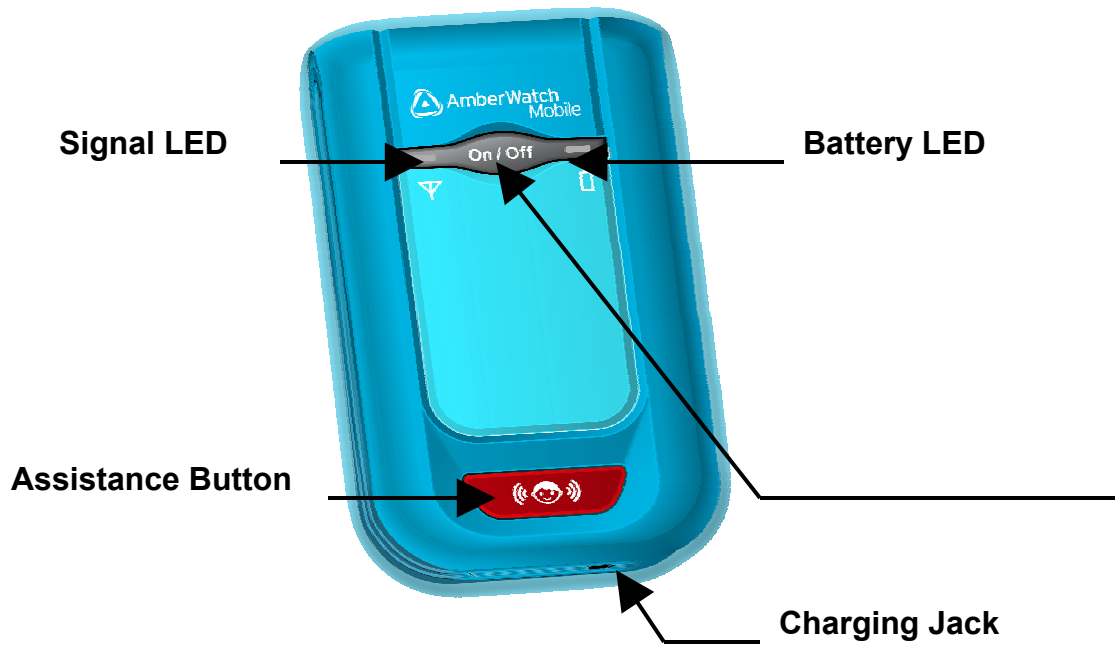

Rear View

[image pending]


HERO kit

The AmberWatch Mobile HERO kit includes:

HERO Device



AC Power Adapter

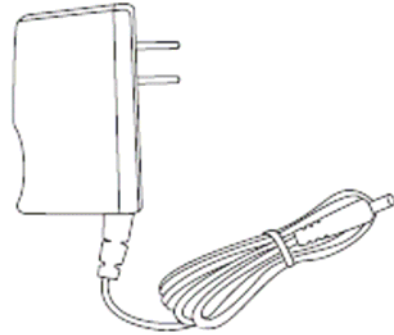

Warranty Card

Wrist Strap

Carrying Case (placeholder)



STOP

Read this first to set up your AmberWatch Mobile HERO

1



Power

Plug in your new AmberWatch Mobile HERO. After about 5 hours, the battery status light will change to green and your HERO will be charged. When you unplug the charged device, the battery light will turn off, but the device will be powered on.

2



Test

Quickly tap and release the "on/off" button. If the HERO is powered on, you will see both LEDs light up for a few seconds. (Holding the same button for 3 seconds or more will power off the device.)

3



Register

Locate the "HEX ESN" code on the back of your HERO - you will need this for registration. Go to www.amberwatchmobile.com on your computer, click "Register my HERO", and follow the instructions.

Device being worn with Carrying Case

