

RMP400



1

English (EN)
Deutsch (DE)
Español (ES)
Français (FR)
Italiano (IT)
日本語 (JA)

2

Polski (PL)
Česky (CS)
Русский (RU)
中文 (繁體) (ZH-TW)
中文 (简体) (ZH)
한국어 (KO)

Draft 5 16/04/18



1

EN	Publications for this product are available by visiting www.renishaw.com/rmp400 .
DE	Weitere Informationen zu diesem Produkt sind unter folgendem Link www.renishaw.de/rmp400 abrufbar.
ES	Las publicaciones para este producto están disponibles a través de www.renishaw.es/rmp400 .
FR	Les documentations pour ce produit sont disponibles en visitant le site www.renishaw.fr/rmp400 .
IT	La documentazione per questo prodotto è disponibile visitando il sito www.renishaw.it/rmp400 .
日本語	本製品に関する資料は、 www.renishaw.jp/rmp400 からダウンロードいただけます。
PL	Publikacje dotyczące tego produktu są dostępne w witrynie www.renishaw.pl/rmp400 .
CS	Dokumentaci k produktu najdete na www.renishaw.cz/rmp400 .
RU	Документация по данному изделию доступна на сайте www.renishaw.ru/rmp400 .
中文 (繁體)	請訪問雷尼紹網站以獲得此產品的相關文件檔案: www.renishaw.com.tw/rmp400 。
中文 (簡體)	请访问雷尼绍网站以获得此产品的相关文档: www.renishaw.com.cn/rmp400 。
한국어	이 제품의 관련 자료는 www.renishaw.co.kr/rmp400 에서 확인 가능 합니다.

2

Draft 5 16/04/18

Radio approvals have not been confirmed yet, so this and the next page are NOT applicable at the moment

Radio approvals

Draft 5 16/04/18

Radio approvals

Draft 5 16/04/18

This page is intentionally left blank.

Draft 5 16/04/18

1

English (EN)

Deutsch (DE)

Español (ES)

Français (FR)

Italiano (IT)

日本語 (JA)

Before you begin

EU declaration of conformity



Renishaw plc declares that the RMP400 complies with the applicable standards and regulations.

Contact Renishaw plc or visit www.renishaw.com/mtpdoc for the full EU declaration of conformity.

WEEE directive



The use of this symbol on Renishaw products and/or accompanying documentation indicates that the product should not be mixed with general household waste upon disposal. It is the responsibility of the end user to dispose of this product at a designated collection point for waste electrical and electronic equipment (WEEE) to enable reuse or recycling. Correct disposal of this product will help to save valuable resources and prevent potential negative effects on the environment. For more information, please contact your local waste disposal service or Renishaw distributor.

FCC Information to user (USA only)

47 CFR Section 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

47 CFR Section 15.21

The user is cautioned that any changes or modifications not expressly approved by Renishaw plc or authorised representative could void the user's authority to operate the equipment.

Before you begin

Safety

The RMP400 has a glass window. Handle with care if broken to avoid injury.

In all applications involving the use of machine tools, eye protection is recommended.

Information to the machine supplier/installer

It is the machine supplier's responsibility to ensure that the user is made aware of any hazards involved during operation, including those mentioned in Renishaw product literature, and to ensure that adequate guards and safety interlocks are provided.

Under certain circumstances, the probe signal may falsely indicate a probe seated condition. Do not rely on probe signals to halt the movement of the machine.

Battery safety

The RMP400 may be supplied or used with non-rechargeable lithium-thionyl chloride batteries.

- Do not attempt to recharge the batteries.
- Please dispose of waste batteries in accordance with your local environmental and safety laws.
- Replace the batteries only with the specified type.
- Ensure that all batteries are inserted with the correct polarity.
- Do not store batteries in direct sunlight.
- Do not heat or dispose of batteries in a fire.
- Do not short-circuit or force discharge the batteries.







- Do not disassemble, pierce, deform or apply excessive pressure to the batteries.
- Do not swallow the batteries.
- Keep the batteries out of the reach of children.
- Do not get batteries wet.
- If a battery is damaged, handle it with care to avoid contact with electrolyte.






Lithium batteries are classified as dangerous goods and strict controls apply to their shipment by air. To reduce the risk of shipment delays, if you need to return the RMP400 to Renishaw for any reason, do not return any batteries.


Equipment operation

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

This page is intentionally left blank.

<p>EN</p>	<p>Configuring the probe</p> <p>The following sections describe the process of reviewing and configuring the probe settings. The Trigger Logic™ app simplifies this process with clear, interactive instructions and informative videos.</p> <div data-bbox="245 228 517 308">  </div> <div data-bbox="535 228 801 308">  </div>
<p>DE</p>	<p>Konfigurieren des Messtasters</p> <p>In den folgenden Abschnitten werden die Prüfung und Konfiguration der Messtastereinstellungen beschrieben. Die Trigger Logic™ App vereinfacht den Vorgang mit deutlichen, interaktiven Anweisungen und informativen Videos.</p> <div data-bbox="245 464 517 543">  </div> <div data-bbox="535 464 801 543">  </div>
<p>ES</p>	<p>Configuración de la sonda</p> <p>Las siguientes secciones describen el proceso de revisión y configuración de los ajustes de la sonda. La aplicación Trigger Logic™ simplifica este proceso con instrucciones claras e interactivas, así como videos informativos.</p> <div data-bbox="245 697 517 777">  </div> <div data-bbox="535 697 801 777">  </div>

<p>FR</p>	<p>Configuration du palpeur</p> <p>Les chapitres qui suivent décrivent le processus de programmation et de configuration des paramètres de palpation. L'application Trigger Logic™ simplifie le processus au travers d'instructions claires et interactives et avec des vidéos d'information.</p> <div data-bbox="214 221 487 301">  </div> <div data-bbox="503 221 769 301">  </div>
<p>IT</p>	<p>Configurazione della sonda</p> <p>Le seguenti sezioni descrivono il processo di revisione e configurazione delle impostazioni della sonda. L'applicazione Trigger Logic™ semplifica questo processo con istruzioni chiare, interattive e video esplicativi.</p> <div data-bbox="214 464 487 543">  </div> <div data-bbox="503 464 769 543">  </div>
<p>日本語</p>	<p>プローブの設定</p> <p>以降のセクションにて、プローブ設定の確認方法および設定方法について説明します。明瞭で対話型の指示とわかりやすいビデオを使用した Trigger Logic™ アプリを使えば、本工程を簡よりシンプルなものにできます。</p> <div data-bbox="214 700 487 780">  </div> <div data-bbox="503 700 769 780">  </div>

<p>Batteries</p> <p>Batterien</p> <p>Baterías</p> <p>Piles</p> <p>Batterie</p> <p>バッテリー</p>	<p>½ AA (3.6 V) lithium-thionyl chloride × 2</p> <p>½ AA (3,6 V) Lithium-Thionylchlorid × 2</p> <p>2 × Lítio-cloruro de tionilo de tamaño ½ AA (3,6 V)</p> <p>2 piles ½ AA chlorure de lithium thionyle (3,6 V)</p> <p>Lítio Cloruro di Tionile ½ AA (3,6 V) × 2</p> <p>½AAサイズの塩化チオニル・リチウム電池 (3.6 V) × 2 本</p>	
	<p>Ecocel EB 1426</p> <p>Saft LS 14250 C, LS 14250</p> <p>✓ Tadiran SL-750</p> <p>Xeno XL-050F</p>	<p>Dubilier SB-AA02</p> <p>Maxell ER3S</p> <p>Sanyo CR 14250 SE</p> <p>✗ Tadiran SL-350, SL-550, TL-4902, TL-5902, TL-2150, TL-5101</p> <p>Varta CR ½ AA</p>

Fitting the stylus

Tastereinsatz montieren

Colocación del palpador

Montage du stylet

Installazione dello stilo

スタイラスの取り付け

1



2



Attention

Please remove the battery isolation device from the battery compartment before use.

* Take care not to short the battery contacts.

Actung

Bitte vor Gebrauch die Batterie-Isolierung aus dem Batteriefach entfernen.

* Die Batteriekontakte dürfen nicht kurzgeschlossen werden.

Precaución

Por favor, retire el dispositivo de aislamiento de las baterías del compartimento de las mismas antes del uso.

* Tenga cuidado para no hacer cortocircuito en los contactos de la batería.

Attention

Merci d'enlever le dispositif d'isolement de la pile du compartiment de la pile avant utilisation.

* Prenez soin de ne pas mettre les piles en court circuit.

Attenzione


Rimuovere la protezione di isolamento dal vano batteria prima dell'uso.

* Fare attenzione a non cortocircuitare i contatti della batteria.


注意



ご使用になる前に、電池ケース内から電極保護材を取り除いて下さい。


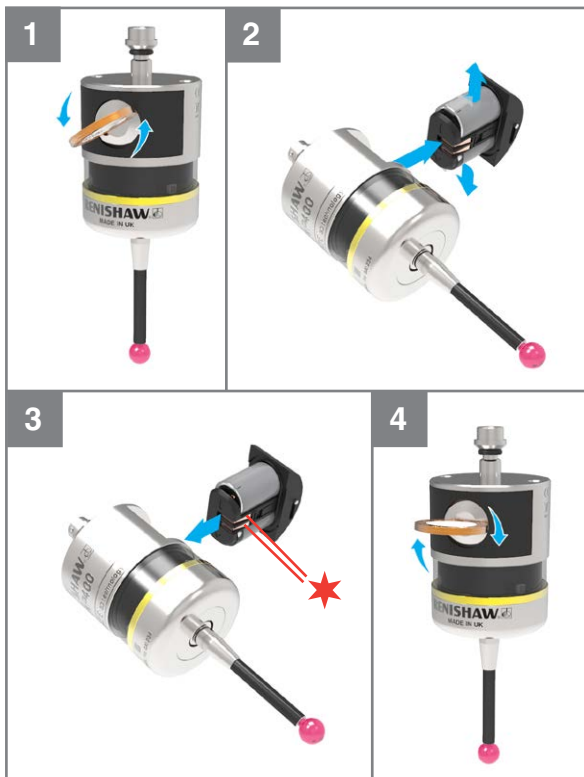
* 電池の接点を短絡させないように気をつけて下さい。

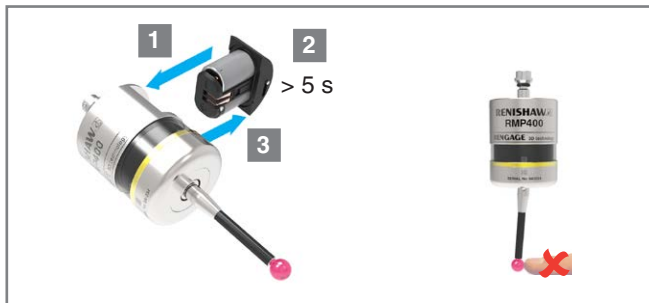


Reviewing the probe settings



Key to the symbols	
	LED short flash
	LED long flash

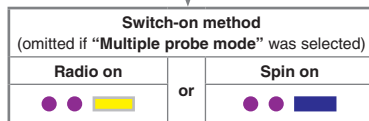

Multiple probe mode settings

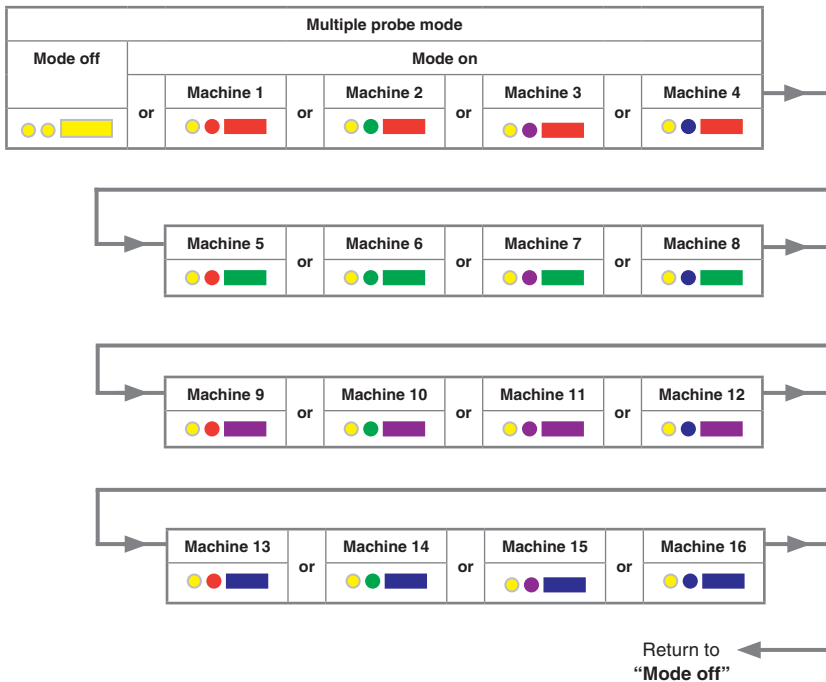


This page is intentionally left blank.

Probe partnering function




Whilst the “**Probe status**” is being displayed, deflect and release the stylus to enter “**Acquisition mode off**”. Probe status will flash red to acknowledge this.

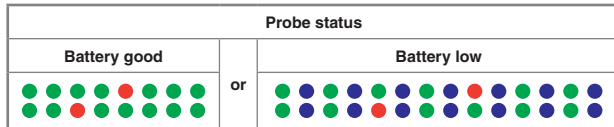

At this point turn on either the RMI or RMI-Q.

After 8 seconds

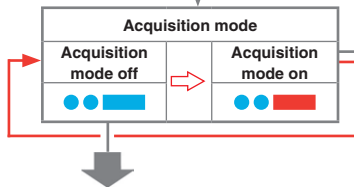

120 seconds probe in standby




Acquisition successful

8 seconds probe in standby

If acquisition is unsuccessful “**Acquisition mode off**” will be displayed again after 8 seconds.
 Deflect the stylus for less than 4 seconds to select “**Acquisition mode on**” again.


This page is intentionally left blank.

Placing the probe in configuration mode

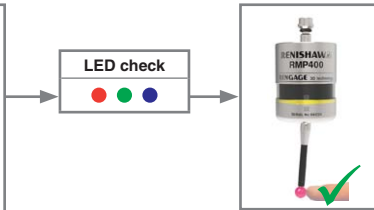

Deflect the stylus and hold it deflected until after the battery status has been displayed at the end of the review sequence.


Key to the symbols	
	LED short flash
	LED long flash
	Deflect the stylus for less than 4 seconds to move to the next menu option.
	Deflect the stylus for more than 4 seconds to move to the next menu.
	To exit, leave the stylus untouched for more than 120 seconds.
	To exit, leave the stylus untouched for more than 20 seconds.




To acquire the probe and/or change the probe settings, go to the next page.

CAUTION: Do not remove the batteries whilst in configuration mode. To exit, leave the stylus untouched for more than 20 seconds.


Changing the probe settings

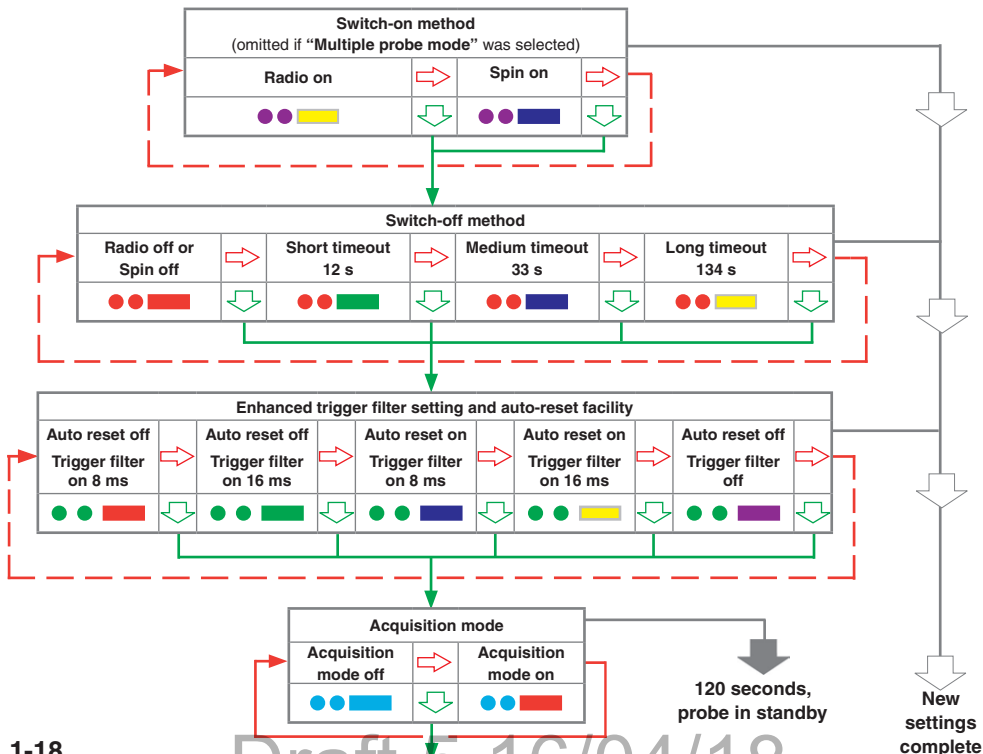

Changing the probe settings

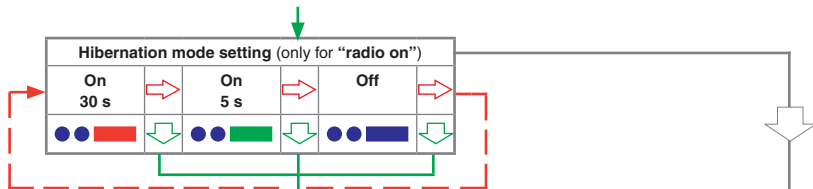


Stop triggering here, unless **"Multiple probe mode"** is required, in which case deflect the stylus for more than 4 seconds.

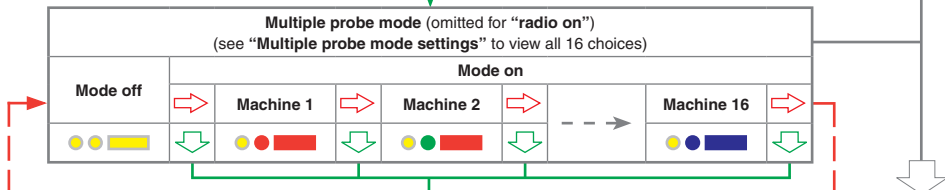

If no changes are made in **"Multiple probe mode"**, then deflecting the stylus for more than 4 seconds will return the probe settings to beginning of the Trigger Logic menu. If **"Multiple probe mode"** is selected, proceed to **"Acquisition mode"** to repartner one probe with the RMI or RMI-Q.

NOTE: After the RMI or RMI-Q has been acquired, the RMP400 will only show **"Acquisition mode off"**.

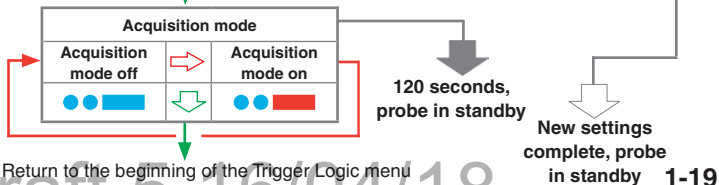


Return to the beginning of the Trigger Logic menu


Draft 5 16/04/18

New settings complete, probe in standby 1-19

RMP400 – RMI partnership




Switch on the RMI




Deflect the stylus to select
“**Acquisition mode on**”.
Ensure this is done within 8
seconds of the RMI signal
LED flashing green.

RMP400 – RMI partnership

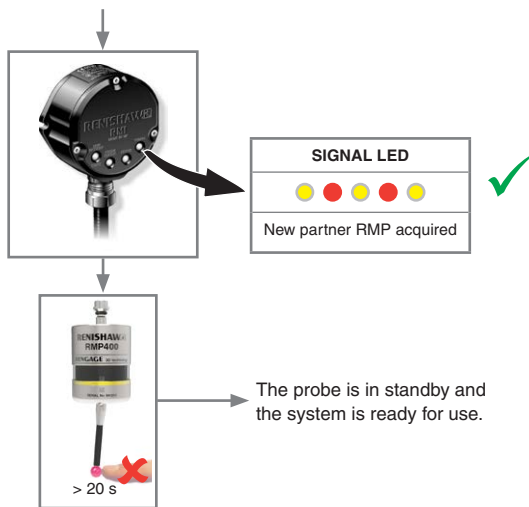


NOTE: Please refer to the *RMI installation guide* (Renishaw part no. H-4113-8554) when partnering the RMP400.

RMP400 – RMI-Q partnership

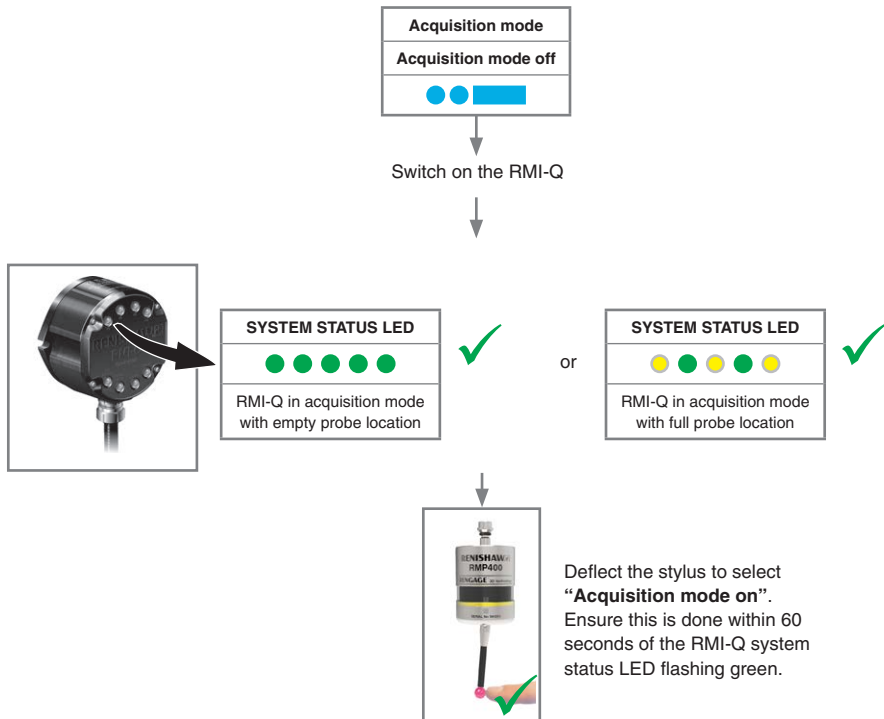

RMP400 – RMI-Q partnership

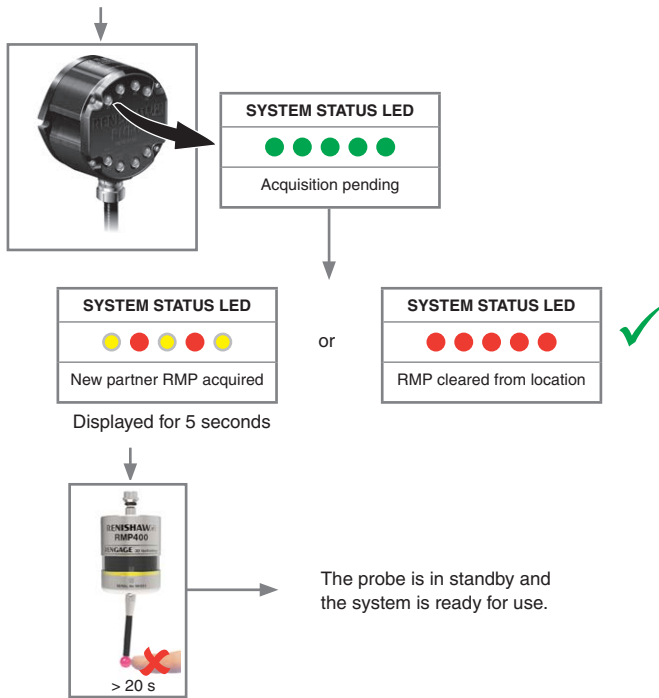

NOTE: Please refer to the *RMI-Q installation guide* (Renishaw part no. H-5687-8504) when partnering up to four RMP400s.

Mounting the probe on a shank


Montage des Messtasters an die Werkzeugaufnahme

Montaje de la sonda en un cono

Montage du palpeur sur un cône

Installazione della sonda sul cono

プローブのシャンクへの取り付け

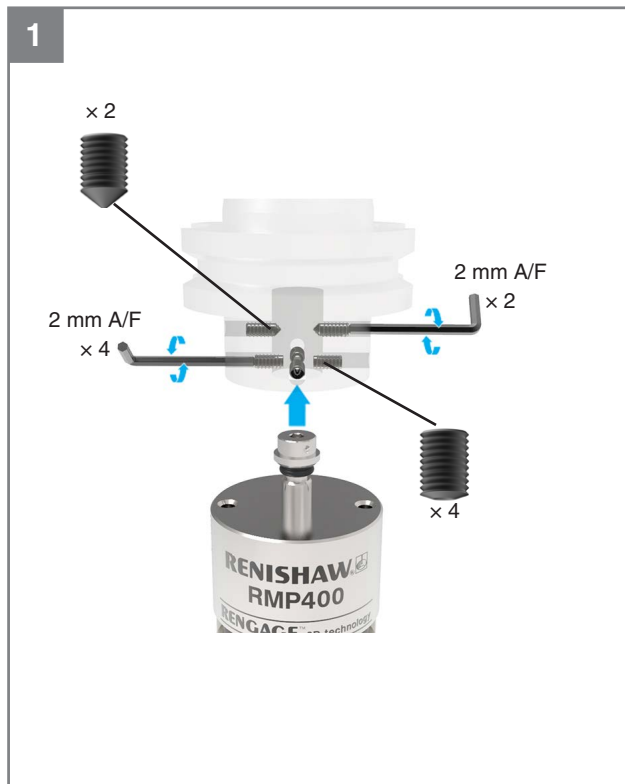

2



Draft 5 16/04/18

1-25

Stylus on-centre adjustment


Rundlauf des Tastereinsatzes
einstellen

Ajuste de centrado del
palpador


Centrage du stylet

Centratura dello stilo

スタイラスの芯出し調整方法

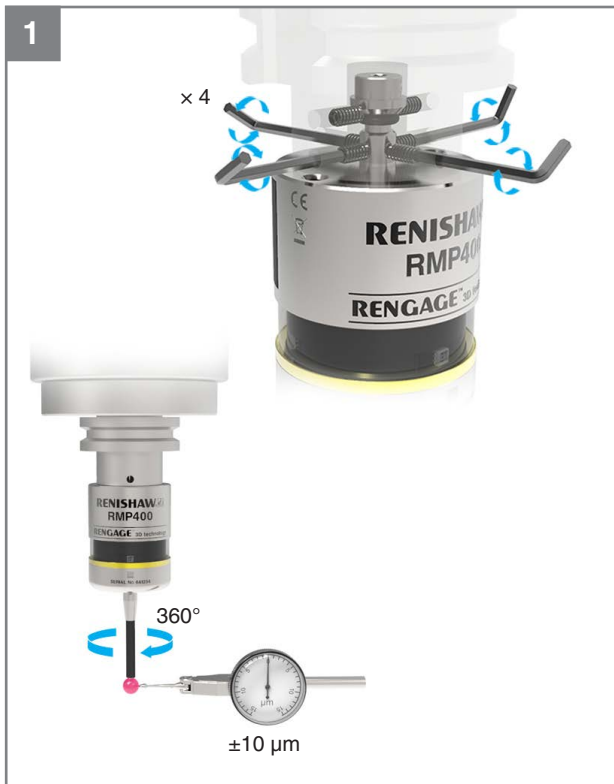


2

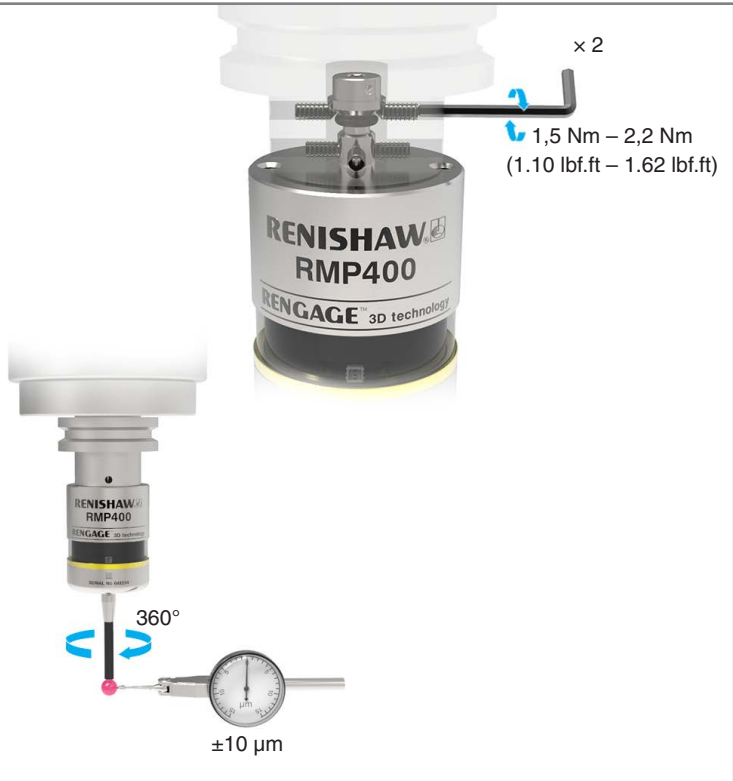

Draft 5 16/04/18

1-27

3

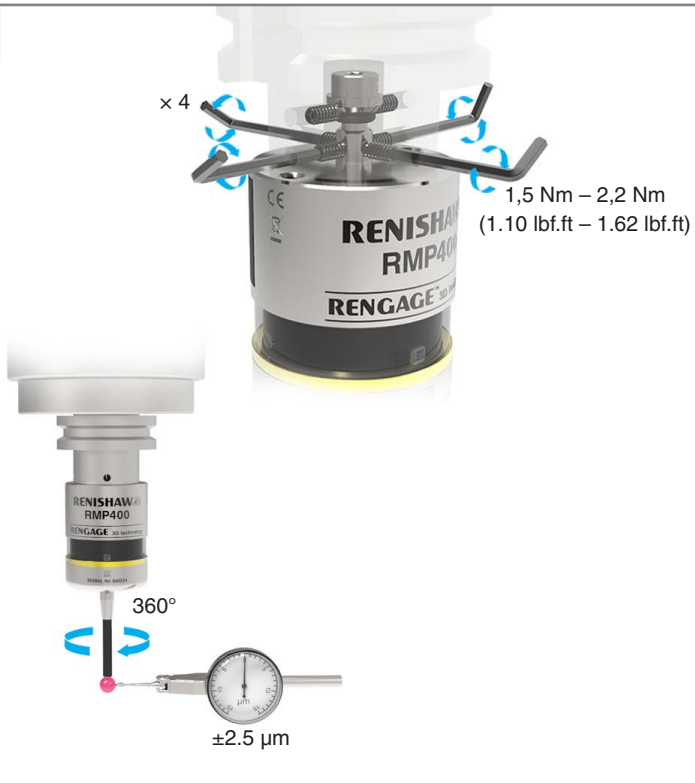

Cleaning

Use a clean cloth.

Reinigung

Verwenden Sie ein sauberes Tuch.

Limpieza

Utilice un paño limpio.

Nettoyage

Utiliser un chiffon propre.

Pulizia

Usare un panno pulito.

クリーニング

きれいな布を使用して下さい。



RMI-Q visual diagnostics

LOW BATTERY/START LED	
Off	Battery is okay and no M-code start/stop in progress
●	Battery low
●	M-code start/stop in progress
●	Battery low and M-code start/stop in progress
● ● ●	Overload error

PROBE STATUS LED	
●	Probe triggered
●	Probe seated
● ● ●	Overload error

P1, P2, P3, P4 SYSTEM STATUS LEDs	
Off	Probe number empty
●	Probe number full, in standby
●	Probe number full, operating
●	Probe number full, 0.5 s compatibility error
● ● ●	Selection error
● ● ● ● ● ●	Acquisition/clearing pending, full
● ● ● ● ● ●	Acquisition pending, empty
● ● ● ● ● ●	Acquisition complete, probe full
● ● ● ● ● ●	Clearing complete, probe empty


Key to the symbols	
●	Continuously on
● ● ●	Flashing

SIGNAL LED	
Off	No probes operating
■	Good communications
■	Poor communications
● ● ●	Overload error

ERROR LED	
Off	No error
●	Error
● ● ●	Overload error



RMI visual diagnostics

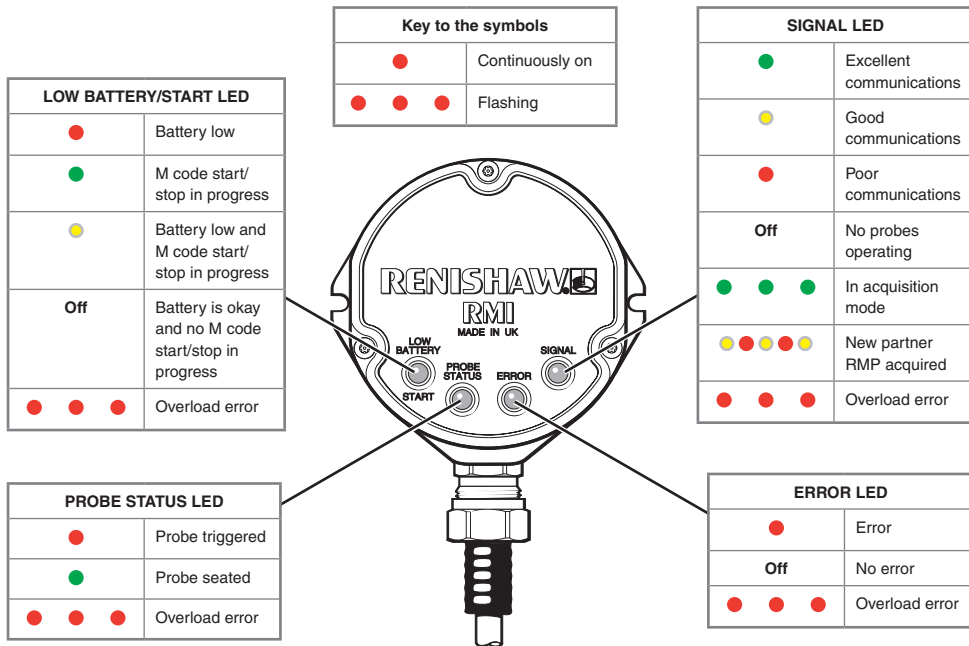

© 2018 Renishaw plc. All rights reserved.

This document may not be copied or reproduced in whole or in part, or transferred to any other media or language, by any means, without the prior written permission of Renishaw plc.

The publication of material within this document does not imply freedom from the patent rights of Renishaw plc.

Disclaimer

RENISHAW HAS MADE CONSIDERABLE EFFORTS TO ENSURE THE CONTENT OF THIS DOCUMENT IS CORRECT AT THE DATE OF PUBLICATION BUT MAKES NO WARRANTIES OR REPRESENTATIONS REGARDING THE CONTENT. RENISHAW EXCLUDES LIABILITY, HOWSOEVER ARISING, FOR ANY INACCURACIES IN THIS DOCUMENT.

Trade marks

RENISHAW and the probe symbol used in the RENISHAW logo are registered trade marks of Renishaw plc in the United Kingdom and other countries. **apply innovation** and names and designations of other Renishaw products and technologies are trade marks of Renishaw plc or its subsidiaries.

Google Play and the Google Play logo are trademarks of Google LLC.

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries.

All other brand names and product names used in this document are trade names, trade marks, or registered trade marks of their respective owners.

Warranty

Equipment requiring attention under warranty must be returned to your equipment supplier.

Unless otherwise specifically agreed in writing between you and Renishaw, if you purchased the equipment from a Renishaw company, the warranty provisions contained in Renishaw's **CONDITIONS OF SALE** apply. You should consult these conditions in order to find out the details of your warranty but, in summary, the main exclusions from the warranty are if the equipment has been:

- neglected, mishandled or inappropriately used; or
- modified or altered in any way except with the prior written agreement of Renishaw.

If you purchased the equipment from any other supplier, you should contact them to find out what repairs are covered by their warranty.

Patents

Features of RMP400 and features of similar products are the subject of one or more of the following patents and/or patent applications:

Patent numbers will be placed here
when there are any

Renishaw plc
New Mills, Wotton-under-Edge
Gloucestershire, GL12 8JR
United Kingdom

T +44 (0)1453 524524
F +44 (0)1453 524901
E uk@renishaw.com
www.renishaw.com

RENISHAW 
apply innovation™

For worldwide contact details, visit
www.renishaw.com/contact

Draft 5 16/04/18



H - 6570 - 8500 - 01