

Pet

Pet Training System



Away Zone



User' s Guide

Thank you for choosing the Pet-1st PAZ-100. Pet-1st product offers an excellent function to increase the quality of the reliable companionship between you and your pet. Using the Pet-1st product and training with simple steps, Your pet will be able to freely play around, away from the specified areas. The Pet-1st product helps your pet to be around your home in a more orderly manner.

Register your Pet-1st product

Keep your purchase receipt. Register your Pet-1st product with us so that we will be able to assist you faster if you call for support. You will be able to talk to our customer support representatives on questions about the product or training.

Safety Information

Please read the entirely User's Guide before using the product.

WARNING

The PAZ-100 is suitable for keeping your dog away from a specified boundary when used as described in this User's Guide. Therefore, always read the instructions in this User's Guide carefully before using the product.

- The Pet-1st indoor pet training system is not to be used for aggressive pets. Do not use this product if your pets tend to behave aggressively. Aggressive pets, especially aggressive dogs can cause serious injury or death to humans.
- The product shall not be used as a solid barrier. It is designed to be used as a deterrent that applies static correction to restrict pets to remain outside of an established barrier area.
- Trainings with your pet during the initial use of the product and on a regular basis are important and necessary. The tolerance level to the stimulation correction varies from pet to pet. Therefore, Alford Industries, Ltd. can not guarantee that the system will keep a pet outside of the established barrier area in all

cases at all time.

- Not all pets can be trained to keep out from entering the barrier area. If you believe that your pet may harm itself or pose a danger to others if it is not kept outside the barrier area, you should not rely on this product solely to restrict your pet. Alford Industries, Ltd. shall not be liable for any personal injuries, property damage, injury to your pet, or death of your pet, financial loss or any consequences as a result of animals entering the barrier area.
- This product is not a toy. Do not allow children to play with it.
- This product is not a substitute for responsible supervision of your dog.
- Test this product and all its functions so that you are familiar with it prior to actual use.
- Only use a battery of the same type. This product uses a replaceable battery.
- Keep this User's Guide for future reference.

NOTE	The safety alert symbol. The symbol is used to alert any potential injury hazards. Follow this symbol and obey safety instructions to prevent any possible injury or death.
WARNING	The symbol indicates a hazardous situation or condition that, if not avoided, may result in injury or death.
ATTENTION	The symbol addresses safe practices not directly related to injury.
CAUTION	The symbol is used to indicate a hazardous situation or condition that, if not avoided, may result in injury.

Table of Contents

Safety Information	3
1. Product Components.....	8
2. Other Available Items	8
3. Definitions and Key Operation.....	8
3.1 Definitions	8
3.2 Stimulation Correction	9
4. System Functions.....	10
4.1 Unique features	11
5. Operating Guide	12
5.1 Install the Awayzone	12
5.2 Set Up the Awayzone	13
5.3 "Free" barking duration	15
5.4 Test the Awayzone Area	15
5.5 Using Multiple Fencing Collars	18
5.5 Train Your Pet	19
5.6 First Training Session.....	20
6. Additional Information.....	22
7. Frequently Asked Questions.....	25
8. Terms of Use and Limitation of Liability	28
8.1 Term of Use.....	28
8.2 Prohibition of Unlawful Use	28
9. Compliance	29
9.1 Canada	29
9.2 USA	29
FCC Part15.19 Warning Statement	29
FCC Part15.21 Warning Statement	29

FCC Part15.105 Warning Statement	30
9.3 Europe	31
10. Limited Warranty	31
11. Disposal of the Device	32

1. Product Components

- Awayzone (4*AA batteries not included)
- 2 pairs of metal contacts(Short and Long)
- User's Guide



Awayzone



User's Guide

2. Other Available Items

During the installation of the Pet-1st product, you may also need drill hardware, Phillips screwdriver, pliers, lighter, leash, and scissors.

3. Definitions and Key Operation

3.1 Definitions

Awayzone: The device to transmit the wireless radio signals.

Awayzone Area: The area that is set for your pet to stay away from.

Metal contact: The end of the short rod on the collar that delivers stimulation corrections when the

pet enters the Awayzone Area.

3.2 Stimulation Correction

The training option for your pet using different level of stimulation correction that you have selected to cause alert to your pet about the invisible fence and the specified area.

3.3 Overview of PAZ-100



Fig.1

- | |
|--|
| <ol style="list-style-type: none">1. Power Key 
Turn on/off the Awayzone.2. Indicator LED
The LED lights up in green for 3 seconds when the unit is powered on and flashes slowly during standby.3. Battery Door4. Mounting Hole |
|--|

4. System Functions

The Pet-1st product is designed to be used indoors. It keeps your pet away from a certain room or rooms that you specified, away from the kitchen, fire place, breakable decoration or furniture, etc.

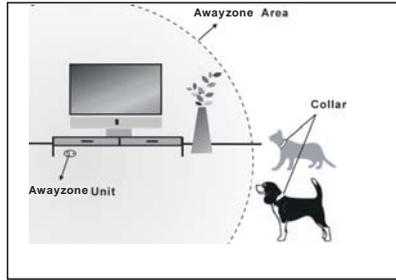


Fig. 3

Install the Awayzone in the area that your pet should stay away. The Awayzone will transmit radio signals in the spherical direction with the radius specified in the Fencing Collar by you up to 3 meters (9.8 feet) in radius, or 6 meters (or 19.6 feet) in diameter. (Refer to Fig.3) When your pet first enters the Awayzone Area, about 5 seconds of "free" barking time which only warning beep will alert your pet with no electrical signal emitted. If your pet continues moving toward the device further, a stimulation correction will be released from the Fencing Collar according to preset level. (Fig.4 & 5)

Except Level 0 with beep sound only, all other levels of stimulation correction is followed by electric shock that is delivered through the metal contacts on the pet's neck. The stimulation correction level is set by you. The higher level of stimulation correction means the stronger electric shock it delivers. The stimulation correction repeats until your pet leaves the Awayzone Area.

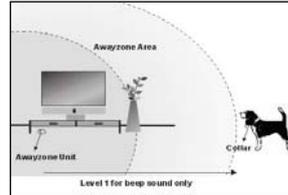


Fig. 4

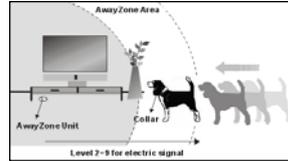


Fig. 5

4.1 Unique features

Awayzone:

- Pet owners can define different radiuses of the Awayzone Area.
- One Awayzone supports unlimited Fencing Collar.
- Operate with the use of regular 4*AA batteries
- The Awayzone Area transmit radio signals in the spherical direction, up to 3 meters (9.8 feet) in radius, or 6 meters (or 19.6 feet) in diameter.

5. Operating Guide

Before install the Awayzone and apply the Fencing Collar to your pet, please make sure both devices have batteries installed and power off.

5.1 Install the Awayzone

You may place the Awayzone on a wall, a floor or a surface. Since the Awayzone emits radio signals to a spherical direction, the signals are transmitted more effectively toward the direction without obstacles. The signals may pass through a ceiling or wall and become weaker. Structures or objects with metal elements embedded will also weaken the directional signals behind the structures/objects.

Please note:

- Do not install the Awayzone on metal surfaces.
- Do not place the Awayzone adjacent to large metal objects, e.g. oven, washer, refrigerator, etc.
- Do not install the Awayzone close to the internet wireless transmitter, audio device, television satellite disk, etc.
- Apply the anti-slip sticky pads on the back of the Awayzone before placing on the horizontal surface, or install screws to the wall and mount the Awayzone.

ATTENTION

Do not install the Awayzone in an outdoor environment. The Awayzone shall be kept away from wet spots, or places of high humidity.

5.2 Set Up the Awayzone

CAUTION

Remove the Fencing Collar from your pet first. Do not perform tests or try to set up the devices when your pet is wearing the Collar.

1. Make sure there are 4*AA batteries installed in the Awayzone. Or, unscrew the battery door on the back of the Awayzone and place 4*AA batteries inside the battery compartment. Then, close the battery door and secure it with a screw. (Refer to Fig.6)
2. **Power On:** Press and hold the Power Key  on the front side of the Awayzone for 2 seconds. When the light turns green, release the button and the indicator stays green for 3 seconds, confirming the power is on.
3. The Awayzone comes with an energy-efficient design. In a standby mode, the indicator flashes green every 5 seconds.

4. **Power Off:** For turning the power off, press and hold the Power Key  for the indicator to turn green. After pressing the button for 2 seconds, the green light will turn off, indicating that the power is off. Release the button.

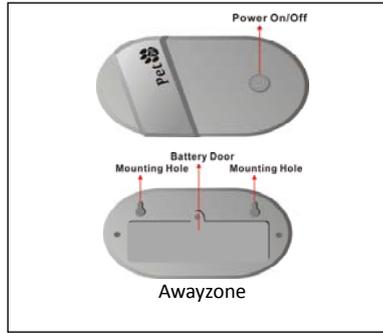


Fig. 6

5. If the battery level of the Awayzone is low, the indicator flashes red.
6. Since one Awayzone can pair with unlimited number of the Fencing Collars, you can set up several Fencing Collars of various Awayzone Areas with different radiuses centered at the Awayzone position to operate at different levels of Stimulation Correction. This feature is especially designed for users who have more than one pet. Please refer to "Set Up the Fencing Collar" on setting up the different Awayzone Areas and different levels of Stimulation Correction.
7. To check whether the power of the Awayzone is on, tap the Power Key  once. If the device is turned on, the

indicator turns green for 3 seconds.

5.3 "Free" barking duration

Your dog is allowed five seconds of "free" barking time, during which just warning beep will trigger. Should your dog continue to bark, the No Bark Collar will administer a stimulation correction at the level that you have selected.

5.4 Test the Awayzone Area

When you perform test on the Awayzone without placing the Fencing Collar on your pet, please keep your hands away from the metal contacts on the Fencing Collar.

1. Please refer to Step 6 in the "Set Up the Fencing Collar" section about "distance setting" to define the distance between the Fencing Collar and the Awayzone.
2. Please refer to Step 9 in the "Set Up the Fencing Collar" section about "Stimulation correction setting". Set the stimulation correction level to level 0 (audio alert sound only, no electrical-stimulation) for the testing and training purpose.
3. Turn the power of both the Awayzone and the Fencing Collar on.
4. Keep the Fencing Collar at about the height of your pet. First, start outside the range and move toward the Awayzone. As you enter the specified Awayzone Area, the

Fencing Collar begins to emit a series of beep sound. Beep sound only for the stimulation correction level 0. For the stimulation correction level 1 to 8, you will see indicators flashes green and red alternatively. The beep sound may be difficult for some people to hear, but is easily heard by your pets.

5. When you move away from the Awayzone Area, the beep sound and the stimulation correction will stop.
6. If you feel that you do not get the exact range of the setting, please try to move the Awayzone a few steps away, or lay the device flat on the surface instead of on the wall, remove items that may block the device. To get the best results, the Awayzone shall be placed on a nonconductive surface, or away from any objects containing metal elements that can alter the magnetic field.

In order to maintain an effective operation of the Fencing Collar, to fit the Fencing Collar to your pet correctly and properly is essential.

1. Make sure your pet is in a comfortable standing position.
2. Make sure both the Awayzone and the Fencing Collar are in power off state.
3. Put the Fencing Collar around your pet's neck

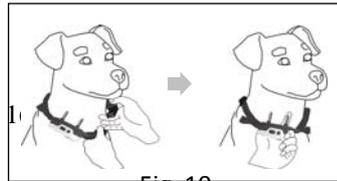


Fig. 10

with both metal contacts are in the position below the chin. The Fencing Collar shall touch the pet's skin. (Refer to Fig.10)

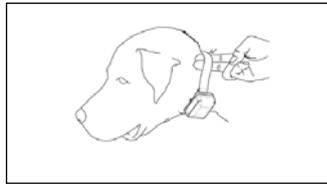


Fig. 11

4. Adjust the tightness of the Fencing Collar; re-arrange the slide buckle and properly threaded the Fencing Collar. The ridges shall be facing outward for easy operation.
5. Check the tightness of the Fencing Collar by inserting two fingers underneath it. The fit should be snug but not constricting. If necessary, trim some of your dog's hair where the Fencing Collar makes constant with your dog's skin at all times for a consistent stimulation. (Refer to Fig.11)
6. If the collar strap is too long for a small pet, after you have fitted the Fencing Collar on your pet, mark the desired length of the strap (taking into consideration of an additional length for a

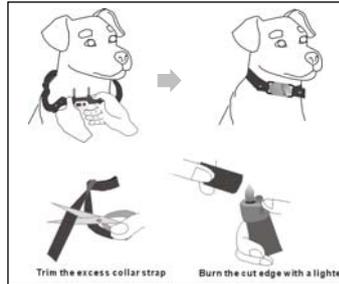


Fig. 12

growing young pet); remove the Fencing Collar from your pet; trim the excess collar strap; use the flame of a lighter to the cut edge (so the frayed edge will not spread later). Please put the Collar back to your pet's neck. (Refer to Fig.12)

5.4 Change Metal Contacts

Included with the PAZ-100 are metal contacts of three different length (short, medium and long) that deliver stimulation correction to your dog. Choose the metal contacts of appropriate length for your dog's hair coat. If your dog has dense coats or undercoats, use one of the longer metal contacts included with your PBZ-100.

IMPORTANT

Make sure that you power off the Fencing Collar before replacing the metal contacts. Make sure that the metal contacts are securely fastened. Do not over tighten.

- Using your fingers to unscrew the metal contacts counter-clockwise to loosen and remove them
- Insert another pair of metal contacts of the appropriate length and gently screw clockwise with your fingers to tighten them.

5.5 Using Multiple Fencing Collars

1. If you have more than one pet, when you use the Pet-1st

pet training system for the first time, it is recommended that you allow one pet in training area, put the Fencing Collar on one pet, and train one pet at a time. By doing so, your pet will be able to focus on the training, learn the signals and comply with your instruction easier. You will be able to give your full attention during the training process.

2. Setup each Collar with a desired distance setting for the Awayzone Area and set the stimulation correction to Level 0 (alert sound only, no electrical stimulation) first before you apply the steps of **“Put the Fencing Collar on Your Pet”** for each pet.
3. When you train more than one pet, it is recommended to remove the Fencing Collar from the pet right after its training session is completed before you begin training the second pet. Lead your pet to another room or area before bringing the second pet to the Awayzone Area for training.

5.5 Train Your Pet

Before you start training your pet, please make sure the Fencing Collar is properly put around your pet’s neck. Please refer to the steps of **“Put the Fencing Collar on Your Pet”**. Lead your pet outside the Awayzone Area before you turn both the Awayzone and the Fencing Collar power on.

5.6 First Training Session

The objective of training your pets in response to the operation of the Pet-1st invisible PAZ-100 is to let your pets learn to leave/avoid the Awayzone Areas you specified, following a stimulation correction. After few repeated trainings, your pets will learn to avoid the uncomfortable feeling incurred in the Awayzone Areas. Eventually, the pets will be accustomed to stay outside the Awayzone Area.

Please give your full attention to your pet during the first training session and observe carefully its response, in order to guide your pet to a faster learning process. It may take several sessions for your pet to understand and learn to cope with the existence of the Awayzone Area since each pet learns at a different rate. Please remember to praise your pet every time after it follows your instructions and leave the Awayzone Area. By doing the negative and positive reinforcement strategies, your pet may easily determine the invisible fenced area itself.

1. Turn the Awayzone power on.
2. Start the first training session from outside the Awayzone Area.
3. Place the Fencing Collar around your pet's neck and make sure that the metal contacts directly contact the skin of your pet's neck.

4. Turn the Fencing Collar power on.
5. In some cases, you may not need to train your pet. Simply let your pet wander freely in the rooms to determine the invisible boundaries. Or, use a regular leash during the first training session (not to let the leash puts pressure on the Fencing Collar) to walk your pet to the Awayzone Area boundary and pull your pet away from the Awayzone Area when the audio alert sound (or the stimulation correction) occurs. After few times of practice, your pet will learn to cope with the operation.
6. Praise your pet after it leaves the Awayzone Area every time.
7. Repeat the process several times until you feel that your pet can masterly avoid the Awayzone Areas.
8. If you have more than one pet, lead your pet to another room after the training before you bring another pet for the training session.
9. After you have completed the training for every pet, you may want to bring all your pets back to the training location and let them get familiar with the setting again and adjust to the newly established behavior of each other.

NOTE

When first using the PAZ-100, it is recommended that you start with the lowest stimulation correction level and

increase the intensity level if need.

6. Additional Information

CAUTION

1. Time out:

The Pet-1st PAZ-100 is designed with a safety feature that will terminate the process of sending the stimulation correction. When your pet enters the Awayzone Area, the Fencing Collar will emit a single stimulation correction at the level you have set up previously. The stimulation correction has automatic control that limits to 1 minute and will stop emitting the stimulation correction for 30 seconds. This will repeat in a cyclic manner until your pet leaves the Awayzone Area. your pet enters the Awayzone Area next time, the Fencing Collar will emit a Stimulation correction again.

2. Using multiple Awayzone

Since the Pet-1st pet training system allows one Fencing Collar to pair with up to 16 Awayzone, the training for each pet

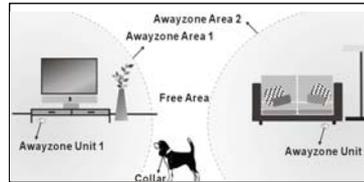


Fig. 13

shall include a session using multiple Awayzone. Your pet will learn to recognize and respond to a broader area that invisibly fenced by multiple Awayzone. Practice with your pet on responding to the setting using multiple Awayzone several times until your pet can respond to the environment without difficulty and confusion. (Refer to Fig.13)

3. Since the Pet-1st PAZ-100 allows one Awayzone to pair with unlimited number of Fencing Collars that is worn by different pets. Besides, you can specify different

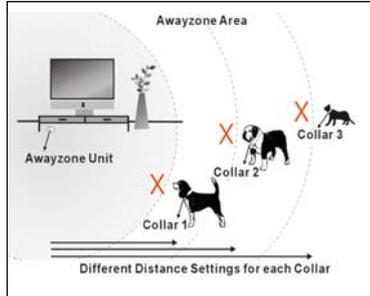


Fig. 14

distance and different level of stimulation correction for different Fencing Collars to be put on different pets. Therefore, using one Awayzone versus multiple Fencing Collars worn by several pets may create a situation that your pets need to rely on the experience learned from the training, instead of responding behaviors of other pets nearby, on how to

respond to the Stimulation correction/alert beep sound.
(Refer to Fig.14)

4. Do not apply the Pet-1st PAZ-100 to aggressive pets or pets that can become agitated easily. The device shall be used only with healthy pets. Consult with your veterinarians if you have concerns about the medical conditions of your pet. If you are not sure if the Pet-1st PAZ-100 is suitable for your pets, consult with your veterinarians or a certified trainer.

3. Test the Fencing Collar

1. Turn on the Awayzone and Fencing Collar.
2. Set the stimulation correction level at 1 or 2 for the Fencing Collar.
3. To touch the metal contacts of the Fencing Collar at one hand's palm and enter Awayzone area. The Fencing Collar will emit a stimulation correction via metal contacts. You can feel the shock instantly at a minimum.

CAUTION

It is important not to turn the stimulation correction level higher than 2 under test mode. If stimulation correction level is too high would make you startle.

7. Frequently Asked Questions

What is meant by stimulation correction?	We have all received a static shock at some point in our lives, such as when we walk barefoot across a carpeted floor and feel a small shock after touching a doorknob. Static shock does not hurt, but it does startle us. As such, the stimulation correction delivered to your dog through our PBO-100 is totally harmless and does not cause any pain or damaging effect
Can I use more than one Fencing Collar on the Awayzone Area?	Yes, one Awayzone can pair with unlimited number of the Fencing Collar. You can purchase an additional Fencing Collar for each pet.
Can I use the pet training system on an aggressive dog?	The pet training system is designed to be a convenient and effective training device on all healthy breeds and sizes. We do not recommend the pet training system to be used on aggressive dogs. Please consult your veterinarian or a certified trainer if you are unsure if your dog is aggressive.
How long can my pet wear the Fencing Collar?	Do not apply the Fencing Collar on your pet for more than 12 consecutive hours per day.
How old	Ideally, your dog should at least be 6

should my pet be before I start training?	months old and know basic commands as "Sit" or "Stay" before using the pet training system.
My PAZ-100 beeps, but my dog keeps barking (does not seem to respond to the stimulation correction).	<ul style="list-style-type: none"> • Tighten the Fencing Collar and/or trim your dog's hair where the metal contacts touch its neck to ensure good skin contact. • Replace the battery. • Test the No Bark Collar • If your dog still does not respond, contact Customer Service at x-xxx-xxx-xxxx.

8. Cleaning and Care

NOTE

Remove the battery and discharge the Fencing Collar before touching the metal contacts

8.1 Cleaning and care

- Check metal contacts for tightness weekly.
- Clean metal contacts with alcohol weekly.
- Check your dog's neck area for irritation and wash neck weekly.
- Make sure the Fencing Collar dry completely before use.
- Every effort has been made to ensure high standards of reliability of your PAZ-100. However, if something does go wrong, please do not try to repair it yourself - contact Customer Service for assistance.

8. Terms of Use and Limitation of Liability

8.1 Term of Use

The Pet-1st product is sold to you conditioned upon your acceptance without modification of the terms, conditions and notices stated herein. Usage of this product implies acceptance of all aforementioned terms, conditions, and notices.

The Pet-1st product is designed for use with pets where training is needed. Not all pets are suitable for using this product. It is recommended that you shall not use this product on pets that weight less than 20 pounds or pets that are aggressive or easily agitated. If you are not sure whether this product is appropriate for your pet, please consult with your veterinarians or a certified trainer. Please read the User's Guide completely and follow the methods to properly use the product.

8.2 Prohibition of Unlawful Use

To use the Pet-1st product in any way that is not intended can result in violation of Federal, State, or local laws. The product is designed for indoor use with pets only. This product is not intended to harm, injure or provoke your pets.

9. Compliance

9.1 Canada

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

9.2 USA

FCC Part15.19 Warning Statement

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part15.21 Warning Statement

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Part15.105 Warning Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

9.3 Europe

This product generates, uses, can radiate radio frequency energy. If this product is not installed and used in accordance with the instructions may cause harmful interference to radio communications.

By turning the power of the product off and on, users can determine whether the product causes the interference. If this product causes interference to radio reception, users can try to eliminate the interference by trying the following steps.

- Move the product to a different location
- Relocate the interfered appliance or its antenna.

Unauthorized modifications to the product, not approved by Alford Industries, Ltd. can result in not meeting compliance with FCC regulations and could void the product owner's right to operate the product.

10. Limited Warranty

Alford Industries Ltd. warrants to the original purchaser that the Pet-1st product and accompanying battery (CR2450) will be free from defects in materials and workmanship for a limited manufacturer's warranty from the date of purchase. This limited warranty does not cover (a) any problem that is caused by neglect, accident, abuse, shock,

electrostatic discharge, wet, heat or humidity beyond product specifications, improper installation, operation, maintenance, modification or alteration; (b) any misuse contrary to the instructions in the User's Guide; or (c) malfunctions caused by other equipment. This limited warranty is voided if the Pet-1st product (a) is repaired or serviced by anyone not authorized by Alford Industries Ltd. to render such service; (b) is returned with removed, damaged or tampered parts of any alterations.

Alford Industries, Ltd. reserves the right to change the terms, conditions and notices under which the Pet-1st product is offered.

11. Disposal of the Device

The ink, paint, wire rods and molding resin materials used in the production of the Pet-1st products are purchased only from the business partners approved by Alford Industries, Ltd. as the Green Partners. However, do not dispose the devices into a regular garbage collection can. Please dispose/recycle the device by the same method that applies to household electronic devices.

Alford Industries, Ltd.
[Address]
Telephone: 1-800-XXX-XXXX
Email: xxx@xxx.com