

EA95414

FCC ID:NRQ ST0800A

HyperPen Tablet Installation Guide

Contents

FCC Statement.....	2
EEC Statement.....	3
System Requirements.....	4
Tablet Specifications.....	5
 Hardware Installation (camera & tablet for HyperMeeting)	
Contents Checklist.....	7
USB Installation.....	8
 Hardware Installation (continued - tablet only)	
Contents Checklist.....	10
Installation.....	10
 Software Installation	
HyperMeeting Manager (Pen Driver).....	12
HyperMeeting Manager (USB Camera Driver).....	14
Cadix CyberSign screen saver.....	16

 **FCC Statement**

This equipment generates and uses radio frequency energy and if not installed and used in accordance with the manufacturer's instructions, it may cause interference to radio and television reception. This equipment has been tested and certified to comply with the limits for a Class B computing device, pursuant to sub-part J of part 15 of FCC Regulation, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient the receiving antenna

Relocate the computer with respect to receiver

Plug the computer into a different power outlet so that the computer and receiver are on different branch circuits.

If necessary, the user should consult with the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet helpful, which was prepared by the Federal Communication Commission:

"How to Identify and Resolve Radio-TV Interference Problems."



EC Statement

This device complies with requirement of EEC directive 89/336/EEC with regard to Electromagnetic Compatibility.

Dieses Gerät entspricht den Anforderungen der EEC-Richtlinie 89/336/EEC für elektromagnetische Verträglichkeit.

Cet appareil est conforme aux exigences de la directive de la Communauté européenne 89/336/EEC sur la compatibilité électromagnétique.

Questo apparecchio è conforme alla direttiva comunitaria 89/336/ CEE relativa alla compatibilità elettromagnetica.

Este dispositivo cumple con los requerimientos de la normativa de la CEE 89/336/EEC en lo referente a Compatibilidad Electromagnética.

System Requirements


- IBM compatible PC with 100Mhz Pentium processor or higher
- An available serial port
- Windows 95, Windows 98 or Windows NT 3.5 or later
- 16MB RAM for Windows 95/98
- 32MB RAM for Windows NT
- CD-ROM Drive
- Color monitor



Tablet Specifications

- Active area (DxW) : 4" x 3.5" (101.6mm x 76.2mm)
- Macro cells : 8 macro function keys
- Physical size : 188 x 200 x 6.9mm
- Weight : 320g
- Max. resolution : 3048dpi / 120ipmm
- Accuracy (overall with pen) : 0.42mm, maximum
- Pressure levels : 512
- Maximum reading height : 10mm (0.4")
- Communication interface : RS-232 serial port
- Connector : 9-pin / 9-25pin D-sub, female
- Certification : FCC class B, VCCI class 2, CE(EMC), BCIQ, C-Tick

Contents Checklist

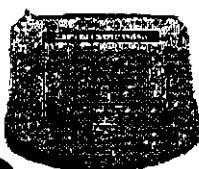

1 TABLET

1




2 PEN

2


3 KEYBOARD POWER ADAPTER

3

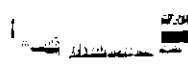

4 5-PIN TO 6-PIN ADAPTER

4

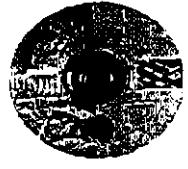


5 APPLICATION / DRIVER CD

5

6



Hardware Installation

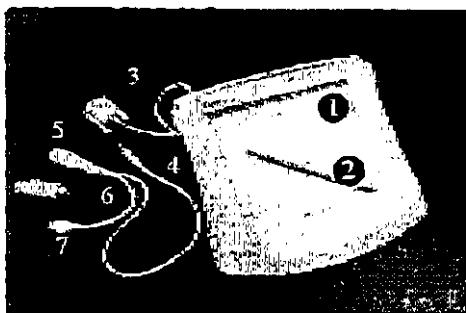

- ① Tablet
- ② Pen
- ③ COM/Serial port connector
- ④ Power adapter
- ⑤ Keyboard connector
- ⑥ 5-6 pin adapter
- ⑦ Keyboard/mouse connector

For PC Users


A Before you start, make sure your computer is turned off.

B Unplug the keyboard cable from the computer.

C Attach the power adapter ④ to the tablet's COM/Serial connector ⑥



D Connect the tablet's COM/Serial port connector ③ to the computer's COM port.

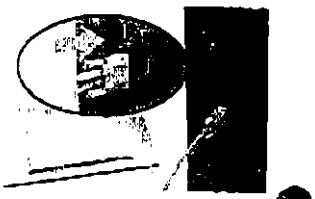

E Connect the keyboard/mouse connector ⑦ to the keyboard socket on the back of the computer (use 5-6 pin adapter if necessary).

F Connect keyboard connector ⑤ to the keyboard/mouse cable.



You have completed the hardware installation!

For Notebook Users


A Before you start, make sure your computer is turned off.

B Unplug the mouse cable from the computer (if necessary).

C Attach the power adapter **4** to the tablet's COM/Serial connector **3**.



D Connect the tablet's COM/Serial port connector **6** to the notebook's COM port.

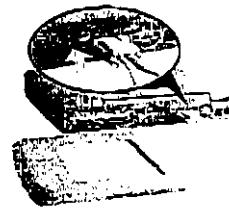

E Connect the keyboard/mouse connector **7** to the keyboard/mouse socket on the back of the notebook.



8

F Use 5-6 pin adapter **6** if you would like to connect additional keyboard or mouse.

You have completed the hardware installation!



Software Installation

HyperPen Manager (Pen Driver)

1 Begin by inserting the autorun installation CD. The following screen appears (Step 2).


OR

If the screen in step 2 does not appear, click **Start** and choose **Run**.

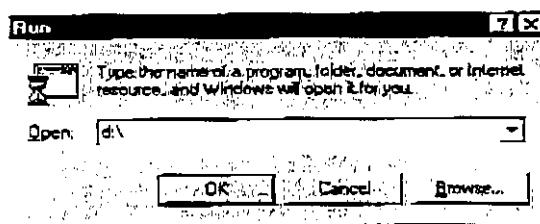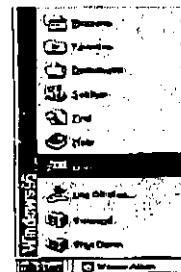

In the **Run** dialog box, type "d" or where your CD drive is located and click **OK**. Then click **Setup** icon.

2

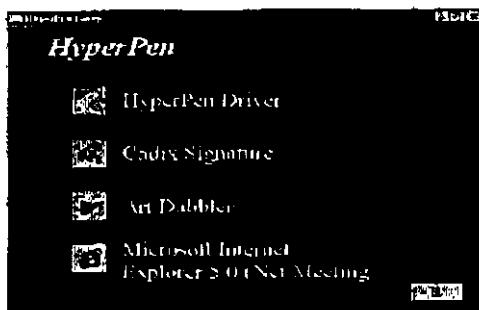


The screen below appears.

Cadix CyberSign


1 Begin by inserting the autorun installation CD. The following screen appears(Step2).

OR

If the following screen does not appear, click **Start** and choose **Run**.

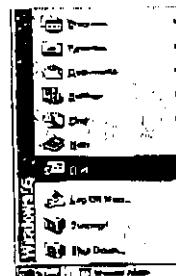

In the **Run** dialog box, type "d:\\" where drive is you CD drive and click **OK**. Then choose **Setup** icon.

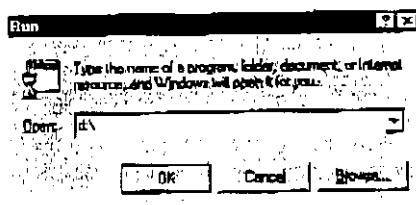

2 The screen below appears.



3

Click the **Cadix CyberSign** icon.




3




Click the *HyperMeeting Manager (Pen Driver)* icon.

4

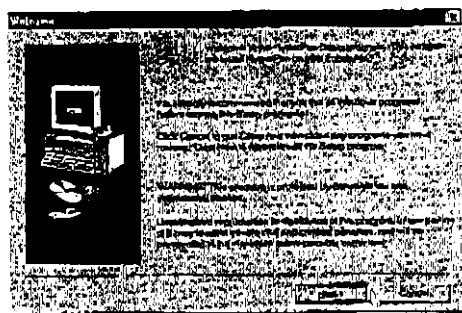


The welcome screen appears, click "Next".

5

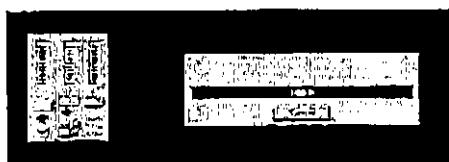

The driver files will begin to install to the proper location.


6

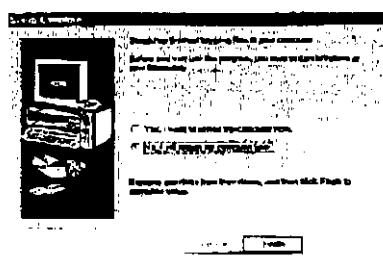

Windows will prompt you to restart your computer in order to complete the installation. Select "*No, I will restart my computer later*" and click "*Finish*".


10

4

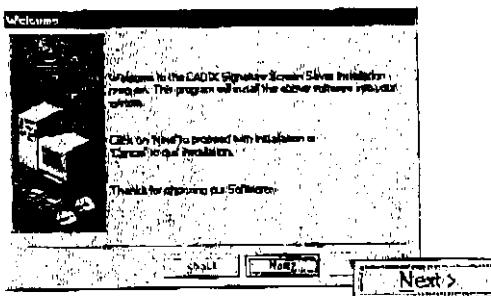


A Welcome dialog box appears. Click "Next" to start the installation.

5

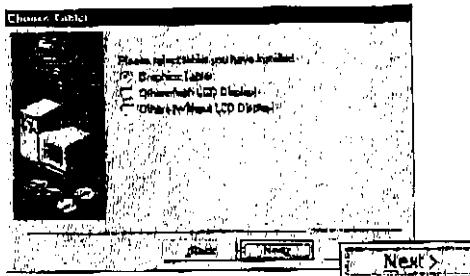

Choose the tablet you have installed. Click "Next".


6

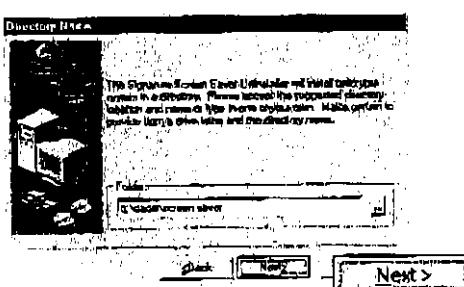

Select the directory where you would like Cadix to be installed, or accept the suggested directory. Click "Next".

12

7

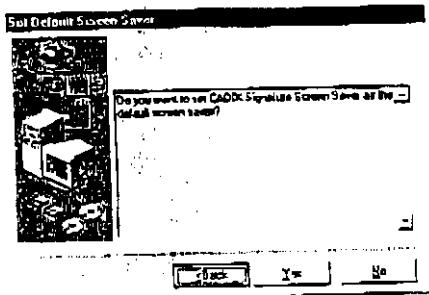

You can set the Cadix as the default screen saver and click "Yes", or click "No" to continue.

You will see a **Done!** dialog box. Now the installation is complete!

You can also install other softwares by clicking on the icons of your choice.