

**ADVANCE DATA TECHNOLOGY CORPORATION**

OFFICE: 12F. No. 1, Sec. 4, Nan-King E. Rd., Taipei, Taiwan, R.O.C.

LAB : No. 47, 14 Ling Chia Pau Tsuen, Lin Kou Hsiang, Taipei, Taiwan, R.O.C.

Tel: (02) 603-2180-4

Fax: (02) 602-2943
(03) 459-7906

Federal Communications Commission
Authorization and Evaluation Division
7435 Oakland Mills Rd.
Columbia, MD. 21046

Attention: Ms. Linda Elliot

SUBJECT: FCC ID: NRQST0800A
Applicant: Aiptek International Inc.
Correspondence Reference Number: 9850
731 Confirmation Number: EA95414

Dear Ms. Elliot,

We, ADT Corp., are the agent of Aiptek International Inc., who is applying for FCC grant for its Tablet, FCC ID: NRQST0800A.

Enclosed please find the product's user's manual. Thank you for your kind attention and we are very sorry for any inconvenience caused.

Sincerely yours,

Sharon Hsiung
Sharon Hsiung / Senior Certification Specialist
ADT Corp.

Date: Sept. 29, 1999

10/11/99
PCL/EExhibit 8Users Manual

FCC ID: NRQ ST0800A

HyperPen Tablet Installation Guide

Contents

FCC Statement	2
EEC Statement	3
System Requirements	4
Tablet Specifications	5
 Hardware Installation (camera & tablet for HyperMeeting)	
Contents Checklist.....	7
USB Installation.....	8
 Hardware Installation (continued - tablet only)	
Contents Checklist.....	10
Installation.....	10
 Software Installation	
HyperMeeting Manager (Pen Driver).....	12
HyperMeeting Manager (USB Camera Driver).....	14
Cadix CyberSign screen saver.....	16

FCC Statement

This equipment generates and uses radio frequency energy and if not installed and used in accordance with the manufacturer's instructions, it may cause interference to radio and television reception. This equipment has been tested and certified to comply with the limits for a Class B computing device, pursuant to sub-part J of part 15 of FCC Regulation, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient the receiving antenna

Relocate the computer with respect to receiver

Plug the computer into a different power outlet so that the computer and receiver are on different branch circuits.

If necessary, the user should consult with the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet helpful, which was prepared by the Federal Communication Commission:

"How to Identify and Resolve Radio-TV Interference Problems."

**EC Statement**

This device complies with requirement of EEC directive 89/336/EEC
with regard to Electromagnetic Compatibility.

Dieses Gerät entspricht den Anforderungen der EEC-Richtlinie
89/336/EEC für elektromagnetische Verträglichkeit.

Cet appareil est conforme aux exigences de la directive de la
Communauté européenne 89/336/EEC sur la compatibilité
électromagnétique.

Questo apparecchio è conforme alla direttiva comunitaria 89/336/
CEE relativa alla compatibilità elettromagnetica.

Este dispositivo cumple con los requerimientos de la normativa de la
CEE 89/336/EEC en lo referente a Compatibilidad Electromagnética.

S**System Requirements**


- IBM compatible PC with 100Mhz Pentium processor or higher
- An available serial port
- Windows 95, Windows 98 or Windows NT 3.5 or later
- 16MB RAM for Windows 95/98
- 32MB RAM for Windows NT
- CD-ROM Drive
- Color monitor



Tablet Specifications

- Active area (DxW) : 4" x 3.5" (101.6mm x 76.2mm)
- Macro cells : 8 macro function keys
- Physical size : 188 x 200 x 6.9mm
- Weight : 320g
- Max. resolution : 3048dpi / 120ipmm
- Accuracy (overall with pen) : 0.42mm, maximum
- Pressure levels : 512
- Maximum reading height : 10mm (0.4")
- Communication interface : RS-232 serial port
- Connector : 9-pin / 9-25pin D-sub, female
- Certification : FCC class B, VCCI class 2, CE(EMC),
BCIQ, C-Tick

Contents Checklist

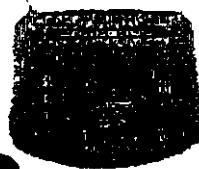

1 TABLET

1

2 PEN


2

3 KEYBOARD POWER ADAPTER

3

4 5-PIN TO 6-PIN ADAPTER

4

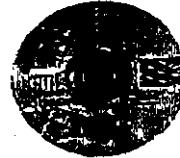


5 APPLICATION / DRIVER CD

5

6

A hardware installation

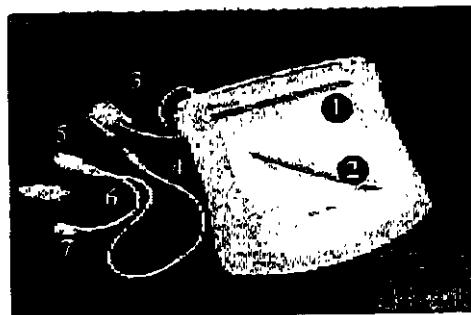

- 1 Tablet
- 2 Pen
- 3 COM/Serial port connector
- 4 Power adapter
- 5 Keyboard connector
- 6 5-6 pin adapter
- 7 Keyboard/mouse connector

For PC Users


A Before you start, make sure your computer is turned off.

B Unplug the keyboard cable from the computer.

C Attach the power adapter **4** to the tablet's COM/Serial connector **3**.



D Connect the tablet's COM/Serial port connector **3** to the computer's COM port.

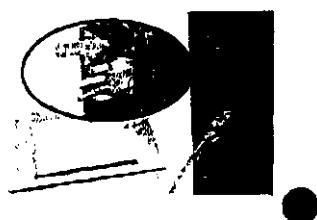

E Connect the keyboard/mouse connector **7** to the keyboard socket on the back of the computer (use 5-6 pin adapter if necessary).

F Connect keyboard connector **5** to the keyboard/mouse cable.




You have completed the hardware installation!

For Notebook Users


- A** Before you start, make sure your computer is turned off.
- B** Unplug the mouse cable from the computer (if necessary).
- C** Attach the power adapter ① to the tablet's COM/Serial connector ③.



- D** Connect the tablet's COM/Serial port connector ⑤ to the notebook's COM port.

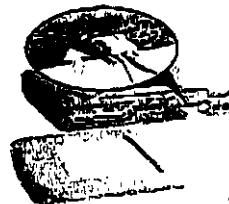

- E** Connect the keyboard/mouse connector ⑦ to the keyboard/mouse socket on the back of the notebook.

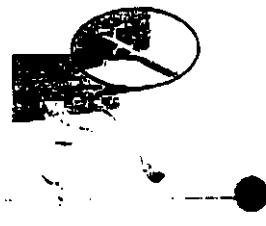

S

- F** Use 5-6 pin adapter ⑥ if you would like to connect additional keyboard or mouse.

You have completed the hardware installation!





Software Installation

HyperPen Manager (Pen Driver)

1 Begin by inserting the autorun installation CD. The following screen appears(Step2).


OR

If the screen in step 2 does not appear,
click **Start** and choose **Run**.

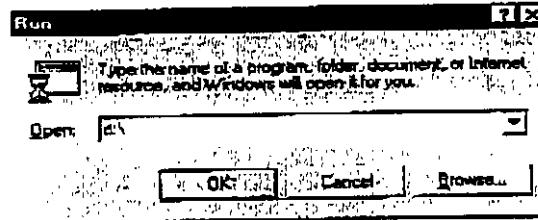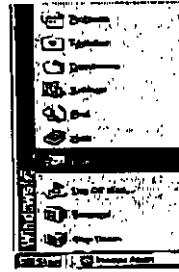


In the **Run** dialog box, type "d" or where your CD drive is located and click **OK**. Then click **Setup** icon.

2

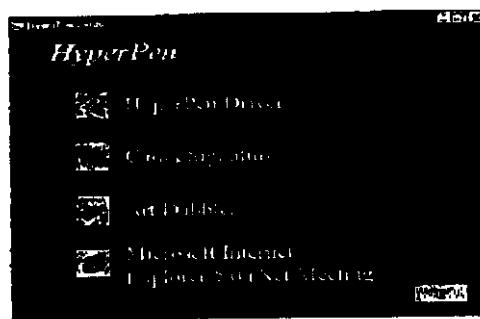


The screen below appears.

3

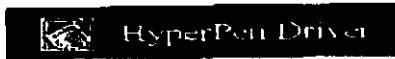


Click the **HyperMeeting Manager (Pen Driver)** icon.

4

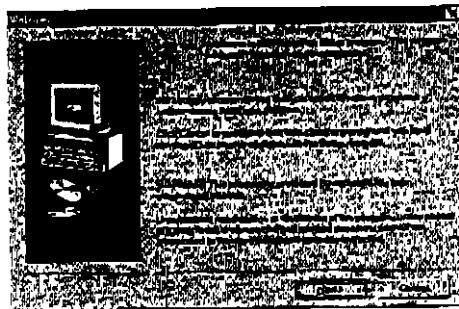


The welcome screen appears, click "Next".

5

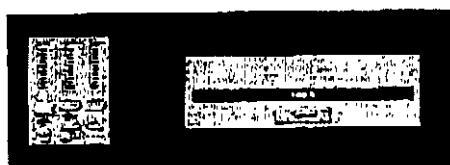

The driver files will begin to install to the proper location.

6

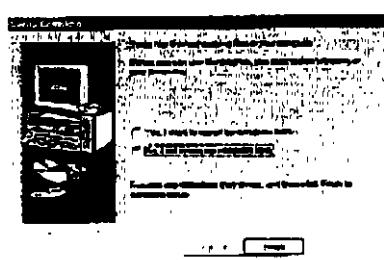

Windows will prompt you to restart your computer in order to complete the installation. Select "**No, I will restart my computer later**" and click "**Finish**".


10

Cadix CyberSign


1 Begin by inserting the autorun installation CD. The following screen appears(Step2).

OR


If the following screen does not appear, click Start and choose Run.

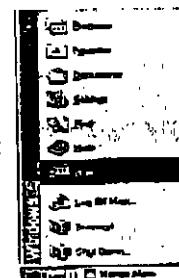

In the Run dialog box, type "d:\\" where drive is you CD drive and click OK. Then choose Setup icon.

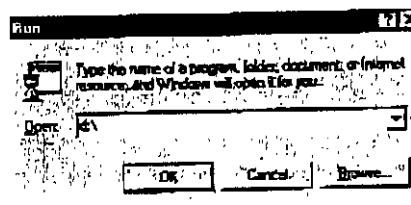


2 The screen below appears.

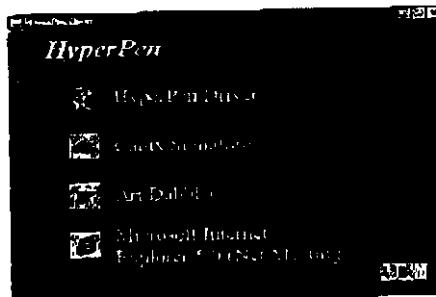


3

Click the Cadix CyberSign icon.




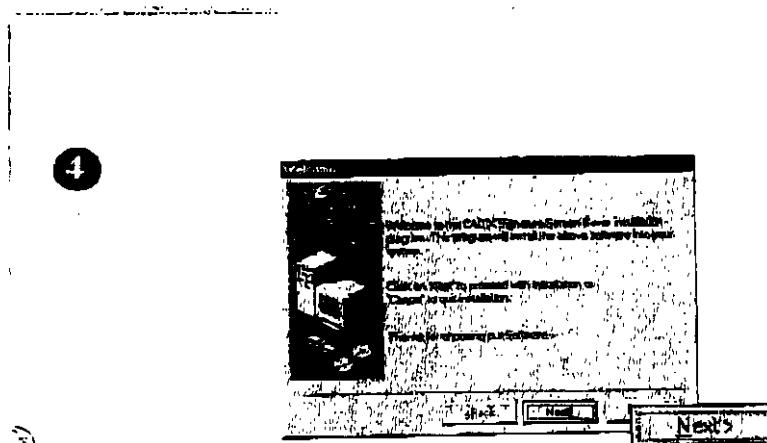

A Welcome dialog box appears. Click “Next” to start the installation.

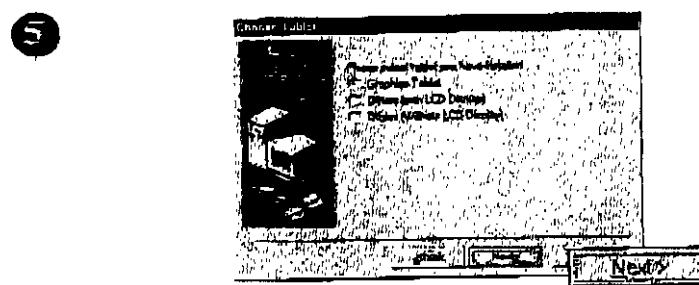


Choose the tablet you have installed. Click "Next".

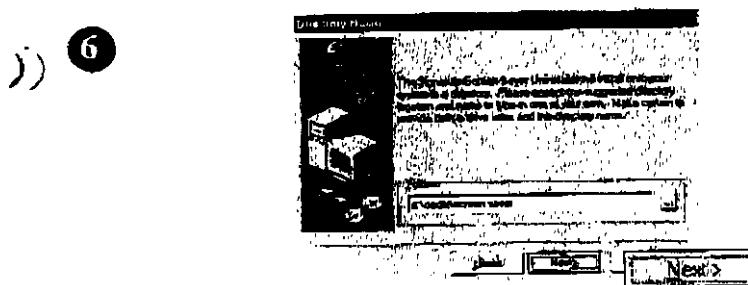

Select the directory where you would like Cadix to be installed
or accept the suggested directory. Click "Next".



7

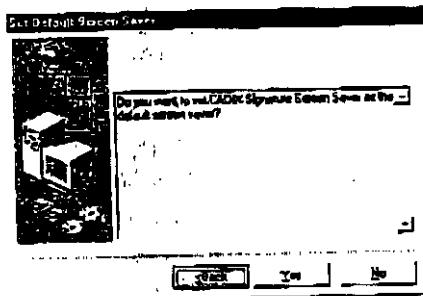

You can set the Cadix as the default screen saver and click "Yes", or click "No" to continue.

You will see a Done! dialog box. Now the installation is complete!

You can also install other softwares by clicking on the icons of your choice.

13