




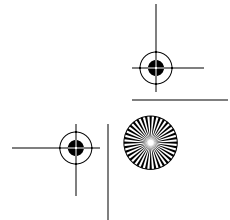

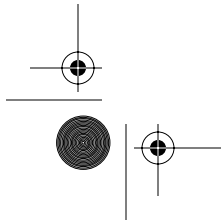


# Bluetooth Module User's Guide

January 18, 2001



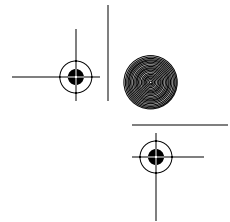

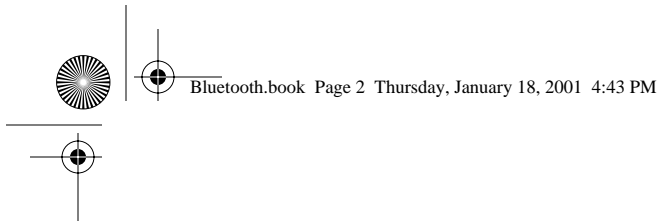

## *Welcome*

---



Welcome to Motorola's "connected" world of Bluetooth personal area wireless networking. We are pleased you have chosen the Motorola Bluetooth Phone Module to keep you connected with ease.

The Bluetooth Phone Module enables you to exchange data and/or audio seamlessly between your cellular telephone and other Bluetooth devices such as PDAs or notebook computers.

All Motorola wireless products are designed and manufactured to meet Motorola's rigorous specifications and world-class quality standards. During development, our testing team took the Motorola Bluetooth Phone Module through rigorous durability tests including temperature, humidity, shock, dust, vibration, and drop tests—and it worked perfectly.

We are confident that you will find your Bluetooth Phone Module to be a convenient and secure way to exchange voice signals and other data. Thank you for choosing a Motorola Bluetooth product!





Personal Communications Sector  
600 North U.S. Highway 45  
Libertyville, Illinois 60048


1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)


[www.motorola.com](http://www.motorola.com)

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.

© 2001 Motorola, Inc. All rights reserved. Printed in the U.S.A.

Manual number: xxxxxxx  
Cover number:








## *Contents*

---



<b>Safety and General Information</b> .....	4
Electromagnetic Interference/Compatibility .....	4
<b>Getting Started</b> .....	7
What Is Bluetooth? .....	7
Attaching the Module to Your Phone .....	8
Bluetooth Menus .....	9
Naming Your Module .....	10
Turning Voice Dial On and Off .....	11
<b>Linking Devices</b> .....	12
Starting a Link to Another Device .....	12
Ending a Link .....	15
Receiving a Link from Another Device .....	16
Managing Your Device List .....	18
Ensuring Successful Fax Transmission .....	21
<b>Troubleshooting</b> .....	22





## *Safety and General Information*




### **IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.**

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).



### *Electromagnetic Interference/Compatibility*



**Note:** Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

### *Facilities*

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.



## *Safety and General Information*

### ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

### ***Medical Devices***

#### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, Wireless Technology Research.

Persons with pacemakers should:

- ALWAYS keep the phone and Bluetooth phone module more than six inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone and Bluetooth phone module in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.



## *Safety and General Information*




### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.







## Getting Started

### What Is Bluetooth?

*Bluetooth* is a type of radio communication. Bluetooth *devices* can find and communicate with each other without using any wires.

Bluetooth *devices* (such as Bluetooth Phone Modules and speakerphones) communicate through a common link that the two devices share.

A Bluetooth device can *seek* other Bluetooth devices and determine which ones are open. An *open* device is one that is awaiting a link. A Bluetooth device can then *link*—establish an active connection—to the device and begin exchanging voice signals or other data with it.




## Getting Started

### Attaching the Module to Your Phone


#### Do This

- 1 Turn off your phone.
- 2 Remove the battery cover.

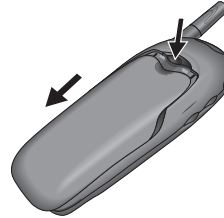

- 3 Attach the Bluetooth module.

**Note:** The Bluetooth module uses some battery power whenever it is attached. (See "Turning Voice Dial On and Off" on page 11.)

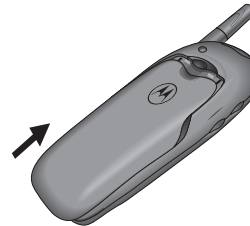



## Getting Started



### Bluetooth Menus

**Note:** Bluetooth menu items only appear when the Bluetooth module is attached.

*Before* you make a bond, the **Bluetooth Link** Menu includes these selections:

- **Bluetooth Link**
  - **Hands Free**
    - Reconnect
    - Scan All
    - Voice Dial
  - **Devices**
  - **Setup**
    - Await Link
    - Name

*After* you make a bond, the **Bluetooth Link** Menu includes these selections:

- **Bluetooth Link**
  - **Hands Free**
    - Disconnect
    - Voice Dial
  - **Devices**
  - **Setup**
    - Await Link
    - Name





## Getting Started



### Naming Your Module

When other Bluetooth devices find your module in a scan, they see its 12-character Bluetooth address. (PC tools can see more character.)

If you want them to see a text name instead, you can “name” your module:

Find the Feature



> **Settings** > **Connection**  
> **Bluetooth Link** > **Setup** > **Name**


Press	To
1 keypad keys	enter the characters for the name (40 characters maximum)
2 OK (👁)	save the name that you entered





## Getting Started

### Turning Voice Dial On and Off

You can change the function of the button on some Bluetooth headsets. This only applies to phones with voice recognition.

- With Voice Dial **On**, this button functions like your phone's Voice Dial button.
- With Voice Dial **Off**, this button functions like .

Find the Feature  > **Settings** > **Connection** > **Bluetooth Link**  
> *device name* > **Voice Dial**

Press	To
1 	scroll to <b>On</b> or <b>Off</b>
2 <b>SELECT</b> (  )	select the option



## *Linking Devices*

---



### *Starting a Link to Another Device*


You can tell your module to find and link to other Bluetooth devices. Your module remembers the last device it linked, so you can reconnect it quickly.

**Note:** You can only link to one device at a time.

### *Finding and Linking Devices*



To look for available Bluetooth devices and select one to link:

Find the Feature  > Settings > Connection > Bluetooth Link  
> Hands Free > Scan All



## Linking Devices

The module scans for devices and shows you a list of the ones it finds. To link a device in the list:

Press	To
1 	scroll to the device you want to link
2 <b>LINK</b> 	ask the device to link
	Your phone displays a linking notice when the link is complete.

### Linking the Last Device

You can quickly reconnect the last device that linked to your module:

Find the Feature  > **Settings** > **Connection** > **Bluetooth Link**  
> **Reconnect**

The module links to the device.

**Tip:** Reconnect to the last device during a voice call by pressing  
 > **Use Bluetooth**.



## Linking Devices




### Resolving a Lost Link

If the module loses its link to a handsfree device, it automatically tries to reconnect for 8 seconds. If it cannot reconnect, it displays **Retrying Bluetooth Link: Use Handset?**.

**Note:** This applies only to handsfree devices such as headsets and car kits.

To resolve the lost link:

Do This	To
Press <b>YES</b> (👁)	switch to your phone's handset and resume the call
<b>or</b>	
Wait	let the module try to reconnect for 30 seconds If the module fails, it ends the call.
<b>or</b>	
Plug in another device (such as a wired headset)	switch to the new device and resume the call





## Linking Devices

### Ending a Link

To disconnect your Bluetooth module from another device:

Find the Feature  > **Settings > Connection > Bluetooth Link**  
> **Disconnect**

Press	To
<b>YES</b> (  )	confirm the disconnect

**Tip:** If you are using a handsfree device during a voice call, you can switch to the *handset* (the phone's earpiece and microphone) by pressing  > **Use Handset**.



## Linking Devices



### Receiving a Link from Another Device

Other Bluetooth devices may ask to link with your module, if it is awaiting links.

### Awaiting Links

Your module *automatically* awaits links from new devices for 60 seconds when you turn on your phone.


You can also *manually* direct your module to await links for a 60-second period:

Find the Feature



> **Settings** > **Connection** > **Bluetooth Link**  
> **Setup** > **Await Link**

The phone displays a brief notice, and the module awaits new links for 60 seconds.



## Linking Devices

### Responding to Link Requests

If a device's access level is set to **Automatic** (the standard setting), then your module grants the device's link requests without any notice. To change a device's access level, refer to "Editing a Device in Your Device List" on page 19.

If your module receives a link request from a device with **Ask** access, your phone displays a message such as **Bond with Computer?**.

Press	To
YES (YES)	grant the device access to a service on your module
or	
NO (NO)	deny access

For additional security, the requesting device may also require you to enter a passkey (authorization code):

Press	To
1 keypad keys	enter your Bluetooth passkey
2 OK (OK)	submit your passkey and grant access

## Linking Devices

### Managing Your Device List

Your module keeps a list of the devices that link with it. If you change the name and access level for a device in this list, your module will use your settings the next time it links to the device.

**Note:** Your device list holds up to seven devices. To add a device to the list, link to the device (your module adds it to the list).

### Access Level Descriptions

You can grant one of two access levels to a device:









Access	Description
<b>Automatic</b> (standard access)	The device can use any of your module's services without asking you for approval.
<b>Ask</b>	Your phone asks for your approval each time the device wants to use a service on your module.

## Linking Devices

### Editing a Device in Your Device List

To edit a device in your list:

Find the Feature  > **Settings** > **Connection** > **Bluetooth Link**  
> **Devices**

Press	To
1 	scroll to the device you want to edit
2 <b>EDIT</b> (  )	display the device's details
3 <b>CHANGE</b> (  )	select <b>Name</b> , if you want to change the name that appears
4 keypad keys	enter the new name (20 characters maximum)
5 <b>OK</b> (  )	store the name
6 	scroll to <b>Access</b>
7 <b>CHANGE</b> (  )	select <b>Access</b>
8 	scroll to <b>Automatic</b> or <b>Ask</b>
9 <b>SELECT</b> (  )	store the access level



## Linking Devices



### ***Deleting a Device in Your Device List***

To delete a device in your list:

Find the Feature



> **Settings** > **Connection** > **Bluetooth Link**  
> **Devices**

Press	To
1	scroll to the device you want to delete
2	display the device list menu
3 <b>SELECT</b>	select <b>Delete</b>



## Linking Devices

### Ensuring Successful Fax Transmission

When originating a fax from a PC (a *mobile originated*, or *MO* fax) with a Bluetooth connection to a Motorola cellular phone, follow these guidelines:

Type of Fax	Use This Fax Application	Use This Interface
one or more text-filled pages	<ul style="list-style-type: none"><li>• 32bitFax</li></ul> <b>or</b> <ul style="list-style-type: none"><li>• CallCenter</li></ul>	TAPI <b>Note:</b> Do not use the COM interface.
pages with less text and large blank areas	<ul style="list-style-type: none"><li>• WinFax Pro</li></ul> <b>or</b> <ul style="list-style-type: none"><li>• FaxTalk Communicator</li></ul>	




## Troubleshooting

---



Error	Resolution
<b>Bluetooth Module Not Attached</b>	Check to make sure that the Bluetooth module is attached and connected correctly. This error appears if the module was attached but became loose or unattached.
<b>Bluetooth Bond Failed: List Full</b>	<p>Your phone may display this error when you try to establish a bond connection between your module and another device.</p> <p>The reason for this error is that your module uses a small amount of memory to establish connections. If your device list is full, your module does not have enough memory to use.</p> <p>To resolve the error, delete one or more items from your device list (refer to "Deleting a Device in Your Device List" on page 20). Then try the connection again from the beginning.</p>
<b>Invalid: Bluetooth Passkey</b>	If you enter an incorrect Passkey, you need to start the bond again. You do not get another chance to enter the Passkey.
<b>No links found</b>	The module found no devices during a scan.







## *Troubleshooting*



Error	Resolution
<b>Unable to Connect (Connection Failed)</b>	This error appears if a device is not available when you try to "reconnect" it or select it from the device list.

