

2.4 GHz RF Wireless Optical Presentation Mouse

User's Manual



CAUTION

Complies with DHHS Radiation
Performance Standard, 21 CFR
Subchapter J

CAUTION: Laser radiation when open.
DO NOT STARE INTO BEAM OR VIEW
DIRECTLY WITH OPTICAL INSTRUMENTS.

CLASS I LASER PRODUCT

**Never point a laser beam into a person's eyes
as prolonged exposure can be hazardous to the
eyes.**

CE and FCC Approved

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference,
and (2) this device must accept any interference
received, including interference that may cause
undesired operation.

Utilizing the 2.4GHz state-of-the-art RF technology,
this presentation mouse can operate within 10
meters range. The major function comes from the
laser pointer as well as while performing the
presentation can use the PowerPoint function.

Specifications

- 2.4GHz RF wireless transmitting technology
- Patented optical trackball
- Built-in laser pointer
- Mouse left and right function keys
- Pencil, Eraser and Black screen keys
- LED indicator
- Error detection ability
- Auto power saving
- Windows 98SE/Me/2000/XP compatible
- FCC & CE approvals
- Dimension: 127(L) x 50 (W) x 42(H)mm


Package contents

- Optical presentation mouse
- USB receiver
- USB extension cable
- 2 AAA Alkaline batteries
- Carrying pouch
- User's manual


Installation method

1. Battery Installation: push-slide the battery cover (Fig. 1). Please assure to install the batteries correctly in place and replace the cover of battery.

Fig. 1

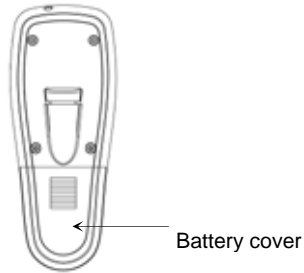



2. Plug the receiver into an available USB port on your computer which automatically detects and installs it.
3. Press the Setup button on the receiver to turn off the LED light. (Fig.2)
4. Hold the presentation mouse close to the receiver. Press the Connect button of the presentation mouse (Fig. 3). The receiver's LED light blinks indicating that the set-up has been completed.

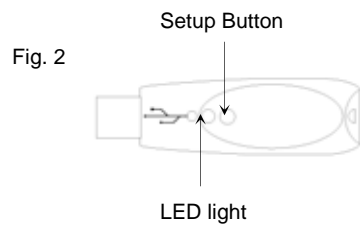

Functions

The presentation mouse provides functionalities as follows:

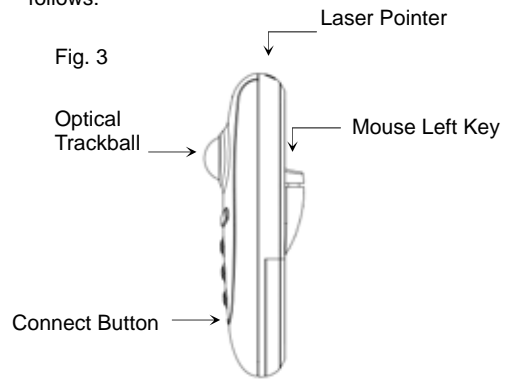

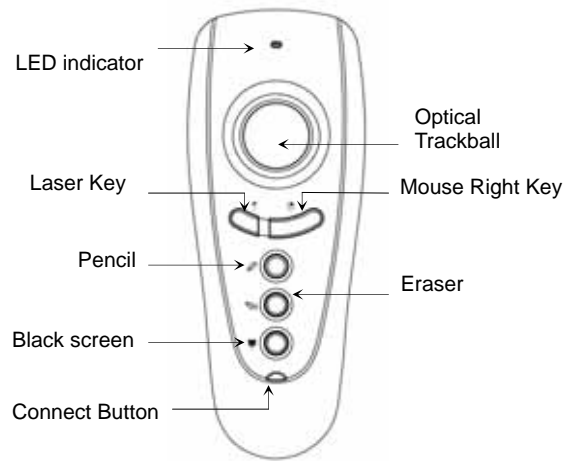

Quick Reference

1. Insert two AAA batteries.
2. Plug the receiver into the USB port.
3. Press the "Setup" button of the receiver to off the LED light.
4. Press "Connect" button of the presentation mouse.
5. Assure the receiver's LED light is on.
6. The device is now ready to use.
7. LED blinks indicating battery low.
8. LED turns on when holding Laser Key.

****This device can be operated with either standard Alkaline batteries or rechargeable batteries. Using rechargeable batteries reduces expenses and is less harmful to the environment.**

Caution

Do not mix Alkaline battery and Rechargeable battery at the same time to avoid the risk of battery explosion.

6MNUP300000US-A0