

The information in this document is subject to change without notice.

Document History

Model Number: EE-290 Original release date 08-01-2016 Revision: V-0.4 Date 29-02-2016

2016 Copyright Opticon. All rights reserved.

This manual may not, in whole or in part, be copied, photocopied, reproduced, translated or converted to any electronic or machine readable form without prior written consent of Opticon.

Limited Warranty and Disclaimers

PLEASE READ THIS MANUAL CAREFULLY BEFORE INSTALLING OR USING THE PRODUCT.

Serial Number

A serial number appears on all Opticon products. This official registration number is directly related to the device purchased. Do not remove the serial number from your Opticon device. Removing the serial number voids the warranty.

Warranty

Unless otherwise agreed in a written contract, all Opticon products are warranted against defects in materials and workmanship for two years after purchase excluding batteries. Opticon will repair or, at its option, replace products that are defective in materials or workmanship with proper use during the warranty period. Opticon is not liable for damages caused by modifications made by a customer. In such cases, standard repair charges will apply. If a product is returned under warranty and no defect is found, standard repair charges will apply. Opticon assumes no liability for any direct, indirect, consequential or incidental damages arising out of use or inability to use both the hardware and software, even if Opticon has been informed about the possibility of such damages.

Packaging

The packing materials are recyclable. We recommend that you save all packing material to use should you need to transport your data collector or send it for service. Damage caused by improper packaging during shipment is not covered by the warranty.

Trademarks

Trademarks used are the property of their respective owners.

Opticon Inc. and Opticon Sensors Europe B.V. are wholly owned subsidiaries of OPTOELECTRONICS Co., Ltd., 12-17, Tsukagoshi 4-chome, Warabi-shi, Saitama, Japan 335-0002. TEL +81-(0) 48-446-1183; FAX +81-(0) 48-446-1184

SUPPORT

USA Europe

Phone: 800-636-0090



Revision History

Product Name : EE-290

Edition	Date	Page	Section	Description of Changes	
V0.1	2015/10/02	-	-	Preliminary Version	
V0.2	2015/10/13	p6 p10 p15 p15 p16 p17	Section 3, Section 7, Section10.1, Section10.2, Section 11.4, Section 12	Added dimensions drawing Changed Radio Frequency range Changed product safety standards Changed FCC statement Added FCC required battery caution statement Added mechanical drawing	
V0.3	2016/01/08	P6	Section 3.2	Updated weight	
V0.4	2016/02/29	P6 P7	Section 3.2 Section 4.4	Updated weight Removed spec for drop resistance	



Contents

1 AI	bstract	6
2 0	verview	6
3 PI	hysical Features	6
3.1	Dimensions	6
3.2	Weight	6
4 Eı	nvironmental Specifications	7
4.1	Operating Temperature and Humidity	7
4.2	Storage Temperature and Humidity	7
4.3	Static Electricity	7
5 8		
6 C	ontrols	8
7 EI	lectrical Specifications	9
7.1	Electrical Characteristics	9
7.2	Battery	9
8 R	adio Specifications	10
8.1	Protocol	10
8.1	1.1 The physical layer	10
8.1	1.2 The medium access control layer	10
8.2	Security	10
9 La	abeling	11
9.1	Product Label	11
9.2	Shipment Box Labels	12
10 Pa	ackaging Specifications	13
10.1	Individual Packaging Specification	13
10.2	Collective Packaging Specification	13
11 R	egulatory Compliance	15
11.1	Product Safety	15
11.2	EMC	15
11.3	WEEE	16
11.4	RoHS	16
12 Sa	afety	17
12.1	Shock	17
12.2	Temperature Conditions	17
12.3	Foreign Materials	17
12.4	Disposal / Battery	17
12.5	Other	17
13 M	lechanical Drawing	18



Table of Figures

Figure 1: Dimensions	6
Figure 2: Product Label	11
Figure 3: Product Label dimensions	
Figure 4: Shipment box label	
Figure 5: Individual packaging	13
Figure 6: collective packaging	13
Figure 7: collective shipment packaging	
Figure 8: Mechanical drawing	



1 Abstract

This manual provides specifications for the EE-290 Electronic Shelf Label (hereafter referred to as "ESL").

2 Overview

The EE-290 is an E-ink based ESL with a 2.4GHz radio for data communication. This product uses Direct Sequence Spread Spectrum RF technology that allows for ultra-low power consumption combined with a reduced sensitivity to background noise. That means less interference by other radios that operate in the 2.4GHz band. The radio protocol that is used is based on the IEEE 802.15.4 standard that specifies the physical layer and media access control for low-rate wireless personal area networks.

A development kit is available that consists out of a base station, several ESL tags and PC software that allows people to quickly test the system and makes it easier to integrate this ESL system into an existing back office system.

3 Physical Features

3.1 Dimensions

W 87.7 mm x H 42.8 mm x D 15 mm

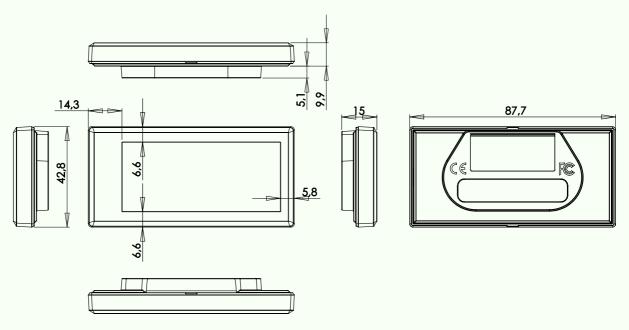


Figure 1: Dimensions

3.2 Weight

47.8 g (including batteries)



4 Environmental Specifications

4.1 Operating Temperature and Humidity

Temperature: 0 to 40° C

Humidity: 20 to 85% RH (Non Condensing)

4.2 Storage Temperature and Humidity

Temperature: -20 to 60° C

Humidity: 20 to 85% RH (Non Condensing)

4.3 Static Electricity

Air discharge:	± 8 kV MAX (No malfunction) ± 15 kV MAX (No destruction)		
Contact discharge:	± 4 kV MAX (No malfunction) ± 8 kV MAX (No destruction)		



5

6 Controls

Items	Specifications		Remarks	
CPU	Туре	8051 core 8-bit MCU		
	Internal flash ROM	128KB		
	Internal RAM 8 KB			
	Clock frequency 32 MHz			
	Active area	W 66.90 x H 29.06 mm		
LCD	Number of dots	W 296 x H 128		
LCD	Dot pitch	112 Horizontal 112 Vertical	Dots per Inch	
Radio	Modulation	DSSS		
	Frequency	2405 - 2480 MHz	Globally approved 2.4GHz band.	
	Baud rate	250 Kbits / second		



7 Electrical Specifications

7.1 Electrical Characteristics

Conditions: Operating voltage 3.0V unless otherwise specified

Parameter	Тур	Unit	Remarks
Operating voltage	2.3-3.3	V	Lithium primary battery
Sleep current	2-5	μA	When the transmitter and receiver are idle
Poll time	>= 20	seconds	See below

The ESL is in sleep mode almost the entire time. The device wakes up at regular intervals (called the poll time) and it then transmits a poll request to the base station. When the base station has no data to send, it acknowledges the poll after which the ESL immediately goes back to sleep. The minimum poll rate is configurable and is set to 20 seconds by default. A higher poll rate will decrease the power consumption but will increase the response time.

7.2 Battery

The power is supplied to the ESL by 2 CR2450 batteries:

- Nominal capacity: 1200 mAh (two times 600mAh)
- Nominal voltage: 3.0 V.
- Maximum self-discharge rate: <1% per year
- Usable time: 7 years minimum (Update frequency: 4 times per day, poll time 20 seconds)

The operating time of the batteries is based on any of the following factors that influence the battery life:

Factor	Default values and	Correlation *	Influence
	estimated averages	(Higher is better)	
Polling for data &	Interval: 20 seconds	Yes	61%
reporting settings	Retransmissions: 10%	No	
	Report ratio: 1 to 39	Yes	
Display updates	4 updates per day	No	20%
	Temperature: 15-25° C	No	
Out of range /	Not connected: 2%	No	4%
base station OFF %	Number of channels: 5	No	
Sleep time	99,9%	Yes	9%
Battery self-discharge	1 % / year	No	6%

^{*} The correlation shows whether increasing the listed value increases or decreases the power consumption of the ESLs.

For example:

- Increasing the poll interval lowers the power consumption
- Turning off the base stations increases the power consumption
- A lower operating temperature increases the power consumption
- More display updates per day increase the power consumption



Battery replacement SOP:

- 1. Remove the front cover
- 2. Slide out the 2pcs CR2450 batteries
- 3. Insert new 2pcs CR2450 batteries
- 4. Add the front cover.

8 Radio Specifications

Parameter	Min	Тур	Max	Unit	Remarks
Receiver sensitivity		-97	-89	dBm	Over the entire temp. and operating voltage range
Nominal output power	-3	4.5	7	dBm	
Frequency	2405		2480	MHz	Over the entire temp. and operating voltage range
Transfer rate		250Kbit/s			
RSSI range		100		dB	Signal strength indication that can be reported to the base station

8.1 Protocol

Modified 802.15.4 (Physical layer and Media Access Control layer).

8.1.1 The physical layer

The physical layer (PHY) provides the data transmission service, as well as the interface to the physical layer management entity, which offers access to every layer management function and maintains a database of information on related personal area networks. Thus, the PHY manages the physical RF transceiver and performs channel selection and energy and signal management functions. It operates on the above mentioned frequency band. The PHY layer is 100% compliant and is based on direct sequence spread spectrum (DSSS) technique with a transfer rate of 250 kbit/s.

8.1.2 The medium access control layer

The medium access control (MAC) layer enables the transmission of MAC frames through the use of the physical channel. Besides the data service, it offers a management interface and itself manages access to the physical channel. It also controls frame validation, guarantees time slots and handles node associations. Finally, it offers hook points for secure services. The EE-202 does not make use of the optional network beaconing, instead it used a polling mechanism to increase power efficiency. Some changes are made to the standard to allow for more efficient data frames and better power efficiency, especially when nodes are not connected to a base station.

8.2 Security

By default only the image transmission is encrypted using a proprietary encryption protocol. Enhanced encryption/authentication can be requested on demand by loading different firmware on the ESLs in combination with the loading of an encryption key and an additional ESL server module. The protection method for RF-communication is done by 128-bit AES encryption.



9 Labeling

9.1 Product Label

The product label is affixed to the ESL as shown below.

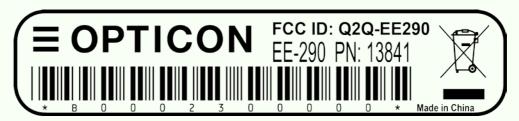


Figure 2: Product Label

Label material:

Material: Base + laminate protection against wear. Base: PP film, thickness 80µm, backing with glue. Laminate: PET film, clear, thickness 25µm.

RoHS compliant

Label dimension:

46mm x 9.9mm (w x h) Tolerance ± 0.1mm Corner radius 3mm

Barcode area:

The size of the barcode area (without the human readable part) is 3x38mm).

The barcode shows the product serial number. This is a 'B' followed by 10 hexadecimal digits. This serial number is the same as the MAC address in the ESL-label, with the first 6 digits ('3889DC') replaced by a 'B'.



Figure 3: Product Label dimensions



9.2 Shipment Box Labels

The shipment box labels are meant to show the regulatory information on the shipment box as well as the quantity in the box. The labels are 150mm*95mm and are made from plain paper with adhesive backing.

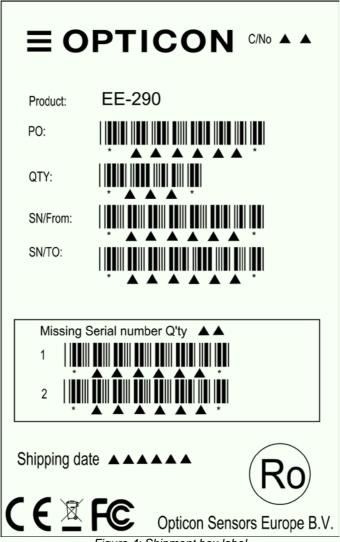


Figure 4: Shipment box label

Label A shows the PO number, the Quantity in the box and the serial number range, all encoded in barcodes as shown. In case there are two or less missing serial numbers, only label A is required. In case there are more than 2 missing serial numbers missing, label B is required to show the rest of the missing serial numbers.



10 Packaging Specifications

10.1 Individual Packaging Specification

The ESL's do not need to be packed separately. To easily pack them, 20 pcs need to be packed in a plastic molder tray:



Figure 5: Individual packaging

10.2 Collective Packaging Specification

Pack the tray with 20 EE-290's in a plastic bag, fold the open end of the bag and fix it with a piece of tape.

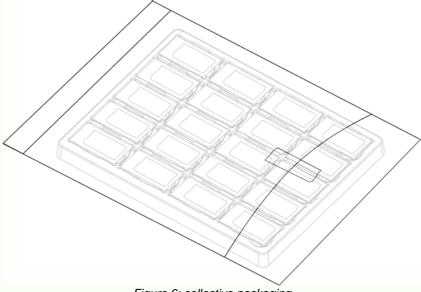


Figure 6: collective packaging



Put 10 stacks, containing 200 ESL's inside a box and stick the shipment box label on the indicated position.

Use cardboard and a plastic bag between each layer of ESL's as shown below.

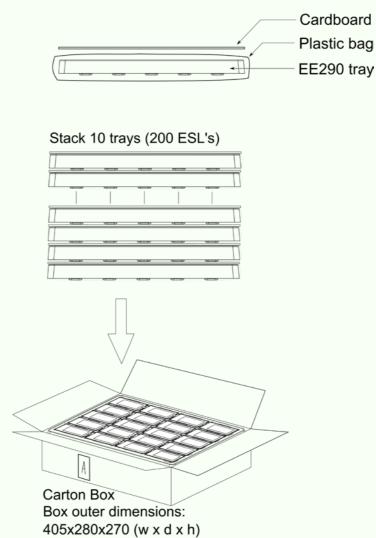


Figure 7: collective shipment packaging

Note: The "RO" mark labeled on the package tray or package box guarantees that the applicable product has passed our test of RoHS restrictions compliance (the restriction of the use of certain hazardous substances in electrical and electronic equipment, 2002/95 EC). However, this document does not have any legal weight in the European Union.



11 Regulatory Compliance

11.1 Product Safety

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013 IEC 60950-1:2005 (2nd Edition)+Am 1:2009+Am 2:2013

11.2 EMC

EN55022: 2010

EN55024: 2010

Federal Communications Commission (FCC) Statement

15 21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

RF Radiation Exposure Statement:

- 1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- 2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.



11.3 WEEE

Waste Electrical and Electronics Equipment Directive, 2012/19/EU.



Following information is only for EU-member states:

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

11.4 RoHS

RoHS: The restriction of the use of certain hazardous substances in electrical and electronic equipment, 2011/65 EC.



12 Safety

Handle this product carefully. Do not deliberately subject it to any of the following.

12.1 Shock

Do not throw or drop the ESL. Do not place heavy objects on the ESL.

12.2 Temperature Conditions

Do not use the ESL at temperatures outside the specified range.

Do not pour boiling water on the ESL.

Do not throw the ESL into the fire.

Do not leave the ESL on the dashboard of a car.

12.3 Foreign Materials

Do not immerse the ESL in liquids. Do not subject the ESL to chemicals.

12.4 Disposal / Battery

Replace the ESL when its lifetime has expired. This is after max. 10 years of operation or sooner when the battery is depleted. When the battery is depleted, discard the complete product with the battery and replace the ESL with a new one. When discarding the product, treat it as chemical waste and dispose of it according to local regulations.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

12.5 Other

Do not disassemble this product.

The ESL may be damaged by high voltage discharges.



13 Mechanical Drawing

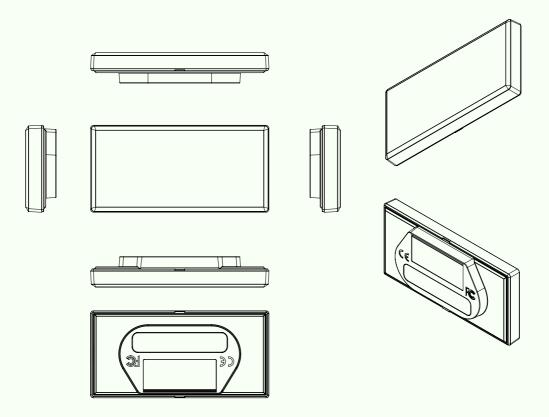


Figure 8: Mechanical drawing

