

LifeShadow Ears User Manual

Thank you for choosing LifeShadow Ears. LifeShadow Ears is a very simple way to capture audio and have it wirelessly transmitted to a LifeShadow account for later recall. Place one or more LifeShadow Ears devices at convenient locations throughout your house and always have an 'ear' that's ready to capture a quick thought for safe-keeping.




The document contains the following topics:

- At-a-glance - an overview of the device components
- Attaching / mounting the device
- Normal device use
- Charge the device
- Reset the device
- Configure the device

At-a-glance

The primary components of the Ears device are shown below.

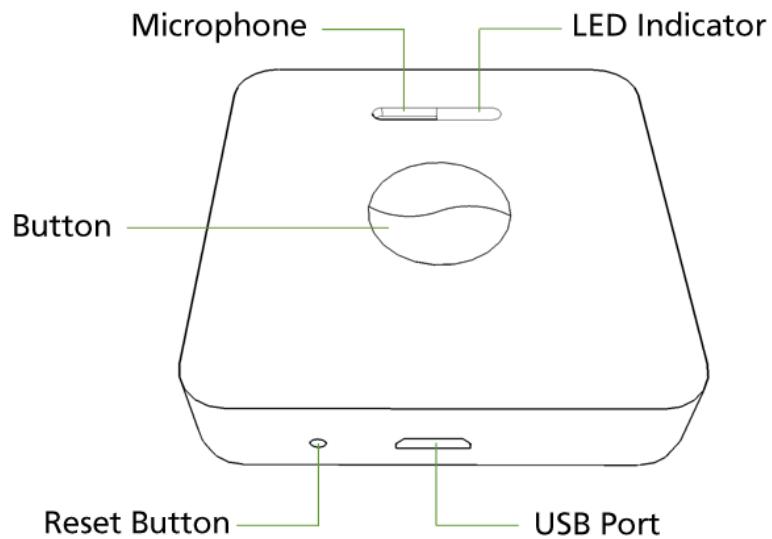


Attaching / Mounting the Device

Inside the Ears enclosure are two magnets that allow the device to be attached to metal surfaces (like on a refrigerator door).

In addition, two industrial strength hook and loop adhesive strips are provided to attach the device to non metallic surfaces. Place one of the adhesive strips in the recess on the back of the device and place the other on the surface to which the device will be mounted. The device will be held securely in place - but can also be temporarily removed for periodically charging the battery.


Normal Device Use

To add a new message, press and hold the button and speak into the microphone. Release the button when done. The message will be automatically uploaded to the LifeShadow account.

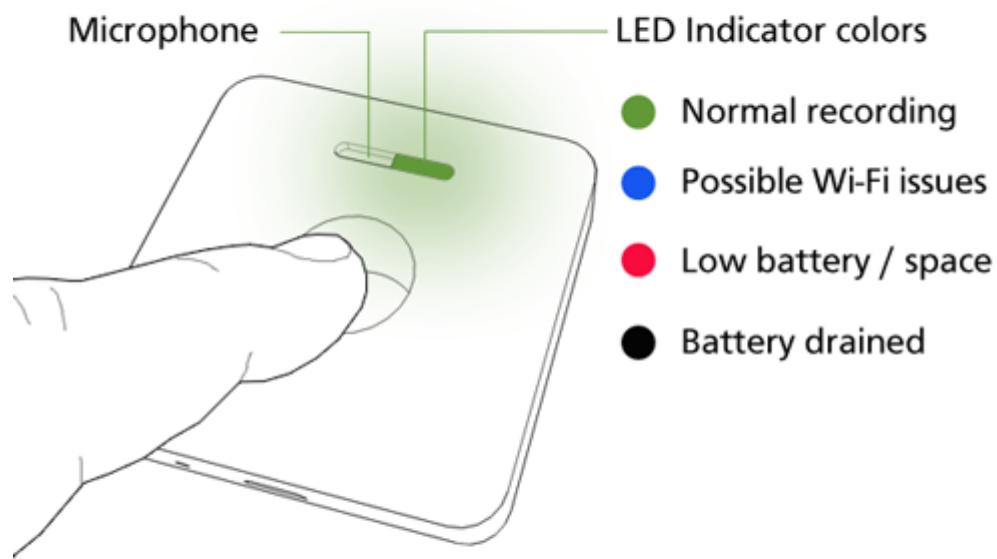


Charge the Device

Plug one of the USB cable into the device and the other into either a power adapter or to a powered computer USB port. The LED indicator will show one of the following colors during charging.

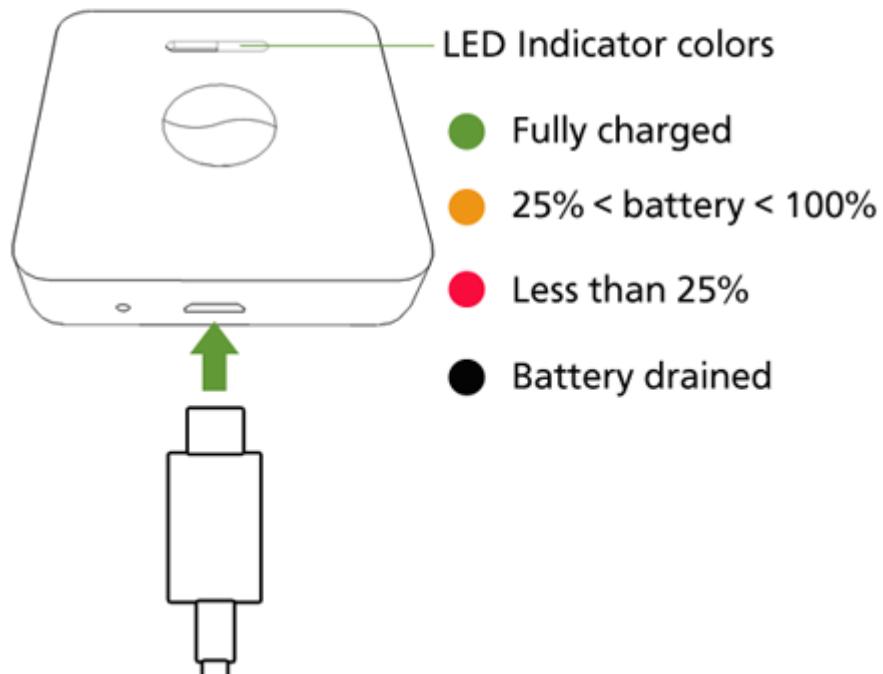

Reset the Device

In the rare event that the device becomes unresponsive, even after charging, insert the end of a paper clip into the rest slot as shown, until you feel a light click.

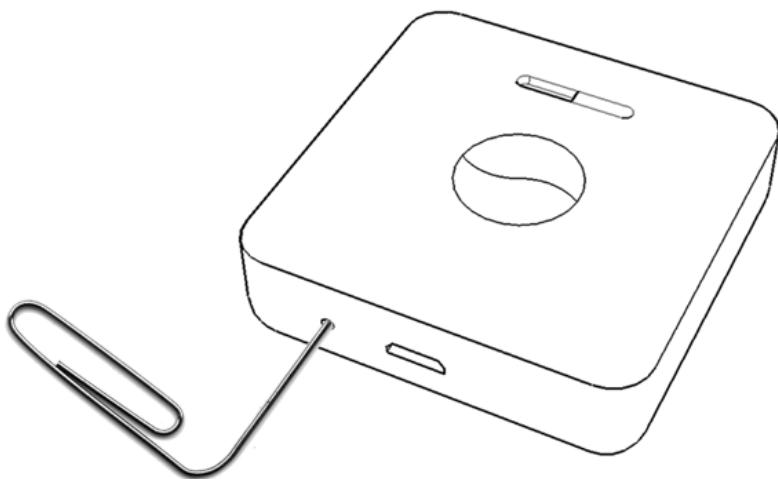


Configure the Device

Prior to initial use, you must configure the device by specifying a known wireless network and providing your username / password for the LifeShadow account where the audio files will be uploaded.

Insert the included device configuration software CD into your computer and follow the onscreen instructions.




The Welcome screen introduces the device configuration software. Please ensure that the computer you're using to do configuration is connected to the Internet. Click Next to

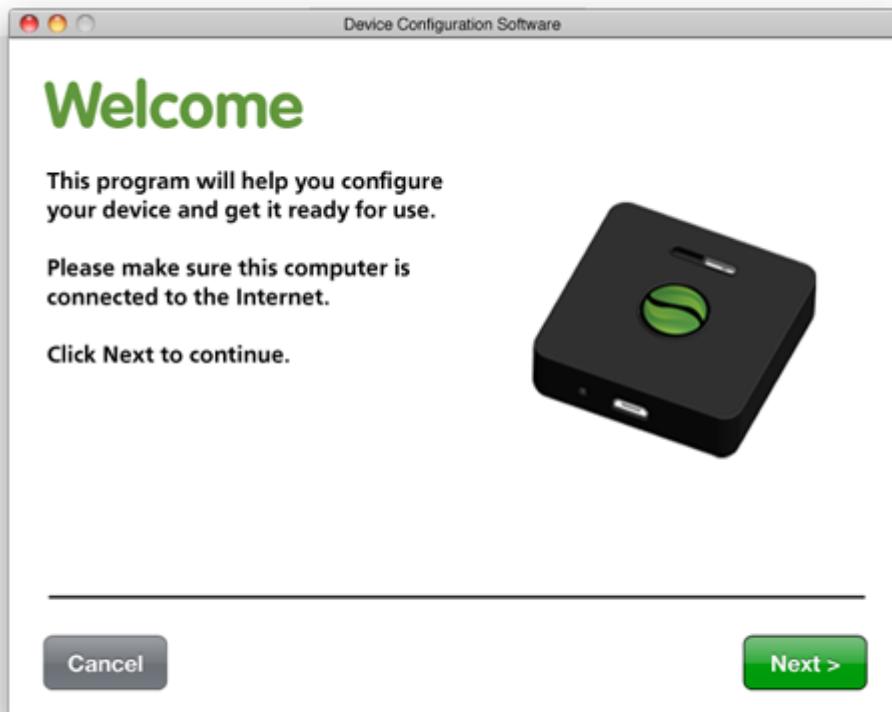


continue.


Please read the license agreement. If you agree to the terms, please select 'I agree' and click Next to continue.

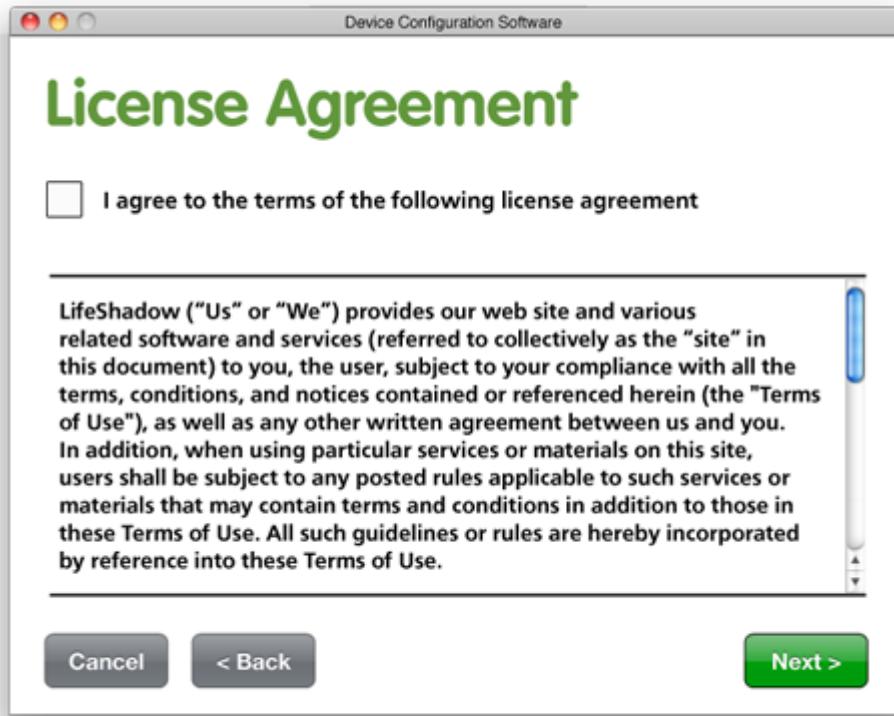

Using the enclosed USB cable, please connect the device to your computer.

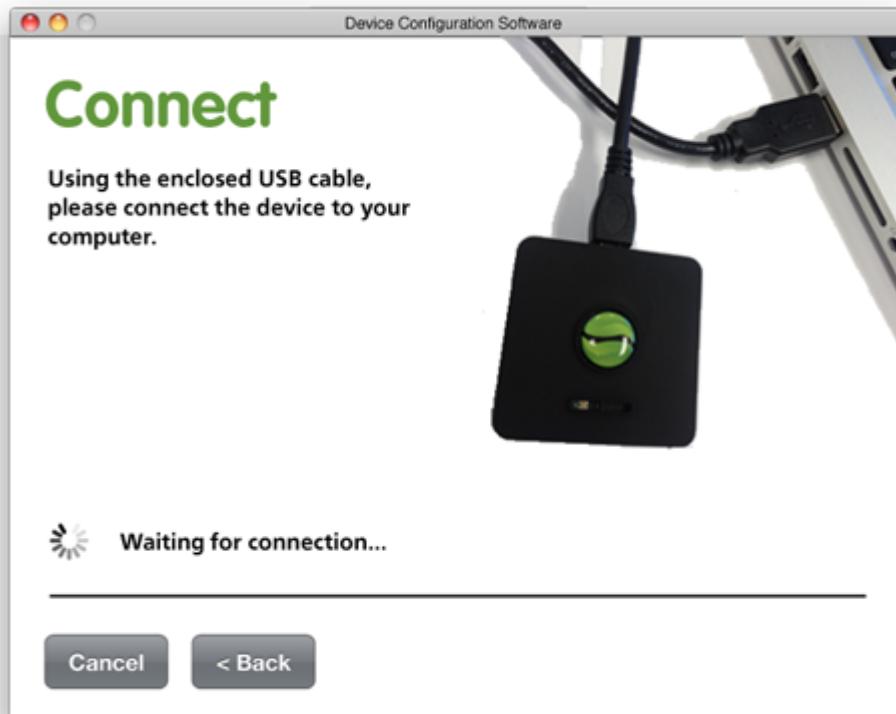

Once a connection has been established, you'll see a 'Connection Successful' message. Click Next to continue. If you see a 'Waiting for connection...' message for a long time, please check the cable connections.

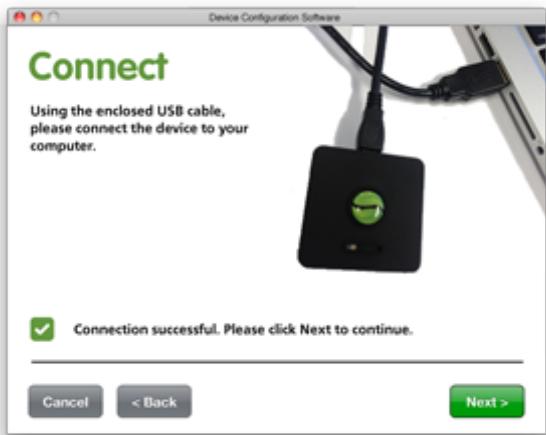


The device requires a connection to a wireless network in order to transmit audio. Please have your wireless network name and password available and click Next to




continue.

The Wi-Fi Network panel lists the wireless networks recognized by the device at the location from which the device is being configured (there may only be one network listed in your list). Select the name of the network to which you want the device to connect and click Next to continue.


If no networks are listed, your wireless network may not be broadcasting its name. In this case, select 'Other...' and click

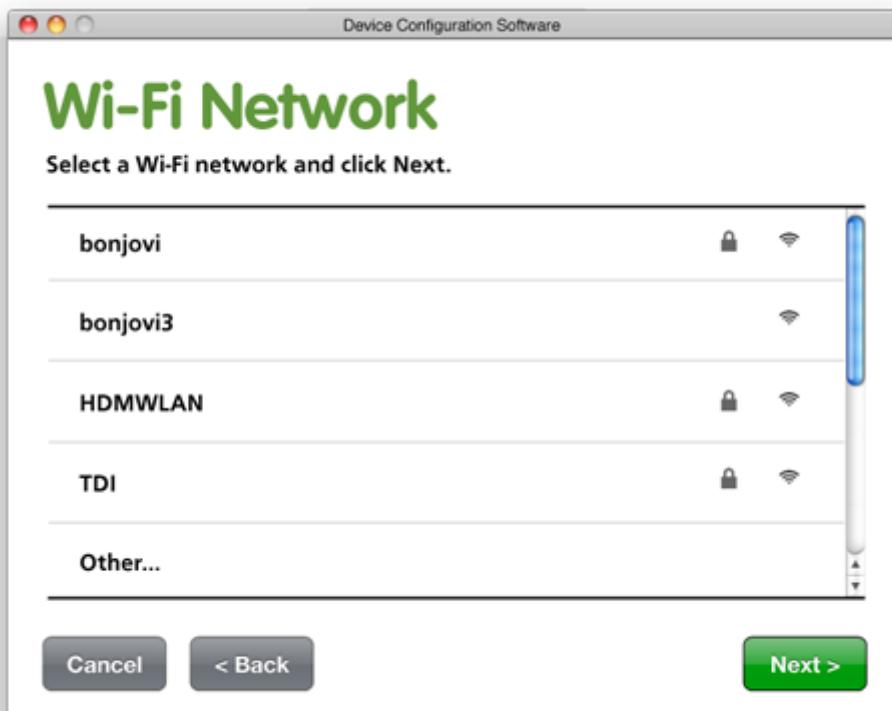

Next.

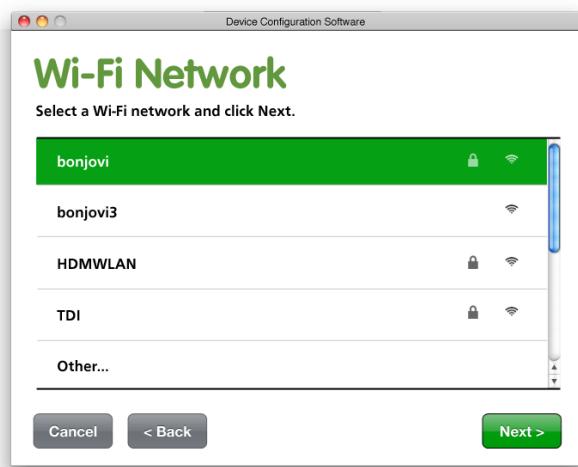


Enter the password for the selected network and click Join to

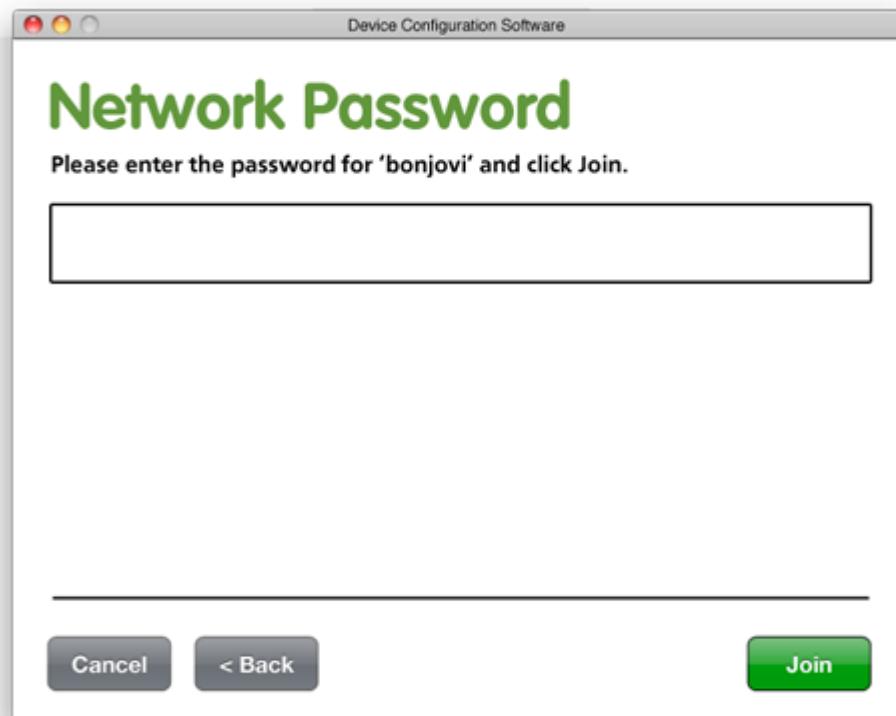


continue.


If you selected 'Other..' network, please enter the network name and password and click "Join" to continue.

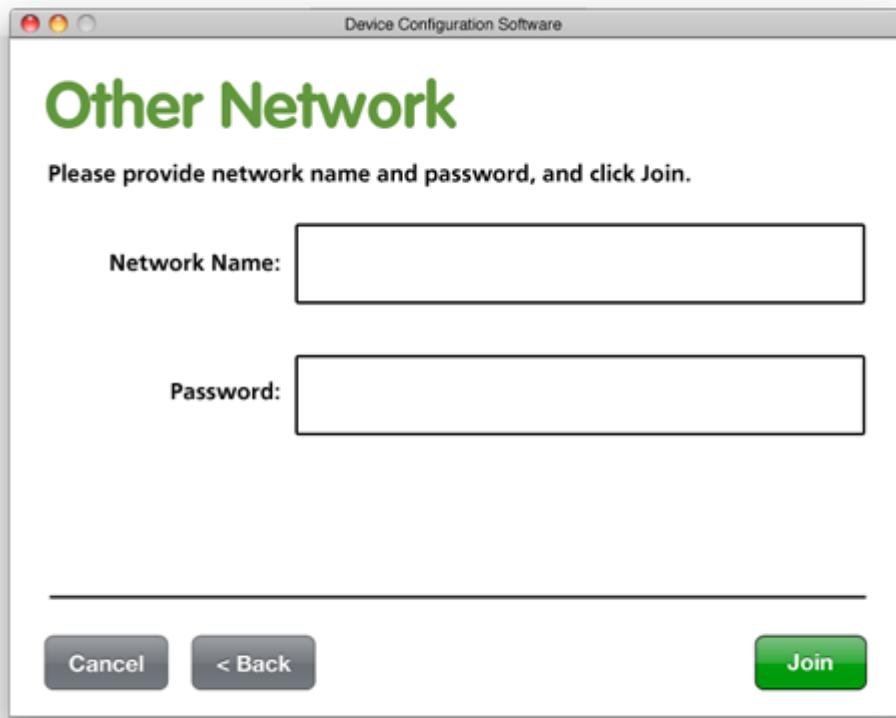

LifeShadow Ears uses an online account to store an archive of the items you add using the device. If you already have a LifeShadow account and are simply adding another device to it, click 'I'm already a LifeShadow user.' If you don't have a LifeShadow account, click 'I'm new to LifeShadow.'

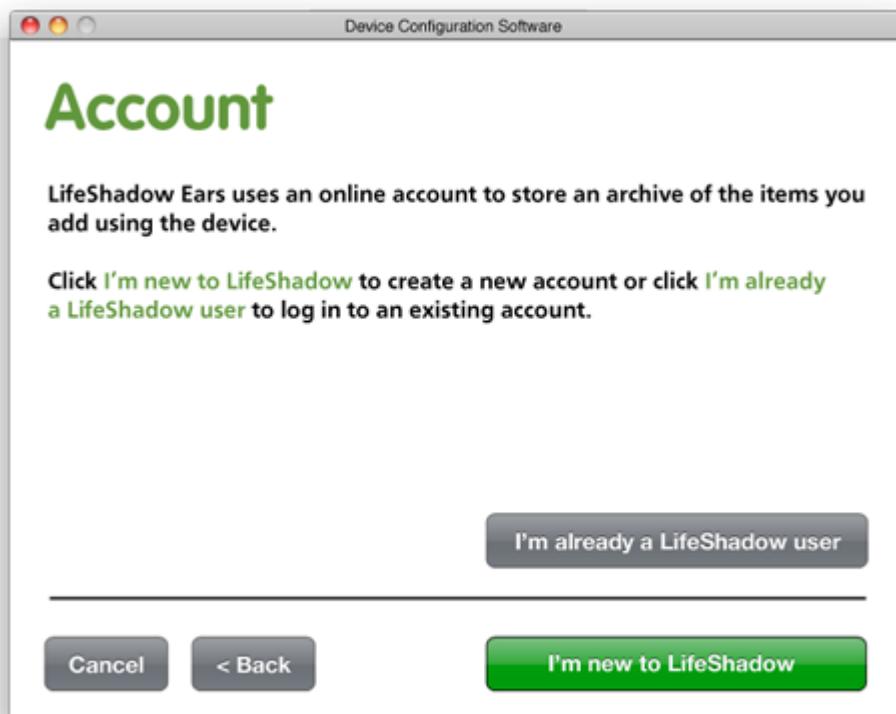


If you are new to LifeShadow, enter an email address, password, and password again to confirm. Click Create Account to

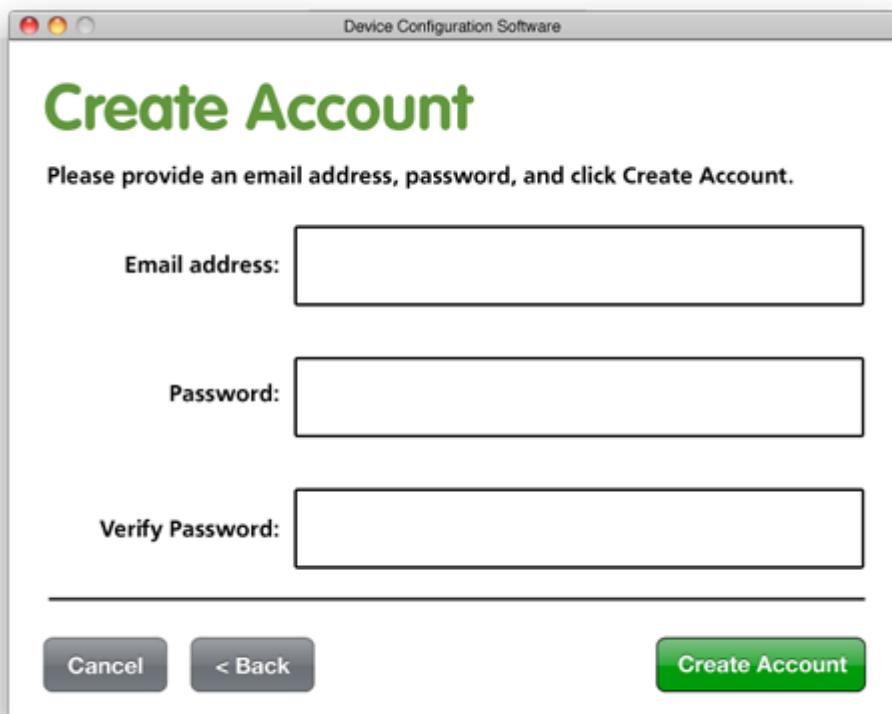


continue.

Personalize your device by giving it a unique name. This is very useful in the event that you get additional devices to use with your

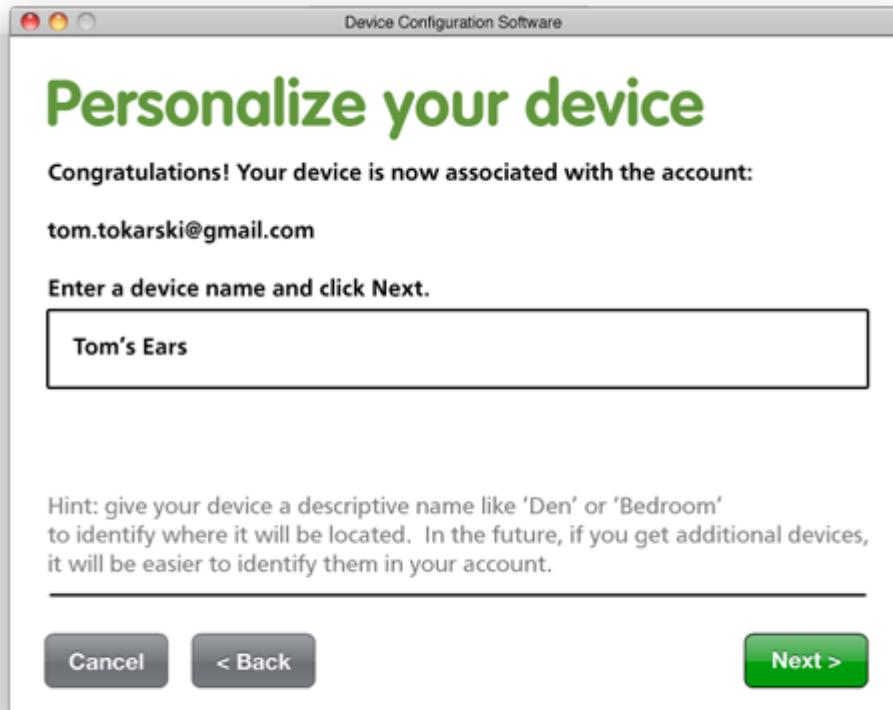

account.

Once you've successfully configured your device, you can test it with your first message. Click Done to complete device configuration and exit the configuration

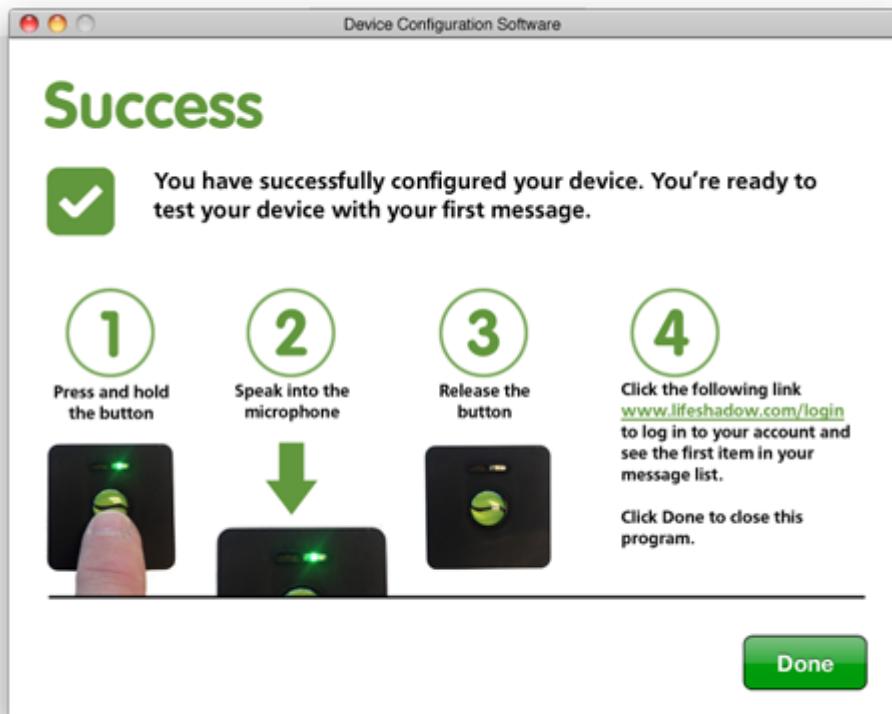

software.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.