




ry
 o PCS new AAA alkaline batteries
 he mouse upper cover and pull the
 d (Please see the reference picture)
 batteries correctly according to the
 battery grooves.
 rs forward, when you hear "crack"
 s the battery cover is locked

ector, please use the USB to PS/2
 t with the connector before your
 connect the receiver directly with the

ere is a little far between the case and
 , suggest you use an extended USB
 case and the receiver, so you can place
 orking surface conveniently.

Press the button to

打开上盖
open the upper cover

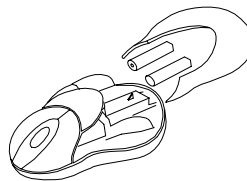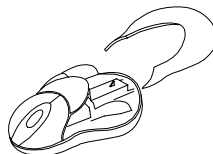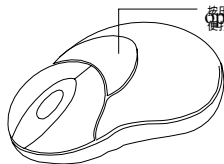

ID Setup

1. Please move the mouse near to the receiver
2. Press the ID button of the receiver by your hand, the receiver light begin to flash
3. Press the ID button of the mouse bottom with some hard and acuate object within 10 seconds, the receiver light will flash very fast, a few seconds later it will be on which shows it is successfully to finish the digital transmission between the mouse and the receiver. You may start to use it.
4. Working distance: within 1-2 meters.



Then press the button of the

Attention Please

1. Please don't make the mouse work in a high temperature order to work more smoothly.
2. You'd better use the mouse with new AAA alkaline batteries. Old batteries can be used longer, but the mouse will not be used for a long time.
3. This mouse with save power function. When the mouse is sleeping, any key or scroll the wheel will wake up the mouse.
4. The optical mouse will not work on any reflecting surface, 3D mouse mat, etc.
5. No need to check the digital transmission when change the batteries, it will be automatically re-operate in the above way to re-operate.

Caution

Any changes or modifications to the original design are the party responsible for compliance with the relevant standards to operate the equipment.