



i6200s Quick Guide

Important notice on lithium ion battery

1)Charge the battery only with original Urovo power adaptor supplied in the box

2)Do not store the device with battery installed for long period of time
3)If long period storage is required, remove battery from device.
4) During long storage period, maintenance work is required at every
3 months period. During maintenance, discharge the battery
completely, and then charge to 60% - 70% (or 3.8V - 3.9V).
5) Store battery in dry, cool environment. Temperature should be 20 to 40 degree Celsius and relative humidity should be 45% to 85%
6) Charge battery at 5 to 45 degree Celsius
7) Do not operate the device outside the recommended temperature, which is from -20 to 60.
8) Do not install a third party battery into Urovo device

Safety precaution

- 1) Do not transport the battery at temperature higher than 65 degree Celsius
- 2) Do expose battery to fire or heat source
- 3) Do not forcefully install the battery in opposite direction into the device
- 4) Avoid impact and high vibration force on the battery
- 5) Keep battery dry at all time
- 6) Do not use battery that is damaged or appear to have been modified
- 7) Do not use unauthorized power adaptor to charge the battery8) Do not discharge the battery beyond the specification of the battery
- 9) Do not place battery into microwave oven or pressured container 10) Do not damage battery with sharp objects
- 11) Do not operate in environment with extreme electrostatic fields or magnetic fields.
- 12) If leakage found in battery, avoid contact with body parts. Should leakage be in contact with body parts, flush with water and immediately seek medical attention
- 13) If battery exhibits unusual behavior like color change, temperature became hot, shape is swollen, remove battery from device and stop using that battery
- 14) If the contact point on the battery is dirty, clean with a dry cloth15) Dispose the battery according local regulation. Recycle ifpossible.
- 16) Improper usage or storage may cause battery performance to drop, leak, damage, or even escalate to personal safety issue.

Appearance and Buttons

Front view

LED indicator



To turn on: Hold power button until device switches on To turn off: Hold power button until the device screen shows the power off menu. Select shutdown on the menu. Sleep: Under operation mode, press the power button once Wake up: Press power button once

Side view



Audio jack USB connector Power button-Scan button Scan button - User define button Volume control Reset button · Rear view





PSAM Slot Contactless reader Micro SD card slot Battery lock



— Camera and LED flash

4

Battery Installation

Insert the battery into the battery compartment as shown in the picture. Battery should sit tightly in the compartment when correctly installed. Do not apply excessive force when inserting the battery.



Charging using power adaptor

Connect the USB cable into the device and the power adaptor. Red LED indicates charging and Green LED indicates fully charge.



USB Data Cable

Charging using cradle

Power Adaptor



Connect the power cable into the cradle. P: LED indicates the cradle is operational. Slot the device into the cradle and take note of the LED change on the device which indicate the charging process Slot the battery into the cradle as shown in the picture. C: LED should lit up to indicate charging.


Battery Operation

The device battery is polymer type battery, which should only be charged by using original Urovo power supply. Metal contact is unavailable or artificial short circuit electrode. Do not store battery in hot, humid, or corrosive environment, Do no break or crack battery. Do not store battery when it is fully charged completely drained. If device is not used for long period of time, remove the battery from the device, pelase.

If the battery is misshapen or is found leaking, replace the battery immediately. Note: The battery should be charged for at least 8 hours before the first use.



Installing SIM/ TF Card

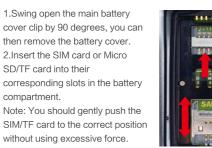

compartment.

USB debugging connected

6:22

Select this option to enable / disable USB debugging Select this option to enable / disable device as USB storage to the PC.

Connecting to PC

After you install the Android driver or an Android smart phone

assistant, you can connect the devices to your PC with USB cable

provided. (You can download the software mentioned above from

www.urovo.com/en. After device connected to your PC, the screen

🛐 🍜 🖞 1 🕍 16:

(:::)

After the device connected to your PC, you could drag the

THURSDAY

Connected in charging mode

top part of the screen downto show the USB options.

would display like this:

Warning

Declaration

This device(FCC ID:SWSI6200S) complies with part 15 of the FCC rules. Operation is subject to the following two conditions:(1) the device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may mause undesied operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

Declaration

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. Warning:

Changes or modifications made to this equipment not expressly approved by UROVO may void the FCC authorization to operate this equipment. The device complies with the RF Exposure requirements when the devices if use near the body is maintained at a mininum separation distance of 1.5 cm using a device holster/case which is not composed of mental components or is operated at more than 1.5cm from the body.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network. The SAR limit adopted by USA and Canada is 1.6 watts/kilogram(W/kg) averaged over one gram of tissue. The Highest SAR value reported under this standard product certification for use the ear is 1.11W/kg and when properly worn on the body is 0.313 W/kg.