



## DOWNLOAD THE JAWBONE® APP TO GET THE MOST FROM J2013

## GET CONNECTED

The Jawbone app helps you easily pair J2013 to your devices.

To pair J2013 without the app, use Bluetooth® settings on the device.

## EASY ACCESS TO ALL YOUR MUSIC

Play all the music you love from your favorite streaming services using the Jawbone app.

## CUSTOMIZABLE PLAY BUTTON

Program the PLAY button to speed dial your favorite person or simply access Siri® on iPhone®.


## MAKE IT YOURS

Get LiveAudio™, customize voice/language and get updates with the Jawbone app.

©2013 JAWBONE 770-00849-0100 REV A

## STILL HAVE QUESTIONS?

The Jawbone app is home to the user guide, how-to information and expert support.

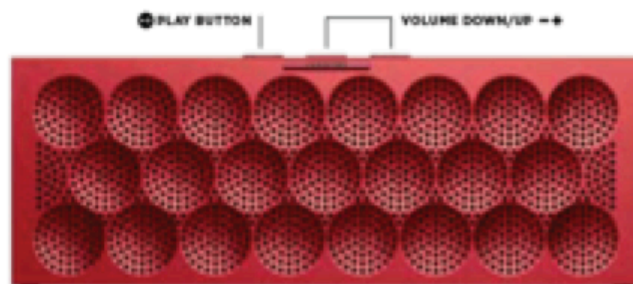

## TOP CONTROLS

When playing media from a Bluetooth® connected device:

Play/Pause Audio \_\_\_\_\_ Press 1x

Skip to Next Track \_\_\_\_\_ Press 2x

Skip to Previous Track \_\_\_\_\_ Press 3x

## SPEAKERPHONE


When using the speakerphone from a Bluetooth® connected device:

Answer/End Calls \_\_\_\_\_ Press 1x

Reject a Call \_\_\_\_\_ Hold

Access Voice Control \_\_\_\_\_ Hold

Mute a Call \_\_\_\_\_ Hold

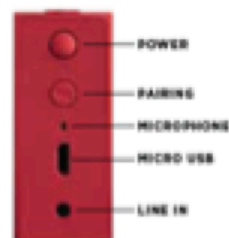

## SIDE CONTROLS

Power On/Off \_\_\_\_\_ Hold

Hear Battery Status \_\_\_\_\_ Press 1x

Activate Pairing Mode \_\_\_\_\_ Hold

Hear Connection Status \_\_\_\_\_ Press 1x

All third party trademarks are those of their respective owners.

## MEET J2013



VISIT [JAWBONE.COM/START](http://JAWBONE.COM/START)

## **J2013 QSG**

[SIDE 1]

[PANEL 1]

"DOWNLOAD THE  
JAWBONE® APP TO GET THE MOST FROM J2013."

[PANEL TWO]

GET CONNECTED

The JAWBONE® app helps you easily pair J2013 to your devices.

[PANEL THREE]

EASY ACCESS

[PANEL FOUR]

CUSTOMIZABLE PLAY BUTTON

Program the PLAY

[PANEL FIVE]

MAKE IT YOURS

[SIDE TWO]

[PANEL SIX]

STILL HAVE QUESTIONS?

The JAWBONE® app is home to the user guide, how-to information and expert support.

[PANEL SEVEN]

BUTTON

CONTROLS

[PANEL EIGHT]

VOLUME DOWN/UP

[SIDE NINE]

POWER

PAIRING  
MICROPHONE  
MICRO-USB  
SIDE CONTROLS

Power On/Off  
Hold

Hear Battery Status  
Press 1x

Activate Pairing Mode  
Hold

Hear Connection Status  
Press 1x

All third party trademarks are those of their respective owners.

[PANEL TEN]  
MEET J2013

VISIT [JAWBONE.COM/START](http://JAWBONE.COM/START)

770-00849-0100 Rev A

# SAFETY GUIDE

## SAFETY INFORMATION



Please read these safety warnings and cautions carefully. Failure to read, understand and follow these warnings can result in death or serious personal injury and property damage.



### **Fire and Electric**

#### **Shock Hazard**

- Never use the Jawbone® J2013 near a bathtub, shower, sink, sauna, pool, or steam room. Death or serious personal injury from electrocution will result.
- Do not expose your Jawbone® J2013 to liquid, moisture, humidity, or rain. Exposure of the Jawbone® J2013 to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the Jawbone® J2013. Such actions could result in electric shock.
- Do not attempt to disassemble the Jawbone® J2013 or force open the built-in battery because this may result in electric shock.
- Do not charge the Jawbone® J2013 in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the Jawbone® J2013 when it is being charged. Always unplug the Jawbone® J2013 first before cleaning.
- Clean the Jawbone® J2013 only with a dry cloth.



## **BATTERY EXPLOSION**

### **Hazard**

- Do not dispose of your Jawbone® J2013 in a fire. The battery could explode causing death or serious personal injury.
- Do not expose your Jawbone® J2013 to extremely high or low temperatures because this could result in an explosion.
- Do not leave your Jawbone® J2013 in direct sunlight for extended periods of time because this could result in an explosion.
- Do not leave your Jawbone® J2013 near open flames or other heat sources such as cooking burners, candles, or fireplaces because this could result in an explosion.
- Do not block any ventilation openings.
- Dispose of the Jawbone® J2013 and the Jawbone® J2013's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.
- Only charge the battery in accordance with the user instructions supplied with the Jawbone® J2013.



- Do not attempt to replace your Jawbone® J2013 battery; it is built-in and is not changeable. Failure to follow this warning may result in serious personal injury.
- Do not attempt to repair, modify, or disassemble your Jawbone® J2013 yourself; it does not contain any user-serviceable components.
- Do not use abrasive cleaners to clean your Jawbone® J2013 because this could cause scratches and damage.
- Do not bring your Jawbone® J2013 in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your Jawbone® J2013 unless otherwise specified in the user instructions. This may damage the

internal components.

- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your Jawbone® J2013 prior to boarding an aircraft. Do not use the Jawbone® J2013 inside an aircraft unless allowed by your airline.

#### **FCC STATEMENT**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **FCC NOTICE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

#### **FCC CAUTION**

- Any changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate this equipment.

- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

### **Canada notices**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations, CAN ICES-3(B)/NMB-3(B). This device has Bluetooth capability, the device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **[Back Cover]**

FCC ID: V3J-J2013 IC: 7589A-J2013

To locate the FCC and IC identification numbers, please look on the underside of the Jawbone® J2013.

©2013 JAWBONE. ALL RIGHTS RESERVED.

770-00850-0200 REV A

VISIT JAWBONE.COM