
## Aranet4 HOME, Aranet4 PRO

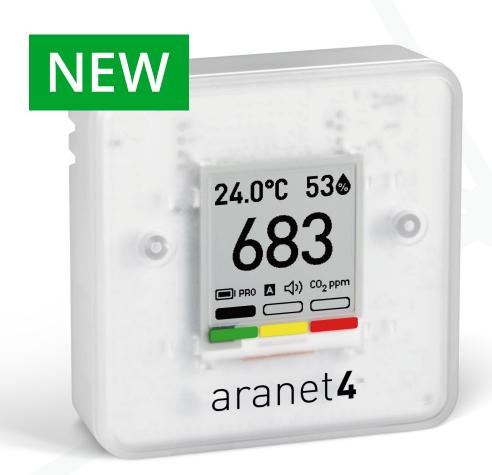



## **USER MANUAL**

Monitors air quality at your home, school, office or any other indoor private or public spaces.

#### About the Aranet4 device

The Aranet4 sensor is a battery powered  $CO_2$  meter with additional measurements of temperature, relative humidity and atmospheric pressure. \* The device is suitable for monitoring the  $CO_2$  level at home, in school, office or any other indoor environment.


Measurement data is displayed on a power-efficient e-ink screen allowing for long battery life. Additionally the device can provide visual and sound notifications in case of the  $CO_2$  concentration becomes unhealthy. The high concentration level of 1400 ppm (parts per million) – level typically associated with complaints of drowsiness and poor air quality.



Data transmission interval: 1, 2, 5 or 10 minutes.

Default measurement interval is set to 5 minutes.

Aranet4 uses the nondispersive infrared (NDIR) sensor to measure the concentration of  $CO_2$ . The  $CO_2$  gas in the chamber absorbs infrared light and this absorption is measured by the sensor. The less light passes through – the higher the  $CO_2$  concentration. The  $CO_2$  gas absorbs only a specific wavelength of the light therefore an optical filter is used.

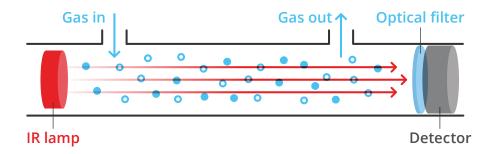

By using the Aranet4 app on your smart device it is possible to wirelessly access real-time data and up to one week of historical measurement data. The app also allows you to configure the Aranet4 device. The Aranet4 app supports connection of several Aranet4 sensors to monitor their parameters remotely from a single smart device.

Additionally up to 100 Aranet4 PRO devices can be connected to the Aranet PRO base station. Refer to the chapter **Using Aranet4 device with the Aranet PRO base station**.

<sup>\*</sup> Atmospheric pressure data measurements are available only on the Aranet4 app. More information in chapter **How to pair the Aranet4 to my smart device**.

## The Aranet4 sensor screen explained

1

Temperature of the air in Celsius or Fahrenheit. Refer to the switch positions of the Aranet4 in chapter **Switch positions explained**.

2

Relative humidity of the air (RH %).




3

 $CO_2$  concentration level in ppm (parts per million).



Alarm status. The  $\checkmark$ ) speaker symbol is visible when alarm function is activated. The alarm settings can be adjusted using the Aranet4 app.

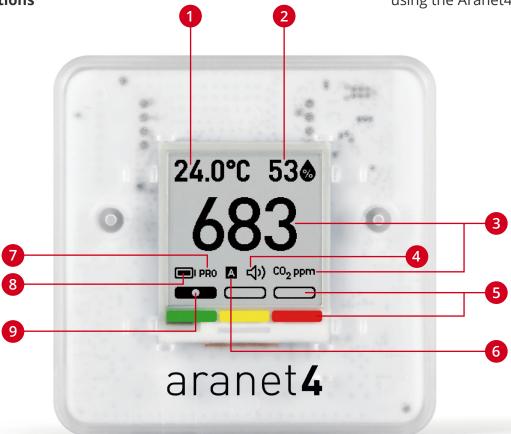



CO<sub>2</sub> threshold level indication.

**Green** represents normal CO<sub>2</sub> level (below 1000 ppm)

Yellow represents average CO<sub>2</sub> level (1000 to 1400 ppm)

Red represents high CO<sub>2</sub> level (above 1400 ppm)



CO<sub>2</sub> calibration mode indication.
Symbol "A" A is displayed when calibration is set to automatic. No letter is displayed when calibration is set to manual mode.



Battery level.



The PRO version of the product (can be wirelessly connected to Aranet PRO base station & Aranet Cloud)



Adjustable CO<sub>2</sub> thresholds that can be set using the Aranet4 app.



The inverted screen alerts when CO<sub>2</sub> concentration is too high and unhealthy.



Do not remove batteries during firmware upgrade.



The battery is exhausted. Replace the batteries.



The calibration progress.

PIN 888888

Pin code representation, when pairing device with smartphone trough Aranet4 app via Bluetooth Temperature is below

Frost can damage the sensor. The recommended operating temperature of the sensor is 0 °C to 50 °C (32 °F to 122 °F).

### CO<sub>2</sub> calibration

The Aranet4 device is calibrated at the factory. However, the user can perform  $CO_2$  calibration manually when needed. During the manual calibration the Aranet4 device must be exposed to fresh air (about 420 ppm of  $CO_2$ ) and the environment should be stable (not changing). Maintain a distance of at least 1 meter from the device during the calibration process.

To start the manual CO<sub>2</sub> calibration, change the position of the switch (see next chapter **Switch positions explained**) from **MANUAL** to **AUTO** and then back to MANUAL (maintain maximum of 1 second between each movement). The calibration progress will be displayed on the screen of the device. In case of a calibration failure message, make sure that the environment requirements are met and repeat the process from the beginning.

Manual calibration can be done using the Aranet4 app as well.

In case of automatic calibration mode, the Aranet4 device needs to be exposed to a fresh air at around 420 ppm (for instance, outdoors or room with good air exchange) at least 8 hours each month.




## Switch positions explained

The Aranet4 device has four small configuration switches that allow the user to adjust the preferences of the device.

To access the configuration switches, open the cover of the battery compartment on the back of the device. While batteries remain inserted, adjust the switch position (up or down) using the pin tool that is supplied with the Aranet4 device (or any other suitable thin tool).

Switches can be adjusted while batteries are removed as well, but note that if you remove the batteries, the measurement history will be erased from Aranet4 memory. The changed preference setting will be enabled once the batteries are inserted back in.

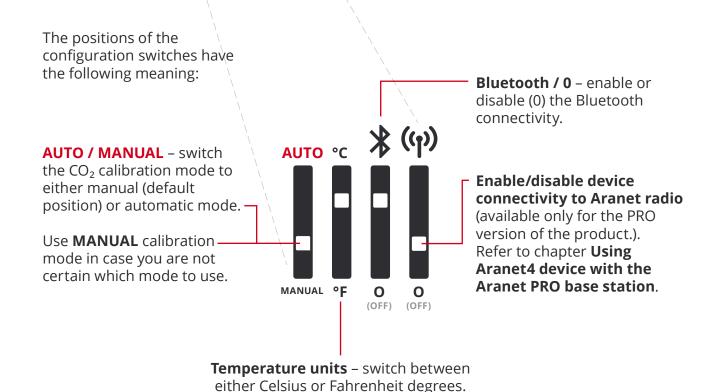


# How to pair Aranet4 to my smart device using the Aranet4 app

Connect your smartphone with the Aranet4 device via Bluetooth by using iOS or Android (access to device's location should be allowed due to general requirement for Bluetooth apps to work correctly on Android OS) app to:

- Access real-time measurement data overview
- Access all nearby
  Aranet4 devices
- View up to seven day measurement history
- Do the CO<sub>2</sub> calibration of the device
- View atmospheric pressure data
- Get access to the available firmware updates
- Set adjustable CO<sub>2</sub> thresholds
- Connect to smart devices and show the readings on larger TV screens
- Set alarms and frequency of sensor readings

**To connect your Aranet4 device to your smart device**, make sure Bluetooth connectivity is enabled on your smart device and on your Aranet4 device, and **do the following steps:** 

- 1 Launch the Aranet4 app and on the main page (My devices) add a new device by clicking on the (+) symbol.
- 2 Select your Aranet4 device from the list.
- 3 When prompted, confirm the start of pairing.
- Type in the 6 digit passcode that is shown on the display of your Aranet4 device.

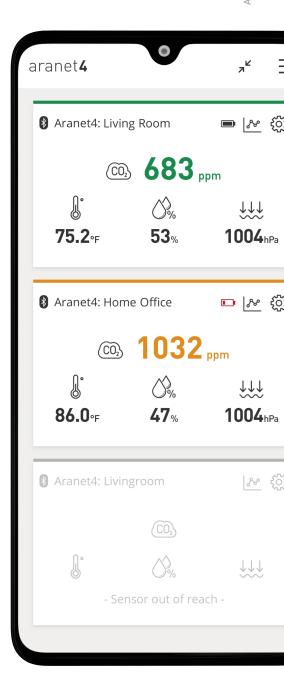





## Using Aranet4 PRO device with the Aranet PRO base station

The Aranet PRO base station serves as a device for collecting, storing and maintaining data from all types of Aranet sensors, including Aranet 4 PRO. Up to 100 sensors can be connected to a single Aranet PRO base station which has a capacity to store the measurement history up to 10 years.

To connect the Aranet4 PRO to the Aranet PRO base station, initiate the sensor pairing mode on the Aranet PRO base station and start the pairing on the Aranet4 device by changing the switch position from disable (0) to enable (radio symbol). Alternatively, while switch is in the enable position (radio symbol on screen is visible), remove and reinsert the batteries. Please note, that by removing the batteries, the measurement history will be erased from the Aranet4 memory.

Find out more about the Aranet PRO base station at **aranet.com** and follow the Aranet PRO User Manual on how to pair Aranet sensors to the Aranet PRO base station.

### Returns and warranty

In case of a return or a warranty claim, please contact your sales representative. For Terms and Conditions refer to **aranet4.com/terms-conditions**.

## Frequently asked questions (FAQ)

If you can't find the answer that you are looking for in this manual, please take a look at the Aranet Forum at **forum.aranet.com**. Otherwise send us a message to **support@aranet.com**.

#### **Additional links**

More information about the product and documentation can be found <a href="https://aranet.com/product/aranet4-sensor/">https://aranet.com/product/aranet4-sensor/</a>

For more detailed information about Aranet products, please visit www.aranet.com, contact your Aranet representative or write to info@aranet.com. Product specifications are subject to change without prior notice. © 2021 SAF Tehnika, JSC. All rights reserved.



DISCUSS. GET SUPPORT. EXCHANGE YOUR EXPERIENCE.

## **FCC Compliance statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

"This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

The information presented in this guide is the property of SAF Tehnika, JSC. No part of this document may be reproduced or transmitted without proper permission from SAF Tehnika, JSC.

The specifications or information contained in this document are subject to change without notice due to continuing introduction of design improvements. If there is any conflict between this document and compliance statements, the latter will supersede this document.

SAF Tehnika, JSC has no liability for typing errors in this document or damages of any kind that result from the use of this document.

To get up to date information about accessories and their availability, please contact sales representative.

#### **Industry Canada Regulatory Statement**

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.