

## Product Instruction


For your safety, please read this manual carefully before using this product.

### 一、 In order to protect you from injury and property damage, we clearly explain what you should follow:

- A) Warning! It may cause serious injuries or even casualties. People should consult the doctor before using implantable medical devices (such as using pacemaker). Please install your equipment 50 centimeters away from this product because it may influence the operation of implantable medical device.
- B) Attention! It may cause fever, fire and electric shock.
- 1) Do not put the product in water or other liquids, avoid water into the product;
  - 2) Do not touch the AC adapter with wet hands to ensure the safety and integrity of the adapter
  - 3) Do not let dust accumulate on this product and adapter
  - 4) Do not use this product under the temperature of  $-10^{\circ}\text{C}$ — $40^{\circ}\text{C}$ ;
  - 5) Do not use it in the places of direct sunlight or high temperature;
  - 6) Do not charge too close to magnetic sheets, magnetic recording media and precision instruments
  - 7) Do not decompose and transform this product
  - 8) Do not put any metal objects between the distance charging transmitting board and the charging mobile phone;
  - 9) When using plugs and other connections, do not exceed the rated value
  - 10) When using, please make sure that you have connected the AC adapter correctly to avoid any damage. Unplug AC adapter from plug when stopping using it.
  - 11) Do not use travel converters
  - 12) Do not let your children use it until they know how to use it.

### 二、 Charging method of distance charging

Diagram for using and installing:

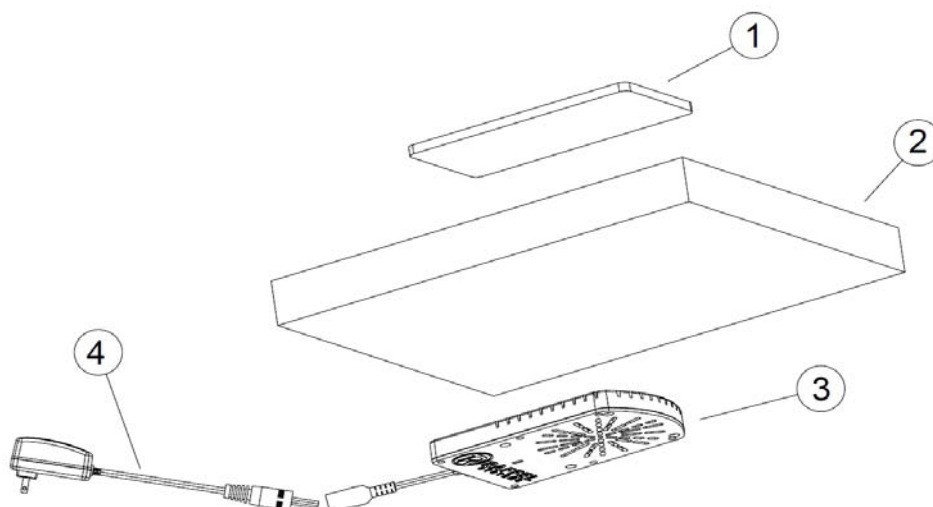

①—— Mobile phone

②—— Marble, glass, wood, plastic and other non-metallic tabletop

③——Wireless distance charger

④ ——Adapter



- 1) Connect the product to an adapter that outputs 24-31Vdc or any device with an output voltage of 24-31Vdc;
- 2) If the distance charging product detects that there is no equipment to be charged in the charging area, the product will be on standby.
- 3) Put the device (mobile phone) to be charged directly in the charging area of the product, the device enter the charging state, and the blue light is on;
- 4) After charging, the product is standby, the blue light is on, then take it away.
- 5) If there is a metal some-like in the charging area (the center of the coil), blue and green light flicker alternately and will disconnect distance charging to protect equipment

### 三、 Product parameter:

- 1) Product model: WCP BL 03 series Distance charging products
- 2) Product name: Wireless distance charger
- 3) Dimension: Length is 142mm, Width is 94.5mm, and height is 14.2mm
- 4) Main function: distance charging launcher
- 5) Product application: All distance charging devices under Qi standard
- 7) Charging type: One-to-one charging in corresponding area
- 8) Input voltage: 24-31Vdc
- 9) Launch distance: 15-30mm
- 10) Charging power: 10W(MAX)
- 11) Charging way: Induction mode
- 12) Working frequency: 110.5—130KHz

## FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

This equipment should be installed and operated with a minimum distance of 20 cm between the device and your body.