

USER MANUAL

WL Series

Version: 1.0

Date: Sept 2016

Firmware Version: Ver1.1.1 (Build 27)

About This Manual This document describes the GUIs and menu operations of the self-service attendance terminal. Not all the devices have the function with. The real product prevails. The photograph in this manual may be different from that of the real product. The real product prevails.

CONTENTS

1 Instruction for Use	1
1.1 Recommended Operation Steps	1
1.2 Finger Placement	1
1.3 Verification Modes	2
1.3.1 Fingerprint Verification	2
1.3.2 Password Verification	3
1.2.4 Card Verification★	3
2 Main Menu	4
3 User Management	5
3.1 Add a User	5
3.1.1 Enter a User ID and Name	5
3.1.2 Enroll a Fingerprint	6
3.1.3 Enroll a Password	6
3.1.4 Enroll an Card ★	6
3.1.5 Select Department and Privilege Settings	7
3.2 User Management	7
3.2.1 Search a User	8
3.2.2 Query a Record	8
3.2.3 Edit a User	8
3.2.4 Delete a User	9
3.2.5 Add a User	9
4 Department Set	10
4.1 Add a Department	10
4.2 Edit a Department	10
4.3 Delete a Department	11
5 Shift Set	12
5.1 Attendance Rule	12
5.2 Shift Setting	13
5.3 Schedule	13
5.3.1 Department-based Scheduling	13
5.3.2 Individual-based Scheduling	14
6 Report Management	16
6.1 Download Att. Report	16
6.2 Download Att. Setting Report	17
6.3 Set Setting Reports	19
7 System Setting	20
7.1 System Setting	20
7.2 Date/Time	21
7.3 Timing State Switching Setting	21
7.4 SMS Setting★	22
7.4.1 Add an SMS Message	23
7.4.2 Edit an SMS Message	23

7.4.3 Delete an SMS Message	23
7.5 Daylight Saving Time (DLST) Setting★	24
7.6 Bell Settings	25
7.7 Ethernet ★	26
7.7.1 WIFI setting	26
7.7.2 PC Connection	27
7.7.3 ADMS	27
7.8 Work code★	28
7.8.1 Add a Work Code	28
7.8.2 Edit a Work Code	28
7.8.3 Delete a work code	29
7.8.4 Use a Work Code	29
7.9 Update firmware	29
7.10 Reset Opts.	30
8 Data Management	31
8.1 Download/Upload	31
8.2 Delete/Clear	31
9 Record Query	33
10 System Information	34
11 Appendix	35
USB Client	35
T9 input	35
Quick Query of Attendance Records	35
Self-Service Attendance Terminal FAQs	37
Statement on Human Rights and Privacy	41
Environment-Friendly Use Description	42

1 Instruction for Use


1.1 Recommended Operation Steps

- Step 1: Set a department (not required if the default department is used). For details, see 4 "Department Set."
- Step 2: Enroll users. For details, see 3 "User Management."
- Step 3: Set attendance rules (not required if the default rule is used). For details, see 5.1 "Attendance Rule."
- Step 4: Set shifts (not required if the default shift is used). For details, see 5.2 "Shift Setting."
- Step 5: Arrange schedules of employees (not required if the default schedule is used). For details, see 5.3 "Schedule."
- Step 6: Record employees' attendance. Check that the device time is precise and start attendance.
- Step 7: Download and review reports. For details, see 6.1 "Download Att. Report."

1.2 Finger Placement


Recommended fingers: The index finger, middle finger or the ring finger; the thumb and little finger are not recommended (because they are usually clumsy on the fingerprint collection screen).

1) Proper finger placement:



The finger is flat to the surface and centered in fingered guide.

2) Improper finger placement:

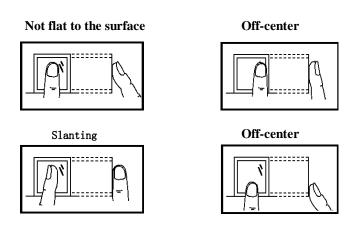

1.3 Verification Modes

1.3.1 Fingerprint Verification

1: N Fingerprint Verification

The terminal compares current fingerprint collected by the fingerprint collector with all fingerprint data on the terminal. Press your finger on the fingerprint collector by adopting the proper finger placement. For details, see 1.2 Finger Placement.





When verification successful, an interface shown above.

When verification failed, an interface shown above.

1:1 Fingerprint Verification

In the 1:1 fingerprint verification mode, the terminal compares current fingerprint collected through the fingerprint collector with that in relation to the user ID entered through keyboard. Adopt this mode only when it is difficult to recognize the fingerprint.



Enter the user ID using keypad on the initial interface. Then press OK. Place the enrolled finger properly on the fingerprint sensor.



When verification successful, an interface shown above.



When verification failed, an interface shown above.

Notes:

- 1. If it says that the enroll number is wrong, it means that there is no such number
- 2. If the device says "Please press again", place the finger on the fingerprint sensor again. You can try another 2 times by default. If it fails after 2 times, return Step 1 for second operation.

1.3.2 Password Verification

In the password verification mode, the terminal compares the password entered with that in relation to the user ID.







Enter the user ID and PWD using keypad on the initial interface. Then press OK.

When verification successful, an interface shown above.

When verification failed, an interface shown above.

Notes:

If the device says "Invalid ID", enter the password again. You can try another 2 times by default. If it fails after 2 times, return Step 1 for second operation.

1.2.4 Card Verification★

Some devices have an embedded ID or Mifare card module, providing the verification function. A device compares the read card ID with all card IDs enrolled in the device during verification.



If the verification is successful, an interface as shown above.



If the verification is not successful, an interface as shown above. Note: If a device is connected to a computer through a USB cable, the Mifare card of the device is unavailable and a text prompt message is displayed on the initial interface. The Mifare card restores after the device is disconnected from the computer.

Notice: The card area in some devices is round the fingerprint sensor and others are round the keyboard.

2 Main Menu

The self-service attendance terminal that integrates the prevalent SSR technology in Europe and America is launched to reduce management costs effectively, provide convenience for employees, and minimize the requirement for computer skills of users. The device allows setting attendance rules, shifts, and schedules for employees, without the need for attendance software. Users can download attendance reports for review and statistics.



This menu item allows you to add, browse, and manage user information, including the employee ID, name, fingerprint, password, card ID, department, and rights. You can add, edit, or delete basic information about employees.



This menu item allows you to browse department information, add, edit, or delete department IDs or names.



This menu item allows you to set attendance rules and required shifts and to arrange schedules for employees. The device supports a maximum of 24 shifts.



This menu item allows you to download statistical reports of attendance or attendance setting reports to a USB flash drive or SD card, or to upload attendance setting reports in which shifts are set and employees' schedules are arranged. The device gives priority to the schedules in an attendance setting report.



This menu item allows you to set system-related parameters, including the basic parameters, Date/Time, Timing State Switching Setting, SMS Setting and so on, to enable the terminal to meet user requirements to the greatest extent in terms of functions and display.



This menu item allows you to upload or download user data or attendance data, delete attendance data and all user data, and revoke management rights.

Through an SD card or a USB disk, import user information and attendance data from the attendance machine to related software or other fingerprint recognition devices.



This menu item allows you to easily query the attendance records saved on the device.



This menu item allows you to check the storage status as well as version information of the device.

3 User Management

3.1 Add a User

Through this submenu, you can browse the user information stored on the terminal, including the user ID, name, fingerprint, password, department, and user role.








Press M/OK on the initial interface.

Select User and press OK.

Select Add user and press OK.


3.1.1 Enter a User ID and Name

The terminal automatically allocates an ID starting from 1 for every user in sequence. If you use the ID allocated by the terminal, you may skip this section.

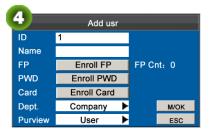

Select User ID.

Enter the user ID using keypad, then press OK.

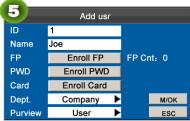

Press ▼ to select Name.


Press M/OK to open input method.

Press ▲/▼to switch input method and enter the Name.

For details of operations on keyboard interface, see T9 input.

The terminal supports the 23-character names by default.

3.1.2 Enroll a Fingerprint

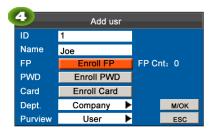

Press ▼ select Enroll FP and press M/OK.



Place your finger on the fingerprint sensor properly. For details, see <u>1.2</u> <u>Finger Placement</u>.



Place the same finger on the fingerprint collector for three consecutive times correctly until enrollment succeeds.

Note: If the enrollment fails, the system will display a prompt message and return to the [Enroll Fingerprint] interface. In this case, you need to repeat the operations of step 2.

3.1.3 Enroll a Password



Press ▼ to select Enroll PWD. Press OK.



Enter a password using keypad and Re-enter the password, press M/OK.

The FFR terminal supports the 1- to 8-digit passwords by default.

3.1.4 Enroll an Card ★

Some devices have an embedded ID or Mifare card module, providing the verification function.



Press ▼ to select Enrolling Card and press OK.



Swipe your ID card properly in the swiping area.




"Read Successfully!

3.1.5 Select Department and Privilege Settings

Administrators: An administrator is granted rights to operate all menus in addition to the fingerprint- and password-based attendance recording.

Ordinary users: An ordinary user is only allowed to record attendance through fingerprint and password verification and query attendance records.





Press ▼ to select Dept..

Press ▼ to select Purview.

Press OK to select department.

Press OK to select Purview.

Finally, press ▲/▼to select M/OK and press M/OK. Till now, a user is added.

3.2 User Management

Generally the user information stored on the device needs to be modified in the wake of the personnel changes in a company. To facilitate modification of user information, our device allows users to add, delete, query and modify user information conveniently.










Press M/OK on the initial Select User and press OK. interface.

Select User Mgt. and press OK.

3.2.1 Search a User

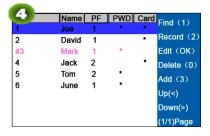

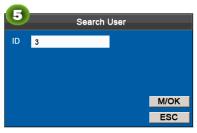

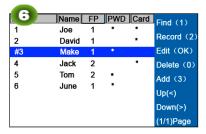

User Mgt. interface

Press 1 to enter

Enter the user ID, such as 3, and press OK.


The cursor to the user to be queried.

Note: "#" as shown in the figure above means the user is an administrator, and "*" means the user has already enrolled a password or card.

3.2.2 Query a Record





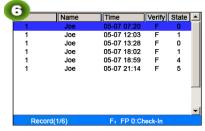

Press $\blacktriangle/\blacktriangledown$ to select a user and press 2.

Press $\blacktriangle/\blacktriangledown$ to scroll the attendance record row by row. Press $\blacktriangleleft/\blacktriangleright$ to scroll the attendance record page by page.

Press M/OK to query detailed information of an employee:



Notes displayed at the bottom of the screen explain all letter meanings.


Verification: validation status.


F: fingerprint verification. P: password verification I: Card verification

Status: attendance status.

0: check-in 1: check-out 4: overtime check-in 5: overtime check-out

3.2.3 Edit a User

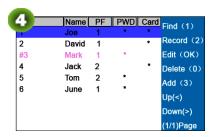


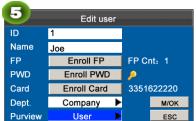

Press ▲/▼ to select a user and The User ID cannot be modified, press M/OK.

and the other operations are similar to those performed to add a user.

3.2.4 Delete a User

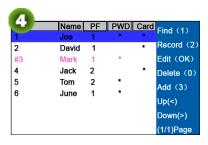



The option "Delete user" is in either of the following cases to delete all information of an employee from the popular color-screen FRT:

- 1) The fingerprint or password of this employee is no longer required.
- 2) This employee has resigned.

Press ▲/▼ to select a user and press 0.

Press M/OK to delete the user or ESC to return without deleting.

Note: Deleting a user will not result in the deletion of the user's attendance records which can be downloaded to related software for query.

3.2.5 Add a User


The Add user option is used to facilitate administrators to add users. For details, see 3.1. Add a User.


4 Department Set

Browse department information. Add, edit, or delete department IDs or names.








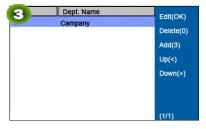


Enter Department set interface as shown as figure.

4.1 Add a Department

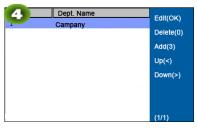

Press 1 to enter Add Dept. interface.

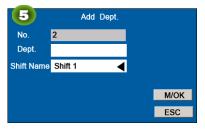


Enter the department name using the T9 input method.

Press **◄**/**▶** to select Shift Name and press M/OK.

No.: The attendance machine automatically assigns work IDs for departments that start from 1 and increase sequentially.

Dept.: Enter the department name using the T9 input method. (For detailed operations, see T9 input.)

4.2 Edit a Department

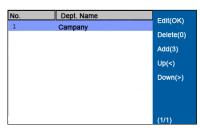


Press $\blacktriangle/\blacktriangledown$ to select a department to be edited and press M/OK.



The Edit department operations are similar to those performed to add department.

4.3 Delete a Department

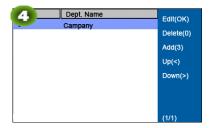



Press $\blacktriangle/\blacktriangledown$ to select a department and press 0.

Press M/OK to delete the user or ESC to return to the User Mgt. interface without deleting.

5 Shift Set

This menu item allows you to set attendance rules and required shifts and to arrange schedules for employees.







Press M/OK on the initial interface.

Select Shift set and press OK.


Select Attendance Rule and press OK.

5.1 Attendance Rule

All attendance statistics are collected based on attendance rules. Attendance rules regarding how to calculate late arrival and early leave and how to arrange schedules need to be set first. Once set, they should not be modified from time to time because a modification may cause deviation in attendance record and a modification in the middle of a month may even disarrange the schedules.

Schedule Type: Department-based scheduling and individual-based scheduling are supported. If a company uses one timetable, only one department needs to be set and department-based scheduling is recommended. If departments have their respective timetables, department-based scheduling is recommended. If employees may take different shifts, individual-based scheduling is recommended.

Default Shift: When individual-based scheduling is used, employees who are not scheduled take the default shift.

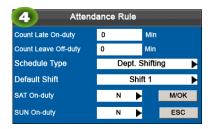

Press $\blacktriangle/\blacktriangledown$ to move the cursor to a desired option. Enter a desired value in the entry box using the numeric keypad. Press $\blacktriangleleft/\blacktriangleright$ in the scroll box to switch to the desired value. After finishing the setting, press OK to save your settings and go back to the previous interface. Press ESC to cancel your settings and go back to the previous interface.

Set attendance rules by referring to the instructions in the text box on the right.

Press **▲**/**▼** to select M/OK.

Press M/OK for saving.


5.2 Shift Setting



Press ▼ to select Shift setting, Press M/OK



Press $\blacktriangle/\blacktriangledown$ to select a shift from the list, and press \blacktriangleright to display the Edit shift interface

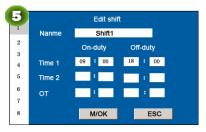

Press $\blacktriangle/\blacktriangledown$ to choose corresponding shift attributes. Enter the time using the numeric keypad. Press M/OK

Shift setting:

The device supports a maximum of 24 shifts including two default shifts (shift 1 and shift 2). All shifts can be edited and a single shift includes three time ranges at most.


5.3 Schedule

As the basis of attendance calculation, shifts should be set based on the actual condition of a company. If no shift is set, the system makes attendance calculations based on default shifts set in attendance rules.



Press M/OK on the initial Select Shift set and press OK. interface.



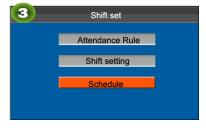



Select Schedule and press OK.


5.3.1 Department-based Scheduling

The Schedule type in Attendance Rule is Department shifting.

1.Scheduling Records Query

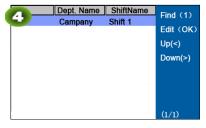

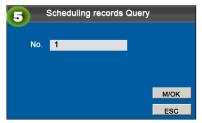

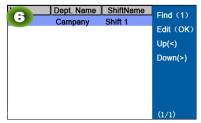



Press 1 to enter Scheduling records Query


Enter a No. and press OK. Enter 1 as shown as in figure.

The department's scheduling records as shown as in figure.

2.Edit Schedule

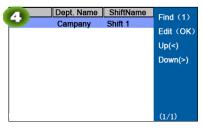

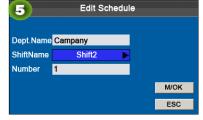

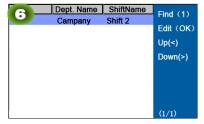

Press $\blacktriangle/\blacktriangledown$ to select a shift then press M/OK.


Press **√** to select Shift Name, like: Shift2, Press M/OK.

When editing successful, an interface shown above.

5.3.2 Individual-based Scheduling

The Schedule type in Attendance Rule is Personal shift.

1. Add Schedule

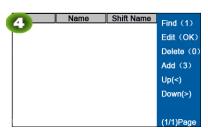


Press 3 to enter Add Schedule interface.




Enter an ID. The device automatically displays the name.

Press $\blacktriangle/\blacktriangledown$ to select Shift Name and then press M/OK.

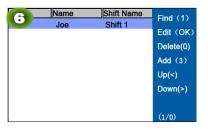


When adding successful, an interface shown above.

2. Edit Schedule

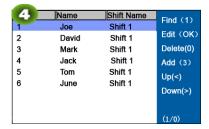



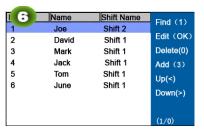


Press ▲/▼to select a shift then press M/OK.


Press ◆/▶ to select Shift Name, like Shift 2, press ▲/▼ to select M/OK then press M/OK.


When adding successful, an interface shown above.

Note: The User ID cannot be modified, and the other operations are similar to those performed to add a shift.

3. Scheduling Records Query

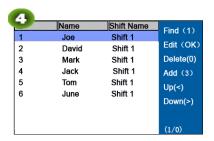

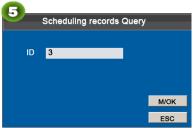

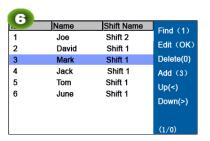


Press 1 to enter Scheduling records Query

Enter an ID number and press OK. Enter 3 as shown as in figure.

The user's scheduling records as shown as in figure.

4. Delete a shift

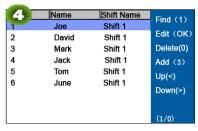



Press $\blacktriangle/\blacktriangledown$ to select a shift then press 0.

Press M/OK to delete.
Press ESC to exit

6 Report Management

Note: The schedules in attendance setting reports have priority over those set on the device in attendance calculation.

Note: The attendance machine downloads information onto the USB disk when a USB disk and an SD card are inserted simultaneously.








Press M/OK on the initial interface.

Select Report and press M/OK.

Select Download Att. Report and press M/OK.

6.1 Download Att. Report

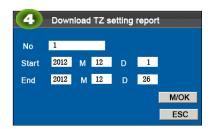

Calcuating & Downloading......



Enter the start and end dates using keypad then press OK.

Downloading.....

Data download succeed!

Press M/OK to take out the USB disk or SD card.

The SSRTemplateS.xls shall be stored in the USB disk or SD card. The schedule information, statistical report of attendance, attendance Record Report, Exception Statistic Report and card report can be viewed on a PC. The following reports show the preceding information:

To make reports more understandable, a report containing two-day attendance records of four employees is provided as an example.

Schedule Information Report: The report allows you to view schedule records of all employees.

			S	c	he	d	ul	e l	ln	fo	rn	าล	tic	or	F	₹e	po	or	t													
Stat.Date:	2013-01-0	1 ~ 2013-01	I-03																	Sp	ecial	shi	fts:2	5-As	sk fo	r lea	ive, 2	26-C	ut, 1	Null-H	lolid	ay
ID	Name	Danastmant	1	2																												
טו	ivame	Department	FEB	MAR	8																											
1	Joe	company	1	1																												
2	David	company	1	1																												
3	Mark	company	1	1																												
4	Tom	company	1	1																												

tatistical Report of Attendance: The report allows you to query attendance of each person in a specified period. Salaries can be calculated directly based on this report.

Note: The unit of Work hour and Overtime hour in the Statistical Report of Attendance is HH:MM. For example, 17:50 indicates that the on-duty time is 17 hours and 50 minutes.

						S	tat	isti	ica	l Re	por	t o	f A	tte	enda	ance	е					
Stat.Date:	2013-0	1-01~2013-01	1-02																			
ID	Name	Department	Worl	k hour	La	ite	Leave	early	Overtin	ne hour	Att. Days	Out	Absen	AFL	Ad	lditem paym	ent	Dec	duction payr	nent	Real pay	Note
ID ID	Ivame	Department	Normal	Real	Times	Min	Times	Min	Workday	Holiday	(Nor./Real)	(Day)	t(Day)	(Day)	Label	Overtime	Subsidy	Late/Leave	AFL	Cutpayment	Real pay	Note
1	Joe	company	18:00	17:50	0	0	- 1	10	00:00	00:00	2/2	0	0	0								
2	David	company	18:00	17:48	1	12	0	0	00:00	00:00	2/2	0	0	0								
3	Mark	company	18:00	08:50	1	5	- 1	10	00:00	00:00	2/2	0	0	0								
4	Tom	company	18:00	18:00	0	0	0	0	00:00	00:00	2/2	0	0	0								

Attendance Record Report: The report lists the daily attendance records of all employees within a specified period.

								Α	ttend	ance	Reco	rd Re	po	ort
Att.	Time	2013	3-01-0	1~20	13-01-	-02	Т	abulation	2013-01-0)2				
1	2													
ID:	1						Name	Joe				Dep	t.:	company
12:25 13:31	07:54 12:56 13:51	3 1												
ID:	18:52						Name	Davi	d			Dep	t.:	company
12:26 13:31	09:12 15:50 15:51 18:52	1												
ID:	3						Name	Marl	(Dep	t.:	company
07:50	09:0	5												
ID:	4						Name	Jack				Dep	t.:	company
07:45 12:50	08:11 17:55 18:06	5												

Exception Statistic Report: The report displays the attendance exceptions of all employees within a specified period so that the attendance department handles the exceptions and confirm them with the employees involved and their supervisors.

			Except	tion	Sta	tist	ic F	Repoi	t			
Stat.Date:	2013-01-0	01 ~ 2013-01-03										
ID	Name	Department	Date	First tim	ne zone	Second t	ime zone	Late	Leave	Absence	Total(Min)	Note
10	ivame	Department	Date	On-duty	Off-duty	On-duty	Off-duty	time(Min)	early(Min)	(Min)	rotal(iviiri)	Note
1	Joe	company	2013-01-01	07:26	17:50			0	10	0	10	
2	David	company	2013-01-02	09:12	18:52			12	0	0	12	
3	Mark	company	2013-01-01	07:50	17:50			0	10	0	10	
4	Tom	company	2013-01-02	09:05				5	0	535	540	

Card Report: The report can substitute for clock-based cards and can be sent to each employee for confirmation.

										-			Ca	rd	R	epo	rt			-								
Att. Da	ate:	2013-	01-01	~ 201	3-01-0	03			Tab	ulation:	2013	01-02																
Dept.		С	ompar	ıy		Name		Joe		Dept.		- 0	ompai	ny		Name		David	d	Dept.		CO	mpan	у		Name	M	ark
Date	2013-	-01-01	~ 2013	3-01-0	3	ID		1		Date	2013	01-01	~ 201	3-01-0)3	ID		2		Date	2013-0	1-01 ~	2013	3-01-0	3	ID		3
Absen	AFL	Out	On-	Overt	ime(H)	L	ate	Lea	ve early	Absen	AFL	Out	On-	Over	time(H)	L	ite	Lea	ave early	Absen	AFL	Out	On-	Overti	ime(H)	Lat	e L	eave early
t(Day)	(Day)	(Day)	duty	Workday	Holiday	(Times)	(Min)	(Times	(Min)	t(Day)	(Day)	(Day)	duty	Workday	Holiday	(Times)	(Min)	(Time	es) (Min)	t(Day)	(Day)	(Day)	duty	Workday	Holiday	(Times)	(Min) (T	mes) (Min)
0	0	0	2	0.0	0.0	0	0	1	10	0	0	0	2	0.0	0.0	1	12	0	0	0	0	0	2	0.0	0.0	1	5	1 10
									•																			
				Att.	Rep	ort								Att	. Rep	ort								Att.	Rep	ort		
Week	Fire	st time	zone	Se	cond t	ime zor	е	Overti	ime	Week	Fire	st time	zone	Se	cond t	time zon	е	Over	time	Week	Firs	t time z	one	Se	cond t	ime zone	0)	ertime
Date	On-d	luty (Off-duty	On	-duty	Off-du	ty Che	eck-In	Check-Out	Date	On-c	luty	Off-dut	y Or	n-duty	Off-du	ty Che	ck-In	Check-Out	Date	On-du	ity Of	ff-duty	On-	-duty	Off-duty	Check-	n Check-Out
01 FEB	07:2	26	17:50							01 FEB	07:	36	18:31							01 FEB	07:5	0 1	7:50					
02 MAR	07:	54	18:52							02 MAR	09:	12	18:52							02 MAR	09:0	5						

6.2 Download Att. Setting Report

If shifts are complex or the shifts of a person are not fixed, it is recommended that the attendance setting report be downloaded and shifts and schedules be set for employees in the attendance setting report.







Press ▼to select Download Att. Downloading...... Report then press OK.

Data download succeed!

Press M/OK to take out the USB disk or SD card.

Open the setting "AttSettingE.xls" in the USB disk or SD card on a PC. Set the Shift in the Attendance setting report. The shifts that have been set on the attendance machine shall be displayed. (For more details, see <u>5.2 Shift Setting</u>) You can modify the 24 shifts and add shifts. After modification, the shifts shall prevail on the attendance machine. For more details, see "How to arrange schedules using the attendance setting report" in the "<u>Self-Service Attendance Terminal FAOs</u>."

Αι	tenu	ance	Shift	tting	Kep	JUIL
Numbe	Firet tin	ne zone		ime zone	Over	time
r	On-duty	Off-duty	On-duty	Off-duty	Check-In	Check-Ou
1	9:00	18:00	Oll-duty	Oll-duty	CHECK-III	CITECK-OU
2	9:00	12:00	13:30	18:00		
3	9:00	12:00	13:30	18:00		
4	9:00	12:00	13:30	18:00		
5	9:00	12:00	13:30	18:00		
6	9:00	12:00	13:30	18:00		
7	9:00	12:00	13:30	18:00		
8	9:00	12:00	13:30	18:00		
9	9:00	12:00	13:30	18:00		
10	9:00		13:30			
		12:00		18:00		
11	9:00	12:00	13:30	18:00		
12	9:00	12:00	13:30	18:00		
13	9:00	12:00	13:30	18:00		
14	9:00	12:00	13:30	18:00		
15	9:00	12:00	13:30	18:00		
16	9:00	12:00	13:30	18:00		
17	9:00	12:00	13:30	18:00		
18	9:00	12:00	13:30	18:00		
19	9:00	12:00	13:30	18:00		
20	9:00	12:00	13:30	18:00		
21	9:00	12:00	13:30	18:00		
22	9:00	12:00	13:30	18:00		
23	9:00	12:00	13:30	18:00		
24	9:00	12:00	13:30	18:00		

Enter the on/off duty time in the corresponding columns, where the First time zone shall be the on/off duty time of Time 1 <u>5.2 Shift Setting</u> in and the Second time zone shall be the on/off duty time of Time 2.

For the correct schedule time format, see "What is the correct time format used in the setting reports" in the "Self-Service Attendance Terminal FAQs."

Set a schedule setting report

Enter the ID, Name, and Department respectively on the left of the Schedule Setting Report. Set shifts for employees on the right of the Schedule Setting Report, where shifts 1–24 are shifts those set in the Attendance setting report and shift 25 is for leave and shift 26 is for out.

					S	ch	ie	d	ul	e	S	et	ti	n	g	R	ep	00	rt	•														
Special sh	ifts:25-Ask fo	r leave, 26-Out,	Null-Holiday																															
	Sched	lule date		201	3-1-	1																												
ID	Name	Department	Card number	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
	Ivame	Бераптепі	Card number	TUE	WED	THU	FRI	SAT	SUN	MON	TUE	WED	THU	FRI	SAT	SUN	MON	TUE	WED	THU	FRI	SAT	SUN	MON	TUE	WED	THU	FRI	SAT	SUN	MON	TUE	WED	THU
1	Joe	company																																
2	David	company																																
3	Mark	company																																
4	Jack	company																																

Notes:

- 1. The shifts of only 31 days can be arranged in one schedule setting report. For example, if the scheduling date is 2012-1-1, the schedule setting report contains the schedules of 31 days after 2012-1-1, that is, schedules from 2012-1-1 to 2012-1-31. If the scheduling date is 2012-1-6, the schedule setting report contains the schedules of 31 days after 2012-1-6, that is, schedules from 2012-1-6 to 2012-2-5.
- 2. If no schedule setting report is set, all employees use the report 1 by default from Monday to Friday.

6.3 Set Setting Reports







Select Upload Att. Setting Report Uploading table..... then press OK.

Data upload succeed! Press M/OK to take out the USB disk or SD card.

The employee information, shifts, and departments in the setting reports can be viewed after you select User, Dept set, and Shift set respectively on the initial interface.

Then you can view the information of employees, shifts, and departments either on relevant interfaces or in downloaded standard reports.

Note: If the schedule time format is incorrect, an interface shown in the following figure will be displayed:





For the correct schedule time format, see "What is the correct time format used in the setting reports" in the "Self-Service Attendance Terminal FAQs."

Press M/OK.

Re-upload the attendance setting report after modification.


7 System Setting

7.1 System Setting

Set system parameters to meet user requirements to the greatest extent in terms of functions and display.






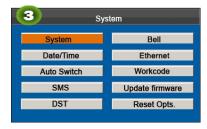

Press M/OK on the initial Select System and press M/OK. interface.

Select System and press M/OK.

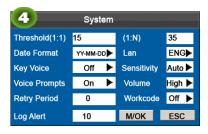

Move the cursor to the desired option by pressing $\blacktriangle/\blacktriangledown$. Enter a desired value in the entry box by using the keypad. Press \blacktriangleright in the scroll box to switch to the desired value. After finishing the setting, press M/OK to save your settings and return to the previous interface. Press ESC to cancel your settings and return to the previous interface.

Set system parameters.

Threshold (1:1): This option is used to set the extent of matching between an input ID/fingerprint and that stored in templates in the ID and fingerprint identification mode.

Threshold (1: N): This option is used to set the extent of matching between an input ID/fingerprint and all those stored in templates.

The recommended thresholds are as follows:

		Match threshold		
FRR	FAR	1:N	1:1	
High	Low	45	25	
Medium	Medium	35	15	
Low	High	25	10	

Date Format: This option is used to set the time format displayed on the initial interface of the popular color-screen FRT.

Select a desired date format by pressing. The popular color-screen FRT supports 10 date formats: YY-MM-DD, YY/MM/DD, YY.MM.DD, MM-DD-YY, MM/DD/YY, MM.DD.YY, DD-MM-YY, DD/MM/YY, DD.MM.YY and YYYYMMDD.

Key Voice: Set whether to generate a beep sound in response to every keystroke by pressing ▶. Select Y to enable the beep sound, and select N to mute.

Voice prompts: Set whether to generate a voice prompt in response to every operation by pressing ▶.

Retry Period: If a user's attendance record already exists and the user signs in again within the specified period (unit: minute), his/her second attendance record will not be stored. (Value scope: 0–60. 0: Save all the records passing the verification.)

Log Alert: When the available space is insufficient to store the specified number of attendance records, the popular color-screen FRT will automatically display a warning message. (Value scope: 1—99. 0: No warning message is displayed when the free space is zero.)

Lan: You can select a language for the device based on your requirements.

Sensitivity: Set the fingerprint collection sensitivity. It is recommended to use the default value Medium. When dryness results in slow reactions of the fingerprint collector, you may set this option to High to enhance the fingerprint collector's sensitivity. When high humidity results in illegible fingerprint images, you may set this option to Low.

Volume: This option is used to adjust the volume of sound. Select a desired volume by pressing ▶.


Workcode: This option is used to set whether to enable the work code function.

7.2 Date/Time

This menu item allows you to calibrate the date and time of the device.





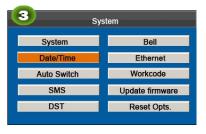

Press M/OK on the initial interface.

initial Select System and press M/OK.

Select Date/Time and press M/OK.



Note: The date and time of the popular color-screen FRT must be set accurately to ensure the accuracy of attendance time.

Enter the desired value by using the keypad. Press M/OK to save.

7.3 Timing State Switching Setting

When it comes the set times, the attendance machine will automatically switch its attendance state. The current attendance state is shown on the initial interface.

Note: The attendance status is downloaded together with attendance records. Users can view the attendance status by using attendance software. The attendance status does not affect attendance calculation, which is based on the preset shift time.





System

Bell

Date/Time
Ethernet

Auto Switch
Workcode


SMS
Update firmware


DST
Reset Opts.

Press M/OK on the initial interface.

Select System and press M/OK.

Select Auto Switch and press M/OK.

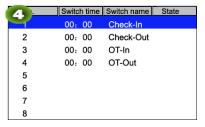



6	Switc	h time	Switch name	State
Ψ	07:	00	Check-In	1
2	00:	00	Check-Out	
3	00:	00	OT-In	
4	00:	00	OT-Out	
5				
6				
7				
8				

Press $\blacktriangle/\blacktriangledown$ to select the item and press M/OK.

Set parameters by referring to the instructions in the following text box and press M/OK.

As shown in the preceding figure, when the time reaches 07:00, the attendance status switches to Check-In.


Press ▲/▼ to switch among the entry boxes. Enter the switch time using the numeric keypad and the switch name using the T9 input method. Press ◄/► to choose a state. After the setting is complete, press M/OK to save and go back to the previous interface. Press ESC to cancel the setting and go back to the previous

7.4 SMS Setting★

The menu item allows you to add, edit, view, and delete SMS messages.






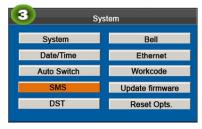



Press M/OK on the initial S interface.

Select SMS and press M/OK.

7.4.1 Add an SMS Message

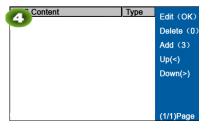



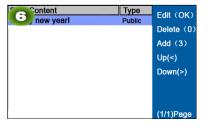

Press 3 to enter Add a SMS interface.

Press M/OK to open input method.

Press ▲/▼ to switch input method and enter the Start, Valid and Type.


Press M/OK to save.


When adding successful, an interface shown above.


Operation description

When the cursor hovers over the text box, press the shortcut key to enable the T9 input method and then enter the message content. You can press $\blacktriangle/\blacktriangledown$ to switch among the entry boxes of different options and press $\blacktriangleleft/\blacktriangleright$ to choose a desired value or enter one using the keypad.

If Personal is chosen, press Assign to assign an SMS message to desired employees. Operation:

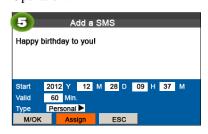

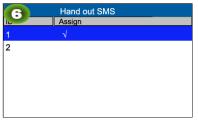

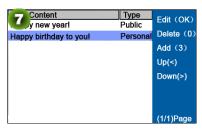

Press 3 to enter Add a SMS interface.

Press M/OK to select User, press M/OK to select $\sqrt{}$ and press ESC to return.


When adding successful, an interface shown above.

7.4.2 Edit an SMS Message

On the SMS Setting interface, press $\blacktriangle/\blacktriangledown$ to choose an SMS message and press OK to edit it. The operations of SMS message editing are the same as those of SMS message adding.

7.4.3 Delete an SMS Message

On the SMS Setting interface, press $\blacktriangle/\blacktriangledown$ to choose an SMS message and then press 0 to delete it and all information relating to the SMS message.

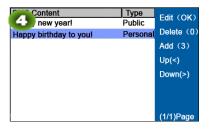



Press ▲/▼to select a SMS then press 0.

Press M/OK to delete. Press ESC to exit

7.4.4 View an SMS Message

View public SMS messages

1 2-26 Fri



When is shown on the initial interface, press M/OK to view.




View the currently-valid public messages, as shown as in figure.

View personal SMS messages

After a user is successfully verified (multiple verification modes can be used and the following uses fingerprint verification as an example), the user's personal messages will show up on the screen, as shown in the following figure.





Successfully verified

Show user's personal messages

Note: SMS messages only show up for 30 seconds, during which you can close current display interface so as to enter the Verification interface.


7.5 Daylight Saving Time (DLST) Setting*

The Daylight Saving Time is a widely used system of adjusting the official local time forward to save energy. The uniform time adopted during the implementation of this system is known as the DLST. Typically clocks are adjusted forward one hour in the summer to make people early to bed and early to rise so as to make full use of illumination resources and save electricity. Clocks are adjusted backward in autumn. The specific DLST regulations vary with countries.

To meet the DLST requirement, the FRT supports the DLST function to adjust forward one hour at $\times\times$ (Hour): $\times\times$ (Minute) $\times\times$ (Day) $\times\times$ (Month) and backward one hour at $\times\times$ (Hour): $\times\times$ (Minute) $\times\times$ (Day) $\times\times$ (Month). For example, adjust the clock forward one hour at 08: 00 on April 1, and backward one hour at 08: 00 on October 1. (As shown in the above figure)






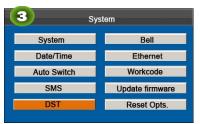



Press M/OK on the initial interface.

Select System and press M/OK.

Select DST and press M/OK.

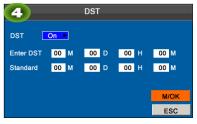



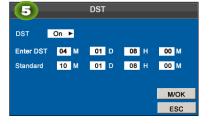

Press $\blacktriangle/\blacktriangledown$ to select among the entry boxes, using the numeric keypad to enter the start and end time of DLST, press M/OK to save

Note: The end time of DLST cannot be set to next year. More specifically, the end time must be later than the start time in the same year.

7.6 Bell Settings


Lots of companies need to ring their bells to signal the start and end of work shifts, and they usually manually ring their bells or use electric bells. To lower costs and facilitate management, we integrate the time bell function into the FRT. You can set the alarm time and duration for ringing the bell based on your requirements, so that the attendance machine will automatically play the selected ring tone, and stop playing the ring tone after the set duration.



Press M/OK on the initial interface.



Select System and press M/OK.

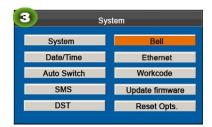

Select Bell and press M/OK.

4 =	Time	Ring	State
Bell1		bell01.w	av
Bell2		bell01.w	av
Bell3		bell01.w	av
Bell4		bell01.w	av
Bell5		bell01.wa	av
Bell6		bell01.wa	av
Bell7		bell01.wa	av
Bell8		bell01.wa	av



6	Time	Ring	State
Bell1	7:00	bell01.wav	\checkmark
Bell2		bell01.wav	
Bell3		bell01.wav	
Bell4		bell01.wav	
Bell5		bell01.wav	
Bell6		bell01.wav	
Bell7		bell01.wav	
Bell8		bell01.wav	

Press ▲/▼to select a bell then press M/OK.

Press $\blacktriangle/\blacktriangledown$ and M/OK to select items. When the setting is completed, press OK to save the setting and exit.

When editing successful, an interface shown above.

Time: Set a time point of one day or several days from Sunday to Saturday when the attendance machine automatically plays a bell ring tone.

Music: Set a bell ring tone.

Volume: Set the volume of the ring tone.


Times: Set the alarm times.

State: Set whether to enable the bell.

7.7 Ethernet★





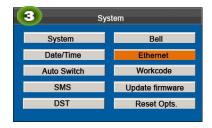


7.7.1 WIFI setting

The greatest advantage of WIFI is its high transmission rate up to 11Mbps. Wi-Fi also features long transmission distance and excellent compatibility with various existing 802.11 DSSS devices. IEEE 802.11b is a radio-based variant of IEEE 802.11. The bandwidth of IEEE 802.11b can be up to 11 Mbps and automatically adjusted to 5.5Mbps, 2Mbps and 1Mbps depending the signal strength and interference level, thus effectively ensuring network stability and reliability. Major advantages: High transfer speed and reliability. The communication distance can be up to 305 m in an open area and 76 m to 122 m in an enclosed area. WIFI can be conveniently integrated with the existing wireline Ethernet, making the networking cost even lower.


Our terminal is also Wi-Fi capable. It supports either built-in or external Wi-Fi module to implement wireless data transmission over the Wi-Fi.


WIFI: Press OK to open or close Wi-Fi.



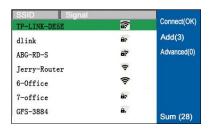

7.7.2 PC Connection

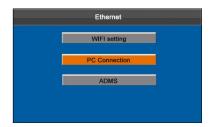

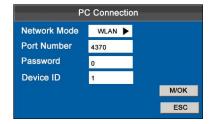

Network Mode: It provides WLAN, hotspot or close three connection modes.

Port Number: This is the default, do not need to modify.


Password: To improve the security of attendance data, connection password needs to be set here. Connection password must be input when PC software is to connect device to read data. System password is 0 by default.(namely, there is no password.) it can be set as other value. After setting, the password must be input if software is to communicate with device. Or the connection will fail. The password length is 1-6 digits.

Device ID: The device ID ranges from 1 to 254. If the communication method is RS485, inputting this device ID in the software communication interface is required.

7.7.3 ADMS

Settings used for connecting with ADMS server, such as server address and port settings.



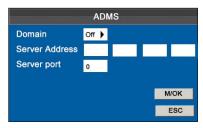

In the initial interface, press [M/OK] > System. > Ethernet > ADMS to enter the ADMS server setting interface.

When the Webserver is connected successfully, the main interface will display the 👪 logo.

This submenu is used to connect the Webserver-related settings, such as Webserver IP address and port settings.

Domain Name: When the domain name mode is enabled, you access a website using a domain name in the format of http://; otherwise, you must enter an IP address for website access.

Server Address: IP address of Webserver.

Server port: Port used by Webserver.

7.8 Work code ★

Salary is based on attendance. There are many work types for employees. An employee may have different work type in different time period. Different work types have different pays. Therefore, in order to distinguish different attendance states when user is dealing with attendance data, the device has provided a parameter to mark which attendance record belongs to which work type.

Work codes are downloaded together with attendance records. Users can use relevant data based on the specific attendance software.








Press M/OK on the initial interface.


Select System and press M/OK.

Select Workcode and press M/OK.

7.8.1 Add a Work Code

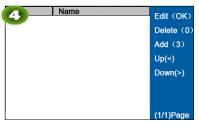



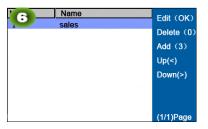

Press 3 to enter adding a Workcode.

Enter the user ID (1-99999999) using keypad, press M/OK to open input method. press $\blacktriangle/\blacktriangledown$ to switch input method and enter the Name. Press $\blacktriangle/\blacktriangledown$ to select M/OK then press M/OK.


When Adding successful, an interface shown above.


Note: For details of enter name, see T9 input

7.8.2 Edit a Work Code

Press ▲/▼ to choose the desired work code from the list and then press OK to display the Edit WorkCode interface. The number cannot be modified. You can modify the work code names only.

7.8.3 Delete a work code

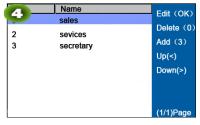




Press ▲/▼select a workcode, press 0

Press M/OK to delete. Press ESC to exit.

7.8.4 Use a Work Code

When the work code function is enabled, the device displays the work code selection interface upon successful verification on the initial interface.



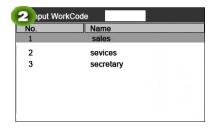

Press **▲**/**▼** to select or enter a



On the initial interface,

Press finger/input ID/Punch Card. workcode then press M/OK.


Note: After the work code function is enabled, a work code must be entered for verification. Employees without a work code can enter any inexistent work code for verification.

7.9 Update firmware

You can upgrade the firmware program of the FFR terminal by using the upgrade file in the USB disk through this parameter.





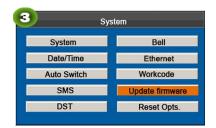

Press M/OK on the initial interface.


Select System and press M/OK.

Select Update firmware and press M/OK.

i If you need such upgrade file, please contact technician. Usually, firmware upgrade is not recommended.

7.10 Reset Opts.

Make device's communication option, system option and so on reset to the state of factory.

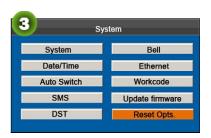



Press ▲/▼to select Reset Opts.

Press M/OK to reset, Press ESC to exit.

8 Data Management

The device allows downloading user data and attendance data to a USB flash drive so that the data can be processed by proper attendance software. It also allows user data from other devices to be uploaded to this device.







Press M/OK the interface.

initial Select Data Mgt. and press M/OK.

Select Download Attlog and press M/OK.

8.1 Download/Upload

Download Attlog (Download attendance data): Download all the attendance data from the popular color-screen FRT to the USB host or SD card.


Download User (Download user data): Get all the equipment user information and fingerprint saved to the USB host or SD card.

Upload User (Upload User Data):Upload the user information and fingerprints from the USB host or SD card to the device.

The following uses attendance data as an example to describe how to download user data:

Insert an USB host or SD card into the USB host or SD card slot on the device.







Select Download Attlog then Downloading...

Data download succeed.

8.2 Delete/Clear


press M/OK.


Delete Attlog: Delete all the attendance records.

Delete all Data: Delete all the information of enrolled personnel, including their fingerprints and attendance records.

Clear Purview: Set all the administrators to ordinary users.

The following uses attendance data as an example to describe how to delete user data:

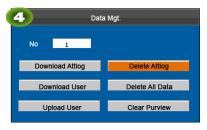



Press \triangle/∇ to select Delete Attlog then press M/OK.

Press M/OK to delete, Press ESC to exit.

9 Record Query

Employees can view their saved attendance records by entering any query conditions. According to the entered query conditions, records that meet the specified query conditions will be displayed on the screen.









Press M/OK Select Record and press M/OK. the initial interface.



Press finger/input ID/Punch Card, enter the Start and End using keypad, then press OK.

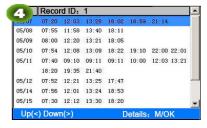



Showing records above

Press M/OK to view the details of the attendance records.

The attendance details of the employee with user ID of 1 on May 7 are as in figure:

Note: For the other two record query modes, see "Quick Query of Attendance Records."



Notes displayed at the bottom of the screen explain all letter meanings.

Verification: validation status.

F: fingerprint verification. P: password verification I: Card verification

Status: attendance status.

0: check-in 4: overtime check-in 5: overtime check-out 1: check-out

10 System Information

You can check the storage status as well as version information of the popular color-screen FRT through the Sys.Info. menu item.






Press M/OK on the initial Select Sys. Info and press M/OK. interface.

Free Space: The number of enrolled users, administrators and passwords is displayed on the Free Space interface. The total fingerprint storage capacity and occupied capacity as well as the total attendance storage capacity and occupied capacity are graphically displayed respectively, as shown below:

Device: The equipment name, serial number, version information, manufacturer and date of manufacture are displayed on the Device interface.

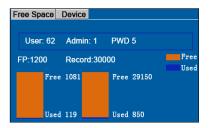



Free Space

Device

Note: The figure above is for reference only. Please refer to the actual object.

11 Appendix


USB Client

The device can communicate with computers. You can connect it to a computer through a USB cable to view the attached quick start guide.

T9 input

T9 input (intelligent input) is quick and high efficient. The device support T9 Chinese, T9 English and symbol input. There are 3 or 4 English letters on numeric keys (0-9), for example, A, B, C are on numeric key 1. Press the corresponding key once, and the program will generate effective spelling. By using T9 input, names, SMS content and some symbols can be input.

The T9 input method is used to enter texts such as employee names, department names, and shift names.

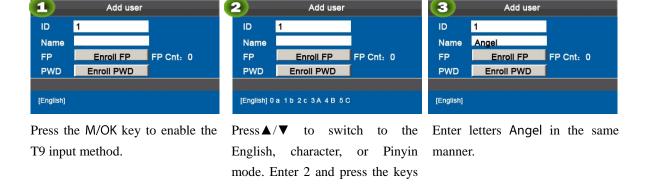

from 3 to A.

Quick Query of Attendance Records

This function allows ordinary users to query their attendance records of current day to make sure whether there are any missing records or time errors so as to inform administrators to record exceptions in time.

Operation description

Mode 1: Save the attendance records and query quickly:

For example, after successful fingerprint matching, the employee with user ID of 1 can view his/her attendance records of current day after pressing M/OK.








Verified!

Press M/OK within 10 seconds.

View all attendance records of an employee on current day.

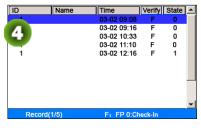

Note: 1.The picture is for reference only.

2.Press ▲/▼ to view the attendance records row by row. Press ◄/▶ to view the attendance records page by page.

Press M/OK to view the details of the attendance records.

Mode 2: Query directly and quickly without saving the attendance records *:




Press 0 on the initial interface to display the Record interface.



Press finger/input ID/Punch Card, enter the Start and End using keypad, then press OK.



Showing records above

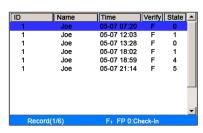

Press M/OK to view the details of the attendance records.

The attendance details of the employee with user ID of 1 on May 7 are as in figure:

Notes displayed at the bottom of the screen explain all letter meanings.

Verification: validation status.

F: fingerprint verification. P: password verification I: Card verification Status: attendance status.


0: check-in 1: check-out 4: overtime check-in 5: overtime check-out

Notes:

- 1 .Three ways for entering the query conditions: 1) Press the enrolled finger. The user ID and the name corresponding to the fingerprint will be automatically displayed. 2) Enter the desired employee information in ID and Name. 3) Sweep the enrolled card. The employee ID and name corresponding to the card will be automatically displayed.
- 2.1,000 records can be displayed on this interface.

Self-Service Attendance Terminal FAQs

- 1. Does self-service attendance terminal support scheduling based on every other days?
- A: No.
- 2. Can the setting records downloaded from the device be edited on WPS software?
- A: Yes. Setting records are supported in Microsoft Office 2003, Microsoft Office 2007, and WPS Office 2012 Personal.
- 3. What is the attendance calculation flow adopted by the self-service attendance terminal?
- A. SSR attendance calculation flow.

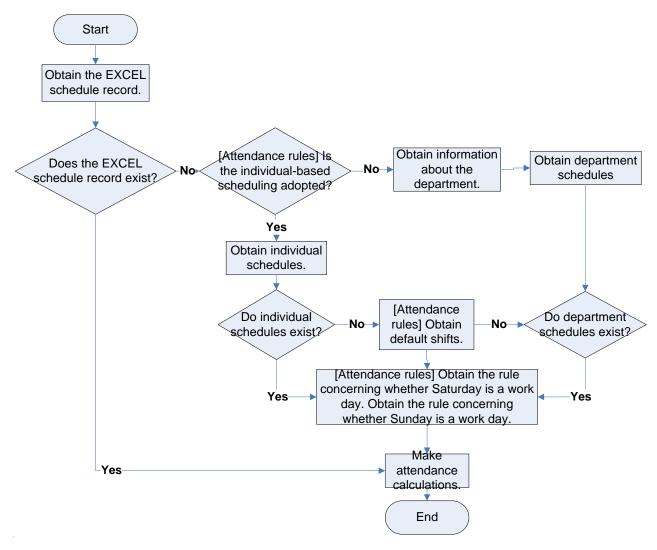

4. How to calculate special overtime hours?

The following cases are deemed special overtime:

- When an EXCEL schedule record exists and attendance reports are used for attendance calculation, there are check-in and check-out records though there is no schedule (or rest is arranged) for the current date.
- When no EXCEL schedule record is available, there are check-in and check-out records though Saturday and Sunday are non-work days.

Overtime hours refer to the duration counted from the first check-in time to the last check-out time on the current day.

5. How to arrange schedules using the attendance setting report?

Step 1: Insert a USB flash drive into the USB port or SD card into the SD port of the device and download the Attendance Setting Report.x/s to the USB flash drive or SD card.

Step 2: Open the Attendance Setting Report.xls on a computer.

Step 3: Set shifts in the Attendance Setting Report.xls.

Attendance Setting Report First time zone Second time zone Overtime Numbe r Off-duty On-duty Off-duty Check-In Check-Out On-duty 18:00 1 9:00 2 12:00 9:00 13:30 18:00 3 13:00 18:00 9:00 12:00 12:00 9:00 14:00 18:00

Data enclosed by a red rectangle is new shifts (shift 3 and shift 4). To add a shift, enter a time directly, in the range of 00:00 to 24:00.

Step 4: Arrange schedules for employees.

Special sl	hifts:25-Ask fo	r leave, 26-Out,	(Da	ite	_]	S	et	tti	n	g	R	eţ	00	rt															
	Sched	dule date	(201	12-1-	D																												
ID.				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	3
ID	Name	Department	Card number	SUN	MON	TUE	WED	THU	FRI	SAT	SUN	MON	TUE	WED	THU	FRI	SAT	SUN	MON	TUE	WED	THU	FRI	SAT	SUN	MON	TUE	WED	THU	FRI	SAT	SUN	MON	TU
1	Joe	company					1	1	1			2	2	2	2	2			25	1	1	1	1			3	3	3	3	3			3	3
3	David	company					2	2	2			1	1	1	1	1			24	3	3	25	3			4	4	4	26	4			4	4
3	Mark	company		7	\leq	L	3	3	3			2	Z_{\angle}	2	2	2			2	\2	2	2	2			4	4	4	26	4			3	3
4	Jack	company		Ę۱	Ho	lid	ay		F			3	Sh	ifts	3	Ì			1		2	2	2			4	4	4	4	1/	\subseteq		1	1
																_			F	ea	ve	J							0	n l	ous	ine	ess	

Note: Dates must be set correctly. For example, if the scheduling date is 2012-1-1, the schedule setting report contains the schedules of 31 days after 2012-1-1, that is, schedules from 2012-1-1 to 2012-1-31. If the scheduling date is 2012-1-6, the schedule setting report contains schedules of 31 days after 2012-1-6, that is, schedules from 2012-1-6 to 2012-2-5

Step 5: Insert a USB flash drive into the USB port or SD card into the SD port of the device and upload the Attendance Setting Report.xls to the device. Then, schedules in the Attendance Setting Report can be used.

6. What is the correct time format used in the setting reports?

A. The correct time format is shown in the following table.

Shift	First Tim	e Range	Second Range	Time	Overtime I	Range	
No.	On-dut	Off-dut	On-dut	Off-dut	Check-in	Check-out	
	y	у	у	у	Check in	Chicon out	
1	09:00	18:00					
2	09:00	12:00	13:30	18:00			
3	9:5	18:00					

Incorrect time formats are as follows:


- A time value is beyond the time range, such as 24:00.
- A time value contains Chinese characters, for example, 9: 00, which differs from 9:00.
- A time value is preceded by a space. As shown in the following table, there is a space in front of 09:00 in shift 1.

Shift	First Tim	e Range	Second Range	Time	Overtime I	Range
No.	On-dut	Off-dut v	On-dut v	Off-dut v	Check-in	Check-out
1	09:00	18:00	У	У		
1						
2	09:00	12:00	13:30	18:00		
3	9:5	18:00				

• A time value contains special characters, for example, _9:00 and 09:-1.

The device performs validity check and error tolerance for other formats.

- 7. How does the self-service attendance terminal collect the correct attendance time based on the preset shift time?
- A: The device collects attendance time based on the following principles:
 - a) Adopt the earliest time for normal attendance and the nearest time for abnormal attendance.
 - b) Adopt the normal attendance time if the normal attendance time and abnormal attendance time coexist.
 - c) Adopt a median in the attendance time range.

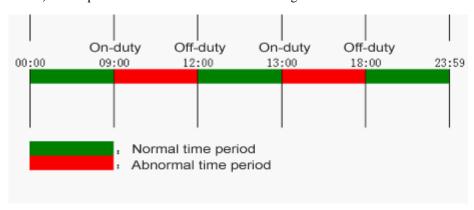

The following uses four examples to describe the preceding principles.

Example 1: normal attendance

Attendance Time Range	09:00 — 12:	00	13:00 — 18:	:00	
Attendance time of #1 employee	8:30, 8:35, 1	1:55,12:01, 1			
Statistical result based on attendance rules	8:30	12:01	12:50	18:02	

Description: The attendance time 8:30 and 8:35 are earlier than the on-duty time 9:00 and they are within the normal attendance time range. Therefore, 8:30 is adopted for the on-duty time 9:00 based on the principle of adopting the earliest time for normal attendance. 18:02 and 19:00 are later than the off-duty time 18:00, and therefore, 18:02 is adopted based on the same principle.

Example 2: Late arrival

Attendance Time	09:00 — 12:	00	13:00 — 18:	00	
Range	05.00 12.	.00	13.00	00	
Attendance time of #1 employee	9:01, 9:04, 1	2:01, 12:50, 1			
Statistical result based on attendance rules	9:01	12:01	12:50	18:00	

Description: Employer 1 checks in for work at 9:01 and 9:04 and he/she is late based on the preset on-duty time. Based on the principle of adopting the nearest time for abnormal attendance, the correct check-in time is 9:01 rather than 9:04 because 9:01 is nearer 9:00.

Example 3: Early leave

Attendance Time	09:00 — 12:	.00	12:00 19:	13:00 — 18:00				
Range	09.00 — 12.	.00	13.00 — 16.	.00				
Attendance time of #1 employee	8:50, 11:40,	8:50, 11:40,11:55, 12:50, 18:01						
Statistical result based on attendance rules	8:50	11:55	12:50	18:01				

Description: The attendance time 12:50 is adopted based on the principle of adopting a median in the attendance time range. For the attendance time range from 9:00 to 12:00, the normal check-out time range for the off-duty time 12:00 is from 12:00 to 12:30 (that is, 12:00 + (13:00 - 12:00)/2). Therefore, the calculated time of attendance is shown in the preceding table.

Example 4: Absence

Case 1:

Attendance Time	09:00 — 12:00		13:00 — 18:	:00	
Range					
Attendance time of #1 employee	8:50, 12:50,	18:01			
Statistical result based on attendance rules	8:50		12:50	18:01	

Description: The attendance time 12:50 is adopted based on the principle of adopting a median in the attendance time range. For the attendance time range from 9:00 to 12:00, the normal check-out time range for the off-duty time 12:00 is from 12:00 to 12:30 (that is, 12:00 + (13:00 - 12:00)/2). Therefore, the check-out time is blank. The normal check-in time range for the on-duty time 13:00 is from 12:30 to 13:00. The calculated time of attendance is shown in the preceding table.

Case 2:

Attendance Time	09:00 — 1	2:00	13:00 — 1	8:00				
Range								
Attendance time of #1	8.50 11.55	50, 11:55, 12:20, 18:01						
employee	0.50, 11.50	3.30, 11.33, 12.20, 10.01						
Statistical result based	8:50	12:20		18:01				
on attendance rules	0.50	12.20		10.01				

Description: The time 12:20 is adopted based on the principle of adopting a median in the attendance time range. The normal check-out time range for the off-duty time 12:00 is from 12:00 to 12:30 (that is, 12:00 + (13:00 - 12:00)/2). Therefore, the check-out time of the employee is 12:20. The normal check-in time range for the on-duty time 13:00 is from 12:30 to 13:00. Therefore, the check-in time of the employee is blank. The calculated time of attendance is shown in the preceding table.

Statement on Human Rights and Privacy

Dear Customers:

Thank you for choosing the hybrid biometric products designed and manufactured by us. As a world-renowned provider of biometric technologies and services, we pay much attention to the compliance with the laws related to human rights and privacy in every country while constantly performing research and development.

We hereby make the following statements:

- 1. All of our fingerprint recognition devices for civil use only collect the characteristic points of fingerprints instead of the fingerprint images, and therefore no privacy issues are involved.
- 2. The characteristic points of fingerprints collected by our products cannot be used to restore the original fingerprint images, and therefore no privacy issues are involved.
- 3. We, as the equipment provider, shall not be held legally accountable, directly or indirectly, for any consequences arising due to the use of our products.
- 4. For any dispute involving the human rights or privacy when using our products, please contact your employer directly.

Our other police fingerprint equipment or development tools will provide the function of collecting the original fingerprint image of citizens. As for whether such a type of fingerprint collection constitutes an infringement of your privacy, please contact the government or the final equipment provider. We, as the original equipment manufacturer, shall not be held legally accountable for any infringement arising thereof.

Note: The law of the People's Republic of China has the following regulations regarding the personal freedom:

- 1. Unlawful arrest, detention or search of citizens of the People's Republic of China is prohibited; infringement of individual privacy is prohibited.
- 2. The personal dignity of citizens of the People's Republic of China is inviolable.
- 3. The home of citizens of the People's Republic of China is inviolable.
- 4. The freedom and privacy of correspondence of citizens of the People's Republic of China are protected by law.

At last we stress once again that biometrics, as an advanced recognition technology, will be applied in a lot of sectors including e-commerce, banking, insurance and legal affairs. Every year people around the globe suffer from great loss due to the insecurity of passwords. The fingerprint recognition actually provides adequate protection for your identity under a high security environment.

Environment-Friendly Use Description



The Environment Friendly Use Period (EFUP) marked on this product refers to the safety period of time in which the product is used under the conditions specified in the product instructions without leakage of noxious and harmful substances.

The EFUP of this product does not cover the consumable parts that need to be replaced on a regular basis such as batteries and so on. The EFUP of batteries is 5 years.

Names and Concentration of Toxic and Hazardous Substances or Elements

0	Toxic and Hazardous Substances or Elements										
Parts Name	Pb	Нд	Cd	Cr6+	PBB	PBDE					
Chip resistor	×	0	0	0	0	0					
Chip capacitor	×	0	0	0	0	0					
Chip inductor	×	0	0	0	0	0					
Chip diode	×	0	0	0	0	0					
ESD components	×	0	0	0	0	0					
Buzzer	×	0	0	0	0	0					
Adapter	×	0	0	0	0	0					
Screws	0	0	0	×	0	0					

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.

Note: 80% of the parts in this product are manufactured with non-hazardous environment-friendly materials. The hazardous substances or elements contained cannot be replaced with environment-friendly materials at present due to technical or economical constraints.

x: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- (2) This device must accept any interference received, including interference that may cause undesired operation.

ZK Building, Wuhe Road, Gangtou, Bantian, Buji Town, Longgang District, Shenzhen China 518129

Tel: +86 755-89602345

Fax: +86 755-89602394

www.zkteco.com

