




Restrict Band NVNT ax20 5745MHz Ant1 Peak

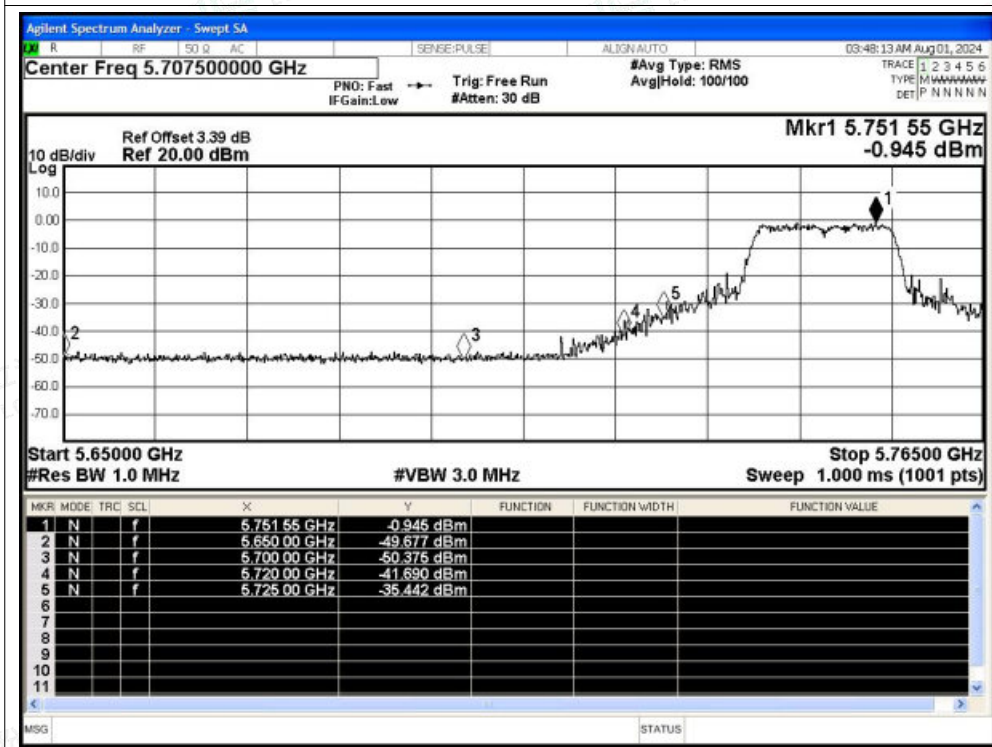


Restrict Band NVNT ax20 5745MHz Ant1 Average

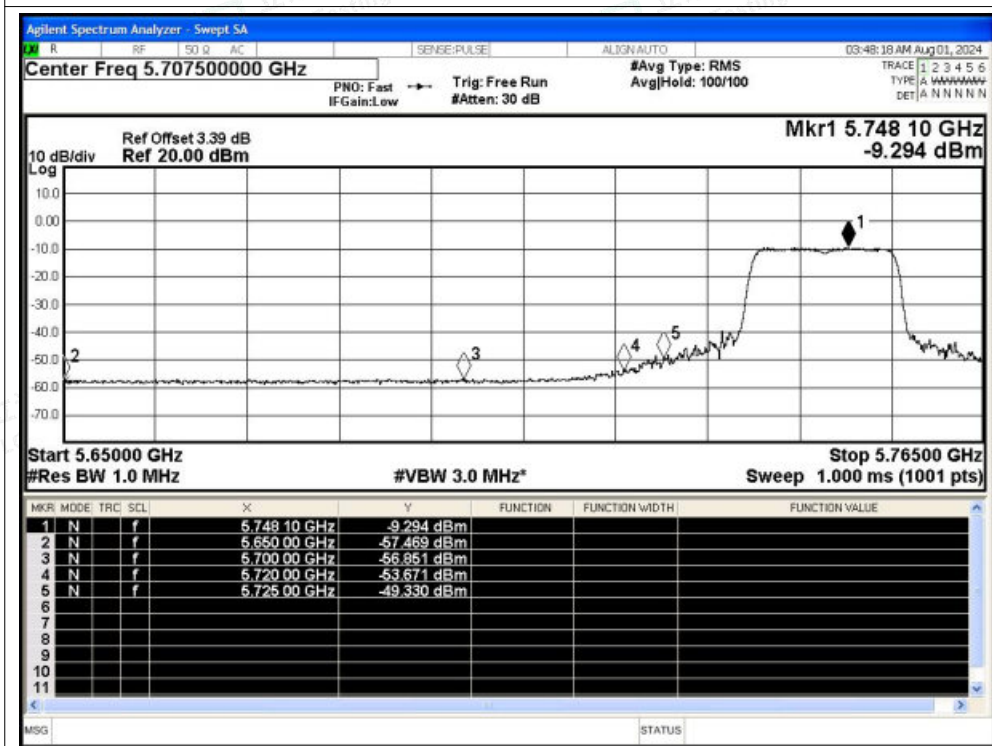


Restrict Band NVNT ax20 5825MHz Ant1 Peak

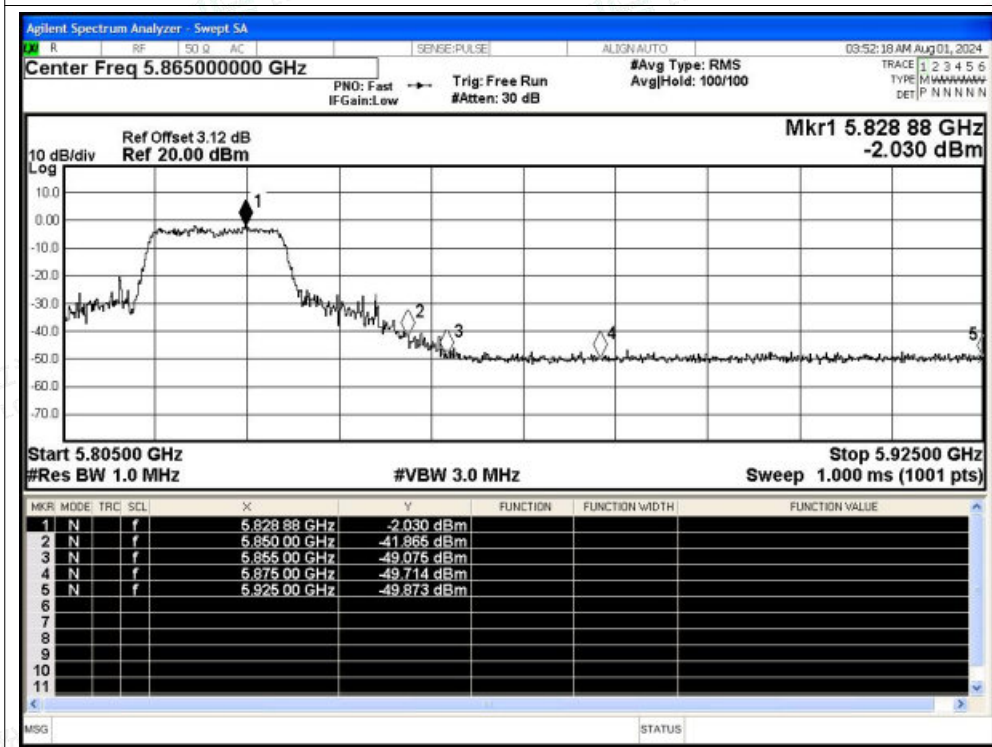


Restrict Band NVNT ax20 5825MHz Ant1 Average

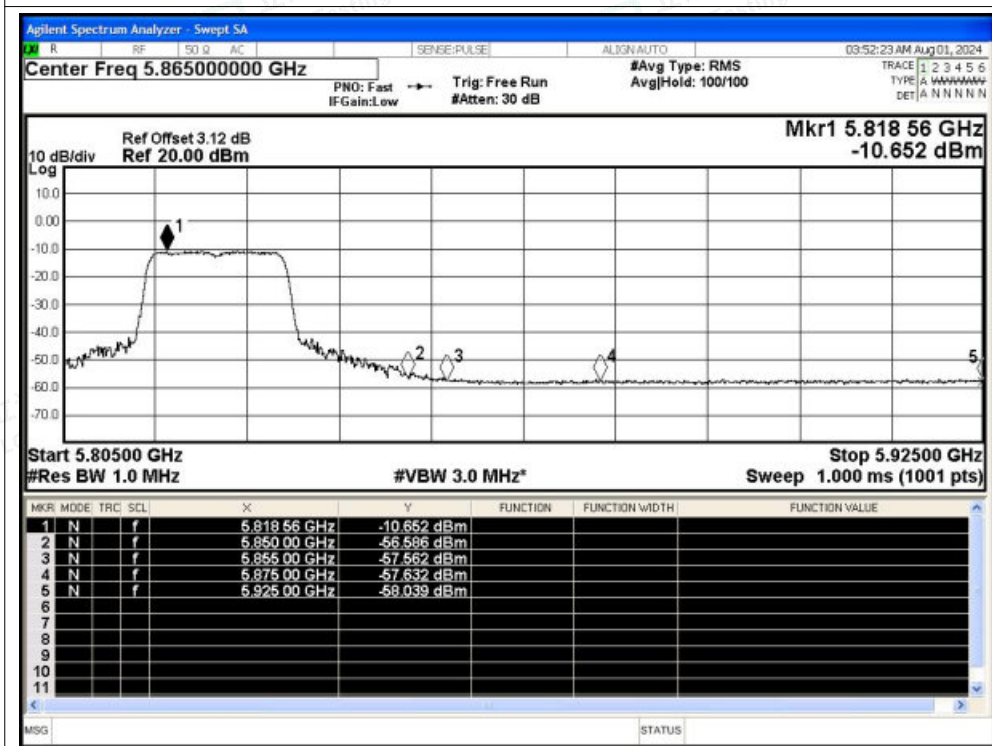


Restrict Band NVNT ax40 5755MHz Ant1 Peak

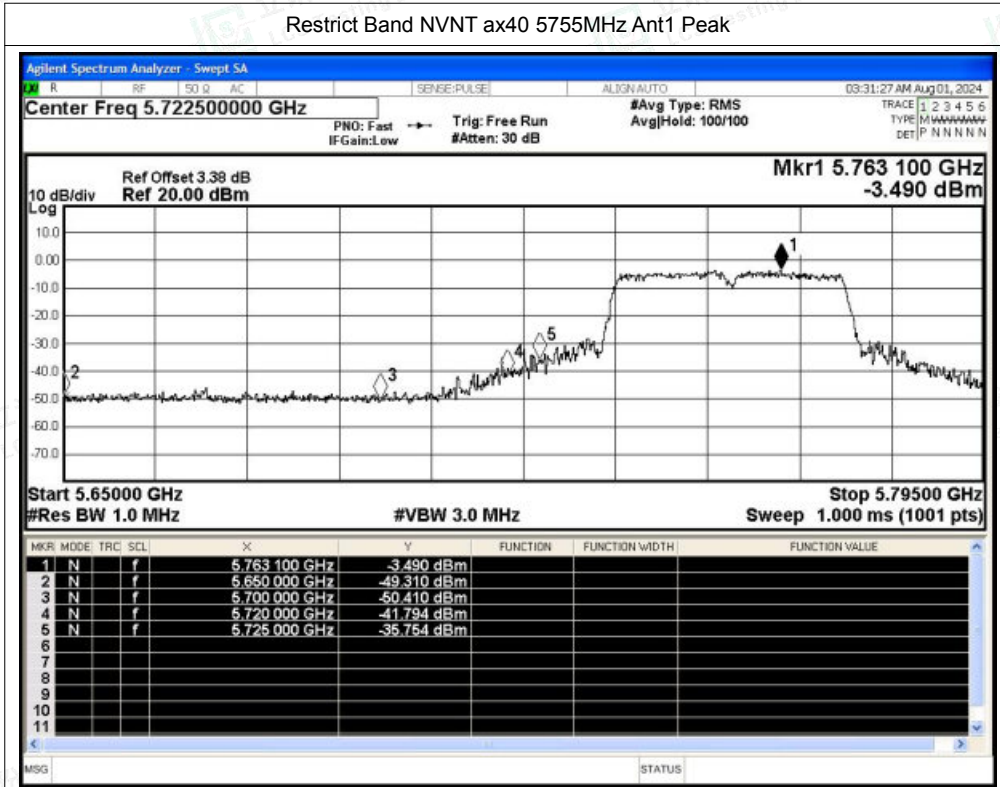


Restrict Band NVNT ax40 5755MHz Ant1 Average

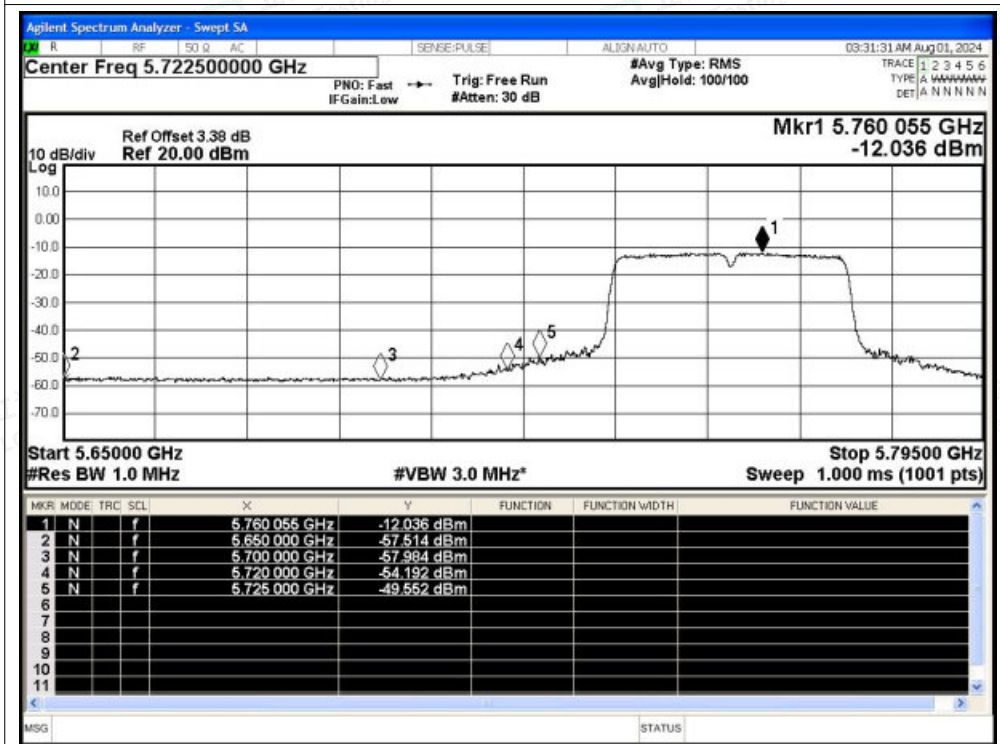


Restrict Band NVNT ax40 5795MHz Ant1 Peak

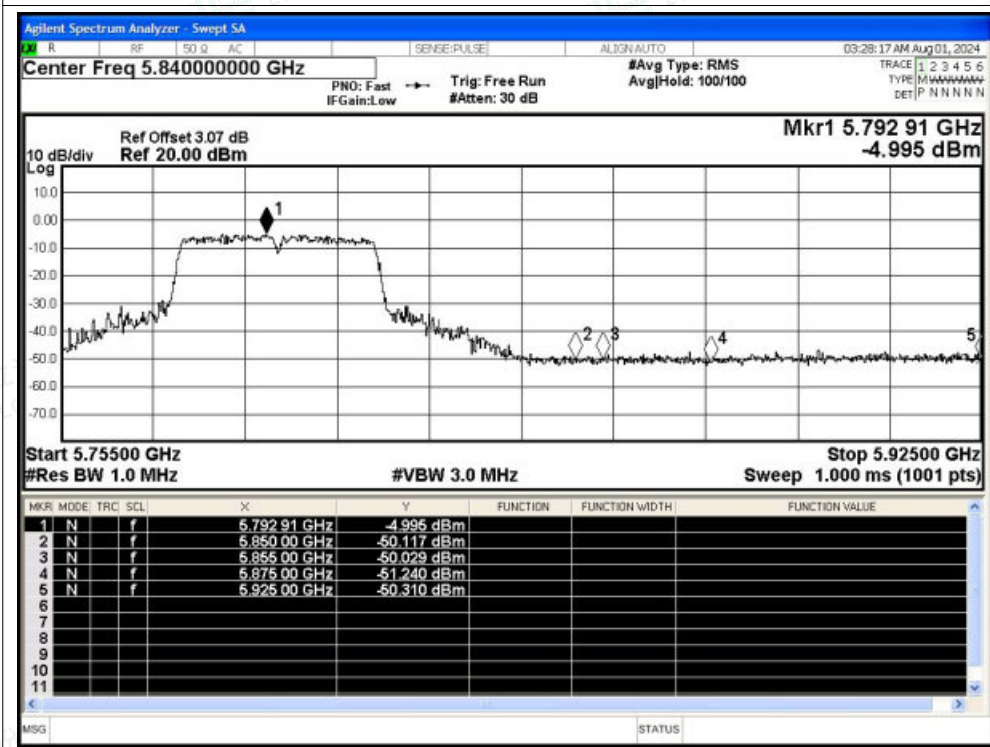


Restrict Band NVNT ax40 5795MHz Ant1 Average

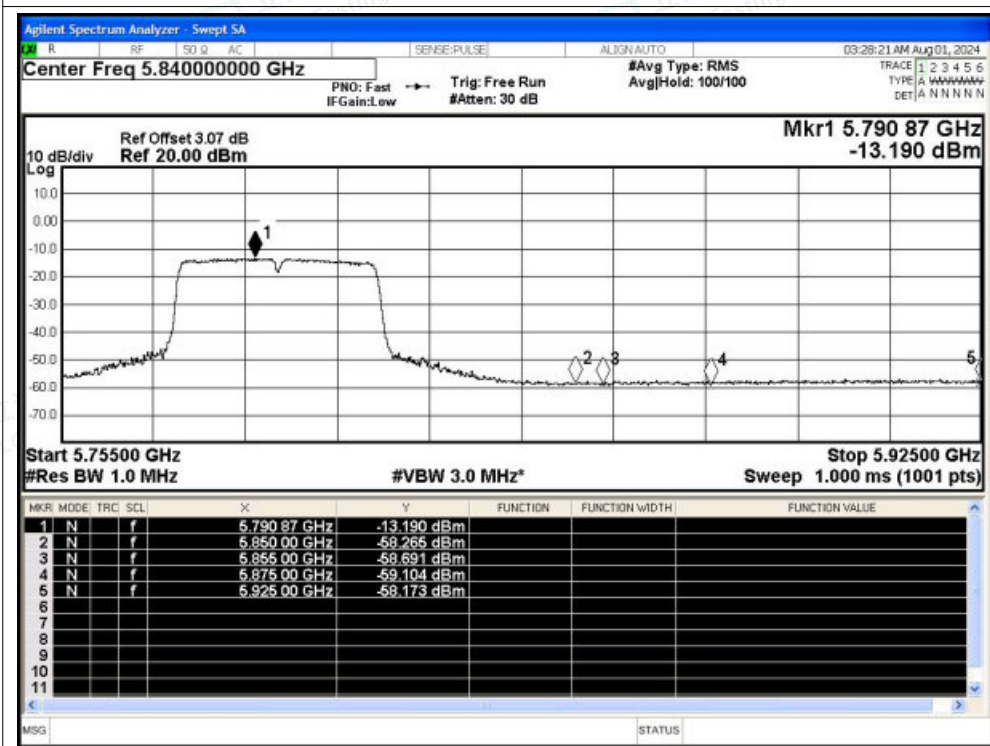


Restrict Band NVNT ax80 5775MHz Ant1 Peak

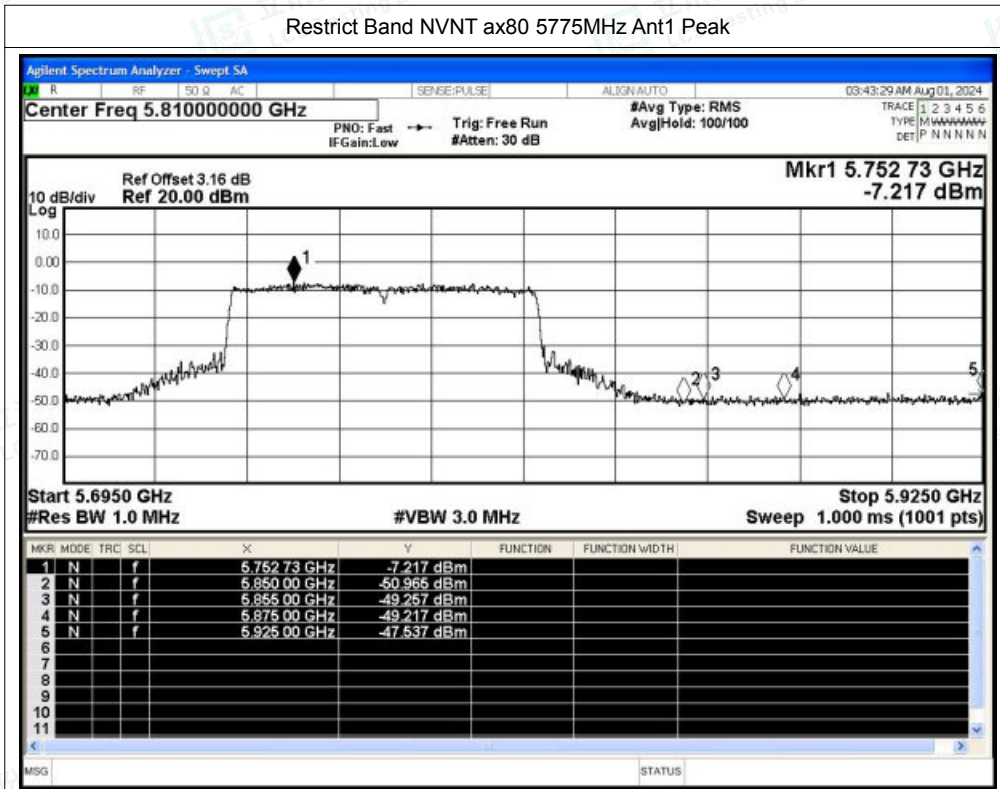


Restrict Band NVNT ax80 5775MHz Ant1 Average

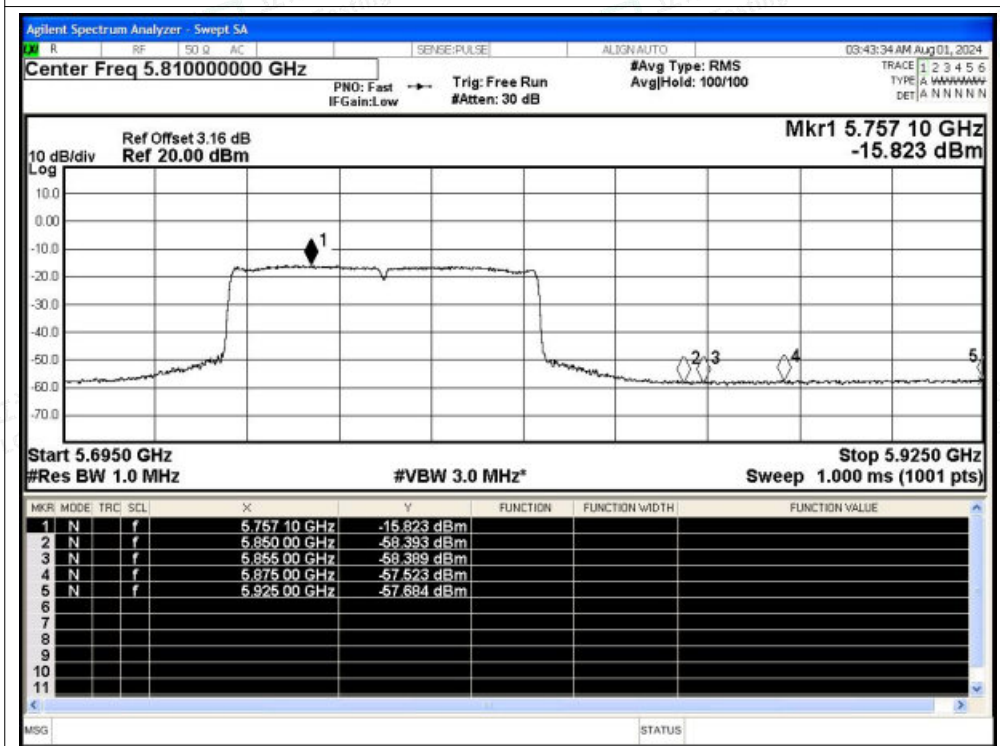

Restrict Band NVNT ax80 5775MHz Ant1 Peak

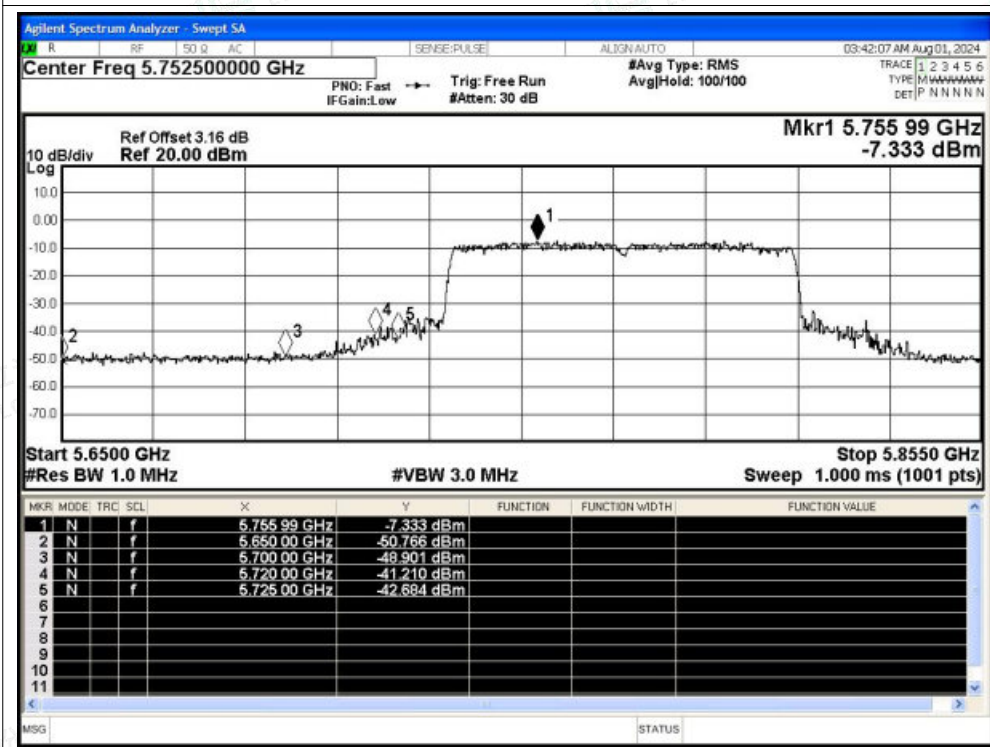

Restrict Band NVNT ax80 5775MHz Ant1 Average

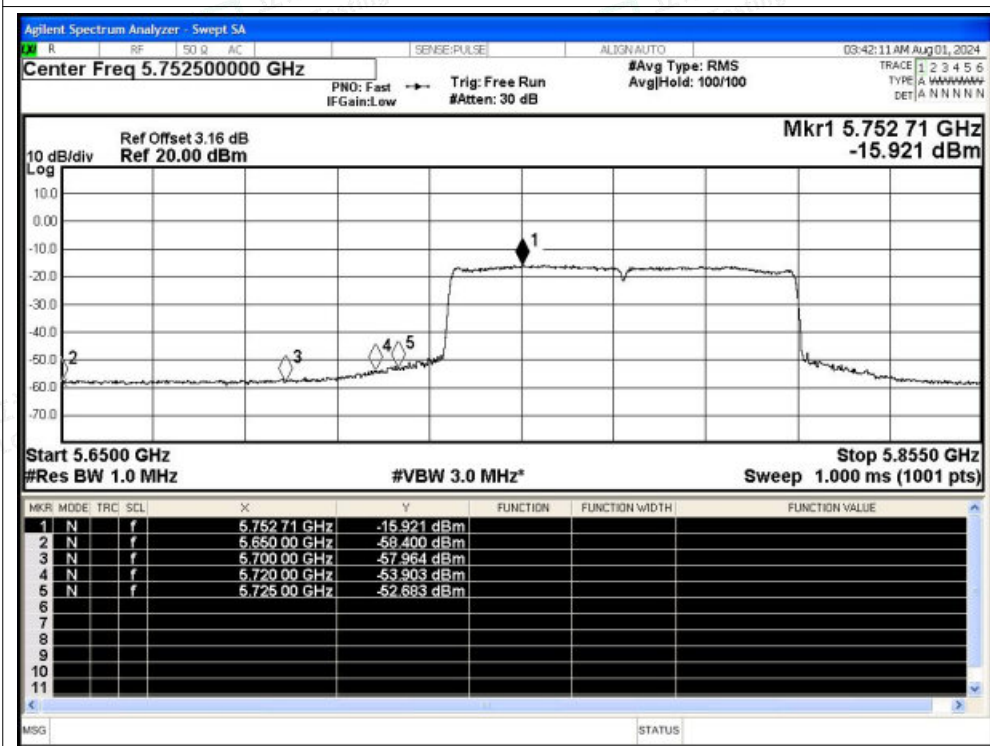


G.5 Frequency Stability

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5745	Ant1	5745	0	0	25	Pass
NVNT	a	5785	Ant1	5784.98	-20000	-3.46	25	Pass
NVNT	a	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	n20	5745	Ant1	5745	0	0	25	Pass
NVNT	n20	5785	Ant1	5784.96	-40000	-6.91	25	Pass
NVNT	n20	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	n40	5755	Ant1	5754.96	-40000	-6.95	25	Pass
NVNT	n40	5795	Ant1	5795	0	0	25	Pass
NVNT	ac20	5745	Ant1	5745	0	0	25	Pass
NVNT	ac20	5785	Ant1	5784.96	-40000	-6.91	25	Pass
NVNT	ac20	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	ac40	5755	Ant1	5754.96	-40000	-6.95	25	Pass
NVNT	ac40	5795	Ant1	5794.96	-40000	-6.9	25	Pass
NVNT	ac80	5775	Ant1	5775	0	0	25	Pass
NVNT	ax20	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	ax20	5785	Ant1	5784.98	-20000	-3.46	25	Pass
NVNT	ax20	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	ax40	5755	Ant1	5755	0	0	25	Pass
NVNT	ax40	5795	Ant1	5795	0	0	25	Pass
NVNT	ax80	5775	Ant1	5774.92	-80000	-13.85	25	Pass




Test Graphs

Freq. Stability NVNT a 5745MHz Ant1

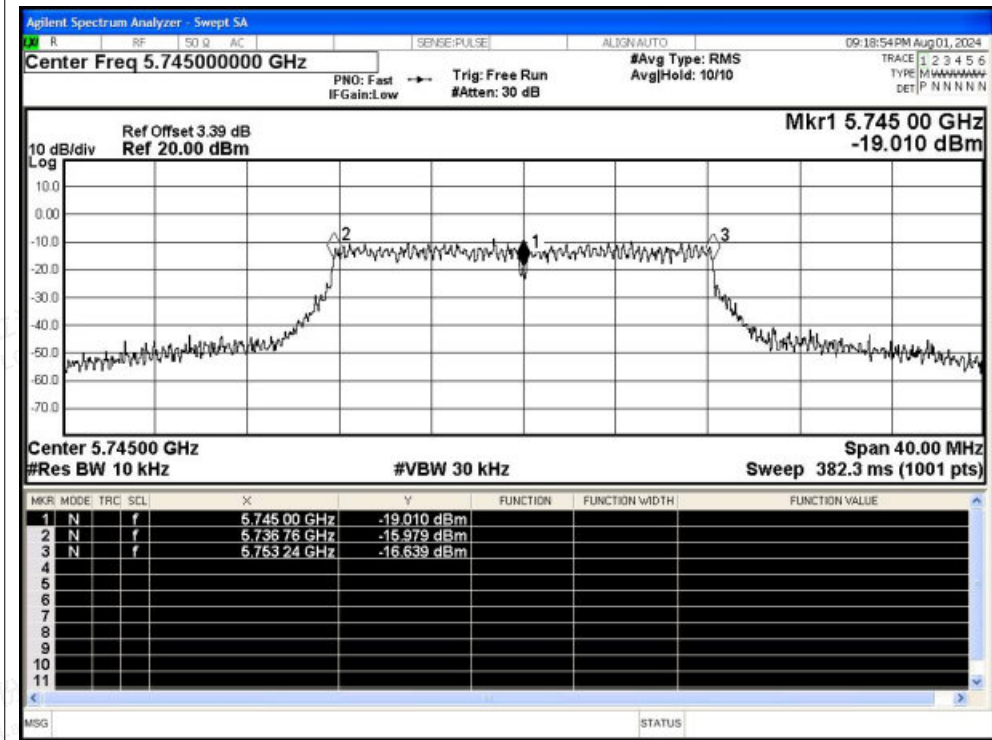


Freq. Stability NVNT a 5785MHz Ant1

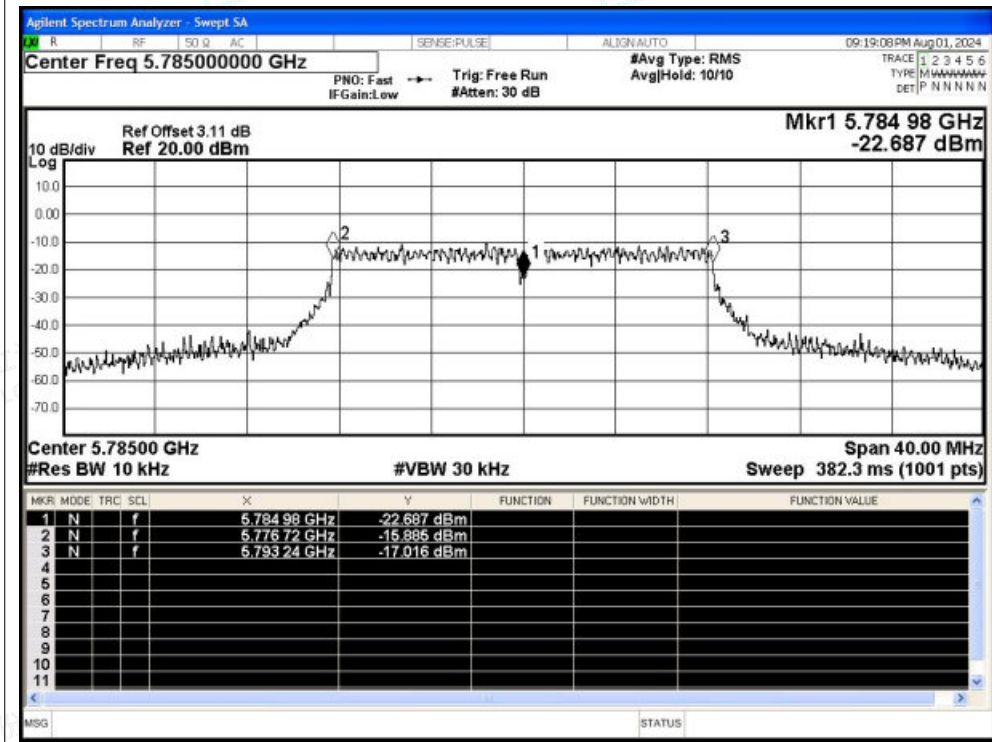




LCSA7194136EH

Freq. Stability NVNT a 5825MHz Ant1

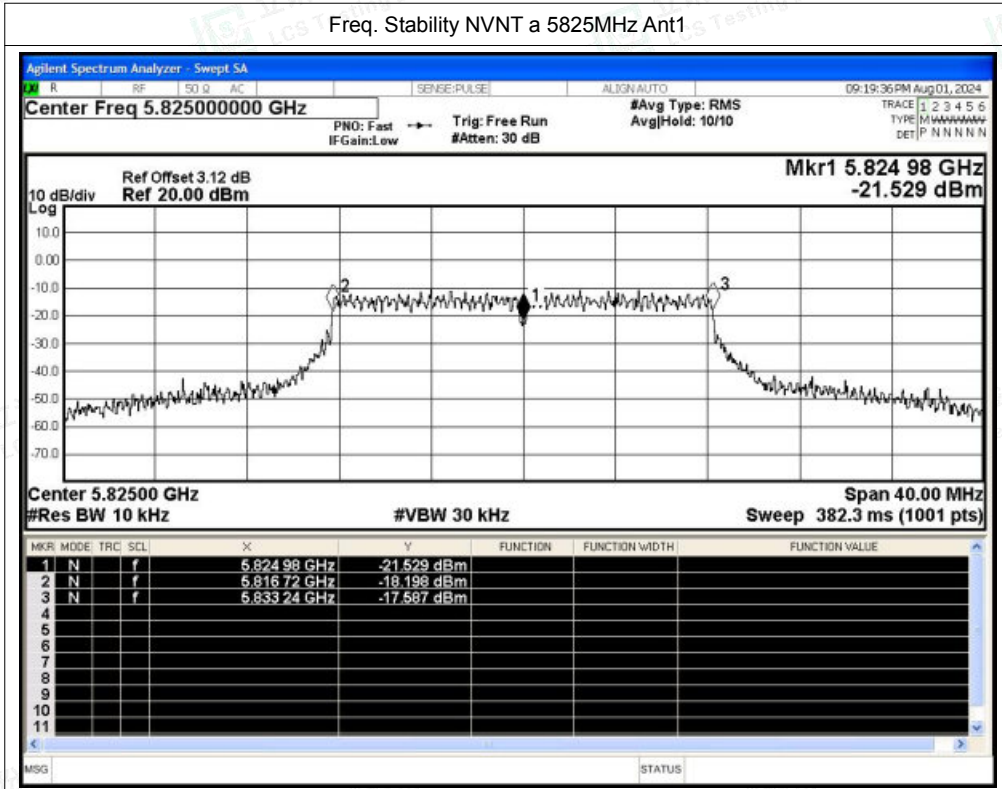


Freq. Stability NVNT n20 5745MHz Ant1

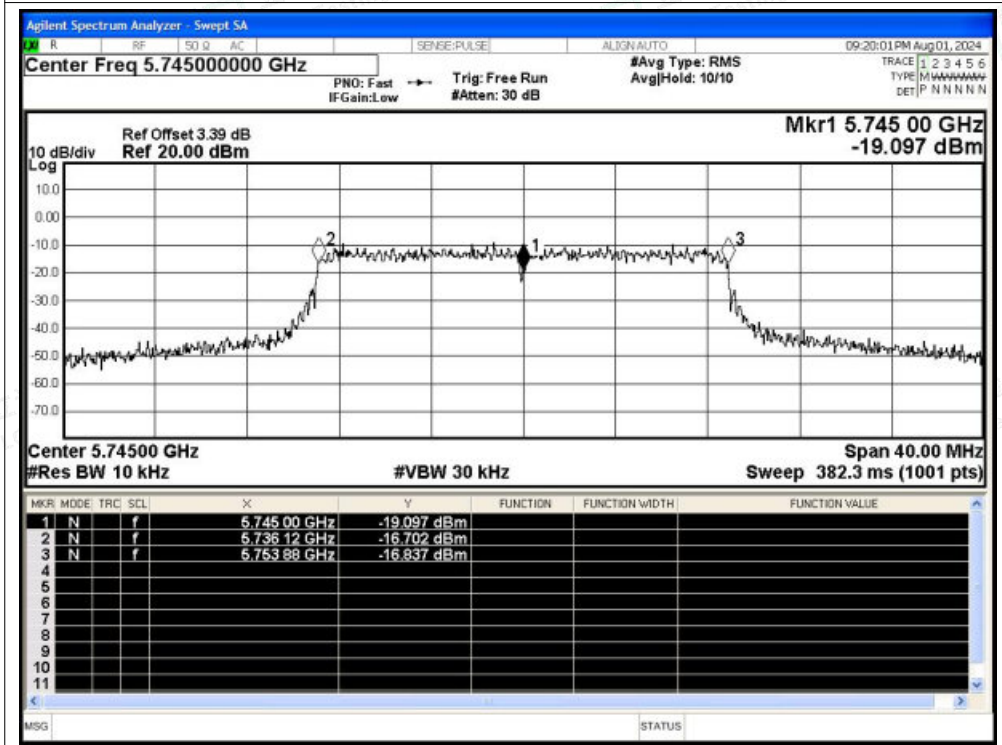




LCSAV7194136EH

Freq. Stability NVNT n20 5785MHz Ant1

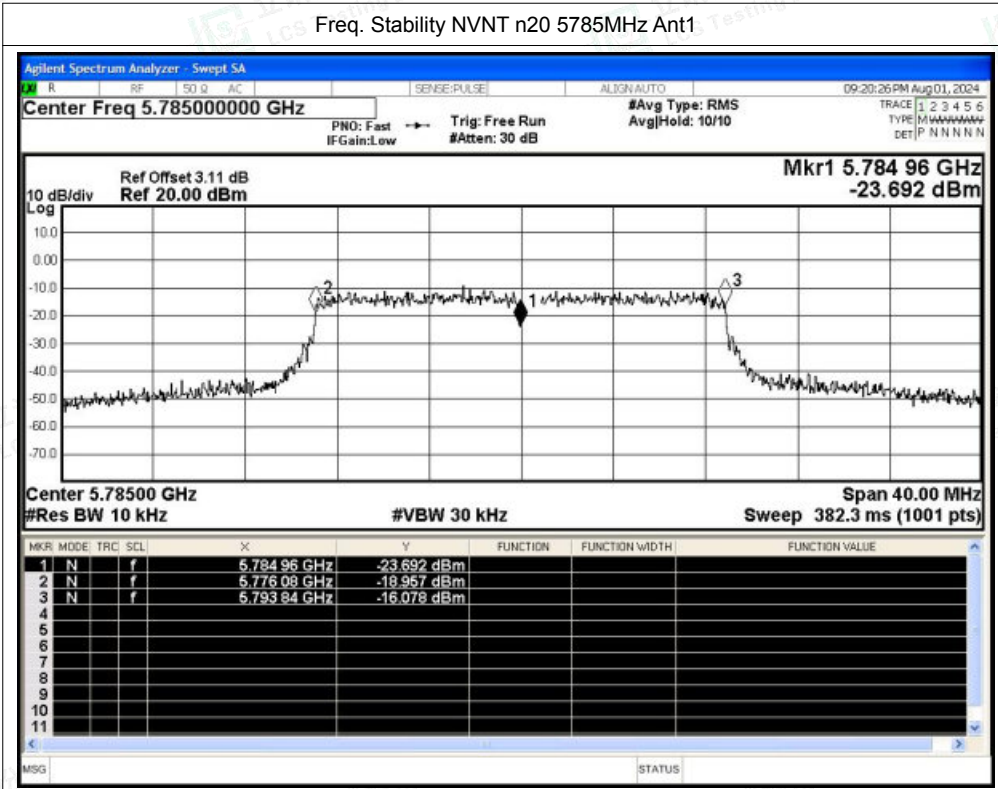


Freq. Stability NVNT n20 5825MHz Ant1

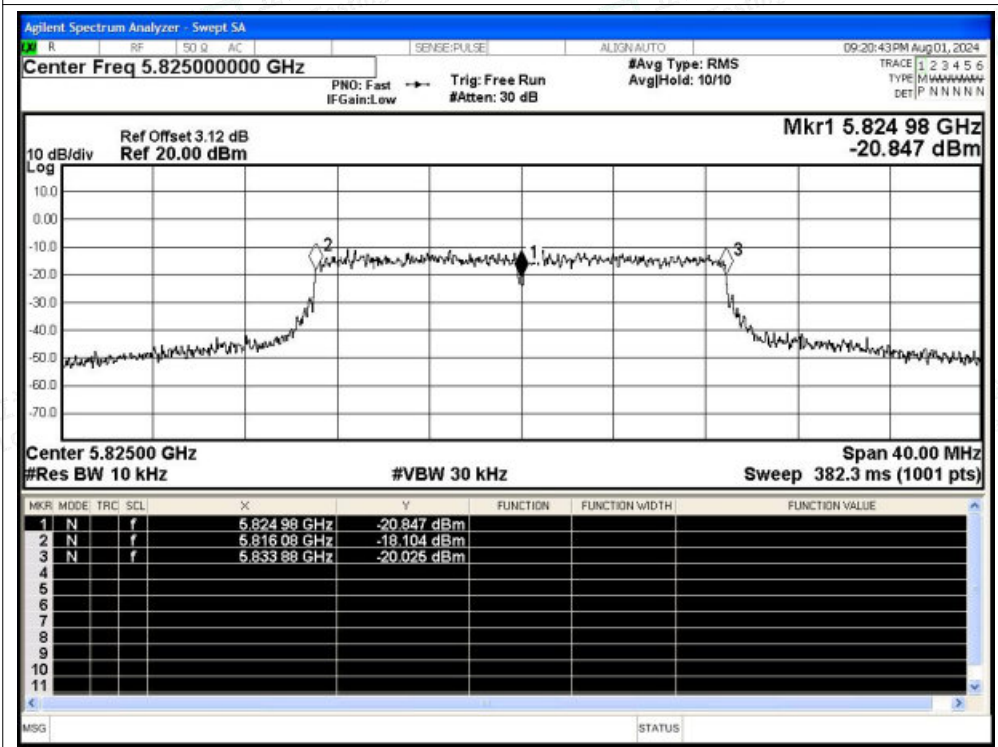




LCSAV7194136EH


Freq. Stability NVNT n40 5755MHz Ant1

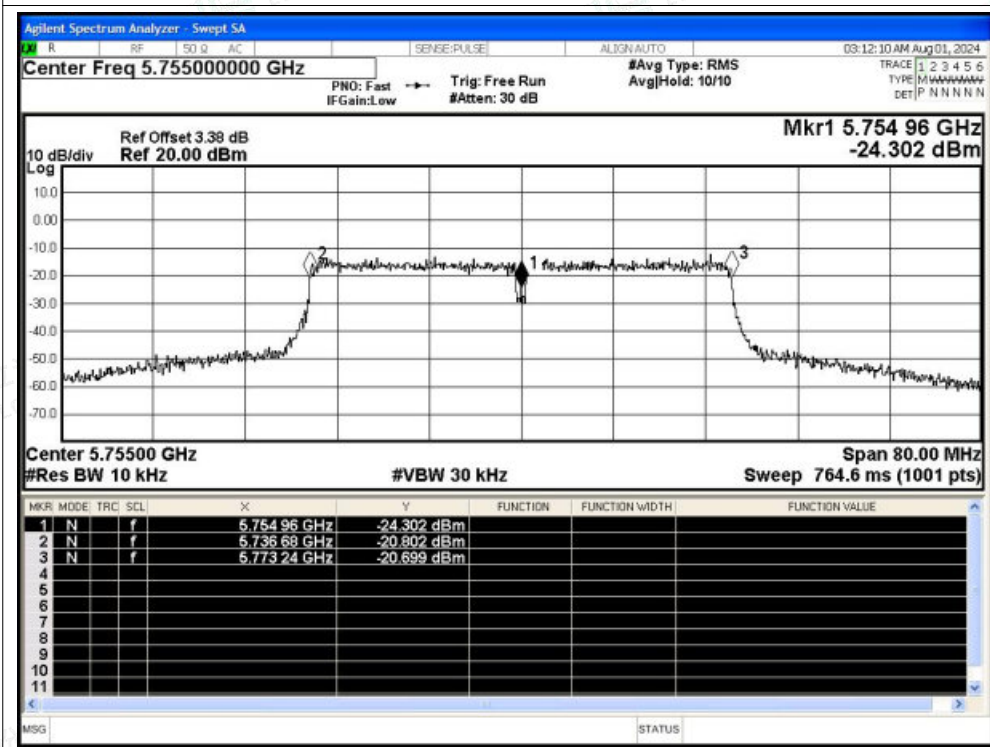


Freq. Stability NVNT n40 5795MHz Ant1

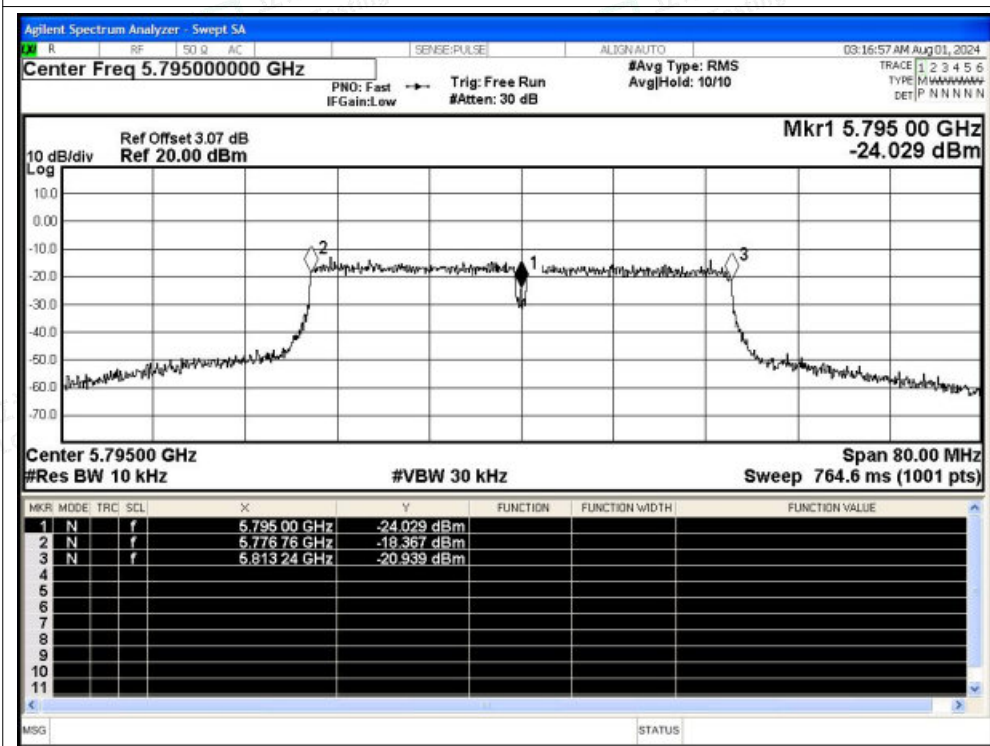


Freq. Stability NVNT ac20 5745MHz Ant1

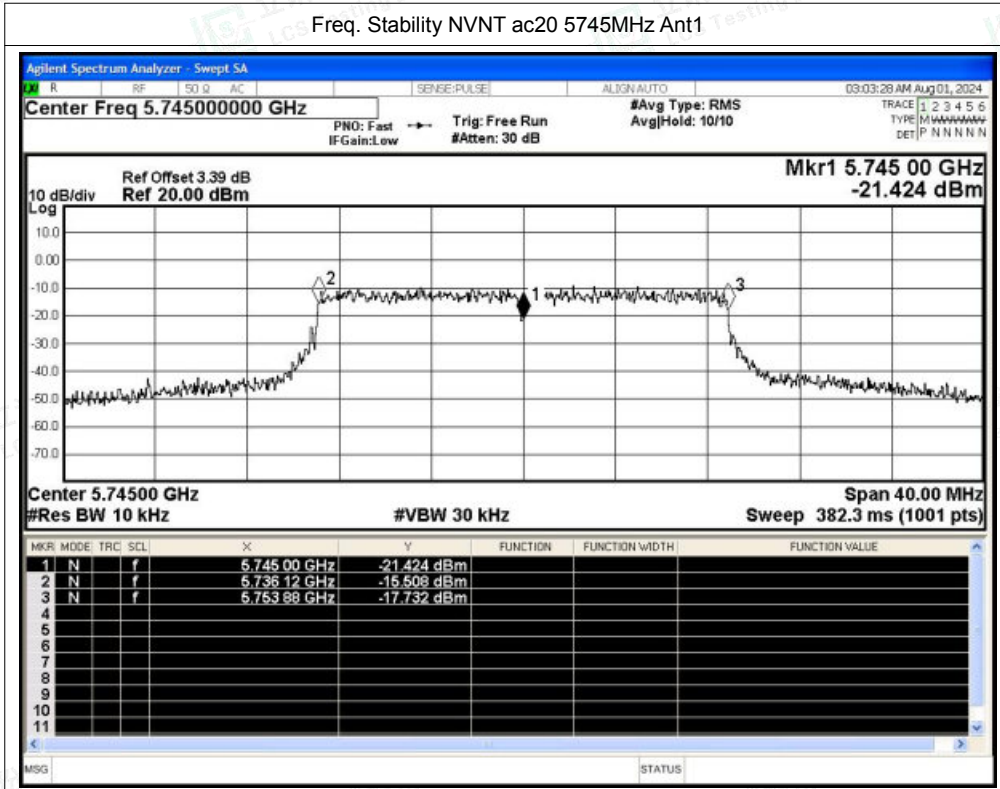


Freq. Stability NVNT ac20 5785MHz Ant1

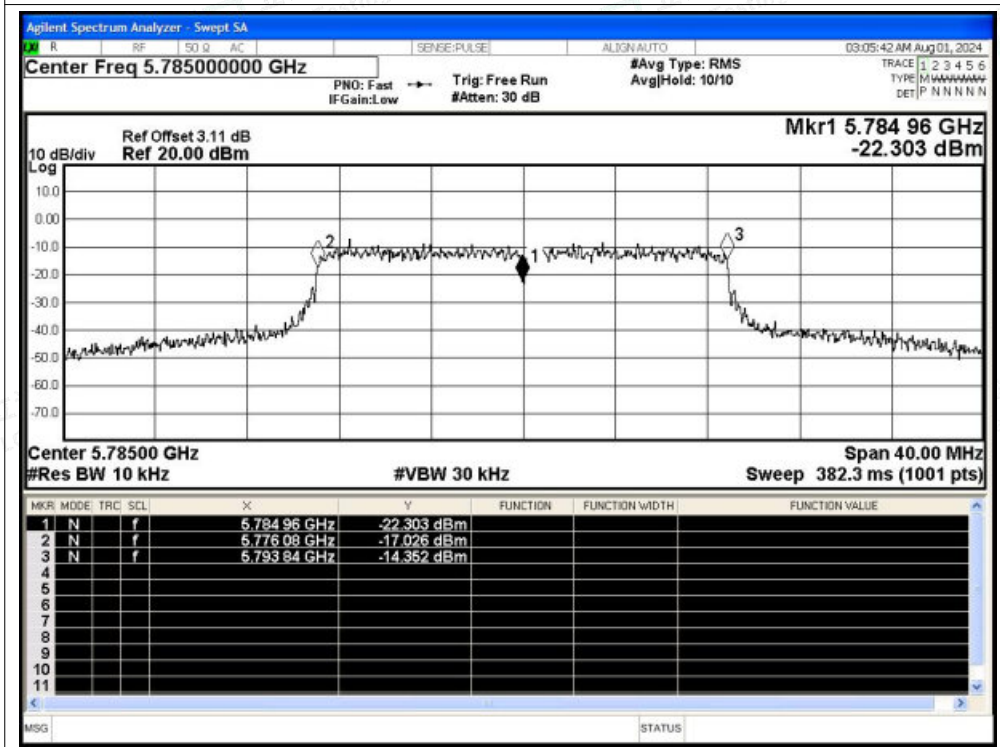

Freq. Stability NVNT ac20 5825MHz Ant1

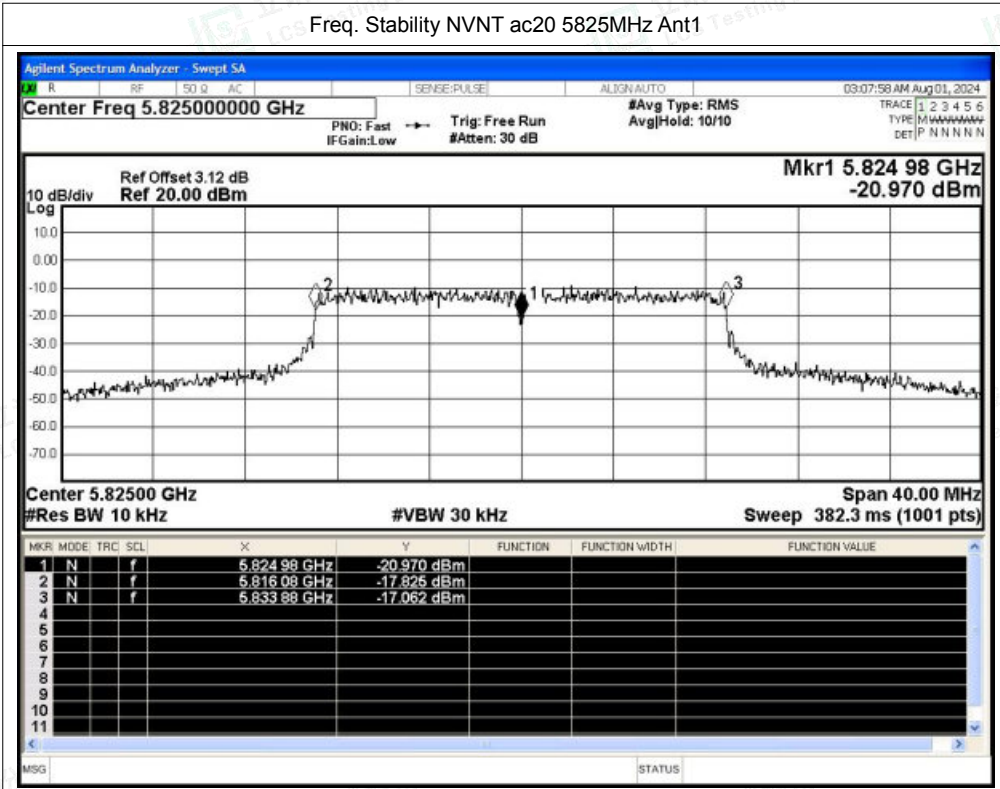


Freq. Stability NVNT ac40 5755MHz Ant1

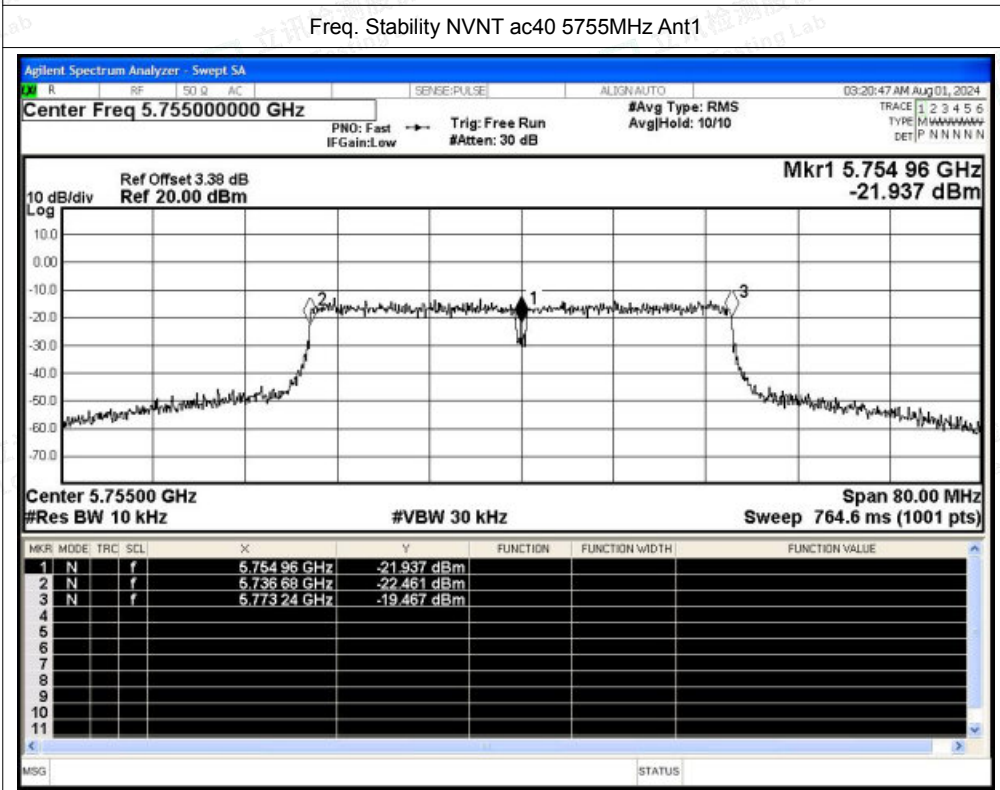




LCSA7194136EH

Freq. Stability NVNT ac40 5795MHz Ant1

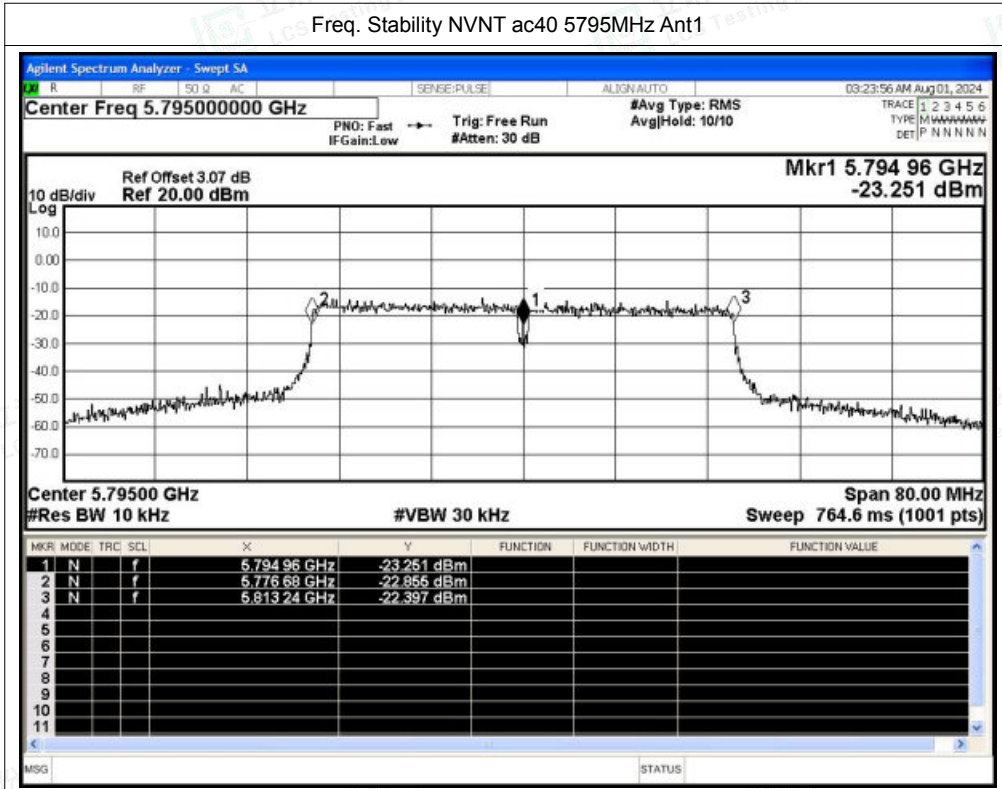


Freq. Stability NVNT ac80 5775MHz Ant1

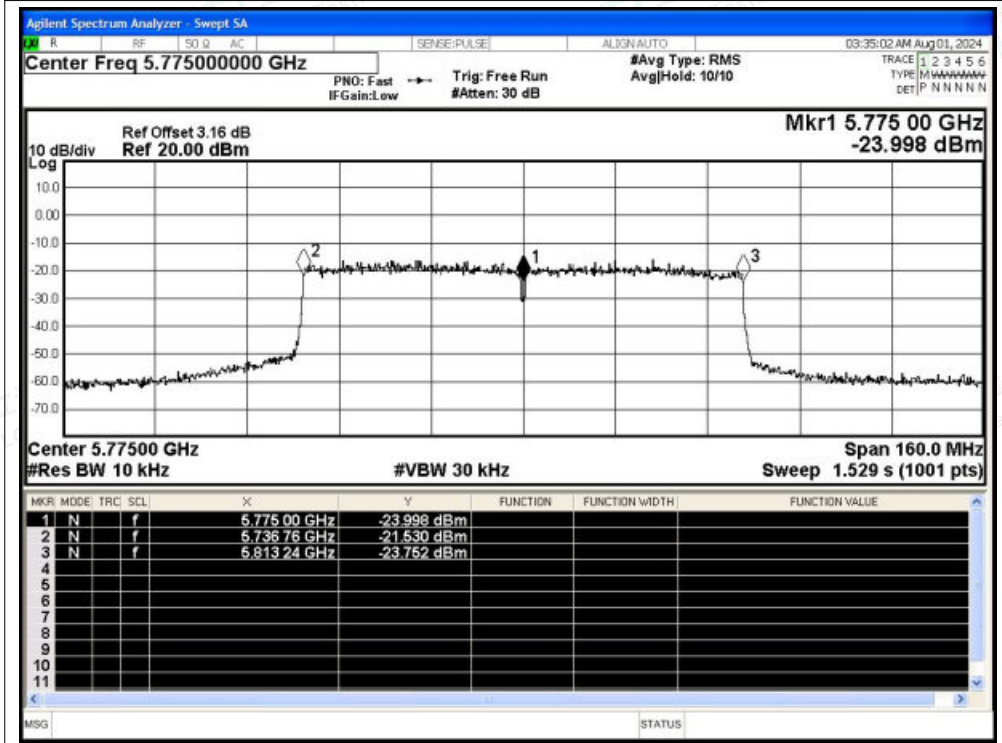




LCSAV7194136EH


Freq. Stability NVNT ax20 5745MHz Ant1

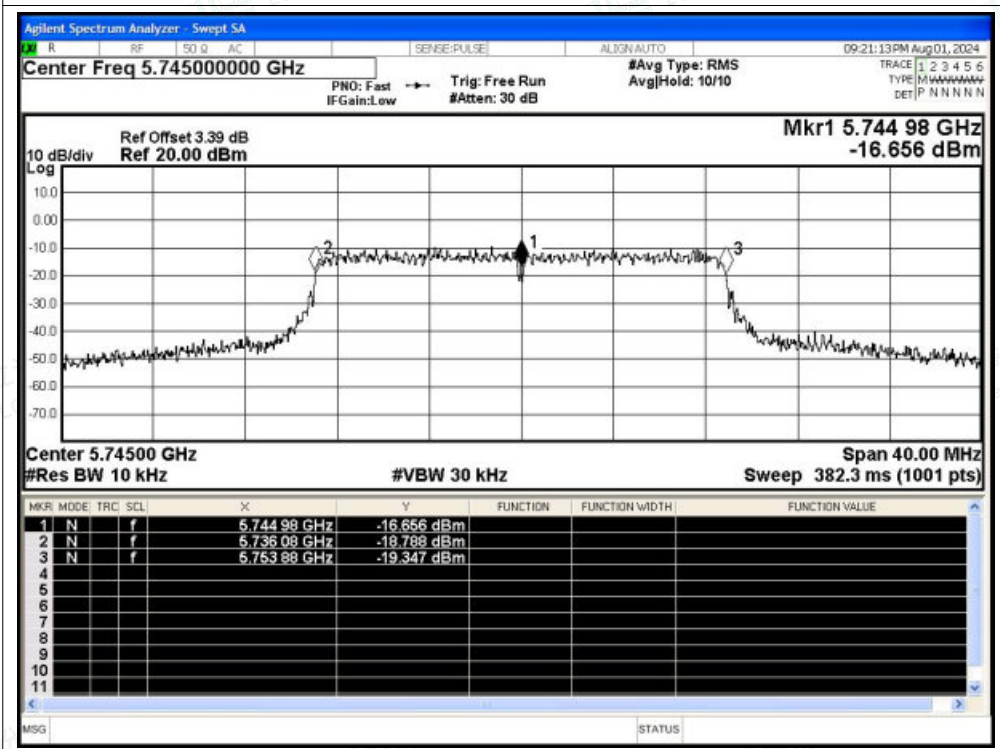


Freq. Stability NVNT ax20 5785MHz Ant1

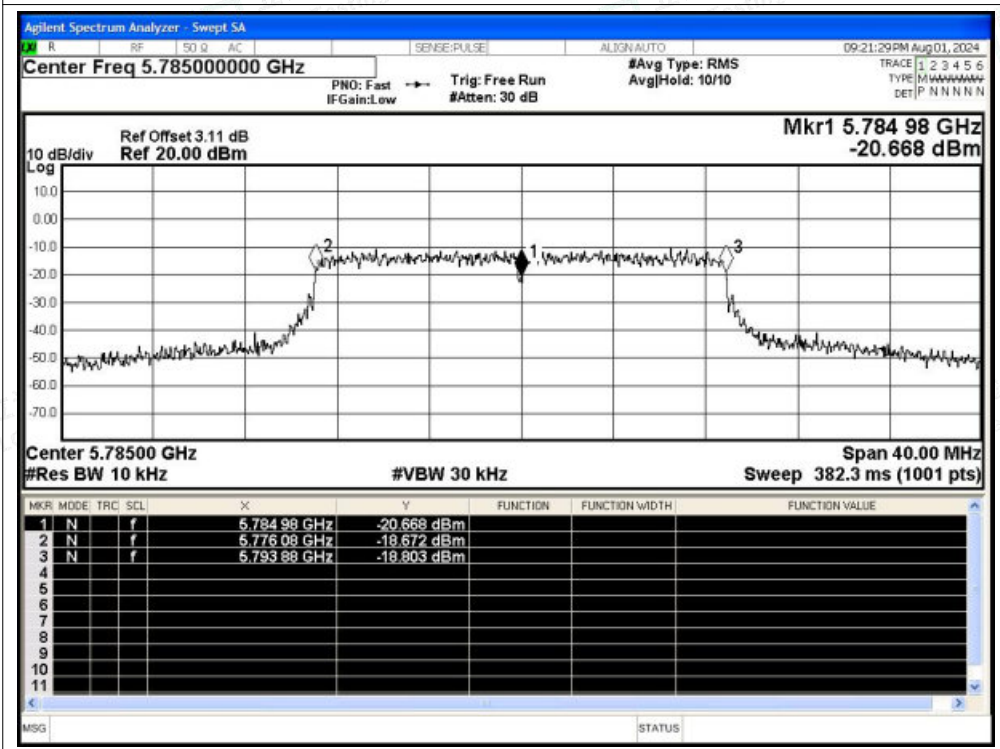

Freq. Stability NVNT ax20 5825MHz Ant1

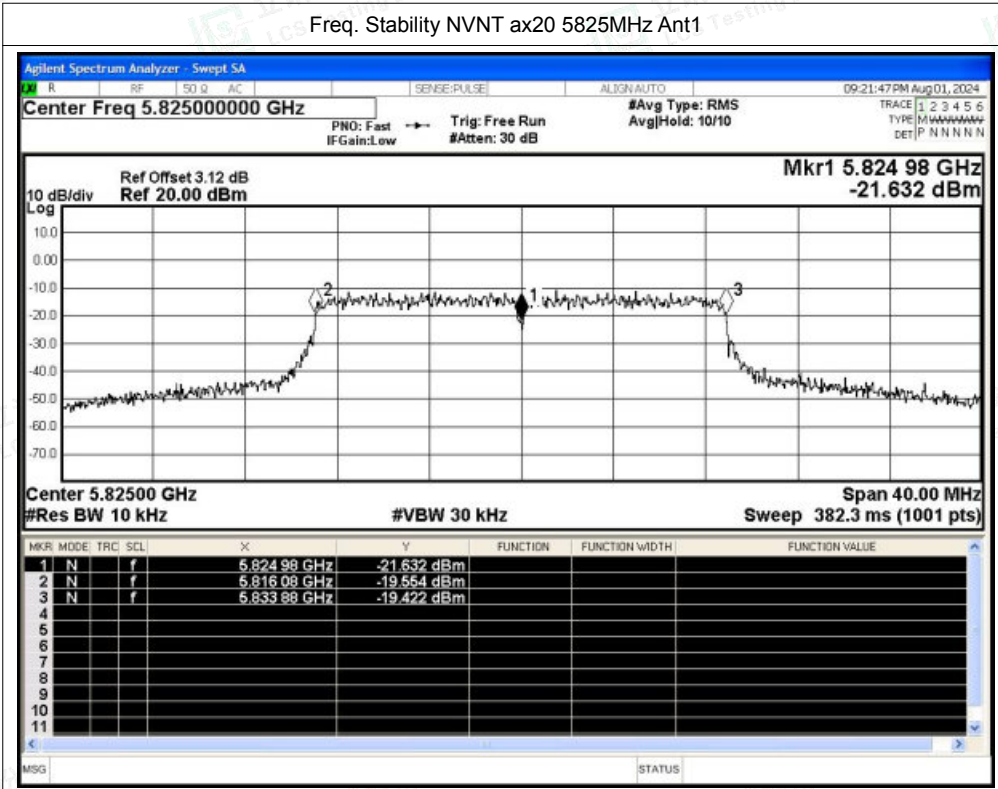


Freq. Stability NVNT ax40 5755MHz Ant1

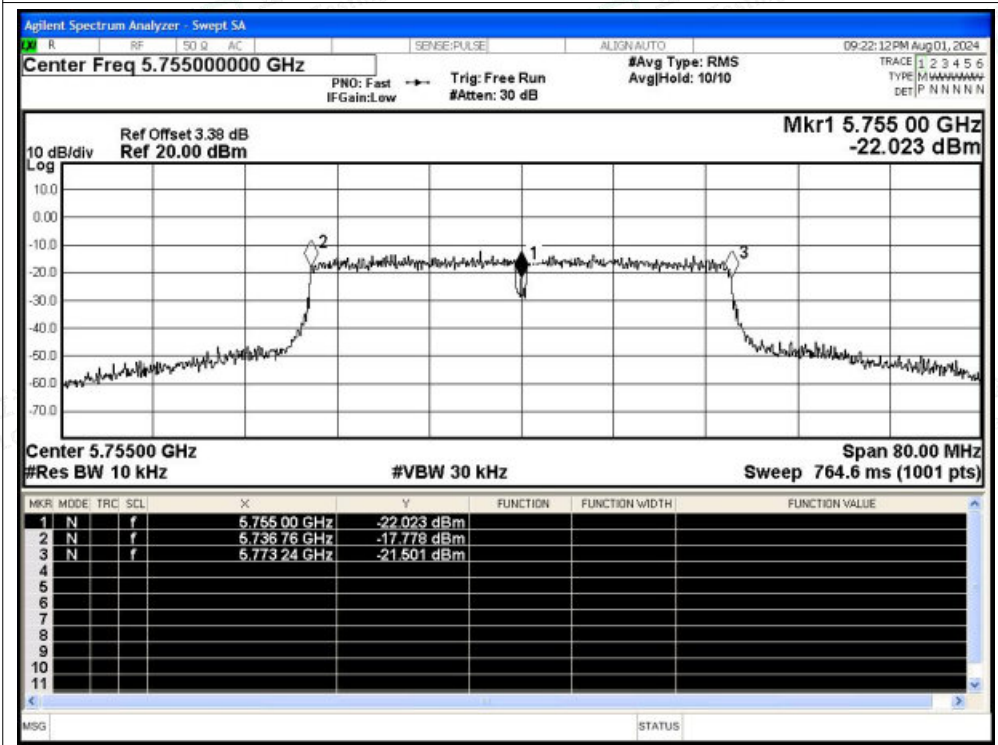




LCSA7194136EH

Freq. Stability NVNT ax40 5795MHz Ant1

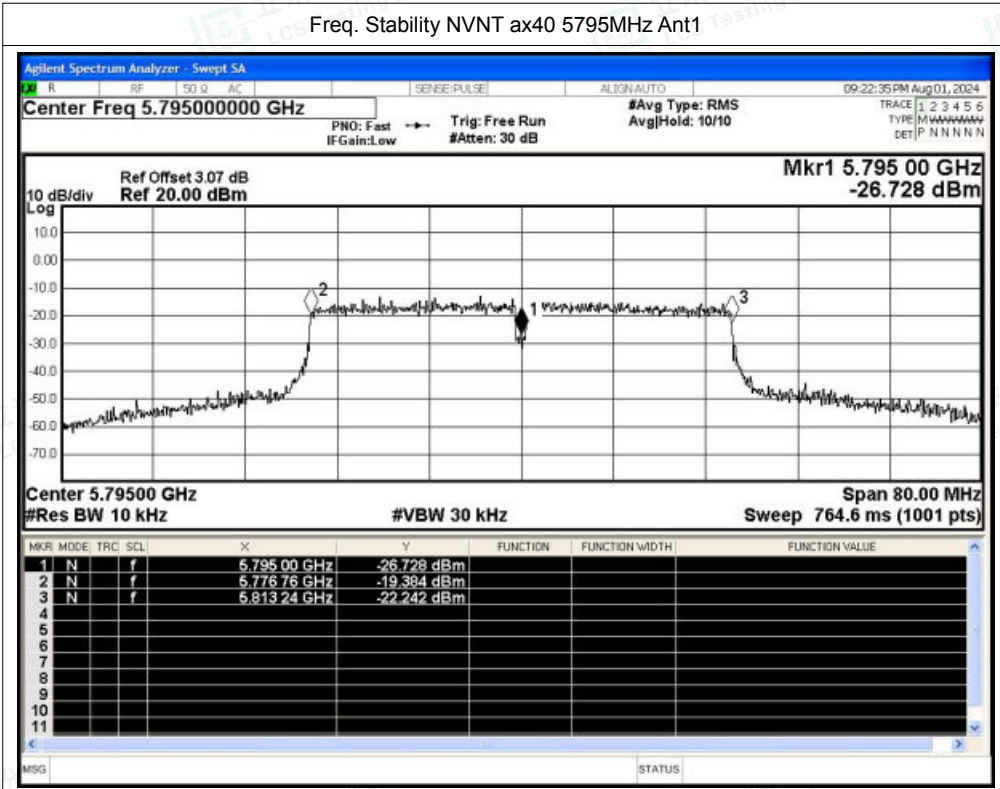

Freq. Stability NVNT ax80 5775MHz Ant1

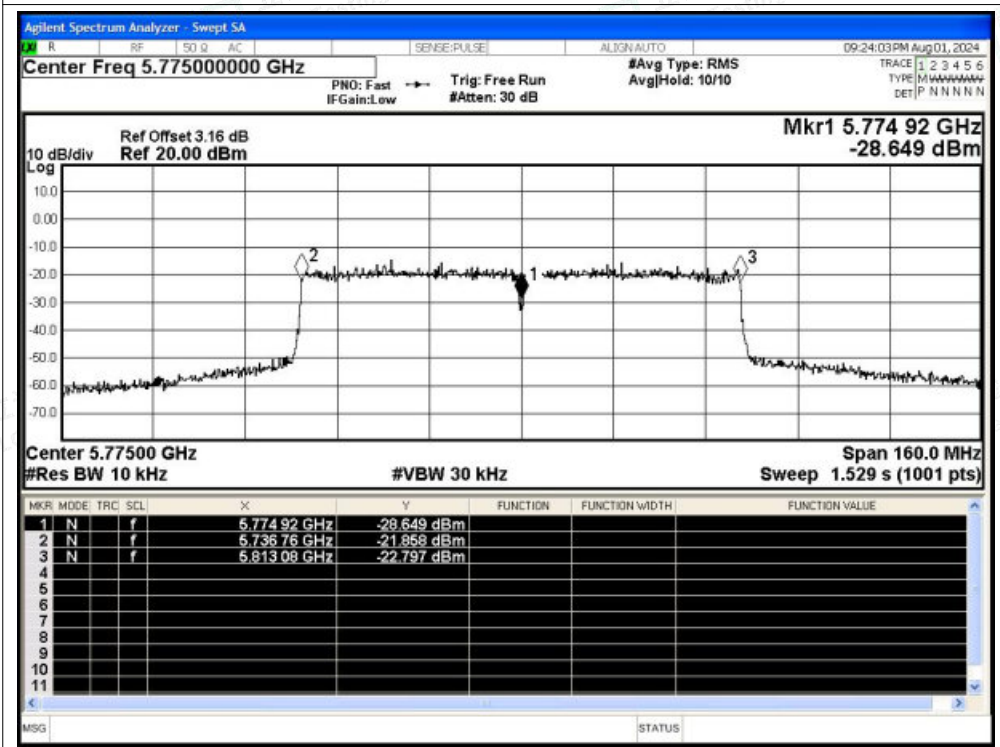


G.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant1	94.56	0.24	0.91
NVNT	a	5785	Ant1	94.65	0.24	0.91
NVNT	a	5825	Ant1	94.56	0.24	0.91
NVNT	n20	5745	Ant1	93.77	0.28	1.07
NVNT	n20	5785	Ant1	93.77	0.28	1.07
NVNT	n20	5825	Ant1	93.77	0.28	1.07
NVNT	n40	5755	Ant1	97.23	0.12	0.46
NVNT	n40	5795	Ant1	97.18	0.12	0.46
NVNT	ac20	5745	Ant1	93.72	0.28	1.06
NVNT	ac20	5785	Ant1	93.72	0.28	1.06
NVNT	ac20	5825	Ant1	93.72	0.28	1.06
NVNT	ac40	5755	Ant1	97.19	0.12	0.46
NVNT	ac40	5795	Ant1	97.19	0.12	0.46
NVNT	ac80	5775	Ant1	94.32	0.25	0.97
NVNT	ax20	5745	Ant1	93.72	0.28	1.06
NVNT	ax20	5785	Ant1	93.82	0.28	1.06
NVNT	ax20	5825	Ant1	93.73	0.28	1.06
NVNT	ax40	5755	Ant1	97.24	0.12	0.46
NVNT	ax40	5795	Ant1	97.2	0.12	0.46
NVNT	ax80	5775	Ant1	94.32	0.25	0.97




Test Graphs

Duty Cycle NVNT a 5745MHz Ant1

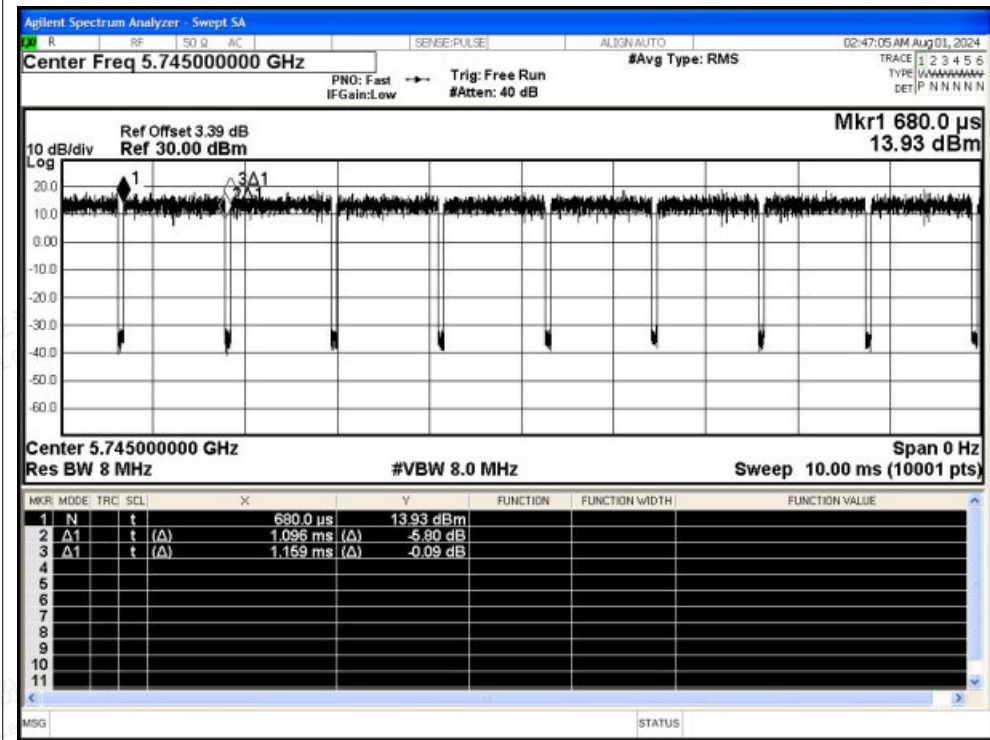


Duty Cycle NVNT a 5785MHz Ant1

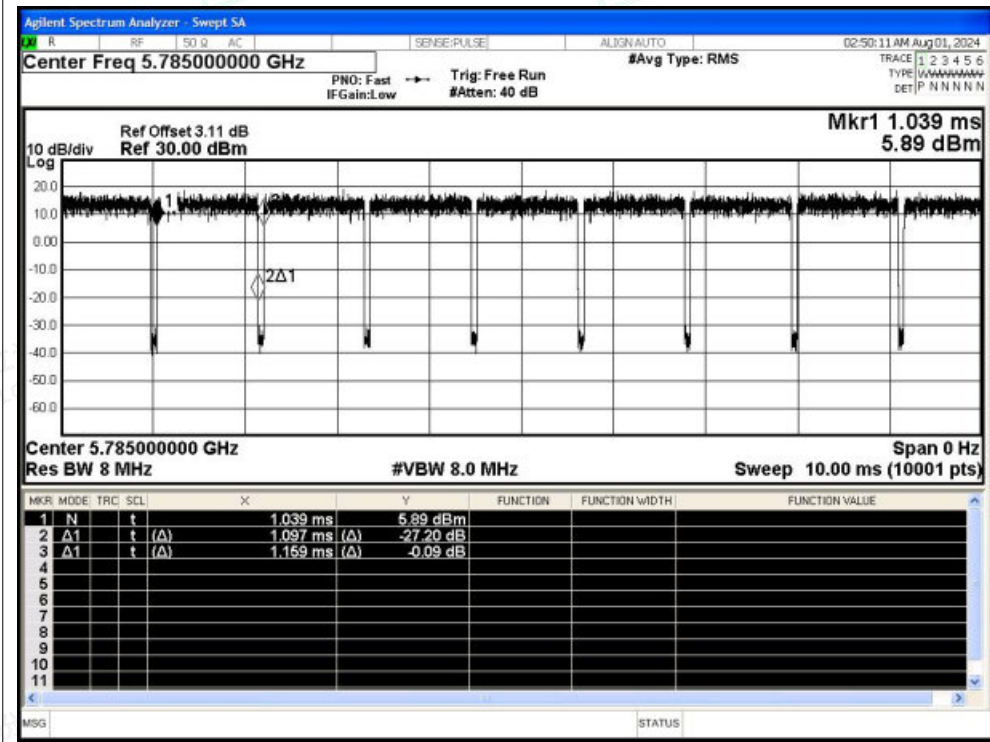




LCSAV7194136EH


Duty Cycle NVNT a 5825MHz Ant1

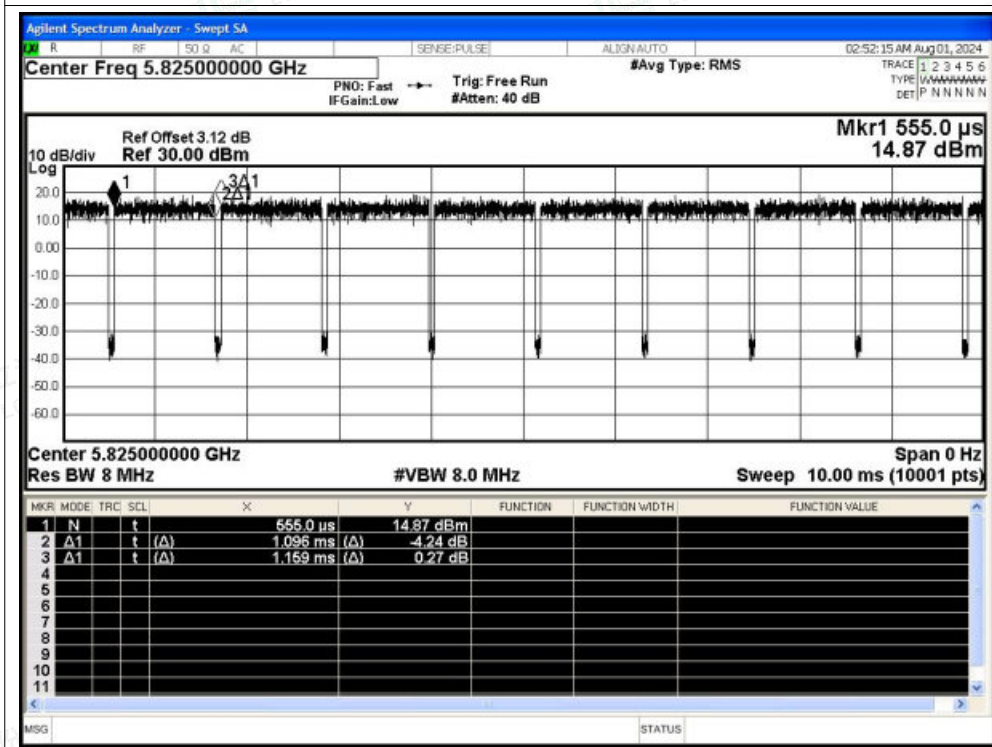


Duty Cycle NVNT n20 5745MHz Ant1

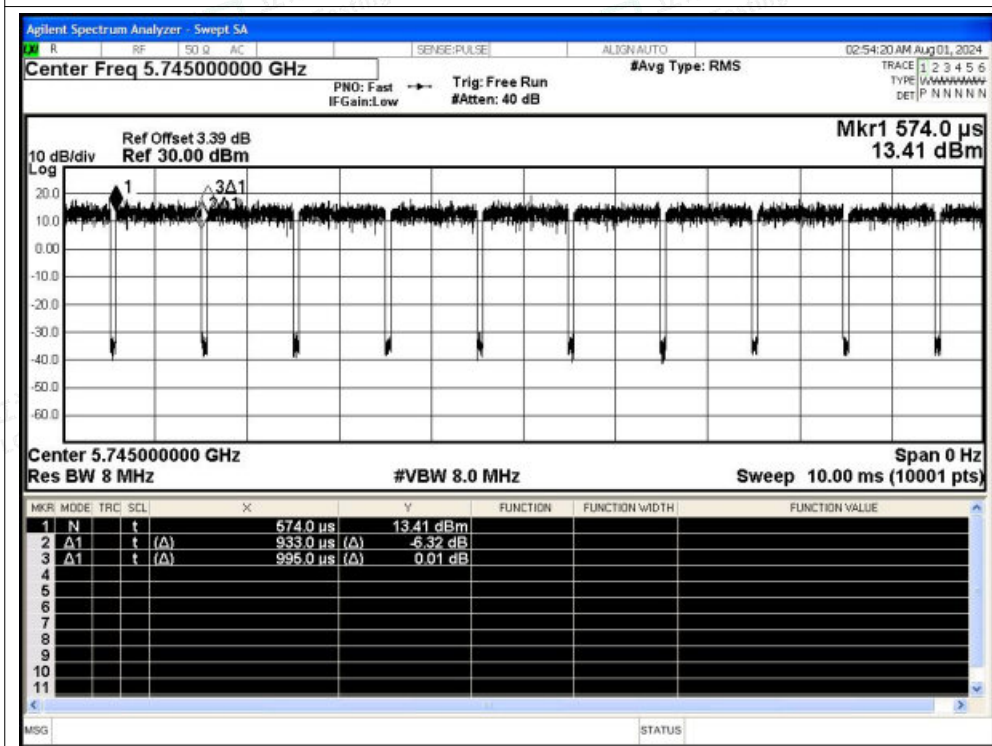


Duty Cycle NVNT n20 5785MHz Ant1

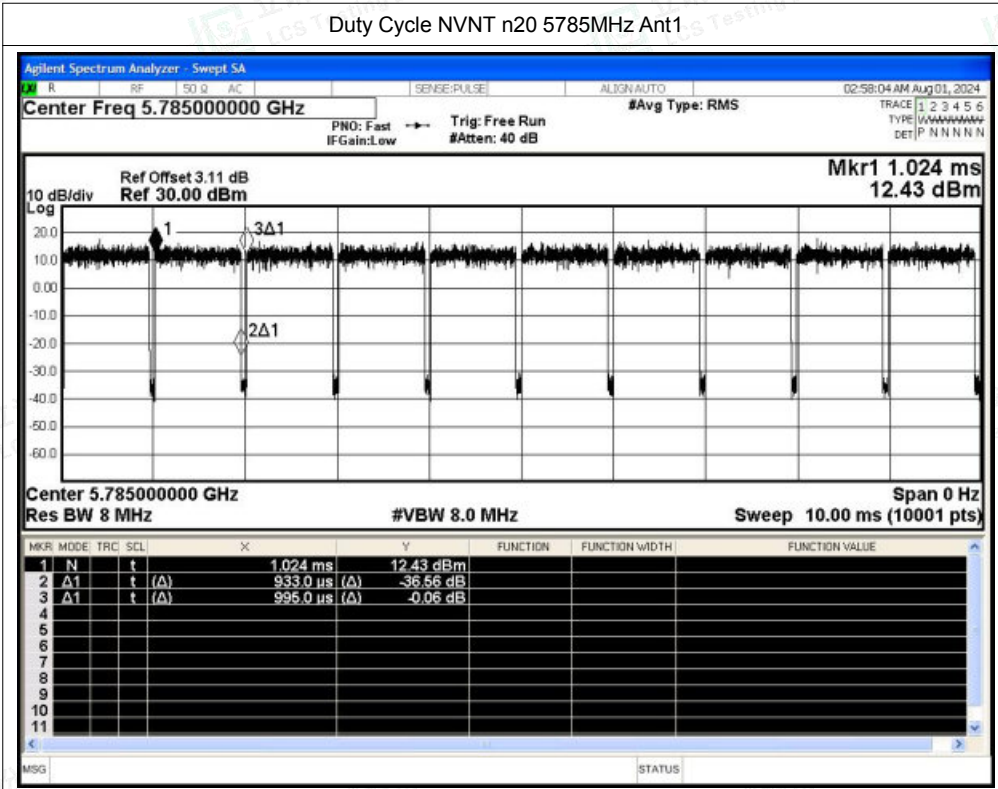


Duty Cycle NVNT n20 5825MHz Ant1

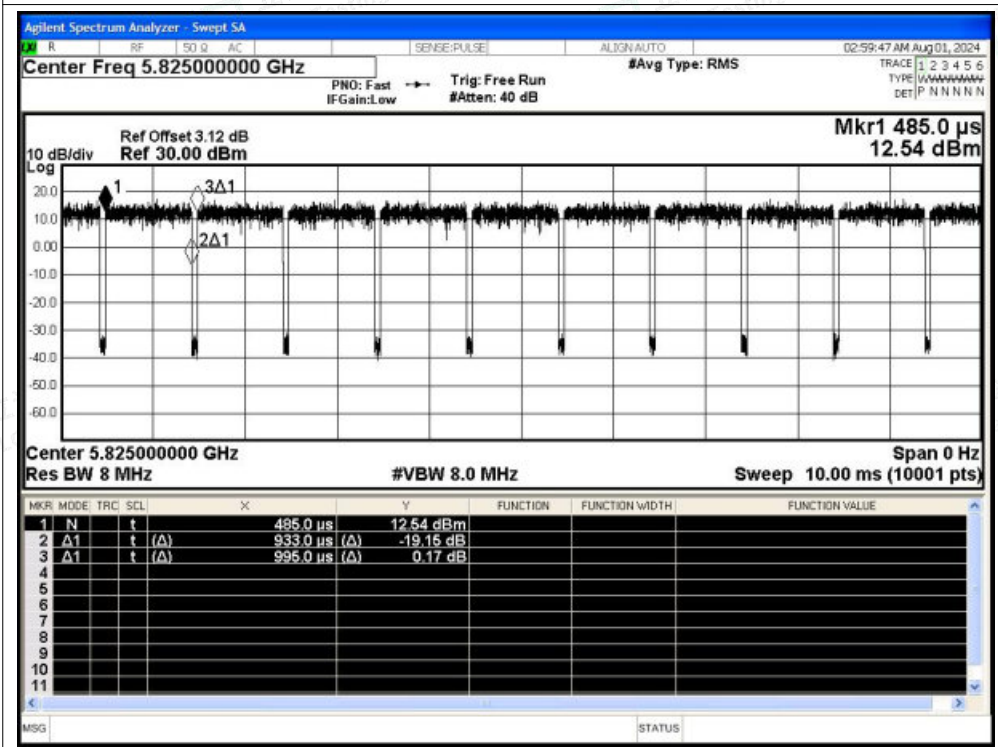


Duty Cycle NVNT n40 5755MHz Ant1

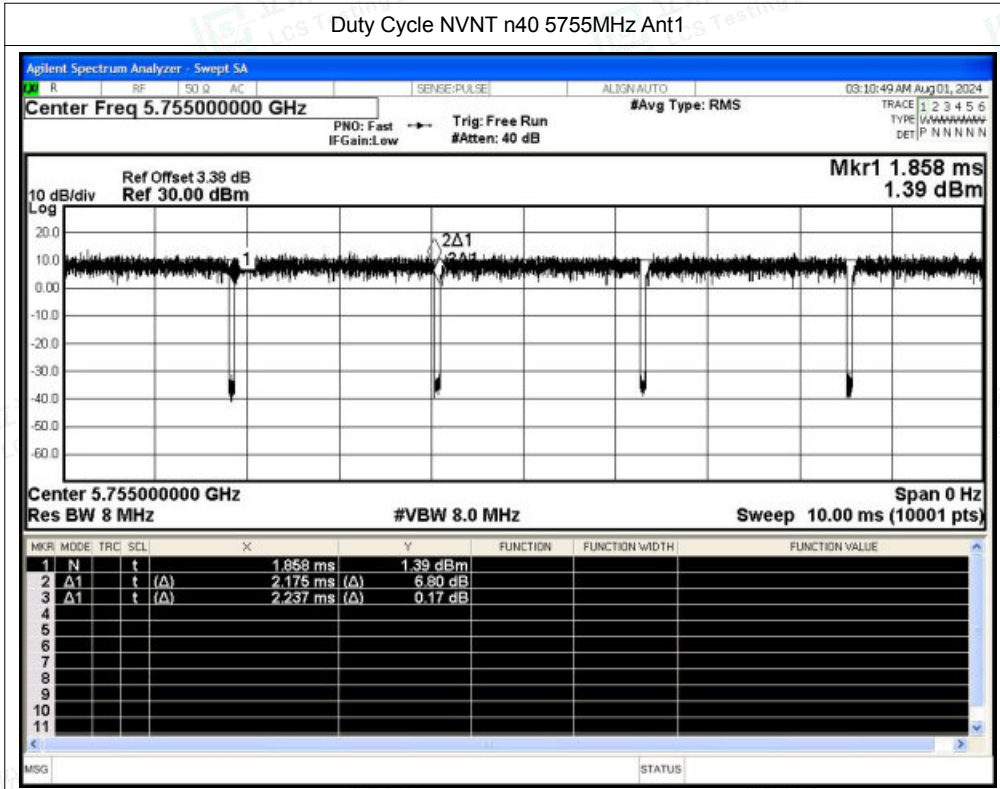


Duty Cycle NVNT n40 5795MHz Ant1

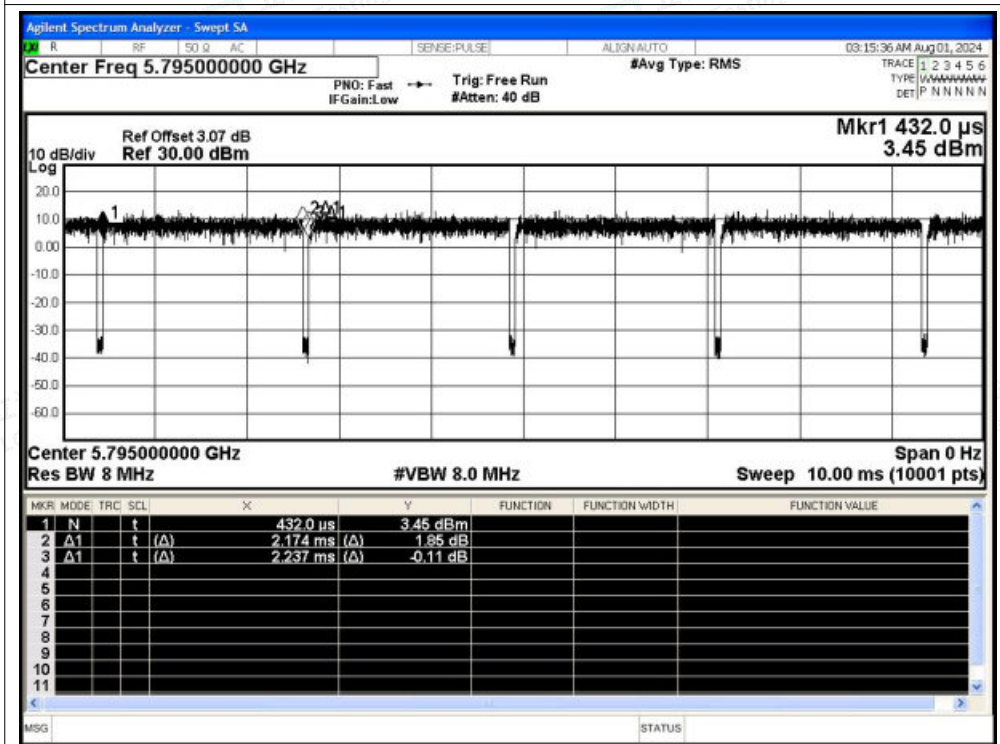

Duty Cycle NVNT ac20 5745MHz Ant1

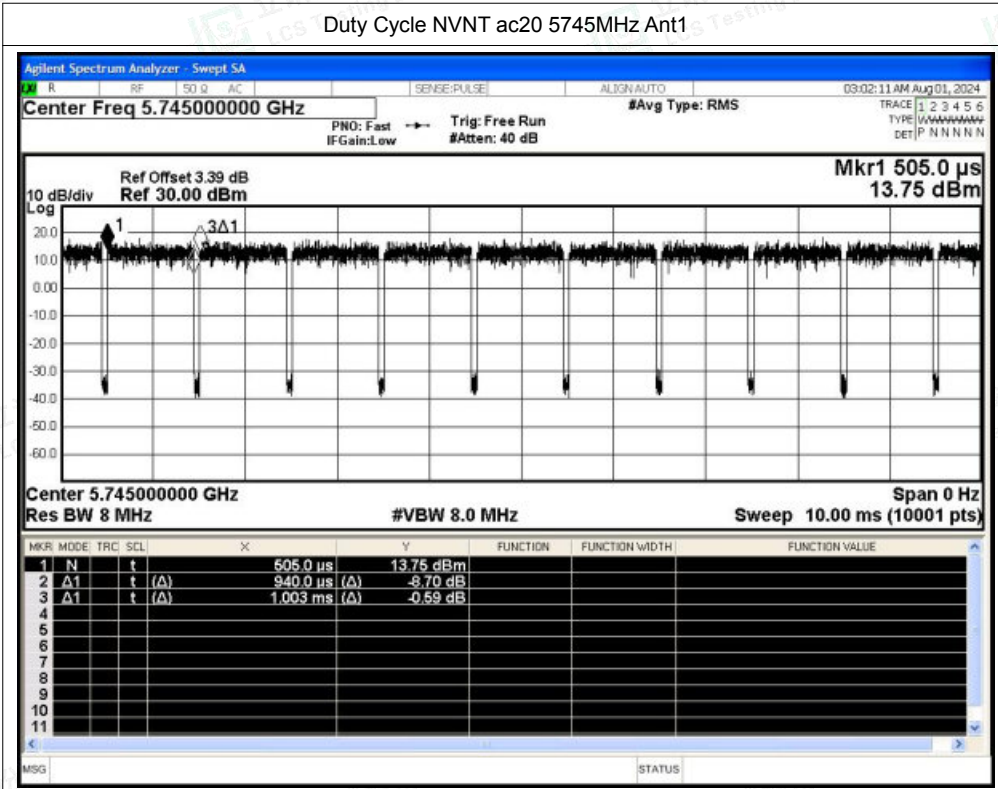


Duty Cycle NVNT ac20 5785MHz Ant1

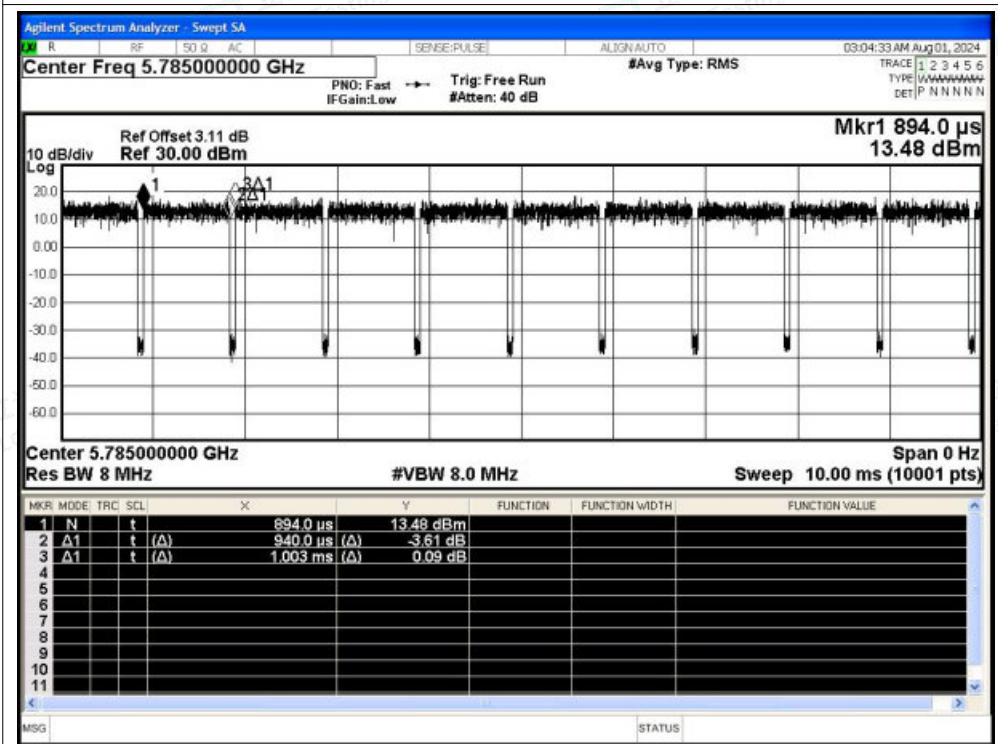




LCSA7194136EH

Duty Cycle NVNT ac20 5825MHz Ant1

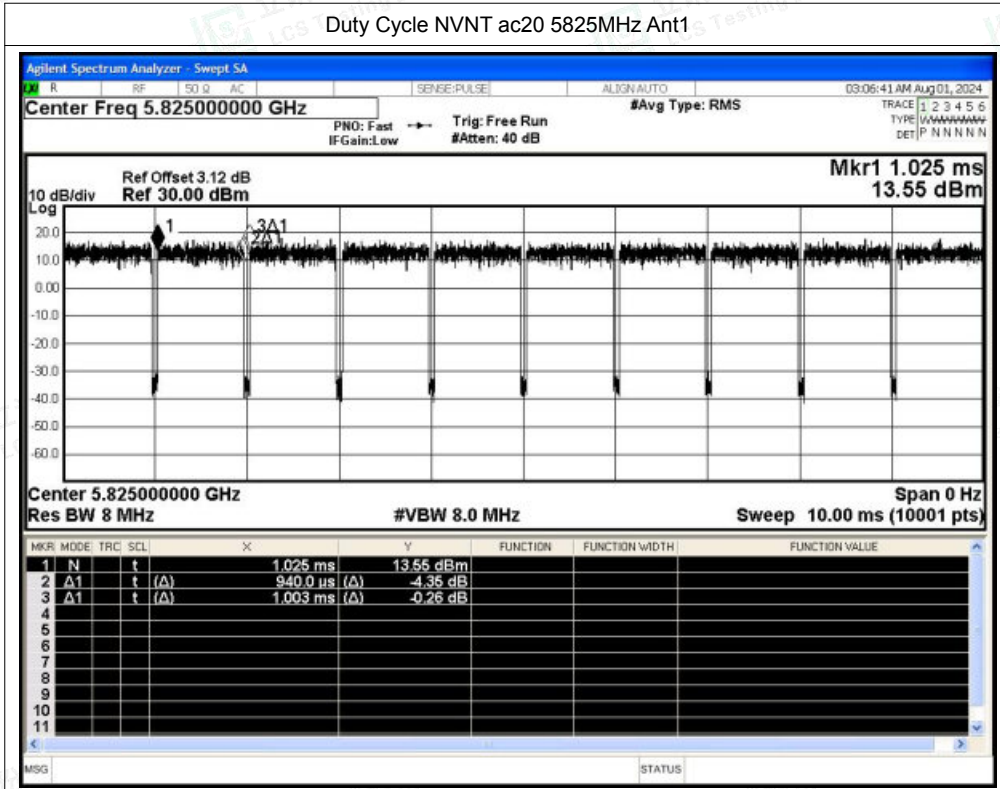


Duty Cycle NVNT ac40 5755MHz Ant1

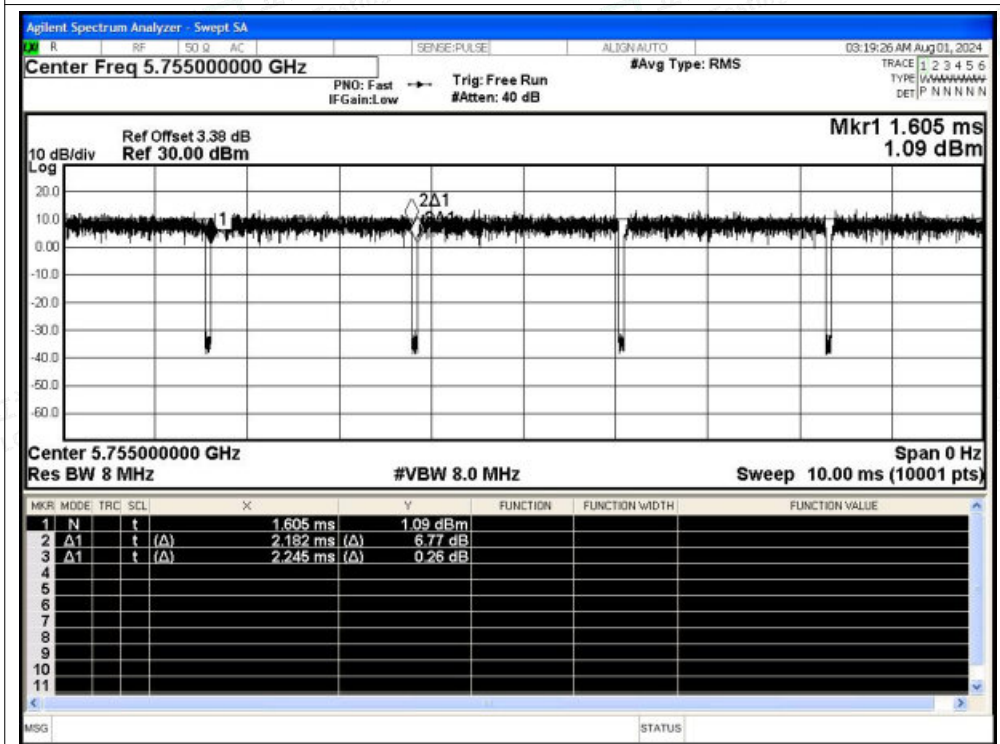




LCSAV7194136EH

Duty Cycle NVNT ac40 5795MHz Ant1

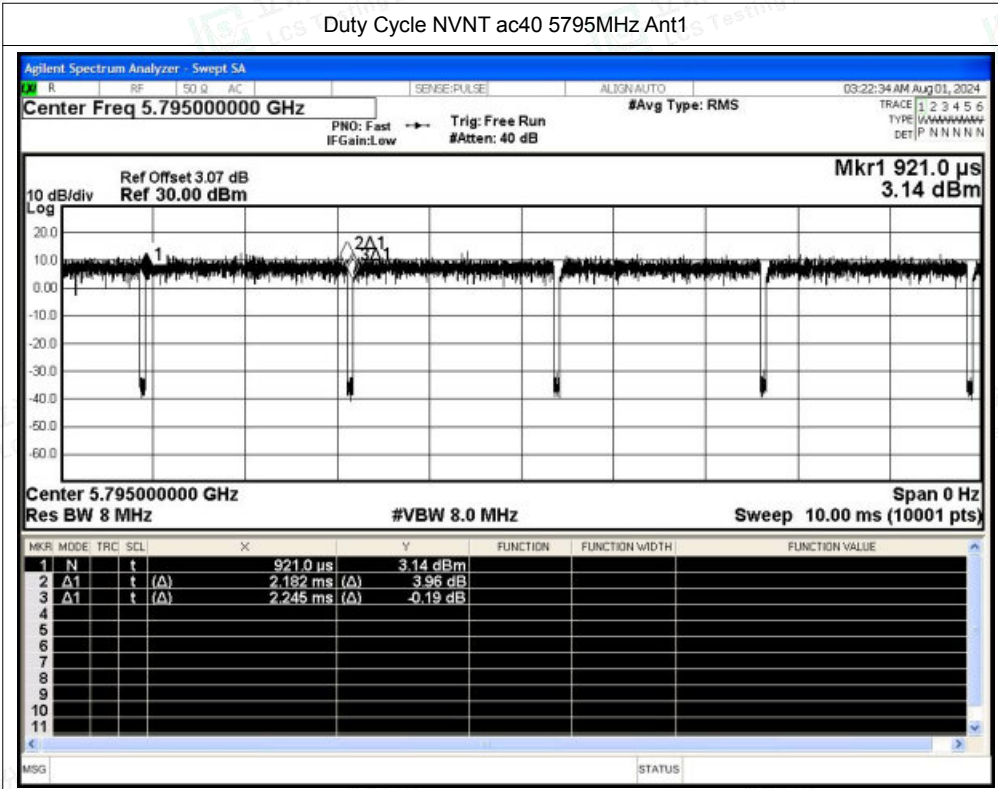


Duty Cycle NVNT ac80 5775MHz Ant1

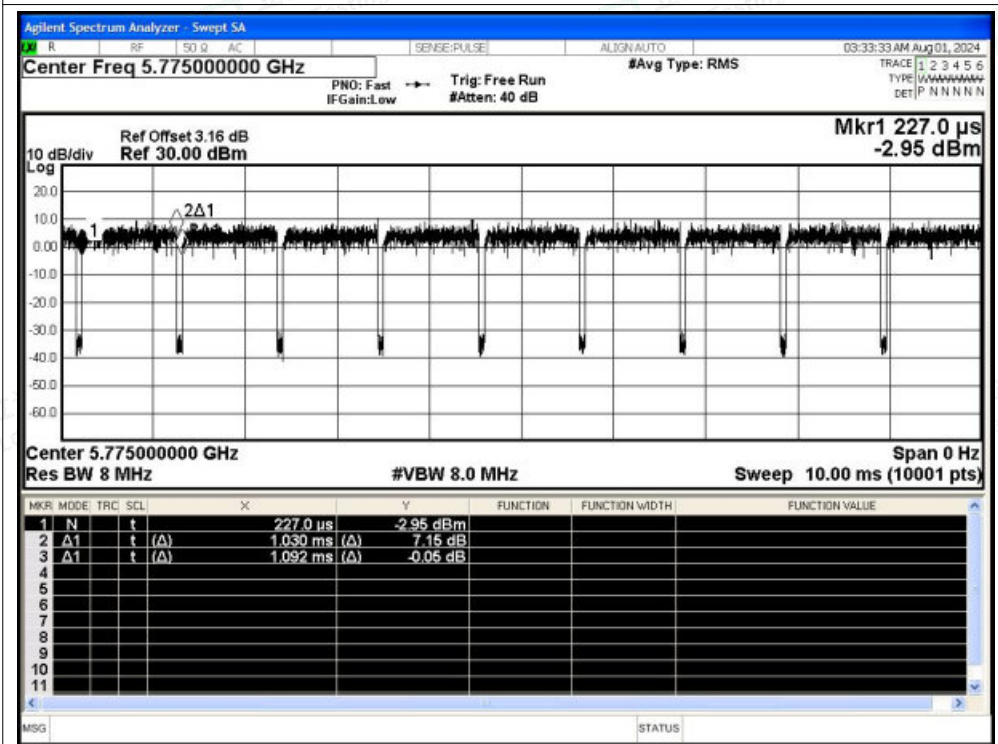




LCSAV2194136EH

Duty Cycle NVNT ax20 5745MHz Ant1

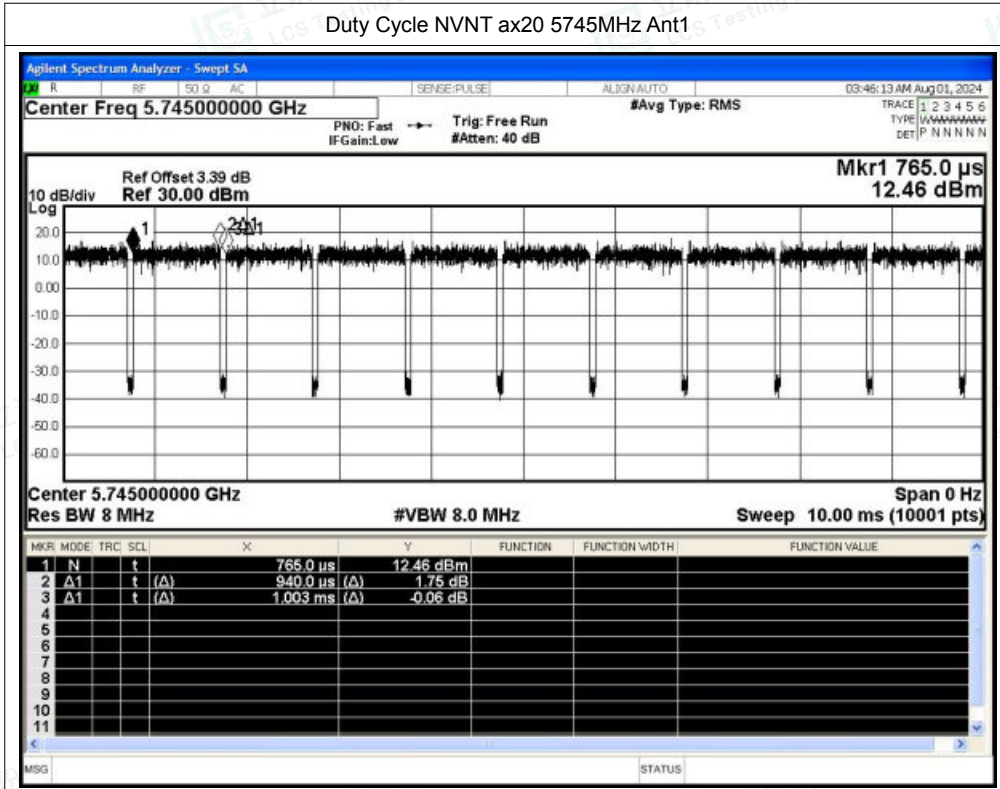


Duty Cycle NVNT ax20 5785MHz Ant1

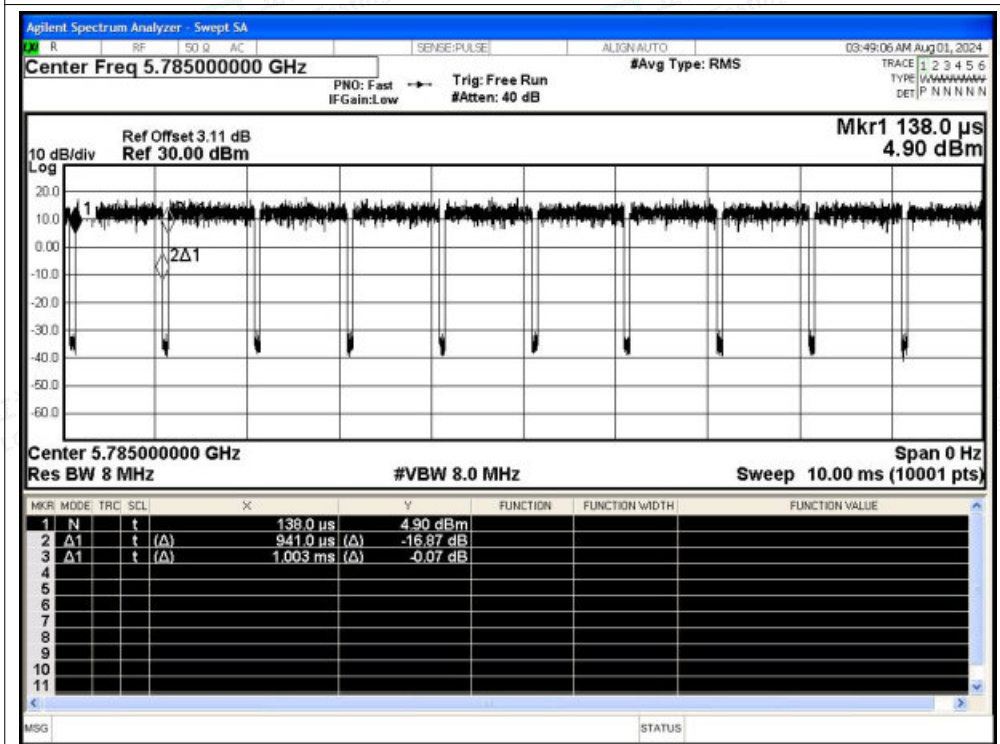




LCSAV2194136EH

Duty Cycle NVNT ax20 5825MHz Ant1

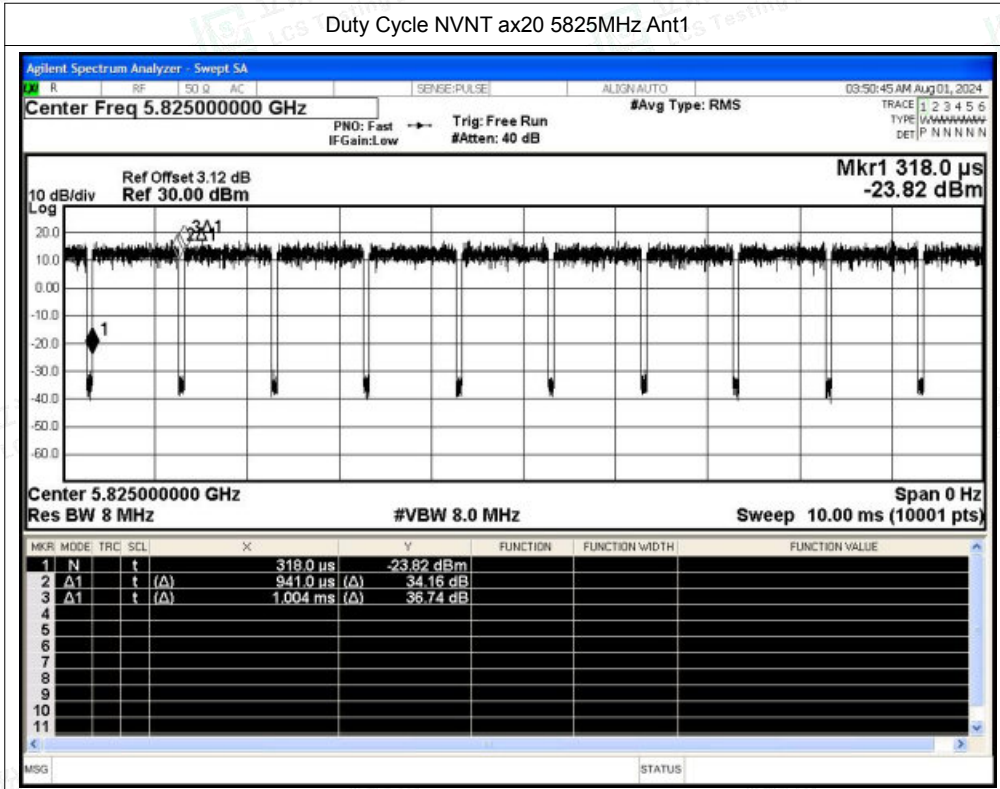


Duty Cycle NVNT ax40 5755MHz Ant1

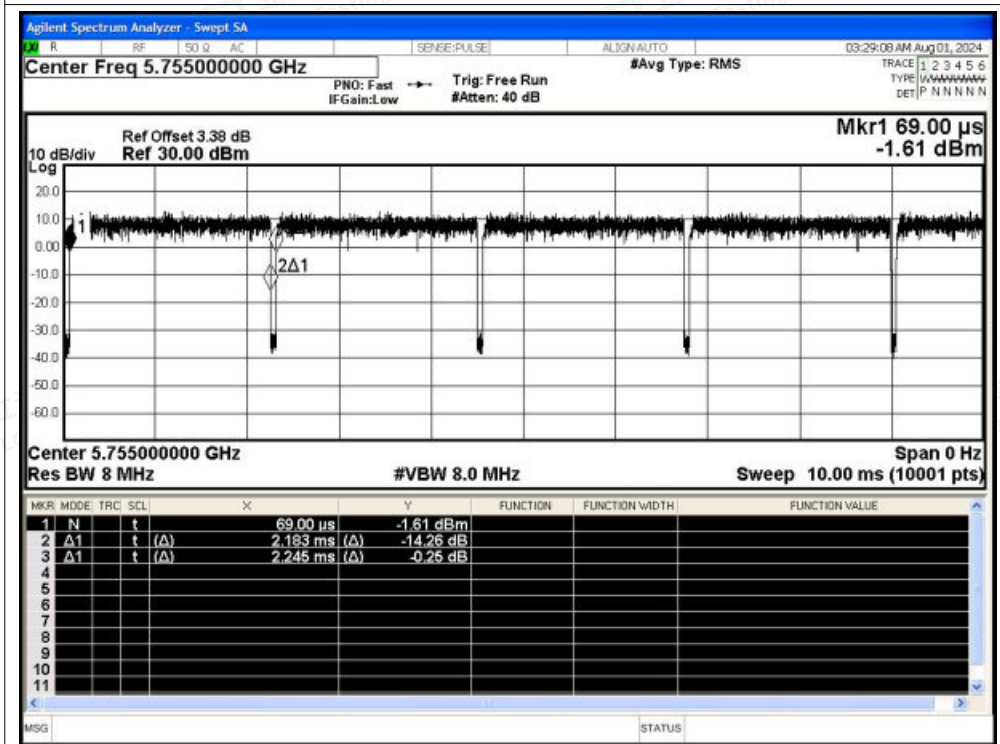



LCSAV2194136EH

Duty Cycle NVNT ax40 5795MHz Ant1

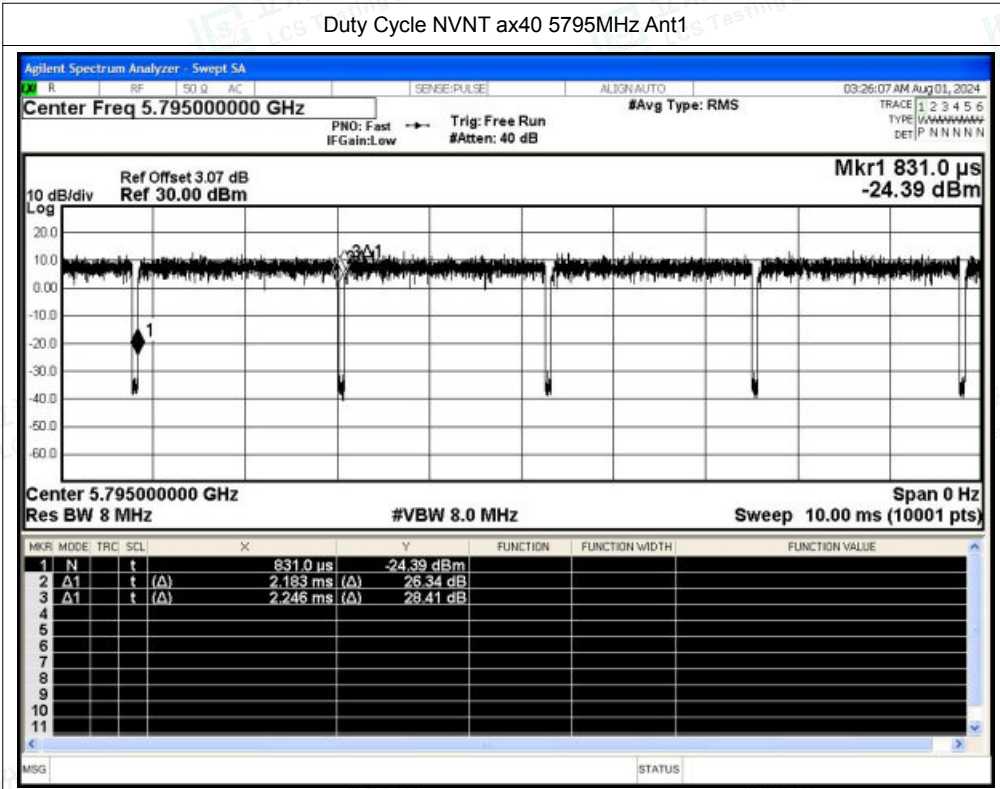

Duty Cycle NVNT ax80 5775MHz Ant1

