

# Section 4 Principles of Operation

# 4-1 Introduction

This section contains a functional description of the Multicarrier Cellular Amplifier.

# 4-2 RF Input Signal

The maximum input power for all carrier frequencies should not exceed the limits specified in table 1-2. For proper amplifier loop balance, the out of band components of the input signals should not exceed -40 dBc. The input VSWR should be 2:1 maximum (or better).

# 4-3 RF Output Load

The load impedance should be as good as possible (1.5:1 or better) in the working band for good power transfer to the load. If the amplifier is operated into a filter, it will maintain its distortion characteristics outside the signal band even if the VSWR is infinite, provided the reflected power does not exceed one watt. A parasitic signal of less than one watt incident on the output will not cause distortion at a higher level than the normal forward distortion (i.e. -65 dBc).

# 4-4 System Functional Description

The MCA9129-90MCA9129-90-A amplifier is a linear, feed-forward power amplifier that operates in the 25 MHz frequency band from 869 MHz to 894 MHz. A typical four-module system is shown in figure 4-1. The power output specification is listed in table 1-2. Each amplifier is a self-contained plug-in module and is functionally independent of the other amplifier modules. The amplifier modules are designed for parallel operation to achieve high peak power output, and for redundancy in unmanned remote locations. Each amplifier in the system can simultaneously transmit multiple carrier frequencies, at an average total power output of 90 watts (1 amplifier module in a subrack unit) to 360 watts (4 amplifier modules), with -65 dBc third order intermodulation distortion (IMD). Each amplifier in the system has been FCC tested to simultaneously transmit multiple carrier frequencies, at an average total power output of 108 watts (1 amplifier module in a subrack unit) to 430 watts (4 amplifier modules), with -60 dBc third order intermodulation distortion (IMD). Refer to the MCR4109-1 subrack installation and service manual (044-05061) for complete system level power and IMD specifications.

The output from each amplifier is an amplified composite signal of approximately 100 watts at -65dBc IMD (120 watts at -60dBc IMD) before combiner losses. All phase and gain corrections are performed on the signal(s) in the individual amplifier modules. In a four -module system, the amplifier outputs are fed to a power combiner and combined to form a composite RF output of up to 360 watts at -65dBc IMD (430 watts at -60dBc IMD). Each amplifier module has an alarm and display board that monitors the amplifier performance. If a failure or fault occurs in an amplifier module, it is displayed on the individual amplifier front panel.

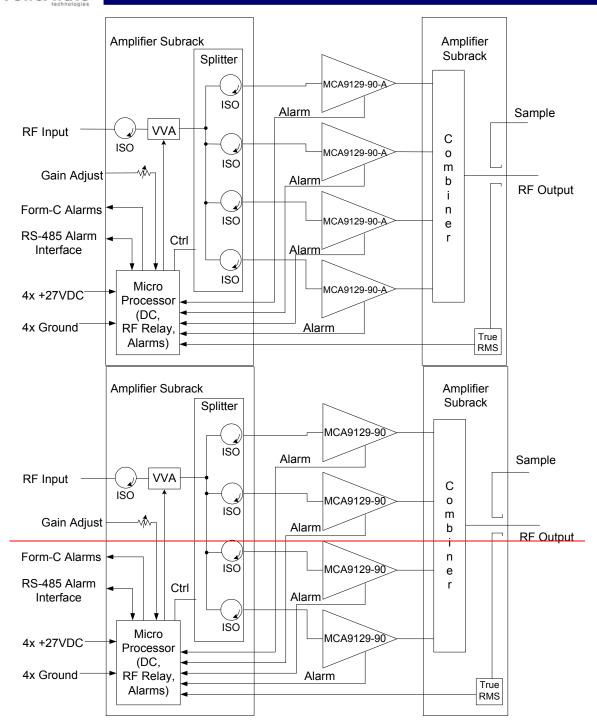


Figure 4-1 MCA9129-90MCA9129-90-A Four Module Amplifier System

# 4-5 MCA9129-90MCA9129-90-A Amplifier Module

The amplifier module, figure 4-2, has an average output of 120 watts power (1200 watts peak power) with intermodulation products suppressed to better than -65 dBc below carrier levels at 100 watts output, -60 dBc at 120 watts output. The amplifier provides an amplified output signal with constant gain and phase by adding approximately 30 dB of distortion cancellation on the output signal. Constant gain and phase is maintained by continuously comparing active paths with passive references, and correcting for small variations through the RF feedback controls. All gain



and phase variations, for example those due to temperature, are reduced to the passive reference variations. The amplifier module is comprised of:

Preamplifiers

Main amplifier

Error amplifier

Two feed-forward loops with phase-shift and gain controls

DC/DC power regulator

Alarm monitoring, control and display panel

The main amplifier employs class AB amplification for maximum efficiency. The error amplifier and feed forward loops are employed to correct signal nonlinearities introduced by the class AB main amplifier. The error amplifier operates in class AB mode. The RF input signals are amplified by a preamp and coupled to an attenuator and phase shifter in the first feed-forward loop. The main signal is phase shifted by 180 degrees and amplified in the premain amplifier. The output from the premain amplifier is fed to the class AB main amplifier. The output from the main amplifier is typically 420-140 watts. The signal is output to several couplers and a delay linefilter.

The signal output from the main amplifier is sampled using a coupler, and the sample signal is combined with the main input signal and input to the second feed-forward loop. The error signal is attenuated, phase shifted 180 degrees, then fed to the error amplifier where it is amplified to a level identical to the sampled output from the main amplifier. The output from the error amplifier is then coupled back and added to the output from the main amplifier. The control loops continuously make adjustments to cancel out any distortion in the final output signals.

The primary function of the first loop is to provide an error signal for the second loop. The primary function of the second loop is to amplify the error signal to cancel out spurious products developed in the main amplifier. The input signal is amplified by a preamplifier and fed to a coupler and delay line. The signal from the coupler is fed to the attenuator and phase shifter in the 1st loop. The first loop control section phase shifts the main input signals by 180 degrees and constantly monitors the output for correct phase and gain.

044-05060 Rev. C



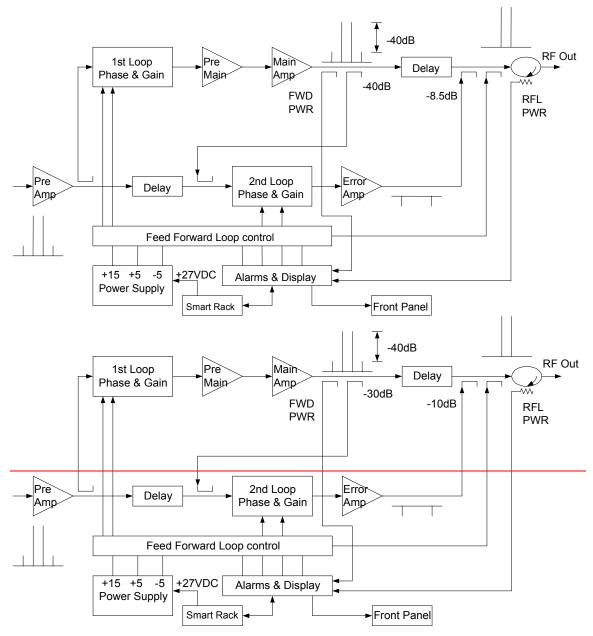


Figure 4-2 MCA9129-90MCA9129-90-A Power Amplifier Module Functional Block Diagram

The 2nd loop control section obtains a sample of the distortion added to the output signals by the main amplifiers, phase shifts the signals by 180 degrees, then feeds it to the error amplifier. There it is amplified to the same power level as the input sample and coupled on to the main output signal. The final output is monitored by the 2nd loop and adjusted to ensure that the signal distortion and IMD on the final output is canceled out.

### 4-5.1 Main Amplifier

The input and output of the amplifier employ three-stage, class AB amplifiers which provide approximately  $\frac{30-15}{1}$  dB of gain in the 25 MHz frequency band from 869 MHz to 894 MHz. The amplifier operates on +27 Vdc, and a bias voltage of  $\frac{+5-12}{1}$  Vdc, and is mounted directly on a heat sink which is temperature monitored by a digital thermostat IC. If the heat sink temperature exceeds  $\frac{92-85}{1}$  °C, the thermostat opens and a high temperature fault occurs. The alarm logic controls the  $\frac{45-12}{1}$  Vdc bias voltage that shuts down the amplifier.

© Copyright Powerwave Technologies, Inc., July 2001. All rights reserved

4-4

4-4

July 2001 November 2002



# 4-5.2 Error Amplifier

The main function of the error amplifier is to sample and amplify the signal distortion level generated by the main amplifier, to a level that cancels out the distortion and IMD when the error signal is coupled onto the main signal at the amplifier output. The error amplifier is a class AB amplifier, has  $\frac{50}{15}$  dB of gain. The amplifier operates on +27 Vdc and a bias voltage of  $\frac{+15}{12}$  Vdc and is mounted directly on a heat sink.

044-05060 Rev. C



### 4-5.3 Amplifier Monitoring

In the main and error amplifier modules, all normal variations are automatically compensated for by the feedforward loop control. However, when large variations occur beyond the adjustment range of the loop control, a loop fault will occur. The alarms are displayed in the front panel indicators and output via a 21-pin connector on the rear of the module to the subrack summary board for subsequent remote monitoring.

#### 4-5.4 Amplifier Module Cooling

Although each amplifier module contains its own heat sink, It is cooled with forced air. Three fans for are used for forced air cooling and redundancy. The fans are located on the front and rear of the amplifier module, draw air in through the rear of the amplifier, and exhaust hot air out the front of the module. The lower front fan is not monitored for failure as are the other two. The fans are field replaceable (refer to paragraph 5-6.2).

# 4-6 Power Distribution

Primary DC power for the system is provided by the host system to the subrack. The subrack supplies each amplifier module with +27 Vdc directly and via the RF power splitter/combiner. The amplifier module has <u>linear and switching regulators that generates required DC voltages such as a DC/DC converter that converts the +27 Vdc to +15 Vdc, +5 Vdc, +9V and -5 Vdc from +27Vdc.</u>

### 4-7 Intermodulation

The MCA9129-90MCA9129-90-A amplifier is designed to deliver a 120-watt composite average analog power, multicarrier signal, occupying a bandwidth less than or equal to 25 MHz, in the bandwidth from 869-894 MHz. The maximum average power for linear operation, and thus the amplifier efficiency, will depend on the type of signal amplified.

### 4-7.1 Two-Tone Intermodulation

When measured with two equal CW tones spaced anywhere from 30 kHz to 25 MHz apart, and at any power level up to the peak power, the third order intermodulation products will be below -65 dBc at 100 watts output, below -60 dBc at 120 watts output.

## 4-7.2 Multitone Intermodulation

Adding more tones to the signal will lower individual intermodulation products. If the frequencies are not equally spaced, the level of intermodulation products gets very low. When the frequencies are equally spaced, those products fall on top of each other on the same frequency grid. The average power of all intermodulation beats falling on the same frequency is called the composite intermodulation; it is -65 dBc @ 100 W output, -60 dBc @ 120 W output, or better, with a maximum of one MHz channel spacing.

044-05060 Rev. C 4-6 July 2001November 2002