
使用手册 Quick Guide 無線讀卡分享器 Wi-Copy

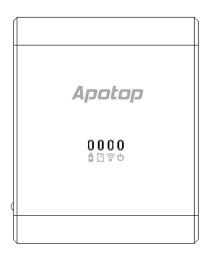

Copyright © 2013, Carry Technology Co., Ltd. All Right Reserved

且錄/Catalog

感謝您的購買/ Thanks for your purchasing······2
1.1 包裝內容/ Package Content······2
1.2 介面與 LED 燈號顯示說明/ Interface & LED Indicators Description3
主要功能介紹/ Main Function5
2.1 無線網卡功能/ Wireless Card Reader5
2.2 如何輕鬆將飯店有線網路轉成無線/ Easy create a wireless network
at hotel room5
2.3 如何設定無線網路環境(插網路線)/ How to Setup a wireless
network (with an internet cable)5
2.4 如何設定無線網路環境(不插網路線)/ How to Setup a wireless
network (without an internet cable)6
2.5 行動電源功能/Power bank function6

感謝您的購買/Thanks for the Purchasing

Wi-Copy 無線讀卡分享器整合了無線讀卡機、無線路由器以及行動電源等三種功能。此產品專為平板電腦、智慧型手機設計。藉由內建的可充電電池提供電源,讓無線裝置不需透過與電腦的連接,直接經由 SD 記憶卡、外接硬碟或是 USB 隨身碟,來無線分享及傳輸您的檔案及照片,除此之外,整合無線路由器的功能,連接網路線後,使用者可以相當方便連接至網際網路,可在一般房間大小的空間分享無線網路,小型化設計便於旅行時攜帶且可滿足基本的無線網路使用需求,內建電池也可做為智慧型手機的行動電力站。

產品使用前請先至 Google Play Store 或 Apple App store 免費下載 Wi-Copy App,並完成安裝。

Wi-Copy is a wireless storage (UFD/ USB HDD or SD card) and wireless router. For Wireless Storage function, you can download the special designed iOS or Android App: "Wi-Copy" based on storage media with FAT16, FAT32, exFAT and NTFS File System

Wi-Copy can be powered from USB Power Adapter or PC/ Notebook with USB port. Wi-Copy has embedded battery for portable usage.Please install Wi-Copy App at Google Play Store or Apple App Store before first usage.

1.1 包裝內容/ Package contents

- 1. 1 組無線讀卡機Wi-Copy (有內建電池,請於第一次使用前將電池充滿)
- 2. 1 條USB Cable
- 3. 1 份使用手册

The package contains the following items

- 1 x Wi-Copy (has built-in battery, please have it full charged before first usage)
- 2. 1 x USB Cable
- 3. 1 x Quick Guide


1.2 介面與 LED 燈號顯示

SD card slot

SD 卡插槽

USB port

USB 連接埠

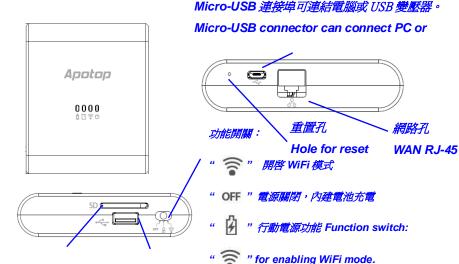

" OFF " power off for built-in battery charging.

" for power bank function.

LED 燈號指示於外殼上方(由右至左依序如下):

1. ① 電源/低電量(綠色 / 橘色)

- 1.指示燈亮綠色表示電力充足以及切換至無線網路模式;
- 2.指示燈亮橘色表示電池電力不足,須盡快進行充電。

2. 無線網路啟動(藍色)

3. 顯示目前無線網路已經啟動,可以使用。

3. LSD卡/隨身碟插入與讀寫(綠色)

4.指示燈亮綠色,顯示 SD 記憶卡或是隨身碟已經插入,燈號閃爍,顯示進行資料傳輸。

4. 電池充電中(紅色)

指示燈亮紅色,表示連接 USB 線正在對內建的電池進行充電, 紅色燈號熄滅表示已經充電完成(註:電力充足時將不會充電)。

5. 重置按鈕 (位於右側重置按鈕孔內)

操作步驟:

- 1. 開啟 WiFi 模式,確認無線分享器的電源已正確供應。
- 2. 確認無線網路連線之藍色燈號閃爍。
- 使用迴紋針等尖端的工具插入重置按鈕孔,按壓超過3秒, 待藍色燈號熄滅後,請放開重置按鈕孔,即可回復出廠設 定。

LED Indicators on top panel: (From R to L):

1. (h) PWR LED / Battery Low LED (Green / Orange):

Indicates Wi-Copy is Power On. (Green color).
Indicates the power of embedded battery is keeping in Low stage (Orange color).

2. WiFi LED (Blue):

Indicates the Wireless LAN is keeping in working stage.

3. Access LED (Green):

Indicates Media In/ Out and R/W Access LED.

4. Battery Charger LED (Red):

Indicates the External power (USB DC5V) is charging the embedded battery of Wi-Copy.

* Charger LED will turn off when charging is finished

5. Reset (3Sec) button on the right side:

First, please make sure you had powered on the Wi-Copy and WiFi LED (Blue) is keeping in working stage, then you can **use a kit to press** the Reset button. After pressing **3 seconds**, you will see **WiFi LED (Blue) will turn off**. Currently, you can **release the button** for recovering it to **Default Network setting**.

主要功能介紹/ Main Function

2.1 無線讀卡機/Wireless Card Reader

如何使用 Wi-Copy 無線讀卡功能/ How to use Wi-Copy Storage Function

1. 請至 App Store 安裝 Wi-Copy 應用程式。
Install Wi-Copy App from Apple App Store on iPhone/ iPad.

2. 插入儲存媒體 (USB 隨身碟或 SD 記憶卡)至 Wi-Copy 本體,開啟 Wi-Copy 電源並等待 35 秒,至藍色 LED 指示燈閃爍。

Plug a storage media (USB Pen Drive or SD Card) into Wi-Copy.

Power it on and wait for the blue led flickering (about 35 sec)

3. 在 iPad/ iPhone 中的"設定-WiFi"中選擇連結至Wi-Copy_xxxxxx。 (標示如 Wi-Copy 本體背後之 SSID)。

Select and connect to "Wi-Copy_xxxxxx" (see SSID number from the back of it) from Settings->Wi-Fi of iPad/ iPhone.

4. 開啟Wi-Copy應用程式,SD 記憶卡或USB隨身碟裡的影片、相片、音樂、文件會被自動分類到各個資料夾,當然也可以直接點進記憶卡或

隨身碟來瀏覽檔案。

Launch Wi-Copy App. You can see **Videos**, **Photos**, **Music** and **Documents** folder and your SD card/ USB flash drive files would be automatically classified. Or you can click Folder view; then browse and view the files.

5. 自 SD Card/ USB 隨身碟傳送檔案到 iPad/ iPhone

請點按畫面右上角的 Edit 可以開始選擇檔案,選擇完畢後再按左下方的小圖示,便可以進行下載、移動、更名或刪除等動作。

Download files from Wi-Copy. Click Edit at the up-right of the screen and you will be able to select the file(s) to download to Photos App/ download to Wi-Copy App(in Collections section), Move, Rename or Delete.

6. 將相簿裡的相片影片傳送至 SD Card/ USB 隨身碟

請點按收藏區的圖示,再點選從相片膠捲上傳。便可以開始選擇相片/影片。選取後請點按 Done,就完成傳送檔案至 SD Card/ USB 隨身碟。
Upload pictures/ videos from Camera roll or files in Collections.
Click Collections icon and then click "Upload From Camera Roll"

You can select pictures/ videos to upload. After selecting the files; click done to complete upload the files.

Wi-Copy App 支援的檔案格式如下/Wi-Copy Supports files format as follows

● 影片 Video: M4V/MP4/MOV ● 音樂 Music: MP3/WAV/AAC

● 相片 Picture: JPG/BMP/PNG/GIF

● 文件 Ducument: PDF/DOC/PPT/TXT/HTM/XLS

2.2 如何輕鬆將飯店有線網路轉成無線網路/ Easy create a wireless network at hotel room

使用飯店網路線(在不需使用者帳號以及密碼的情況下)/ With internet cable (need no User name/Password)

- 1. 連接網路線至 Wi-Copy 的 WAN Port。

 Connect the internet cable to Wi-Copy WAN port.
- 2. 將網路線另一端接到飯店的網路孔。

 Connect the other end of the cable to Ethernet hole of hotel (or ISP router).
- 3. 打開 Wi-Copy 電源並等待約 35 秒。

 Power on the Wi-Copy and wait about 35 sec
- **4.** 在 iPad 或 iPhone 的"**設定-WiFi**"中選取 Wi-Copy_xxxxxx。(標示如 Wi-Copy 本體背後之 SSID) 。

Choose a WiFi Network: "Wi-Copy_xxxxxxxx"(See individual SSID of each Wi-Copy)

- 5. 打開 iPad/ iPhone 瀏覽器(例如 Safari), 你現在應已連上網路了!

 Open iPad / iPhone Browser ex. Safari, and you should get on Internet now!
- 更改密碼I Password Change

連結至 Wi-Copy(見 2.3 步驟 1-5)

在右邊功能欄點選 Wireless,於下拉選單中的 Security 裡的 Encryption 可選擇加密方式。

開啟 Wi-Copy 密碼保護功能將可預防任何未經授權的連結至無線網路或讀卡功能,Encryption 中可選擇加密方式,請在 Pre-share Key 欄位設定 Wi-Copy 密碼,更改後請點選 Apply Changes 以利設定更新。

At "Wireless" - "Security" (See **2.3 step 1 – 5** to enter setup page)

Choose the type of Encryption.

Turning on the Wi-Copy Security will prevent any unauthorized access to the wireless network and storage device. Setup the password of Wi-Copy at Pre-Share Key, after updating it, please click **Apply Changes**.

● 更改 Wi-Copy 無線網路名稱/ Change the name of SSID

連結至 Wi-Copy(見 2.3 步驟 1-5)

在右邊功能欄點選 Wireless,於下拉選單中的 Basic Settings 裡的 SSID 欄位可更改 Wi-Copy 網路名稱。更改後請點選 Apply Changes 以利設定更新。

At "Wireless" – "Basic Settings" (See **2.3 step 1 – 5** to enter setup page)

You can change the name of SSID for your Wi-Copy. Click **Apply Changes** while done.

2.3 如何設定無線網路環境(插網路線)/ How to setup a wireless network (with an internet cable)

- 若家中使用 ADSL 寬頻網路(Gateway mode)/
 For ADSL (Gateway mode)
- 1. 開啟 Wi-Copy 電源並等待 35 秒。

 Power on the Wi-Copy and wait about 35 sec
- 在無線網路列表中選擇 Wi-Copy_xxxxxxx。
 Choose a WiFi Network: "Wi-Copy_xxxxxxxxx"

- 3. 在 iPad/ iPhone 開啟瀏覽器(例如 Safari) 。
 Open iPad / iPhone Native Browser Safari
- 4. 在瀏覽器地址列中輸入 http://10.10.1.1 Enter: http://10.10.1.1/ in URL-address
- 5. 請進入畫面右上角的 Settings。

 The following screen will show up and click "Settings" on Up-right corner.
- 6. 此步驟請直接點按 Next。

 Refer to the following Web U/I and click "Next".

7. LAN Interface Setup

為了同時使用 Wi-Copy 的讀卡功能,你不需要更新 IP Address 以及 Subnet mask。請直接點按 Next。

In order to use storage function of Wi-Copy, you don't need to update the IP addresses, subnet mask for Wi-Copy. Please click "Next" directly to skip it.

8. WAN Interface Setup

在此以 ADSL 寬頻網路為例設定,請選擇 PPPoE 撥號網路,並請輸入網路供應商提供的使用者名稱以及密碼,然後點按 Next。

若是透過網路分享器連網,或只是使用無線讀卡機傳送資料,可以維持 "DHCP Client"的設定值,可以直接點選 Next。

For Example: Select PPPoE for ADSL on WAN interface. User Name and Password need to be done and click "Next". If Wi-Copy would be connected to internet through your original router or you just want to use the storage function of Wi-Copy, you can keep it in "DHCP Client" and click "Next" directly.

- 9. 在 Wireless Basic Settings,你可以更改 Wi-Copy 的無線網路名稱,若不想要變動名稱,也可以直接點按 Next。
 Wireless Basic Settings for using different SSID for your
 Wi-Copy. Also, if you do not want to change it, please click
 "Next" directly.
- 10. 在 Wireless Security 設定中,於 Encryption 可選擇加密方式。 開啟 Wi-Copy 密碼保護功能將可預防任何未經授權的連結至無 線網路或讀卡功能,在更新後點選 Finished 並等待約 20 秒,以 連結至您新設定的 SSID 或密碼。

At "Wireless" - "Security" (See 2.3 step 1 – 5 to enter setup page)

Choose the type of Encryption.

Turning on the Wi-Copy Security will prevent any unauthorized access to the wireless network and storage device. Setup the password of Wi-Copy at Pre-Share Key, after updating it,

2.4 如何設定無線網路環境(不插網路線,直接連線至現有無線分享器) How to setup a wireless network (without an internet cable, connect to original wireless router)

- 無線網路橋接模式/WiFi Repeater Mode
- 1. 開啟 Wi-Copy 電源並等待 35 秒。
 Power on the Wi-Copy and wait about 35 sec
- 在無線網路列表中選擇 Wi-Copy_xxxxxxx。
 Choose a WiFi Network: "Wi-Copy_xxxxxxxxx."
- 3. 在 iPad/ iPhone 開啟瀏覽器(例如 Safari)。

 Open iPad / iPhone Native Browser Safari.
- 4. 在瀏覽器地址列中輸入 http://10.10.1.1 http://10.10.1.1 in URL-address.
- 5. 請進入畫面右上角的 Settings。

 The following screen will show up and click "Settings" on Up-right corner.

- 6. 請選擇 WiFi Repeater 並點接 Next。

 Refer to the following Web U/I and click "Next".
- 7. 為了同時使用 Wi-Copy 的讀卡功能,在 LAN Interface Setup 中不需要更新 IP Address 以及 Subnet mask。請直接點接 Next。
 LAN Interface Setup In order to use storage function of
 Wi-Copy, you don't need to update the IP addresses, subnet
 mask for Wi-Copy. Please click "Next" directly to skip it.
- 8. 在 WAN Interface Setup,請使用預設值"DHCP Client"並點按 Next。
 - WAN Interface Setup. Please keep it in "DHCP Client" and click "Next" directly to skip it.
- 9. 在 Wireless Basic Settings,你可以更改 Wi-Copy 的 SSID(無線網路名稱),若不想要變動名稱,也可以直接點按 Next。
 Wireless Basic Settings for using different SSID for your
 Wi-Copy. Also, if you do not want to change it, please
 click "Next" directly.
- 10. 在 Wireless Security 設定中,於 Encryption 中可選擇加密方式。 開啟 Wi-Copy 密碼保護功能將可預防任何未經授權的連結至無 線網路或讀卡功能,請在 Pre-share Key 欄位設定 Wi-Copy 密 碼,更新後請點選 Next。

Wireless Security Setting. The following figure is to show setting up the security of the Wi-Copy. Turning on the Wi-Copy security will prevent any unauthorized access to the wireless network and storage device. After updating it, please click "Next" directly.

- **11.** 在 Wireless Site Survey, 請選擇欲連接至現有無線分享器名稱, 並點按 Next。
 - Wireless Site Survey. You can select one of the Wireless Router w. ISP connection, then click "Next".
- **12.** 接著在 Select Wireless Security mode, 在 Pre-Share Key 欄位 請輸入現有無線分享器密碼後點按 Finished,等待約 70 秒,即完 成設定變更。
 - Please input (key in) the password of Wireless Router, then please click "Finished" and wait about 70 seconds to finish setup.
- 13. 設定完成之後,將可以透過橋接現有的無線網路,同時達成上網 與無線讀卡機之資料傳輸需求。
 - After that, Wi-Copy will connect to the ISP Router through Wireless. Also, you can use both storage function and Internet by Wi-Copy.

2.5 行動電源功能/ Powerbank Function

Wi-Copy 內建可充電 5200mAh 電池,可做為智慧型手機的行動電力站。

Wi-Copy has a built-in 5200mAn rechargeable battery and it can serve as a Powerbank for Smartphones.

如何幫智慧型手機充電:請先將 Wi-Copy 本體開關切換到左手邊以啟動行動電源功能(電池圖示上方),再將欲充電的智慧型手機連結至 Wi-Copy 的 USB 連接埠,即會開始充電。

How to charge a Smartphone: Please make sure the button of Wi-Copy is on the left side (above the battery icon). Plug your Smartphone to the USB port of Wi-Copy, and the charging will begin immediately.

NCC警語

第十二條:

經型式認證合格之低功率射頻電機,非經許可,公司、商號或使用者 均不得得擅自變更頻率、加大功率或變更通原計之特性及功能。

第十四條:

低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有 干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。

前項合法通信,指依電信法規定作業之無線電通信。低功率射頻電機 須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

FCC Compliance and Advisory Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try correct the interference by one or more of the following measures:

- 1. Reorient the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- 3. Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- 4.Consult the dealer or an experienced radio/TV technician for help. Any special accessories needed for compliance must be specified in the instruction manual.

Warning: A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used. Use only shielded cables to connect I/O devices to this equipment.

CAUSION: Any changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.