
Delta Series Mifare Readers Quick Reference Guide

The Delta Series models include the Delta3, Delta5, and Delta 6.4. The Delta 6.4 is simply a Delta5 with a keypad attachment.

All Delta Series Readers are compliant with the following organizations:







FCC compliance Statement: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes made to this equipment that is not authorized by Farpointe Data Inc. may void the user's authority to operate the equipment.

Cable Requirements

All readers operate at up to 500 feet (152 m) of cable, using nine-conductor, shielded, stranded cable. Per the Security Industry Association's Wiegand specification, AWG 24 (such as Belden 9539) is the minimum gauge required for data transfer in a 500-foot run length. However, the proper wire gauge to use must be determined by the current draw requirements of the reader, the length of the cable run, and the voltage applied to the reader.

If the reader is to be operated at 5 VDC, 5 VDC must be available at the reader (long cable runs have a voltage drop due to the resistance in the cable). A larger gauge of wire (having less resistance) or a separate power supply near the reader may be required to ensure 5 VDC is available at the reader.

Reader Modes

Delta Series readers can be configured to operate in any of the following modes:

- Sector Only Mode: Reader looks for access control data in a secure sector but if no valid data is found the reader outputs nothing. This is the default mode.
- CSN Only Mode: Reader does not look for access control data in a secure sector data and simply outputs the card's CSN.
- Sector Plus CSN Mode: reader looks for access control data in a secure sector but if none is found the reader outputs the card's CSN instead.

3.0 **CSN Output Formats**

Delta Series readers can be configured to output the card's CSN in any of the following ways:

- 32-bit Wiegand: The reader outputs the 32-bit CSN as Wiegand data starting with the MSB. This is the default mode.
- 26-bit Wiegand: The reader outputs 26-bit Wiegand data comprised of the 16 lower bits of the 32-bit CSN, fixed 8-bit facility code, and beginning and ending parity bits. Facility code defaults to 001 (Note: cutting off 16 MSBs from CSN can cause card duplication).
- 34-bit Wiegand: The reader outputs 34-bit Wiegand data comprised of the 32-bit CSN MSB first plus beginning and ending parity bits.
- 40-bit Wiegand: The reader outputs 40-bit Wiegand data comprised of the 32-bit CSN followed by an 8-bit check sum.
- Magnetic Stripe (ABA Track II, clock and data, with card present): 32-bit CSN is output in ABA Track II format.

4.0 **Secure Sector Access Control Data Output Formats**

Access control data programmed onto a secure mifare sector can be output in any of the following ways:

- Wiegand (industry standard 26-bit Wiegand and custom formats)
- Magnetic Stripe (ABA Track II, clock and data, with card present)

5.0 Grounding

Shield (drain) continuity must run from the reader to the access panel. Shield (drain) and reader ground must be tied together at the access panel and connect to an earth ground at one point.

6.0 **Power**



2177 Leghorn Street

Mountain View, CA 94043-1605 USA

1 of 2

05465-001 Rev. 1.1

Web: http://www.farpointedata.com E-mail: sales@pyramidseries.com

Delta Series Mifare Readers Quick Reference Guide


A reader may be powered by the access panel, so the reader is powered on when the access supply is powered on. However the best case is to power the reader by a separate, linear power supply.

7.0

Can range from 5 to 14 VDC, 12 VDC is nominal

8.0 Reader Wiring

Please note that at minimum the power, ground, data 0, and data 1 lines must be connected to the access panel. Other lines are for additional functionality.

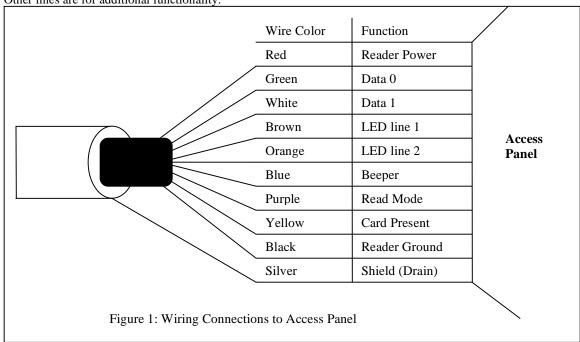

9.0 Connections in Detail

9.0 Connections in Detail			
Wire Color	Line	I/O	Description
Red	Reader Input voltage	Input	5 to 14 VDC
Green	Wiegand data 0/	Output	Wiegand data or ABA Track II clock
	Magstripe Clock		
White	Wiegand data 1/	Output	Wiegand data or ABA Track II data
	Magstripe Data		
Brown	Red LED host control	Input	LED host control. In single line LED control
			mode (default mode) pull line low to turn on
			green LED. In dual line LED mode pull line
			low to turn on Red LED
Orange	Green LED host	Input	LED host control, only used in dual LED mode.
	control		In dual LED mode pull line low to turn on
			green LED.
Blue	Audio tone host	Input	Beeper host control. Pull line low for beep.
	control		
Purple	Read mode control	Input	Read mode host control. Pull line low for
			"CSN Only" mode.
Yellow	Card Present	Output (can be	Card present line for ABA Track II magnetic
		configured as TTL or	stripe output.
		open collector)	
Black	Reader Ground	Input	Reader Ground
Silver	Cable shield	N/A	Cable shield (drain), should be grounded



2177 Leghorn Street

05465-001 Rev. 1.1

Mountain View, CA 94043-1605

2 of 2

Web: http://www.farpointedata.com E-mail: sales@pyramidseries.com

Delta Series Mifare Readers Quick Reference Guide

Mifare® is a registered trademark of Philips Electronics N.V.

05465-001 Rev. 1.1