





IP based Fingerprint Access Control

Installation Guide (ver 1.0)

www.supremainc.com





Contents

Safety precautions	3
Basics of fingerprint recognition	5
How to place a finger	6
Product Contents	8
Front Side	10
Bottom and Back Side	11
Product Dimension	12
Cables and Connectors	13
Installation of Wall-mount Bracket	14
Power Connection	15
Ethernet Connection	16
RS485 Connection	18
Relay Connection	20
Digital Input Connection	23
Wiegand Output	25
Installation Reference	26
Electrical Specification	29
General Specification	30
Troubleshooting	31
Device cleaning	32
FCC Rules	33
Caution	34





Safety precautions

The list below is to keep user's safety and prevent any loss. Please read carefully before use.



Do not install the device in a place subject to direct sun light, humidity, dust or soot.



Be careful not to let liquid like water, drinks or chemicals leak inside the device.



Do not place a magnet near the pr oduct. Magnetic objects such as magnet, CRT, TV, monitor or spe aker may damage the device.



Clean the device often to remove dust on it.



Do not place the device next to heating equipments.



In cleaning, do not splash water on the device but wipe it out with smooth cloth or towel.





Safety precautions

The list below is to keep user's safety and prevent any loss. Please read carefully before use.



Do not drop the device.

Do not let children touch the

device without supervision.





Do not use the device for any other purpose than specified.



Do not disassemble, repair or alter the device.



Contact your nearest dealer in case of a trouble or problem.





Basics of fingerprint recognition

What is fingerprint recognition?

- Fingerprint is an individual's own biometric information and does not change throughout his/her life. Fingerprint recognition is a technology that verifies or identifies an individual using such fingerprint information.
- Free from the risk of theft or loss, fingerprint recognition technology is being widely used in security systems replacing PIN or cards.

Process of fingerprint recognition

- Fingerprint consists of ridges and valleys. Ridge is a flow of protruding skin in a fingerprint while
 valley is a hollow between two ridges. Each individual has different pattern of ridges and valleys
 and finger recognition makes use of such originality and uniqueness of these patterns.
- Fingerprint sensor generates 2-dimentional fingerprint image using different technology. According to the sensing technology, fingerprint sensors are classified into optical, capacitive, or thermal.
- Fingerprint template is a collection of numeric data representing the features of a fingerprint. Fingerprint templates are saved inside the memory of BioStation and used for identification.

Secure way to protect personal information

• To avoid privacy concern, Suprema's fingerprint products do not save fingerprint images itself. It is impossible to reconstruct a fingerprint image from a fingerprint template which is just numeric data of the features of a fingerprint.






How to place a finger


Suprema's fingerprint products show an outstanding recognition performance regardless of the user's fingerprint skin condition or the way of fingerprint positioning. However, following tips are recommended to get more optimal fingerprint recognition performance.

Select a finger to enroll

- It is recommended to use an index finger or a middle finger.
- Thumb, ring or little finger is relatively more difficult to place in a correct position.



- Place a finger such that it completely covers the sensor area with maximum contact.
- Place core part of a fingerprint to the center of a sensor.
 - People tend to place upper part of a finger.
 - The core of a fingerprint is a center where the spiral of ridges is dense.
 - Usually core of fingerprint is the opposite side of the lower part of a nail.
 - Place a finger such that the bottom end of a nail is located at the center of a sensor.
- If a finger is placed as in the right picture, only a small area of a finger is captured. So it is recommended to place a finger as shown in the left picture.

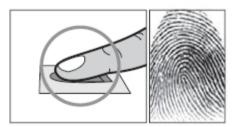







How to place a finger

Tips for different fingerprint conditions

- Suprema's fingerprint products are designed to scan fingerprint smoothly regardless of the conditions of a finger skin. However, in case a fingerprint is not read well on the sensor, please refer to the followings tips.
 - If a finger is stained with sweat or water, scan after wiping moisture off.
 - If a finger is covered with dust or impurities, scan after wiping them off.
 - If a finger is way too dry, place after blowing warm breath on the finger tip.

Tips for fingerprint enrollment

- In fingerprint recognition, enrollment process is very important. When enrolling a fingerprint, please try to place a finger correctly with care.
- In case of low acceptance ratio, the following actions are recommended.
 - Delete the enrolled fingerprint and re-enroll the finger.
 - Enroll the same fingerprint additionally.
 - Try another finger if a finger is not easy to enroll due to scar or worn-out.
- For the case when an enrolled fingerprint cannot be used due to injury or holding a baggage, it is recommended to enroll more than two fingers per user.






Product Contents

Basic Contents



BioEntry Plus Wall-mounting metal bracket

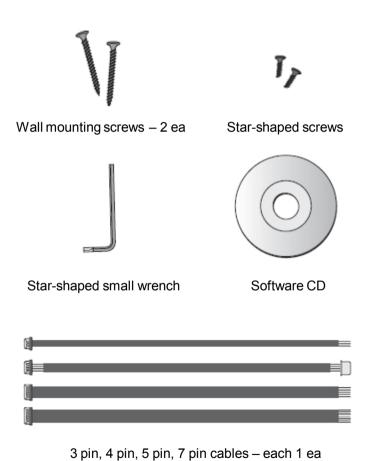





Product Contents

Optional accessories







12V power adaptor



Plastic stand



USB fingerprint scanner for enrollment on PC





Front Side

Front



- RF card reading part
 Place an RF card over the picture
 - LED

 Display current status using seven different colors
 - Fingerprint sensing part
 Place a finger on a sensor
 surface

LED Status per Color

- Green: Authorization Success
- Red : Authorization Fail
- Pink: On Processing
- Flicker Blue/Sky-Blue Color per 2sec : Normal
- Flicker Red/Pink Color per 2sec : Locked
- Flicker Blue/Red Color per 2sec : Initialized Time due to the Internal Battery Discharge
- Flicker Blue/Yellow Color per 2sec : DHCP Fail
- Flicker Red Color per 2sec : Failed. Please contact to your distributor or Suprema
- Flicker Yellow Color per 2sec : Waiting Input
- Flicker Yellow Color per 1sec : Receiving IP Address from DHCP server






Bottom and Back Side

Bottom




Back

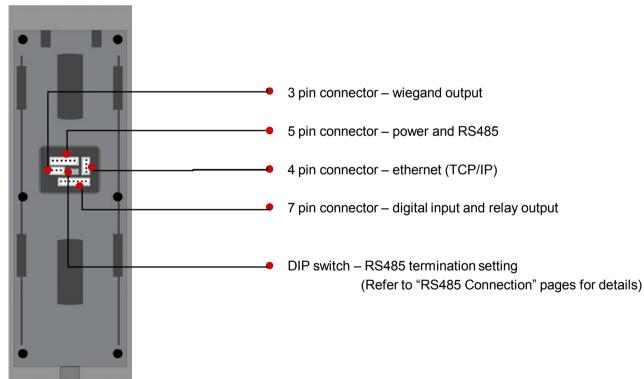






Product Dimension

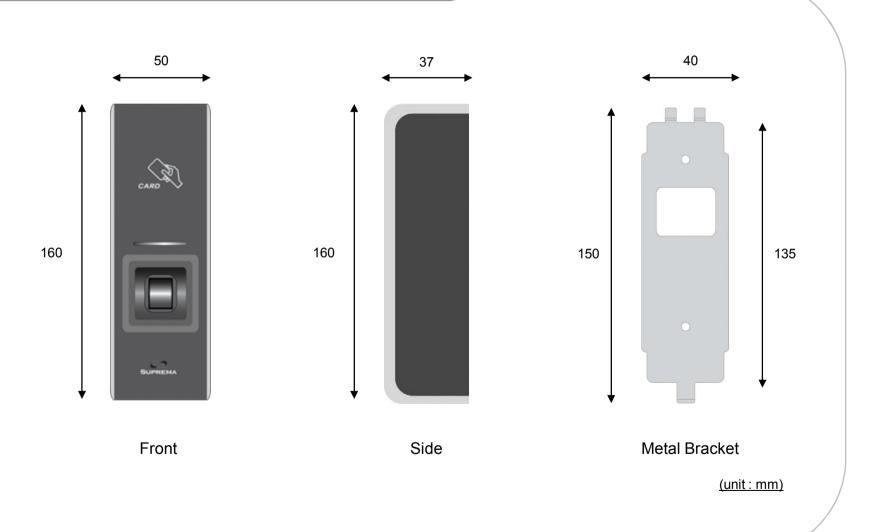





Cables and Connectors

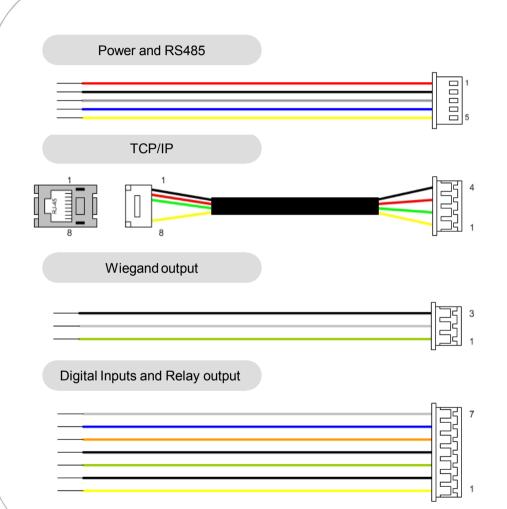

PIN	PIN DESCRIPTION	WIRE
1	POWER+12V	RED
2	POWER GND	BLACK
3	RS -485 GND	GRAY
4	RS -485 TRX+	BLUE
5	RS -485 TRX-	YELLOW

PIN	PIN DESCRIPTION	WIRE	RJ45 PIN
1	TX +	YELLOW	6
2	TX -	GREEN	3
3	RX +	RED	2
4	RX -	BLACK	1

PIN	PIN DESCRIPTION	WIRE
1	WIEGAND DATA0	GREEN
2	WIEGAND DATA1	WHITE
3	WIEGAND GND	BLACK


PIN	PIN DESCRIPTION	WIRE
1	SW1 INPUT	YELLOW
2	SW1 GND	BLACK
3	SW2 INPUT	GREEN
4	SW2 GND	BLACK
5	RELAY NORMAL CLOSE	ORANGE
6	RELAY COMMON	BLUE
7	RELAY NORMAL OPEN	WHITE






Installation of Wall-mount Bracket

Fix wall mount bracket on a wall using wall mounting screws

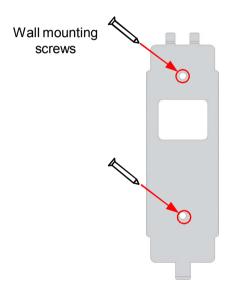




Hook BioEntry Plus on the wall mount bracket

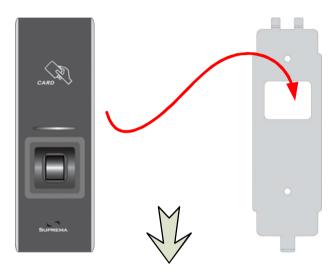

Fix BioStation and wall mounting bracket using a star shape screw.

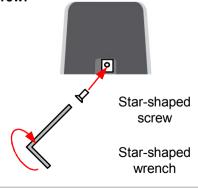






Power Connection UPS (optional) (1) Power 12V (Red) DC (2) Power GND (Black) Power supply (3) Signal GND (Gray) RS-485 (4) TRX+ (Blue) (5) TRX- (Yellow) BioEntry Plus **Recommended power supply** \bullet 12V \pm 10%, at least 1500mA. • Comply with standard IEC/EN 60950-1. • To share the power with other devices, use a power supply with higher current ratings.





Ethernet Connection

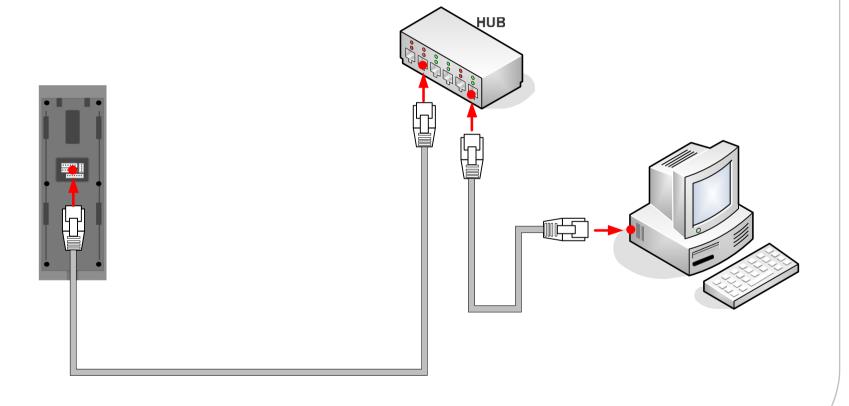






Ethernet Connection (Direct connection with PC)


To connect BioEntry Plus with a PC directly, connect both devices with a straight CAT-5 cable. As the BioEntry Plus supports auto MDI/MDIX feature, it is not necessary to use a crossover type cable.

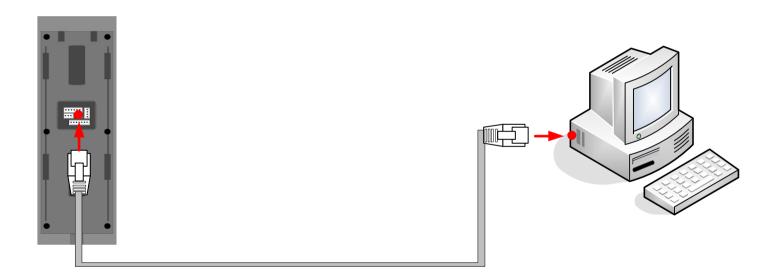






RS485 Connection for Host Communication

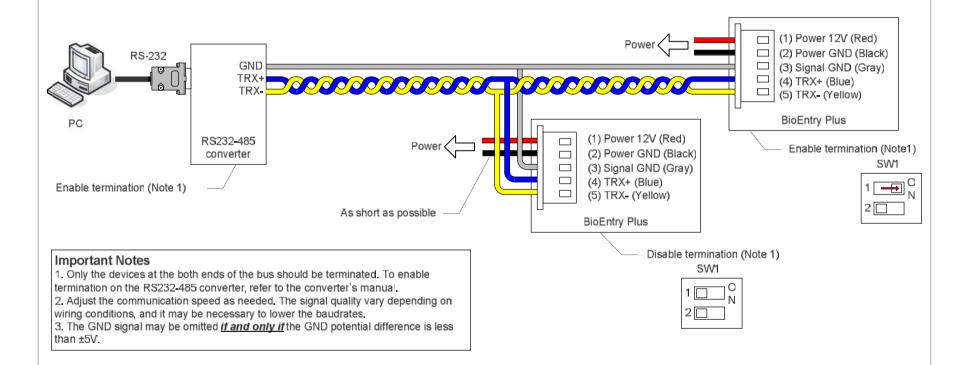





RS485 Connection for Secure I/O

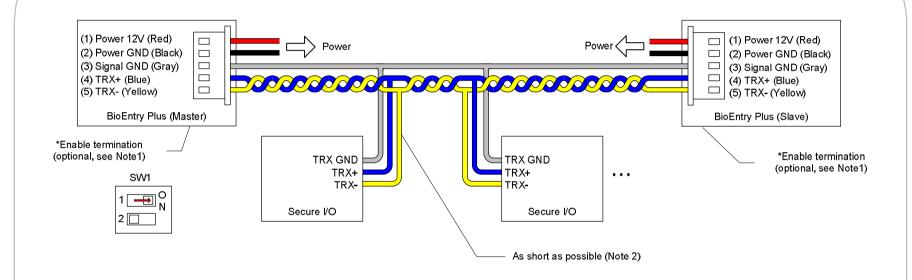

Important Notes


- 1. For bus termination, only the devices at both ends of the bus should be terminated.
- To enable termination on the RS232-485 converter, refer to the converter's manual.
- 2. The stubs should be as short as practical

Max number of devices

• Maximum numbers of devices in an RS485 loop are two(2) devices (BioStation or BioEntry Plus) and four(4) Secure I/Os






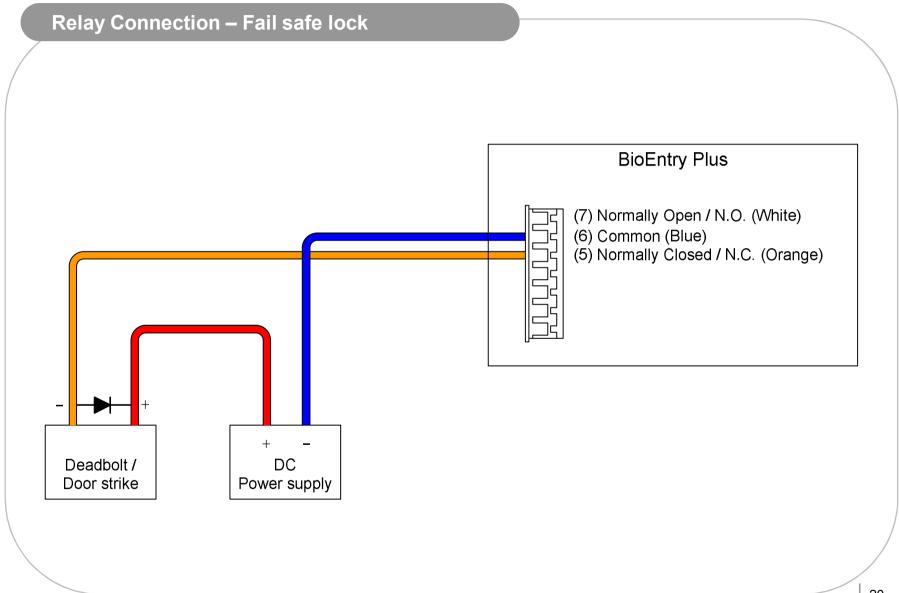






Relay Connection – Fail secure lock

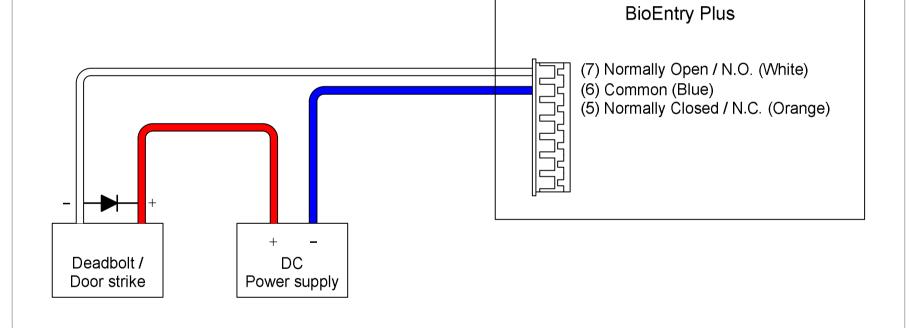






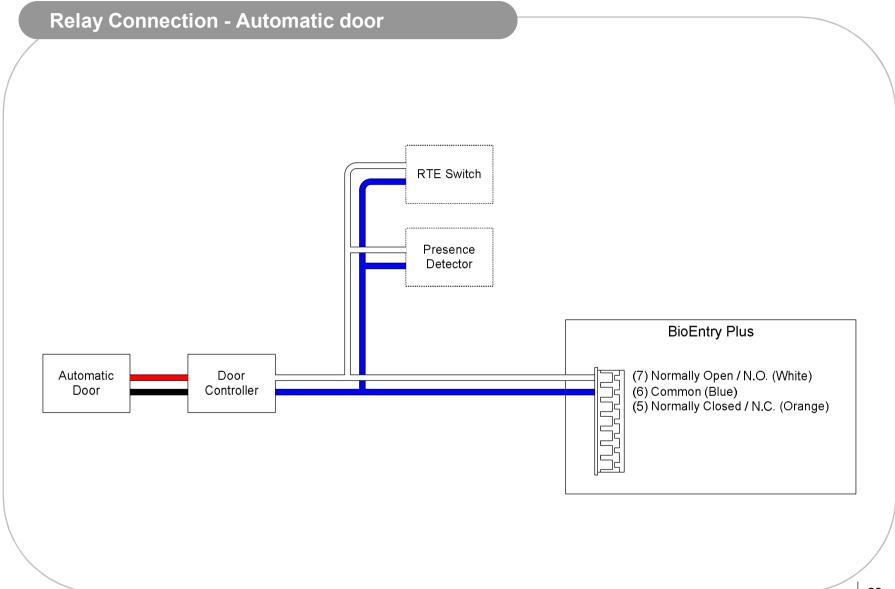






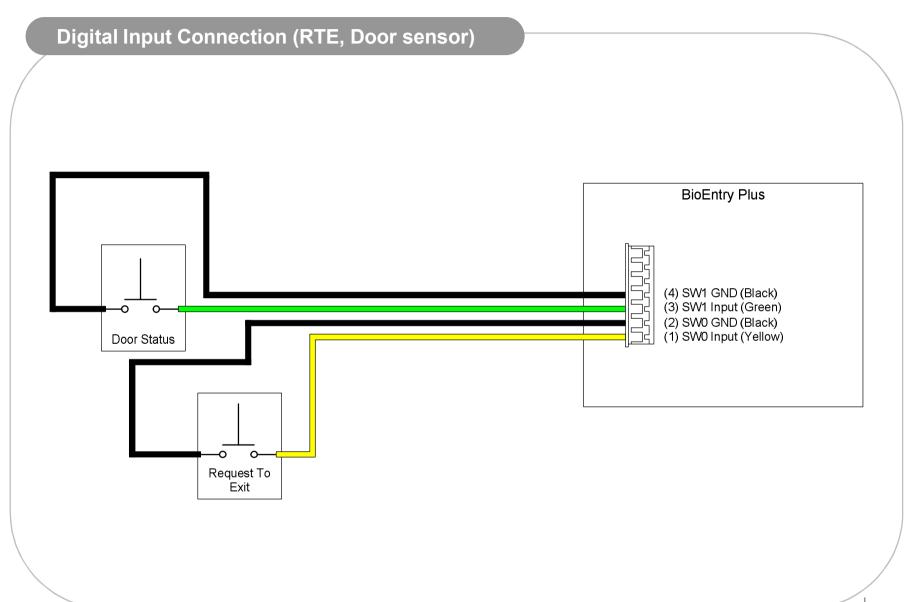








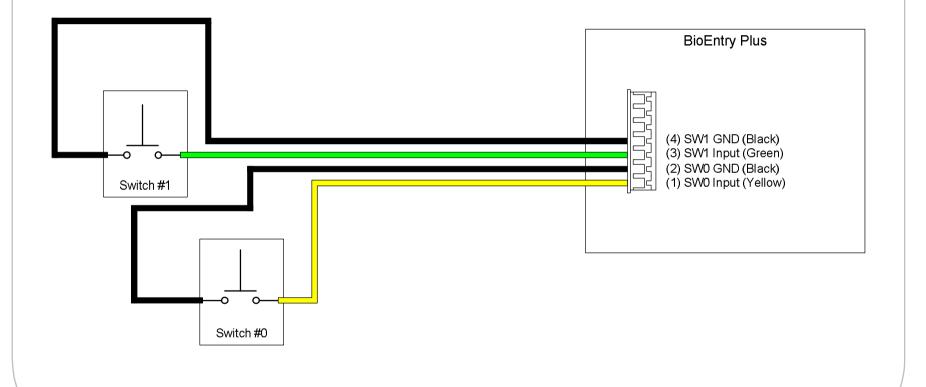






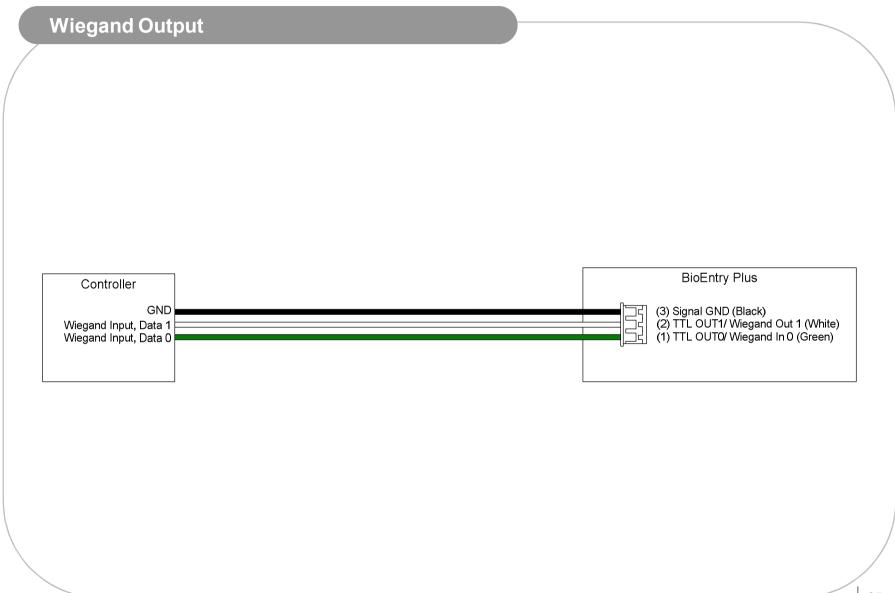






Door Sensor Door Lock Exit Button

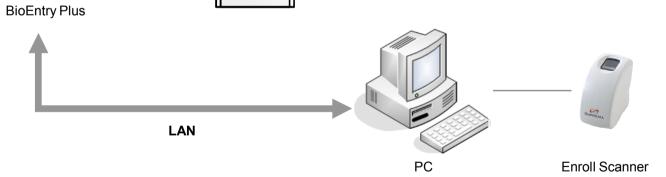






Installation Reference 2 – Secure

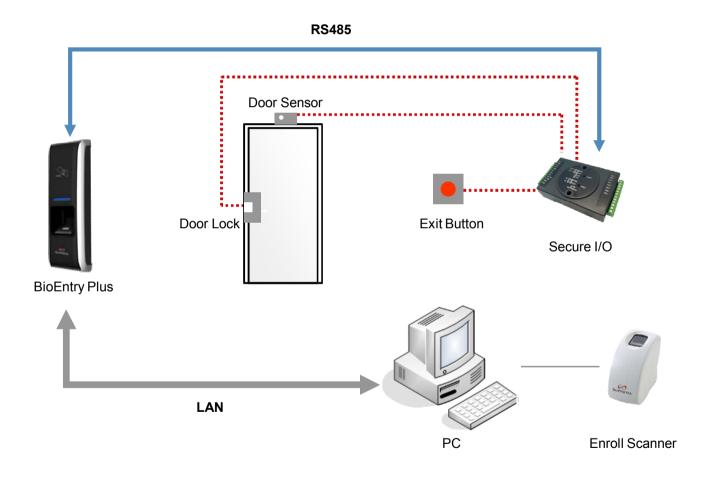





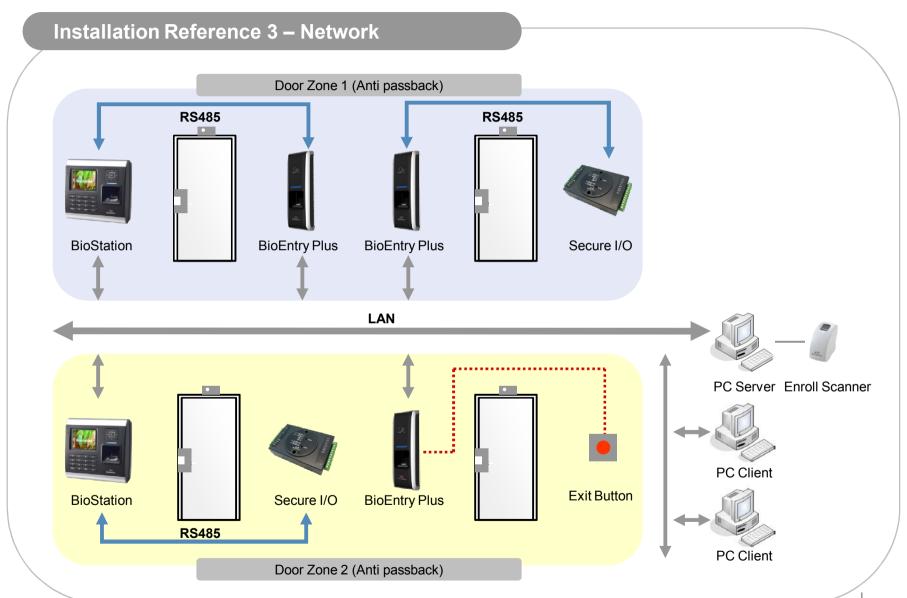





Electrical Specification

	Min.	Тур.	Max.	Notes
Power				
Voltage (V)	10.8	12	13.2	Use regulated DC power adaptor only
Current (mA)	-		250	
Switch Input				
V _{IH} (V)	-	TBD	-	
V _{IL} (V)	-	TBD		
Pull-up resistance (Ω)	-	4.7k	-	The input ports are pulled up with 4.7k resistors
TTL/Wiegand Output				
V _{OH} (V)	-	5	-	
V _{OL} (V)	-	0.8	-	
Pull-up resistance (Ω)	-	4.7k	-	The outputs ports are open drain type, pulled up with 4.7k resistors internally
Relay				
Switching capacity (A)	-	-	1 0.3	30V DC 125V AC
Switching power (resistive)	-	-	30W 37.5VA	DC AC
Switching voltage (V)	-	-	110 125	DC AC





General Specification

Item	Specification			
CPU	400MHz DSP			
Fingerprint Sensor	OC Model : Optical Sensor TC Model : Capacitive Sensor			
IN/OUT	Relay Out x 1, Switch Input x 2, Wiegand In/Out x 1 RS-485 x 1, Ethernet x 1			
Power Input Rate	DC12V, Max 250mA			
Support Cards	BioEntey Plus OC/TC Model (BEPL-OC/TC): - 125KHz EM4100 Compatible Card Read BioEntry Plus HID OC/TC Model (BEPH-OC/TC) - 125KHz HID Prox Compatible Card Read BioEntry Plus Mifare OC/TC Model (BEPM-OC/TC) - 13.56MHz Mifare Card Read/Write - 13.56MHz ISO14443A Card CSN Read			
Size	50 x 160 x 38 (Width x Height x Depth)			
Certified	KCC, CE, FCC			





Troubleshooting

- Fingerprint can not be read well or it takes too long.
 - Check whether a finger or fingerprint sensor is stained with sweat, water, or dust
 - Retry after wiping off finger and fingerprint sensor with dry towel.
 - If a fingerprint is way too dry, blow on the finger and retry.
- Fingerprint is entered but authorization keeps failing.
 - Check whether the user is restricted by door zone or time zone.
 - Inquire of administrator whether the enrolled fingerprint has been deleted frin the device for some reason.
- Authorized but door is not opened.
 - Check whether the time is set as lock time.
 - Check whether an antipass back mode is in use. In antipass back mode, only who entered can exit.
- Device doesn't operate though power is connected.
 - Check whether a device and a bracket is well connected to each other. If not, a tamper switch is activated and the device doesn't work.





Device cleaning

- Wipe out machine surface with dry towel or cloth.
- In case there is dust or impurities on the sensor of the BioStation, wipe off the surface with dry towel.
- Note that if the sensor is cleaned by detergent, benzene or thinner, surface is damaged and fingerprint can't be entered.









FCC Rules

Caution

 Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Warning

 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Information to User

- This equipment has been tested and found to comply with the limit of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, user and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guaranteee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - 1. Reorient / Relocate the receiving antenna.
 - 2. Increase the separation between the equipment and receiver.
 - 3. Connect the equipment into an outlet on a circuit difference from that to which the receiver is connected.
 - 4. Consult the dealer or an experienced radio/TV technician for help





Caution

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
- DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



Suprema Inc. 16F Parkview Office Tower, Jeongja-dong, Bundang-gu, Seongnam, Gyeonggi, 463-863 Korea

E-mail : support@supremainc.com
Website : www.supremainc.com

Functions and specifications of the product are subject to changes without notice due to quality enhancement or function update. For any inquiry on the product, please contact **Suprema Inc**.