

**Annex acc. to FCC Title 47 CFR Part 95 M
relating to
s.m.s, smart microwave sensors GmbH
DRVEGRD 171**

Annex no. 5 User Manual Functional Description

**Title 47 - Telecommunication
Part 95 - Personal Radio Services
Subpart M – The 76 – 81 GHz Band Radar Service
Measurement Procedure:
ANSI C63.26-2015**



Deutsche
Akkreditierungsstelle
D-PL-12053-01-03

DRVEGRD 171 RED USER MANUAL

PROJECT TITLE:

DRVEGRD 171 RED USER MANUAL

PROJECT NO.:

KEYWORD(S):

DRVEGRD 171 RADAR SENSOR

DATE:

21. JULY, 2023

STATUS:

IN PROGRESS

s.m.s, smart microwave sensors GmbH
In den Waashainen 1
38108 Braunschweig
Germany

Phone: +49 531 39023-0
Fax: +49 531 39023-599
info@smartmicro.de
www.smartmicro.com

1 CONTENTS

| | | |
|-----|--|----|
| 1 | Contents | 2 |
| 2 | Abbreviations | 3 |
| 3 | Introduction..... | 4 |
| 4 | General description..... | 5 |
| 4.1 | Sensor description | 5 |
| 4.2 | Transmit Signal..... | 5 |
| 4.3 | General Performance Data | 6 |
| 4.4 | Self-Diagnosis..... | 7 |
| 4.5 | Sensor Network | 7 |
| 4.6 | Data Logging and Visualisation Tools | 7 |
| 5 | Hardware | 9 |
| 5.1 | DRVEGRD 171 sensor | 9 |
| 5.2 | Sensor Dimensions | 10 |
| 5.3 | Sensor Connector | 11 |
| 5.4 | Sensor and Hardware Identification | 12 |
| 6 | Data interfaces | 13 |
| 6.1 | CAN data interface..... | 13 |
| 6.2 | CAN-Settings | 13 |
| 6.3 | Ethernet Connection..... | 15 |
| 7 | Application-Specific Characteristics | 16 |
| 8 | Compliance for Europe..... | 17 |
| 8.1 | Simplified Declaration of Conformity | 17 |
| 8.2 | Safety Instruction..... | 17 |
| 9 | Legal Disclaimer Notice | 18 |

2 ABBREVIATIONS

| | |
|-------|---|
| ACC | Adaptive cruise control |
| ADC | Analog-to-digital converter |
| AEB | Advanced emergency braking |
| CAN | Controller area network |
| DSP | Digital signal processing; digital signal processor |
| FMCW | Frequency modulated continuous wave |
| RFIC | Radio Frequency integrated circuit |
| RS485 | Physical communication layer standard EIA RS-485 |
| UMRR | Universal medium-range radar |

3 INTRODUCTION

This document is a short documentation of the general purpose universal medium range radar (UMRR) DRVEGRD 171 with type 171 antenna.

4 GENERAL DESCRIPTION

4.1 SENSOR DESCRIPTION

The main task of the UMRR is the detection of any reflectors in the field of view, to measure the distance, the relative speed and the angle to the shortest reflector (and to other reflectors), to detect motion and to track (filter) the results over time.

For this **general purpose measurement application**, range and relative radial speed and the angle value of each reflector inside the antenna beam are measured and the results are reported via the communication links cycle by cycle.

4.2 TRANSMIT SIGNAL

The UMRR transmit frequency is located in the 76 GHz to 77 GHz band, the used bandwidth is smaller than 1 GHz. The maximum transmit power is less than 45dBm.

The DRVEGRD Sensor Type 171 provides 3 modes. Antenna Type 171 consists of six transmit and eight receive antennas, both are linear (horizontal) polarized.

The device uses different FMCW transmit signal waveforms for distance and speed measurement.

4.3 GENERAL PERFORMANCE DATA

After power up or reset, the sensor readings are within specified performance within <10 seconds. In Table 1 the general performance data of DRVEGRD 171 are given.

Table 1: General performance data

| | | |
|-------------------------------|---|----------------------|
| Environmental | | |
| Ambient Temperature | -40 ... +85 | degree C |
| Shock | | |
| Vibration | | |
| IP | 67 | |
| Pressure / Transport altitude | 0...10.000 | m |
| Mechanical | | |
| Weight | ≤ 455 | g |
| Dimensions | 97 x 143 x 25.7mm | |
| Housing Identification | 17 | |
| Antenna Identification | AB (Type 171) | |
| DSP Board Identification | A4 | |
| General | | |
| Power Supply | 7 ... 32 ¹ <7 | V DC W |
| Frequency Band | 76.0...77.0 | GHz |
| Bandwidth | < 1000 | MHz |
| Max. Transmit Power (EIRP) | <45 | dBm |
| Interfaces | 1000BASE-T1 Ethernet 1GBit (2-wire); 2xCAN FD 5Mbit/s | |
| Connector | MX64 Molex Series | CAN, Power, Ethernet |

¹ measured at connector

START-UP TIME

After powering up or resetting, sensor readings meet the specified performance in <10s.

4.4 SELF-DIAGNOSIS

The sensor cyclically reports a status message providing its cycle time, run time and diagnosis information. Additionally, the sensor can also provide sensor mode and status information on request.

The diagnosis information provided by the sensor is an optional self-diagnosis feature to allow limited fail-safe capabilities, which helps in detecting for example:

- Sensor blindness¹
- Detection and automatic suppression of RF interference, or rather signals from other radar sensors operating in the same frequency band

4.5 SENSOR NETWORK

Sensors are typically used standalone. However, for one vehicle multiple sensors can be connected to one sensor fusion ECU. Such networks are possible by using a CAN(FD) or Ethernet interface. All sensors in the network can work on a plug-and-play basis after the configuration of separate frequency channels, which avoid mutual interference. Customer-specific configurations are possible.

4.6 DATA LOGGING AND VISUALISATION TOOLS

Drive Recorder

The visualization of all data (target lists, object lists, etc.) is possible using the Drive Recorder software on a Windows PC. It also provides for example data logging, associated video documentation, play back and analysis functions.

ROS

smartmicro offers Robot Operating System (ROS) support which includes ROS drivers for ROS1/ROS2 environments for easier customer integration of the sensors and ready-to-run real-time visualization using ROS display tools. The proprietary radar protocol can be read into ROS, which facilitates the processing and visualization of radar data.

¹ Not available yet.

Smart Access

In alternative to the provided Drive Recorder or ROS-based solutions, the customer can also develop own software products to interface smartmicro products. For these customer applications, smartmicro provides detailed documentation on topics like the integration of the radar system interface, dbc files or example code (in C). Additionally, smartmicro provides an API developed in-house for easier communication between customer solutions and smartmicro products via Ethernet or CAN/CAN(FD).

5 HARDWARE

5.1 DRVEGRD 171 SENSOR

An example picture of a DRVEGRD 171 sensor is shown below.



Figure 1: Sensor Front view



Figure 2: Sensor Rear view

5.2 SENSOR DIMENSIONS

All values are given in mm.


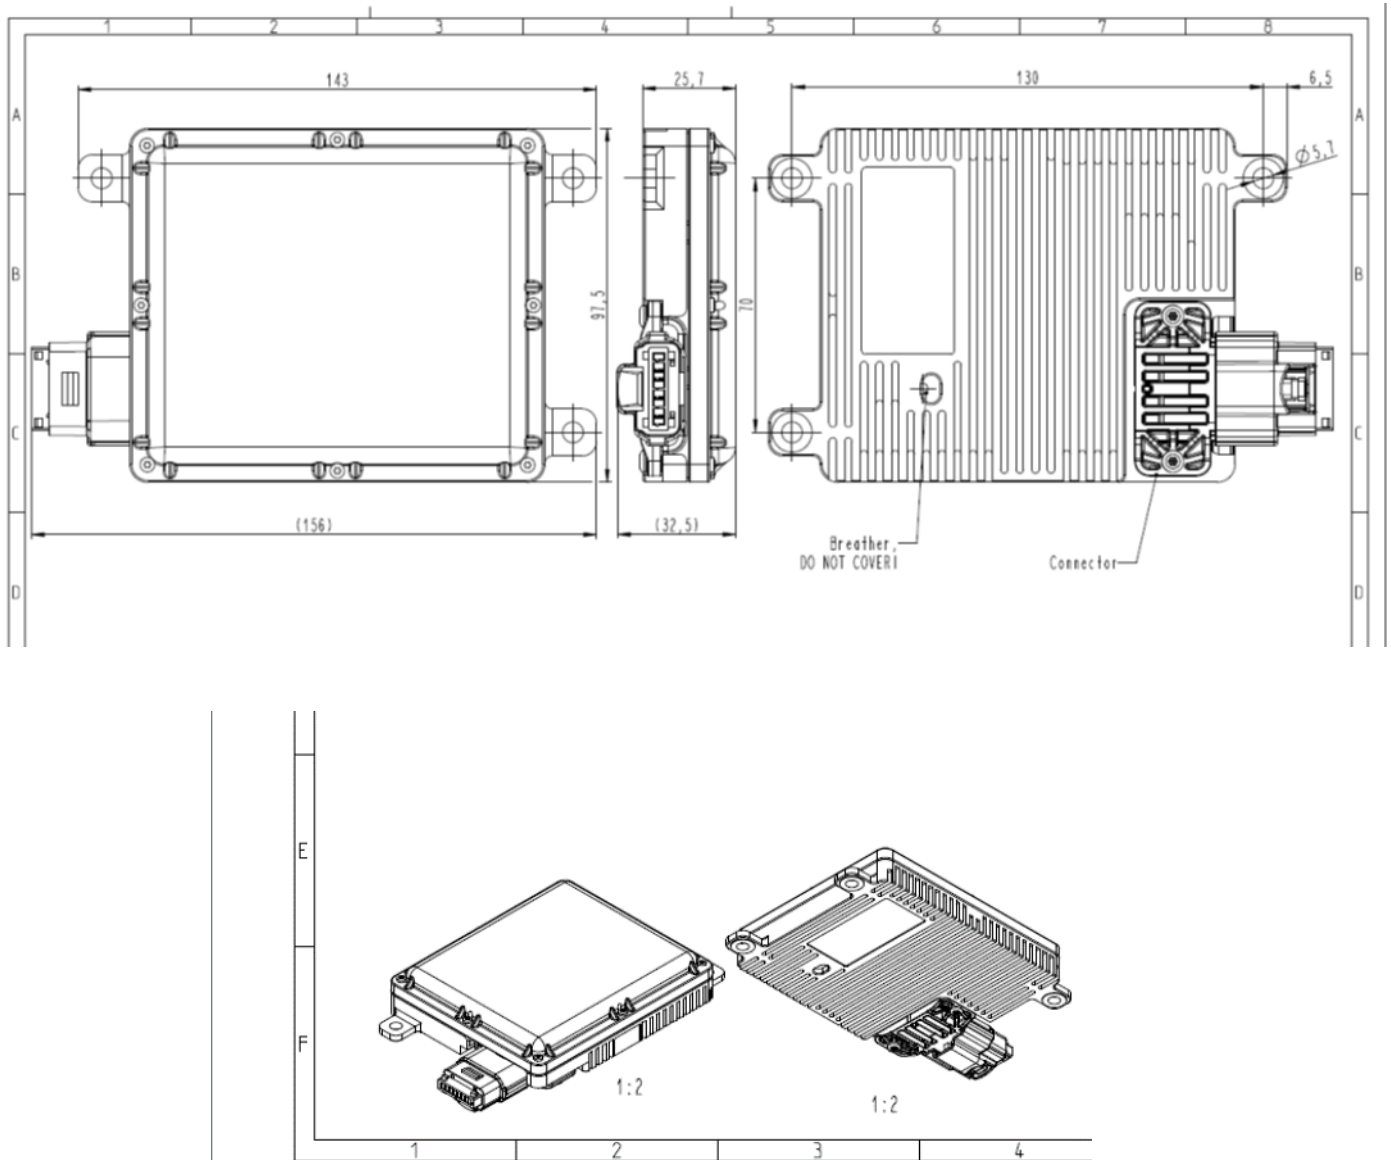


Figure 3: Sensor dimensions

5.3 SENSOR CONNECTOR

The sensor connector is a 8-pin male (plug) connector (waterproof IP67, MX64 Molex Series 31404). A female counterpart (socket), Molex 64 series 31404, must be used to connect with sensor.

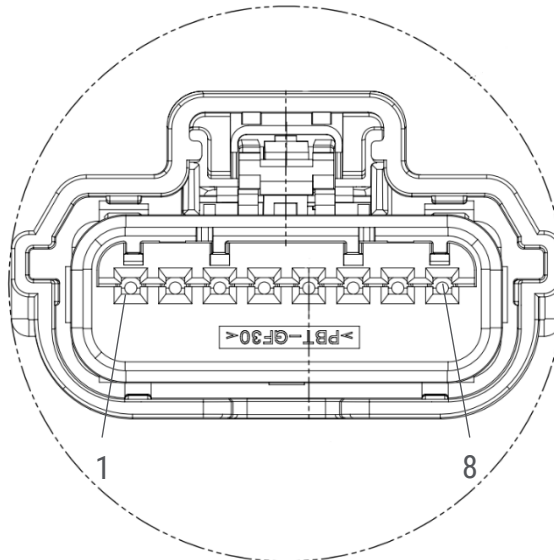

*View on solder cup side of socket showing the pin numbering
(rear view of female counterpart to be connected to sensor)*

Sensor connector pin out:

| Pin No. | Cable Connector |
|---------|-----------------|
| 1 | V_Supply |
| 2 | GND |
| 3 | Auto_Eth_TX_N |
| 4 | Auto_Eth_TX_P |
| 5 | CAN1_N |
| 6 | CAN1_P |
| 7 | CAN0_N |
| 8 | CAN0_P |

Please note that in the standard configuration the sensor does have a 120 Ohms resistor on board for CAN1 (CAN bus termination between CAN L and CAN H). This resistor is required at either end of a CAN bus. CAN0 has high impedance termination (2.6 kOhm).

Several cable sets for initial operation and test purposes are offered by smartmicro, to deliver a fast set-up of a sensor system. Among those preconfigured ready-to-run cables as well as cable stumps (pig tail cables or various lengths) which carry the connector on one side and open wires on the other.

5.4 SENSOR AND HARDWARE IDENTIFICATION

The sensor housing is tagged with a type sticker containing the product description and the serial number. It also indicates which side of the sensor is the top side.



Figure 4: Label Example of DRVEGRD 171

6 DATA INTERFACES

6.1 CAN DATA INTERFACE

This specification gives a detailed description of the CAN data communication used in the UMRR based systems on the sensor CAN. The UMRR is compliant with CAN 2.0B standard.

CAN is a very robust full duplex bidirectional interface.

6.2 CAN-SETTINGS

| | | |
|---------------------|--------------------|-----------------------------------|
| Baud Rate: | 500kBit/s or lower | |
| Prescaler: | 1 | |
| T _{seg1} : | 8 | |
| T _{seg2} : | 7 | |
| T _{sjw} : | 2 | (SJW: synchronization jump width) |

Above values for CAN bit timing are illustrated in Figure 5 and used in the UMRR radar sensor (note: the CAN module is integrated in the DSP). For comparison purposes, in Figure 6 the CAN bit timing as defined by the CAN protocol is shown.

The CAN bit timing parts as defined by the CAN protocol (Figure 6) can be described as follows:

- **Sync:** This part of bit time is used to synchronize the various nodes on the bus. An edge is expected to lie within this segment. For the UMRR sensor, this segment is always 1 TIME QUANTUM (TQ).
- **Prop:** This part of the bit time is used to compensate for the physical delay times within the network. It is twice the sum of the signal's propagation time on the bus line, the input comparator delay, and the output driver delay. For the UMRR sensor, this segment is programmable from 1 to 8 TIME QUANTA (TQ).
- **Phase 1:** This phase is used to compensate for positive edge phase error. For the UMRR sensor, this segment is programmable from 1 to 8 TIME QUANTA (TQ) and can be lengthened by resynchronization.
- **Phase 2:** This phase is used to compensate for negative edge phase error. For the UMRR sensor, this segment is programmable from 2 to 8 TIME QUANTA (TQ) and can be shortened by resynchronization.

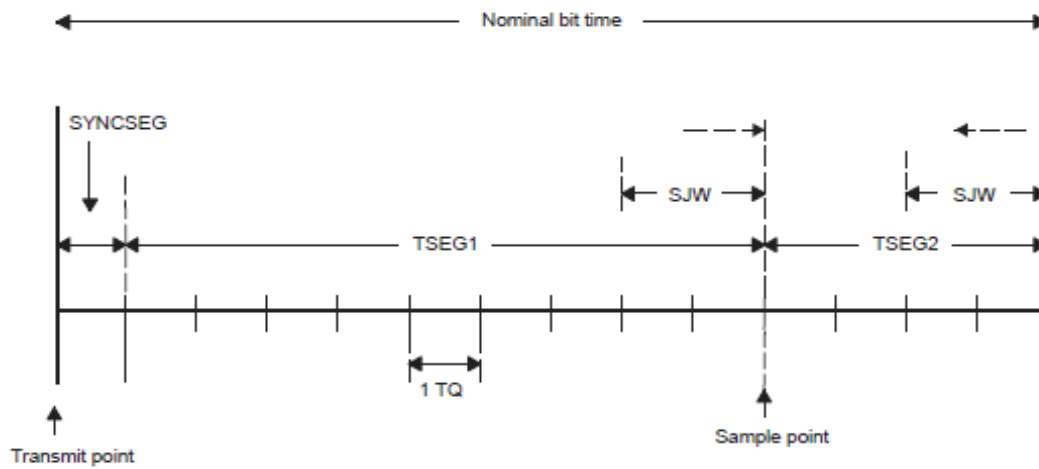


Figure 5: CAN bit timing for UMRR sensor

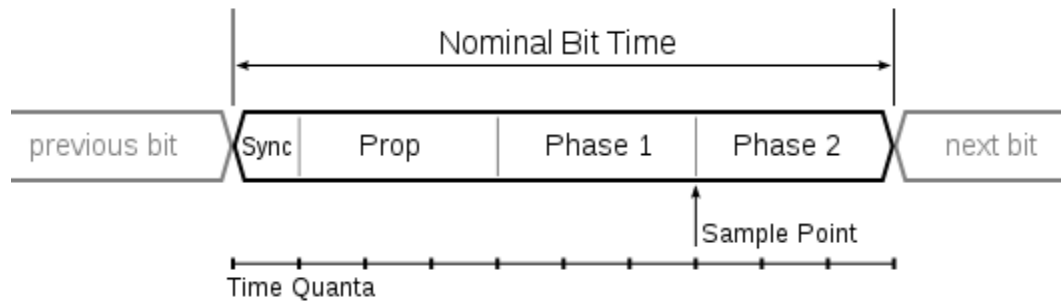



Figure 6: CAN bit timing as defined by the CAN protocol

6.3 ETHERNET CONNECTION

The sensor supports UDP via Ethernet in a Local Area Network (LAN). Communication over low bandwidth environments (not less than 100Mbps recommended) or routed networks such as the world wide web are not supported.

Features:

- Ethernet standards IPv4, ARP, IGMP IP multicast and UDP
- Support of Static IP configuration. DHCP is not supported
- smartmicro's proprietary communication protocol "smartmicro transport protocol" with sensor data transmission, which sends a list of detected targets every radar cycle. Operation parameters can be accessed via Ethernet.

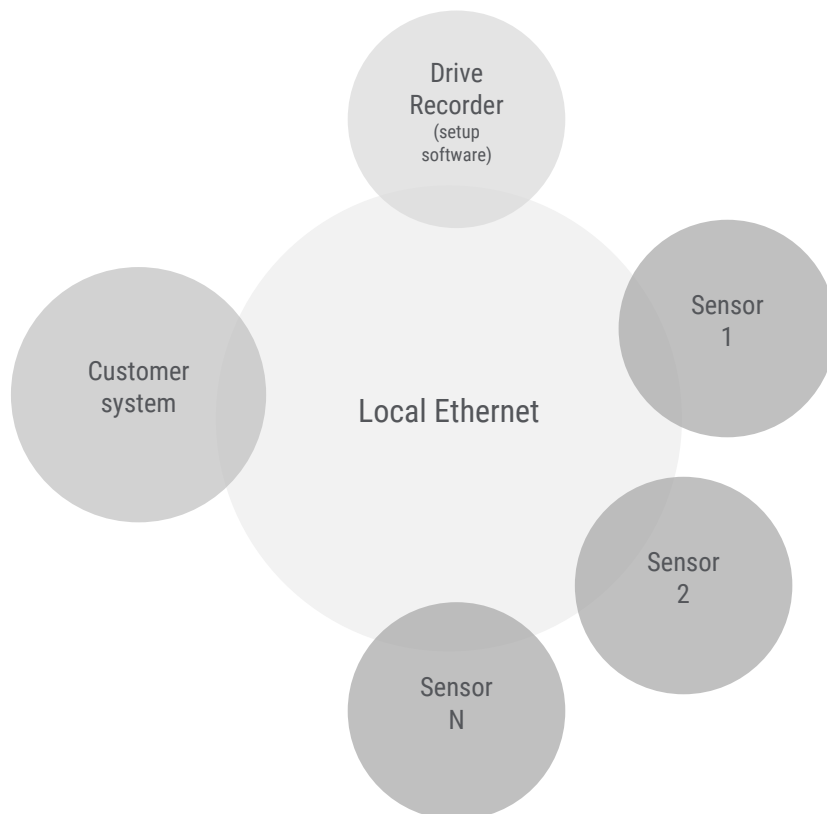

7 APPLICATION-SPECIFIC CHARACTERISTICS

The sensor can be used for long, medium and short range applications in autonomous driving systems, for example:

- Autonomous driving
- Adaptive Cruise Control (ACC)
- Advanced Emergency Braking (AEB)
- Forward Collision Warning (FCW)
- Rear Collision Warning (RCW)

One or multiple sensors may be integrated into vehicle models by OEMs. Usually, certain OEM-specific engineering efforts are required for the adaptation to specific vehicle models as well as the application of test and qualification procedures. Customer-specific connectors, CAN FD or Ethernet interfaces, tracking algorithms, warning algorithms or other software packages can be included.

FUNCTIONAL SAFETY

The sensor can optionally be made compliant to ASIL Level B in customer-specific projects. Requirements and safety concepts need to be agreed between an OEM and smartmicro.

AUTOSAR

The sensor is offered with AUTOSAR compliant software in customer-specific projects. Specifications need to be agreed between an OEM and smartmicro.

UTILITY VEHICLES

The sensor can be used on utility vehicles with operational voltages of 24V (or even up to 32V). It has been tested against the ISO Standard 7637-2.

8 COMPLIANCE FOR EUROPE

8.1 SIMPLIFIED DECLARATION OF CONFORMITY

Hereby, s.m.s, smart microwave sensors GmbH declares that the radio equipment type UMRR-A4 Type 171 (DRVEGRD 171) is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<http://www.smartmicro.de/company/quality-certificates/>.

8.2 SAFETY INSTRUCTION

Note:



Parts of the DRVEGRD 171 device may be hot. To ensure protection against accidental contact and fire, operate this device only in compliance with observed safety instructions according EN 62368, corresponding UL Standard or national safety regulation.



Power supply 8 - 32 V DC, a PS2 class power supply with maximal 3 A according to EN 62368 should be taken, install by skilled person only.

9 LEGAL DISCLAIMER NOTICE

This document is subject to change without notice.

The installation procedure, field test or other procedure described herein ("manual") is a mere recommendation or proposal by smartmicro for installing and/or implementing and/or otherwise using the product in generic/general applications. The recommendations and proposals contained herein are believed to be accurate as of the stated date.

smartmicro disclaims any and all liability for any errors, inaccuracies or incompleteness contained in this manual or in any other disclosure relating to the manual. In particular, the manual was designed for generic/general applications and has not been adapted to a particular/specific purpose of use of the products.

Since the installation procedure, field test or other procedure may vary due to the specific applications and surroundings, smartmicro makes no representations or warranties in relation to this manual or the information and test procedures provided herein.

The manual is provided solely for informational purposes. It is the customer's/user's responsibility to validate that the application of the product is suitable for the customer's/user's particular/specific purpose. The installation procedure, field test or other procedure for the products may deviate from statements made herein due to specific applications and/or surroundings. Therefore, it is important that customer/user invents and certifies his own installation, test or other procedures to validate the performance of the products in the particular/specific application before their commercialization. Although products are well optimized to be used for the intended applications stated, it must also be understood by the customer/user that the detection probability may not be 100% and that the false alarm rate may not be zero. In case of uncertainties with the installation, test or other procedures, the customer/user shall consult smartmicro, a certified distributor, a subsidiary or appropriate professional.

To the extent permitted by applicable law, smartmicro disclaims (i) any and all liability arising out of the application or use of the manual or product, (ii) any and all liability of damages exceeding direct damages, including - without limitation - indirect, consequential or incidental damages.

Please note that the application of the product may be subject to standards or other regulations that may vary from country to country. smartmicro does not guarantee that the use of products in the applications described herein will comply with such regulations in any country. It is the customer's/user's responsibility to ensure that the use and installation of products comply with the regulatory requirements of their markets.

If any provision of this disclaimer is, or is found to be, void or unenforceable under applicable law, that will not affect the validity or enforceability of the other provisions of this disclaimer.

User manual/ Functional description of the test equipment (EUT)