# MC-302EL PG2

Two-way Wireless Magnetic Contact Device with Hard-wired Input

# A Tyco International Company

Visoni

Installation Instructions

## 1. INTRODUCTION

The MC-302EL PG2 is a two-way wireless PowerG magnetic contact device that is compatible with PowerMaster control panels, version and above. The device includes a built-in reed switch (that opens upon removal of a magnet placed near it) and an auxiliary hard-wired input, programmable as either N.O., N.C. or E.O.L., for use with additional sensors – pushbuttons detectors, door contacts, etc.

The MC-302EL PG2 can be configured through the PowerMaster control panel to allow the installer to disable the magnet-operated reed switch if only the auxiliary input is needed. The reed switch and the auxiliary input behave as separate transmitters, although they trigger the same RF transmitter. The MC-302EL PG2 sends the parameters of the specific alarm to the control panel using PowerG two-way communications protocol.

The MC-302EL PG2 tamper switch is activated when the cover is removed.

A periodic supervision message is transmitted automatically. The control panel is thus informed, at regular intervals, of the unit's active participation in the system.

An LED lights whenever alarm or tamper events are reported. The LED does not light while a supervision message is being transmitted.

Operating power is obtained from an on-board 3 V Lithium battery. When the battery voltage is low, a "low battery" message is sent to the receiver.

# 2. INSTALLATION

### 2.1 Mounting (Fig. 3a and 3b)


It is highly recommended to attach the transmitter to the top of the door/window on the fixed frame and the magnet to the movable part (door or window). Make sure that the magnet is located not more than 6 mm (0.25 in.) from the transmitter's marked side.

**Note:** Once the cover is removed, a tamper message is transmitted to the receiver. Subsequent removal of the battery prevents transmission of "TAMPER RESTORE", leaving the receiver in permanent alert. To avoid this, press the tamper switch while you remove the battery.


### Caution!

Risk of explosion if battery is replaced by an incorrect type. Dispose of used battery according to manufacturer's instructions.

Attention! The unit has a back tamper switch (optional) under the PCB. As long as the PCB is seated firmly within the base, the switch lever will be pressed against a special break-away base segment that is loosely connected to the base (Figures 2 and 3a). Be sure to fasten the break-away segment to the wall. If the detector unit is forcibly removed from the wall, this segment will break away from the base, causing the tamper switch to open.

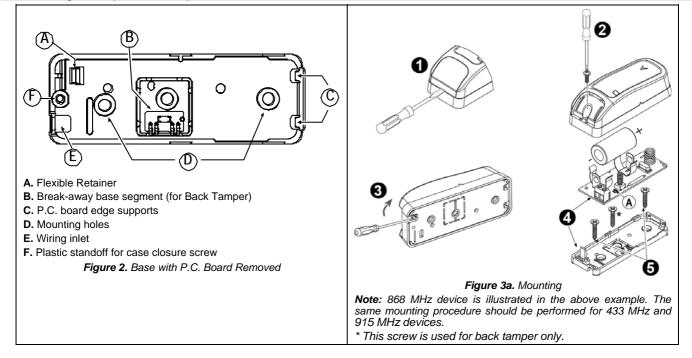


A. Transmission LED
B. Magnet
Figure 1: External View

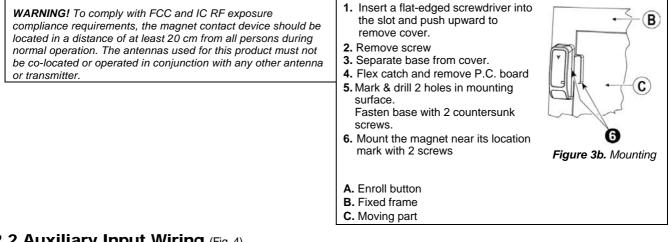

### 2.2 Auxiliary Input Wiring (Fig. 4)

A. Connect the auxiliary sensor contacts across the MC-302EL PG2 auxiliary input terminals.



B. If the auxiliary input of the MC-302EL PG2is defined as a Normally Closed (N.C.) type, series connected N.C. sensor contacts must be used exclusively. An E.O.L. resistor will not be required.

- C. If the auxiliary input of the MC-302EL PG2is defined as a Normally Open (N.O.) type, parallel connected N.O. sensor contacts must be used exclusively. An E.O.L. resistor will not be required.
- D. For E.O.L. supervision:

Normally Closed (N.C.) sensor contacts can be used, as shown in Figure 4. A 47kΩ E.O.L. resistor must be wired at the far end of the zone loop.

Note: For UL installations, the device connected to the initiating circuit must be located in the same room as the transmitter. The drawing below illustrates a N.O. and N.C. alarm circuit with E.O.L. resistor.

Note: An alarm message is transmitted once the loop is opened or short circuited.

### 2.3. Enrollment

Refer to the PowerMaster panel's Installer Guide and follow the procedure under the "02:ZONES/DEVICES" option of the Installer Menu. A general description of the procedure is provided in the following flow chart.

Step 1	Step 2	Step 3	Step 4	Step 5	Step 6
Enter the Installer menu and select "02:ZONES/DEVICES"	Select "ADD NEW DEVICE" Option See Note [1]	Enroll the device or Enter the device ID	Select the desired Zone Number	Configure Location, Zone Type & Chime Parameters	Configure the Magnet
02.ZONES/DEVICES	ADD NEW DEVICES	ENROLL NOW or	Z06:Contact Sens	Z06.LOCATION	
	↓ MODIFY DEVICES	ENTR ID:XXX-XXXX	ID No. 104-XXXX	Z06.ZONE TYPE Z06.SET CHIME	
🔿 means scroll ⋗ an	d select ok			Z06.DEV SETTINGS	See Note [2]

### Notes:

[1] If the magnetic contact device is already enrolled you can configure the magnetic contact device parameters via the "Modify Devices" option - see Step 2.

[2] Select the "Device Settings" option and refer to section 2.3 to configure the magnetic contact device parameters.

### 2.4. Configuring the Magnetic Contact Device Parameters

Enter the DEVICE SETTINGS menu and follow the configuration instructions for the MC-302EL PG2 magnetic contact device as described in the following table

the following table.	
Option	Configuration Instructions
Alarm LED	Determine whether or not the alarm LED indication will be activated.
	Optional settings: <b>ON</b> (default) or <b>OFF</b> .
Reed Switch #1	Determine whether to enable or disable the internal reed switch.
	Optional settings: Enabled (default) or Disabled.
Input #1	Define the external input according to the installer's requirements.
	Optional settings: Disabled (default), EOL-End Of Line, Normally Open or Normally Closed.

## **3. LOCAL DIAGNOSTICS TEST**

Before testing, separate the base from the cover (see Fig. 3a).

- A. Press the tamper switch once and release it.
- **B.** Put back the cover to return the tamper switch to its normal (undisturbed) position, and then secure the front cover to the base with the case closure screw.
- C. Momentarily open the door or window and verify the red LED blinks, indicating detection.
- D. After 2 seconds the LED blinks 3 times.

Т

	4-61-1-			- : I		
The following	table I	ndicates	received	signai	strenath	indication.

LED response	Reception
Green LED blinks	Strong
Orange LED blinks	Good
Red LED blinks	Poor
No blinks	No communication

**IMPORTANT!** Reliable reception must be assured. Therefore, "poor" signal strength is not acceptable. If you receive a "poor" signal from the device, re-locate it and re-test until a "good" or "strong" signal strength is received.

Note: For detailed Diagnostics Test instructions refer to the control panel Installer Guide.

## 4. MISCELLANEOUS COMMENTS

Visonic Ltd. wireless systems are very reliable and are tested to high standards. However, due to low transmitting power and limited range (required by FCC and other regulatory authorities), there are some limitations to be considered:

- A. Receivers may be blocked by radio signals occurring on or near their operating frequencies, regardless of the digital code used.
- B. A receiver responds only to one transmitted signal at a time.
- C. Wireless devices should be tested regularly to determine whether there are sources of interference and to protect against faults.

The user is cautioned that changes or modifications to the unit, not expressly approved by Visonic Ltd., could void the user's FCC or other authority to operate the equipment.

The digital circuitry of this device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio and television reception. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause such interference, which can be verified by turning the device off and on, the user is encouraged to eliminate the interference by one or more of the following measures:

- Re-orient or re-locate the receiving antenna.

- Increase the distance between the device and the receiver.
- Connect the device to an outlet on a circuit different from the one which supplies power to the receiver.

- Consult the dealer or an experienced radio/TV technician

# **5. COMPLIANCE WITH STANDARDS**

**Compliance with Standards** 



**Europe:** EN 301 489-3, EN 50130-4:( 95) & A1 : (98) & A2: (03), EN 300 220-2, EN 60950-1, EN 50130-5, EN 50131-1, EN 50131-6, , EN 50131-2-6: 2008.

The MC-302EL PG2 is compatible with the RTTE requirements - Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 and EN50131-1 Grade 2 Class II.

EN 50131-2-6, EN 50131-6, EN 50131-5-3, EN 50130-4, and EN 50130-5.

**UK:** This product is suitable for use in systems installed to conform to PD6662:2010 at Grade 2 and environmental class 2. DD243 and BS8243

USA: CFR 47 part 15 (FCC)

Canada: RSS 210

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with the essential requirements and provisions of Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio and telecommunications terminal equipment.

The Power G peripheral devices have two- way communication functionality, providing additional benefits as described in the technical brochure. This functionality has not been tested to comply with the respective technical requirements and should therefore be considered outside the scope of the product's certification.

Wood		Support s	Soft Iron	
Opening	Closing	Direction	Opening	Closing
20mm+/-	14mm+/-	×	15mm+/-	14mm+/-
5mm	6mm		5mm	5mm
14mm+/-	15mm+/-	Y	<mark>15mm+/-</mark>	14mm+/-
5mm	5mm		5mm	5mm
25mm+/-	24mm+/-	Z	25mm+/-	24mm+/-
5mm	5mm		5mm	5mm

#### EN 50131-1 Security Grade

According to EN 50131-1:2006 and A1:2009, this equipment can be applied in installed systems up to and including Security Grade 2. Class II

#### EN 50131-1 Environmental Class

### **FCC Compliance Statement**

The digital circuitry of this device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio and television reception. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause such interference, which can be verified by turning the device off and on, the user is encouraged to eliminate the interference by one or more of the following measures:

- Re-orient or re-locate the receiving antenna.
- Increase the distance between the device and the receiver.
- Connect the device to an outlet on a circuit different from the one which supplies power to the receiver.
- Consult the dealer or an experienced radio/TV technician

#### IC statement:

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le present appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisee aux deux conditions suivantes :(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioelectrique subi, meme si le brouillage est susceptible d'en compromettre le fonctionnement.

#### WARNING!

To comply with FCC and IC RF exposure compliance requirements, the device should be located at a distance of at least 20 cm from all persons during normal operation. The antennas used for this product must not be co-located or operated in conjunction with any other antenna or transmitter.

#### WARNING!

The user is cautioned that changes or modifications to the unit, not expressly approved by Visonic Ltd., could void the user's FCC or other authority to operate the equipment.

al documentation as required by the European Conformity Assessment procedure is kept at: DINGLEY COURT CHIPPENHAM DRIVE KINGSTON MILTON KEYNES MK10 0BZ. Telephone number: 0870 7300800, Fax number: 0870 7300801
W.E.E.E. Product Recycling Declaration For information regarding the recycling of this product you must contact the company from which you originally purchased it. If you are discarding this product and not returning it for repair then you must ensure that it is returned as identified by your supplier. This product is not to be thrown away with everyday waste. Directive 2002/96/EC Waste Electrical and Electronic Equipment.

## APPENDIX: SPECIFICATIONS

Frequency Band (MHz) Communication Protocol Alarm Input Supervision Tamper Alert	<b>Europe and rest of world:</b> 433-434, 868-869 <b>USA:</b> 912-919 PowerG One internal Signaling at 4-min. intervals Reported when a tamper event occurs	
Power Supply	Type C	
		I.
Battery type	3 V Lithium CR-123 type battery, Panasonic, Sanyo or GP only.	I.
Battery Life Expectancy	8 years (for typical use)	
Battery Supervision	Automatic transmission of battery condition data as part of periodic status report and immediately upon low battery condition detection	
Operating Temperature	0°C to 49°C (32°F to 120°F)	
Humidity	Average relative humidity of approximate 75% non-condensing. For 30 days per year relative	
Trainiarty	humidity may vary between 85 % and 95 % non-condensing	
Dimensions (LxWxD) Weight (including battery)	81 x 34 x 25 mm (3-3/16 x $1-1/4 \times 1$ in.) 53g (1.9 oz)	

#### WARRANTY

Visonic Limited (the "Manufacturer") warrants this product only (the "Product") to the original purchaser only (the "Purchaser") against defective workmanship and materials under normal use of the Product for a period of twelve (12) months from the date of shipment by the Manufacturer.

This Warranty is absolutely conditional upon the Product having been properly installed, maintained and operated under conditions of normal use in accordance with the Manufacturers recommended installation and operation instructions. Products which have become defective for any other reason, according to the Manufacturers discretion, such as improper installation, failure to follow recommended installation and operational instructions, neglect, willful damage, misuse or vandalism, accidental damage, alteration or tampering, or repair by anyone other than the manufacturer, are not covered by this Warranty.

other than the manufacturer, are not covered by this Warranty. The Manufacturer does not represent that this Product may not be compromised and/or circumvented or that the Product will prevent any death and/or personal injury and/or damage to property resulting from burglary, robbery, fire or otherwise, or that the Product will in all cases provide adequate warning or protection. The Product, properly installed and maintained, only reduces the risk of such events without warning and it is not a guarantee or insurance that such events will not occur. THIS WARRANTY IS EXCluSIVE AND EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, OBLIGATIONS OR LIABILITIES, WHETHER WRITTEN, ORAL, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTRABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR OTHERWISE, IN NO CASE SHALL THE MARVACTORER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES IN DAMAGES IN THE DAMAGES IN THE MARVACTORE OF THE MANUFACTURER BE LIABLE TO ANYONE FOR ANY CONSECUENTIAL OR INCIDENTAL DAMAGES

FOR BREACH OF THIS WARRANTY OR ANY OTHER WARRANTIES WHATSOEVER. AS AFORESAID

THE MANUFACTURER SHALL IN NO EVENT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES OR FOR LOSS, DAMAGE, OR EXPENSE, INCLUDING LOSS OF USE, PROFITS, REVENUE, OR GOODWILL, DIRECTLY OR INDIRECTLY ARISING FROM PURCHASER'S USE OR INABILITY TO USE THE PRODUCT, OR FOR LOSS OR DESTRUCTION OF OTHER PROPERTY OR FROM ANY OTHER CAUSE, EVEN IF MANUFACTURER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE

THE MANUFACTURER SHALL HAVE NO LIABILITY FOR ANY DEATH, PERSONAL AND/OR BODILY INJURY AND/OR DAMAGE TO PROPERTY OR OTHER LOSS WHETHER DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR OTHERWISE, BASED ON A CLAIM THAT THE PRODUCT FAILED TO FUNCTION

However, if the Manufacturer is held liable, whether directly or indirectly, for any loss or damage arising u limited warranty, THE MANUFACTURER'S MAXIMUM LIABILITY (IF ANY) SHALL NOT IN ANY CASE mage arising under this EXCEED THE PURCHASE PRICE OF THE PRODUCT, which shall be fixed as liquidated damages and not as a

Penalty, and shall be the complete and exclusive remedy against the Manufacturer. When accepting the delivery of the Product, the Purchaser agrees to the said conditions of sale and warranty and he recognizes having been informed of. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so these

limitations may not apply under certain circumstances.

The Manufacturer shall be under no liability whatsoever arising out of the corruption and/or malfunctioning of any

The Manufacturer shall be under no liability whatsoever ansing out of the corruption and/or malfunctioning of any telecommunication or electronic equipment or any programs. The Manufacturers obligations under this Warranty are limited solely to repair and/or replace at the Manufacturer's discretion any Product or part thereof that may prove defective. Any repair and/or replacement shall not extend the original Warranty period. The Manufacturer shall not be responsible for dismantling and/or reinstallation costs. To exercise this Warranty the Product must be returned to the Manufacturer freight pre-paid and insured. All freight and insurance costs are the responsibility of the Purchaser and are not included in this Warranty. Warranty

This warranty shall not be modified, varied or extended, and the Manufacturer does not authorize any person to This warranty shall not be modified, varied or extended, and the Manufacturer does not authorize any person to act on its behalf in the modification, variation or extension of this warranty. This warranty shall apply to the Product only. All products, accessories or attachments of others used in conjunction with the Product, including batteries, shall be covered solely by their own warranty, if any. The Manufacturer shall not be liable for any damage or loss whatsoever, whether directly, indirectly, incidentally, consequentially or otherwise, caused by the malfunction of the Product due to products, accessories, or attachments of others, including batteries, used in the indirectly the formation of the product. conjunction with the Products. This Warranty is exclusive to the original Purchaser and is not assignable

This Warranty is in addition to and does not affect your legal rights. Any provision in this warranty which is contrary to the Law in the state or country were the Product is supplied shall not apply. Warning: The user must follow the Manufacturer's installation and operational instructions including testing the

Product and its whole system at least once a week and to take all necessary precautions for his/her safety and the protection of his/her property.

1/08

