

EC21 Hardware Design

LTE Standard Module Series

Rev. EC21_Hardware_Design_V1.8

Date: 2019-11-26

Status: Released



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

Quectel Wireless Solutions Co., Ltd.

Building 5, Shanghai Business Park Phase III (Area B), No.1016 Tianlin Road, Minhang District, Shanghai, China 200233

Tel: +86 21 5108 6236

Email: info@quectel.com

Or our local office. For more information, please visit:

<http://www.quectel.com/support/sales.htm>

For technical support, or to report documentation errors, please visit:

<http://www.quectel.com/support/technical.htm>

Or email to: support@quectel.com

GENERAL NOTES

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL WIRELESS SOLUTIONS CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2019. All rights reserved.

About the Document

Revision History

Revision	Date	Author	Description
1.0	2016-04-15	Yeoman CHEN	Initial
1.1	2016-09-22	Yeoman CHEN/ Frank WANG/ Lyndon LIU	- Updated frequency bands in Table 1. - Updated transmitting power, supported maximum baud rate of main UART, supported internet protocols, supported USB drivers of USB interface, and temperature range in Table 2. - Updated timing of turning on module in Figure 12. - Updated timing of turning off module in Figure 13. - Updated timing of resetting module in Figure 16. - Updated main UART supports baud rate in Chapter 3.11. - Added notes for ADC interface in Chapter 3.13. - Updated GNSS Performance in Table 21. - Updated operating frequencies of module in Table 23. - Added current consumption in Chapter 6.4. - Updated RF output power in Chapter 6.5. - Added RF receiving sensitivity in Chapter 6.6.
1.2	2016-11-04	Lyndon LIU/ Michael ZHANG	- Added SGMII and WLAN interfaces in Table 2. - Updated function diagram in Figure 1. - Updated pin assignment (Top View) in Figure 2. - Added description of SGMII and WLAN interfaces in Table 4. - Added SGMII interface in Chapter 3.17. - Added WLAN interface in Chapter 3.18. - Added USB_BOOT interface in Chapter 3.19. - Added reference design of RF layout in Chapter 5.1.4. - Added current consumption of EC21-V in Chapter

			6.4
			10. Added note about SIMO in Chapter 6.6.
1.3	2017-01-24	Lyndon LIU/ Rex WANG	1. Updated frequency bands in Table 1. 2. Updated function diagram in Figure 1. 3. Updated pin assignment (top view) in Figure 2. 4. Added BT interface in Chapter 3.18.2. 5. Updated reference circuit of wireless connectivity interfaces with FC20 module in Figure 29. 6. Updated GNSS performance in Table 24. 7. Updated module operating frequencies in Table 26. 8. Added EC21-AUV current consumption in Table 38. 9. Updated EC21-A conducted RF receiving sensitivity of in Table 42. 10. Added EC21-J conducted RF receiving sensitivity in Table 48.
1.4	2017-03-01	Geely YANG	Deleted the LTE band TDD B41 of EC21-CT
1.5	2018-03-05	Annice ZHANG/ Lyndon LIU/ Frank WANG	1. Updated functional diagram in Figure 1. 2. Updated frequency bands in Table 1. 3. Updated UMTS and GSM features in Table 2. 4. Updated description of pin 40/136/137/138. 5. Updated PWRKEY pulled down time to 500ms in chapter 3.7.1 and reference circuit in Figure 10. 6. Updated reference circuit of (U)SIM interface in Figure 17&18. 7. Updated reference circuit of USB interface in Figure 19. 8. Updated PCM mode in Chapter 3.12. 9. Updated USB_BOOT reference circuit in Chapter 3.20. 10. Added SD card interface in Chapter 3.13. 11. Updated module operating frequencies in Table 26. 12. Updated EC21 series modules current consumption in Chapter 6.5. 13. Updated EC21 series modules conducted RF receiving sensitivity in Chapter 6.6. 14. Added thermal consideration description in Chapter 6.8. 15. Updated dimension tolerance information in Chapter 7. 16. Added storage temperature range in Table 2 and Chapter 6.3. 17. Updated RF output power in Table 42. 18. Updated antenna requirements in Table 29.

			19. Updated GPRS multi-slot classes in Table 55.
			20. Updated storage information in Chapter 8.1
1.6	2019-04-30	Woody WU/ Nathan LIU/ Frank WANG	1. Added new variants EC21-EU and related information. 2. Updated star structure of the power supply in Figure 8. 3. Updated power-on scenario of module in Figure 12. 4. Updated reference circuit with translator chip in Figure 20. 5. Added timing sequence for entering into emergency download mode of USB_BOOT interface in Figure 32. 6. Updated GNSS frequency in Table 29. 7. Updated antenna requirements in Table 30. 8. Added EC21-EU current consumption in Table 41. 9. Added EC21-EC current consumption in Table 42. 10. Updated EC21-E conducted RF receiving sensitivity in Table 44. 11. Updated EC21-A conducted RF receiving sensitivity in Table 45. 12. Updated EC21-V conducted RF receiving sensitivity in Table 46. 13. Updated EC21-AUT conducted RF receiving sensitivity in Table 47. 14. Updated EC21-AU conducted RF receiving sensitivity in Table 51. 15. Added EC21-EU conducted RF receiving sensitivity in Table 52. 16. Added EC21-EC conducted RF receiving sensitivity in Table 53. 17. Updated recommended stencil thickness as 0.18mm~0.20mm and reflow soldering thermal profile in Chapter 8.2.
1.7	2019-08-19	Ward WANG/ Owen WEI	1. Added ThreadX variant EC21-AUX and updated related information in Table 1 and Chapter 2.1. 2. Deleted the information of GNSS supported on EC21-EC in Table 1 3. Updated supported protocols and USB serial driver in Table 2. 4. Updated functional diagram in Figure 1. 5. Updated notes in Chapter 3.7.1. 6. Updated EC21-E current consumption (GSM voice call) in Table 34. 7. Updated EC21-EU current consumption in Table 41.

			8. Updated EC21-EC current consumption in Table 42. 9. Added EC21-AUX current consumption in Table 43. 10. Updated EC21-EU conducted RF receiving sensitivity in Table 53. 11. Added EC21-AUX conducted RF receiving sensitivity in Table 55. 12. Updated module bottom dimensions (bottom view) in Figure 45. 13. Added tape and reel directions in Figure 51.
1.8	2019-11-26	Fanny CHEN	1. Removed related information of ThreadX OS because the baseline has been updated. 2. Updated the supported protocols and USB serial drivers in Table 2. 3. AT command AT+QCFG="airplanecontrol" has been fully developed in Chapter 3.5. 4. Updated the notes for GNSS performance in Chapter 4.2. 5. Updated the AT command be used to disable the receive diversity in Chapter 5.1.3.

Contents

About the Document.....	2
Contents	6
Table Index.....	9
Figure Index	11
1 Introduction	13
1.1. Safety Information.....	14
2 Product Concept	15
2.1. General Description	15
2.2. Key Features	16
2.3. Functional Diagram	错误!未定义书签。
2.4. Evaluation Board	19
3 Application Interfaces	20
3.1. General Description	20
3.2. Pin Assignment	21
3.3. Pin Description.....	22
3.4. Operating Modes	34
3.5. Power Saving.....	34
3.5.1. Sleep Mode	34
3.5.1.1. UART Application	34
3.5.1.2. USB Application with USB Remote Wakeup Function	35
3.5.1.3. USB Application with USB Suspend/Resume and RI Function	36
3.5.1.4. USB Application without USB Suspend Function.....	36
3.5.2. Airplane Mode	37
3.6. Power Supply.....	38
3.6.1. Power Supply Pins	38
3.6.2. Decrease Voltage Drop	38
3.6.3. Reference Design for Power Supply	39
3.6.4. Monitor the Power Supply	40
3.7. Power-on/off Scenarios	40
3.7.1. Turn on Module Using the PWRKEY	40
3.7.2. Turn off Module	42
3.7.2.1. Turn off Module Using the PWRKEY Pin.....	43
3.7.2.2. Turn off Module Using AT Command.....	43
3.8. Reset Module.....	43
3.9. (U)SIM Interface	45
3.10. USB Interface	47
3.11. UART Interfaces	48
3.12. PCM and I2C Interfaces	51
3.13. SD Card Interface	53
3.14. Wireless Connectivity Interfaces	55

3.14.1.	WLAN Interface	57
3.14.2.	BT Interface*	58
3.15.	ADC Interfaces	58
3.16.	SGMII Interface.....	59
3.17.	Network Status Indication	61
3.18.	STATUS	63
3.19.	Behaviors of RI	64
3.20.	USB_BOOT Interface	64
4	GNSS Receiver	66
4.1.	General Description	66
4.2.	GNSS Performance	66
4.3.	Layout Guidelines	67
5	Antenna Interfaces.....	68
5.1.	Main/Rx-diversity Antenna Interfaces.....	68
5.1.1.	Pin Definition	68
5.1.2.	Operating Frequency	68
5.1.3.	Reference Design of RF Antenna Interface	69
5.1.4.	Reference Design of RF Layout.....	70
5.2.	GNSS Antenna Interface	72
5.3.	Antenna Installation	74
5.3.1.	Antenna Requirement	74
5.3.2.	Recommended RF Connector for Antenna Installation	75
6	Electrical, Reliability and Radio Characteristics	77
6.1.	Absolute Maximum Ratings.....	77
6.2.	Power Supply Ratings	78
6.3.	Operation and Storage Temperatures	78
6.4.	Current Consumption	79
6.5.	RF Output Power	93
6.6.	RF Receiving Sensitivity.....	94
6.7.	Electrostatic Discharge	99
6.8.	Thermal Consideration	100
7	Mechanical Dimensions	102
7.1.	Mechanical Dimensions of the Module.....	102
7.2.	Recommended Footprint.....	104
7.3.	Design Effect Drawings of the Module	105
8	Storage, Manufacturing and Packaging	106
8.1.	Storage.....	106
8.2.	Manufacturing and Soldering	107
8.3.	Packaging	108
9	Appendix A References.....	110
10	Appendix B GPRS Coding Schemes	114

11	Appendix C GPRS Multi-slot Classes	115
12	Appendix D EDGE Modulation and Coding Schemes	117

Table Index

TABLE 1 : SUPPORTED FREQUENCY BANDS AND GNSS FUNCTION OF EC21 SERIES MODULE.....	15
TABLE 2 : KEY FEATURES OF EC21 MODULE.....	16
TABLE 3 : I/O PARAMETERS DEFINITION.....	22
TABLE 4 : PIN DESCRIPTION.....	22
TABLE 5 : OVERVIEW OF OPERATING MODES.....	34
TABLE 6 : VBAT AND GND PINS.....	38
TABLE 7 : PIN DEFINITION OF PWRKEY.....	41
TABLE 8 : PIN DEFINITION OF RESET_N.....	44
TABLE 9 : PIN DEFINITION OF (U)SIM INTERFACE.....	45
TABLE 10 : PIN DESCRIPTION OF USB INTERFACE.....	47
TABLE 11 : PIN DEFINITION OF MAIN UART INTERFACE.....	49
TABLE 12 : PIN DEFINITION OF DEBUG UART INTERFACE.....	49
TABLE 13 : LOGIC LEVELS OF DIGITAL I/O.....	49
TABLE 14 : PIN DEFINITION OF PCM AND I2C INTERFACES.....	52
TABLE 15 : PIN DEFINITION OF SD CARD INTERFACE.....	53
TABLE 16 : PIN DEFINITION OF WIRELESS CONNECTIVITY INTERFACES.....	55
TABLE 17 : PIN DEFINITION OF ADC INTERFACES.....	58
TABLE 18 : CHARACTERISTIC OF ADC.....	59
TABLE 19 : PIN DEFINITION OF SGMII INTERFACE.....	59
TABLE 20 : PIN DEFINITION OF NETWORK CONNECTION STATUS/ACTIVITY INDICATOR.....	62
TABLE 21 : WORKING STATE OF NETWORK CONNECTION STATUS/ACTIVITY INDICATOR.....	62
TABLE 22 : PIN DEFINITION OF STATUS.....	63
TABLE 23 : BEHAVIORS OF RI.....	64
TABLE 24 : PIN DEFINITION OF USB_BOOT INTERFACE.....	64
TABLE 25 : GNSS PERFORMANCE.....	66
TABLE 26 : PIN DEFINITION OF RF ANTENNAS.....	68
TABLE 27 : MODULE OPERATING FREQUENCIES.....	68
TABLE 28 : PIN DEFINITION OF GNSS ANTENNA INTERFACE.....	72
TABLE 29 : GNSS FREQUENCY.....	73
TABLE 30 : ANTENNA REQUIREMENTS.....	74
TABLE 31 : ABSOLUTE MAXIMUM RATINGS.....	77
TABLE 32 : POWER SUPPLY RATINGS.....	78
TABLE 33 : OPERATION AND STORAGE TEMPERATURES.....	78
TABLE 34 : EC21-E CURRENT CONSUMPTION.....	79
TABLE 35 : EC21-A CURRENT CONSUMPTION.....	81
TABLE 36 : EC21-V CURRENT CONSUMPTION.....	82
TABLE 37 : EC21-AUT CURRENT CONSUMPTION.....	82
TABLE 38 : EC21-AUV CURRENT CONSUMPTION.....	83
TABLE 39 : EC21-J CURRENT CONSUMPTION.....	84
TABLE 40 : EC21-KL CURRENT CONSUMPTION.....	85
TABLE 41 : EC21-EU CURRENT CONSUMPTION.....	85

TABLE 42 : EC21-EC CURRENT CONSUMPTION.....	87
TABLE 43 : EC21-AUX CURRENT CONSUMPTION	89
TABLE 44 : GNSS CURRENT CONSUMPTION OF EC21 SERIES MODULE.....	93
TABLE 45 : RF OUTPUT POWER	93
TABLE 46 : EC21-E CONDUCTED RF RECEIVING SENSITIVITY	94
TABLE 47 : EC21-A CONDUCTED RF RECEIVING SENSITIVITY	94
TABLE 48 : EC21-V CONDUCTED RF RECEIVING SENSITIVITY	95
TABLE 49 : EC21-AUT CONDUCTED RF RECEIVING SENSITIVITY	95
TABLE 50 : EC21-KL CONDUCTED RF RECEIVING SENSITIVITY	95
TABLE 51 : EC21-J CONDUCTED RF RECEIVING SENSITIVITY	96
TABLE 52 : EC21-AUV CONDUCTED RF RECEIVING SENSITIVITY.....	96
TABLE 53 : EC21-AU CONDUCTED RF RECEIVING SENSITIVITY	96
TABLE 54 : EC21-EU CONDUCTED RF RECEIVING SENSITIVITY	97
TABLE 55 : EC21-EC CONDUCTED RF RECEIVING SENSITIVITY	98
TABLE 56 : EC21-AUX CONDUCTED RF RECEIVING SENSITIVITY.....	98
TABLE 57 : ELECTROSTATICS DISCHARGE CHARACTERISTICS (25°C, 45% RELATIVE HUMIDITY).....	99
TABLE 58 : RECOMMENDED THERMAL PROFILE PARAMETERS	107
TABLE 59 : RELATED DOCUMENTS.....	110
TABLE 60 : TERMS AND ABBREVIATIONS.....	110
TABLE 61 : DESCRIPTION OF DIFFERENT CODING SCHEMES	114
TABLE 62 : GPRS MULTI-SLOT CLASSES	115
TABLE 63 : EDGE MODULATION AND CODING SCHEMES.....	117

Figure Index

FIGURE 2 : PIN ASSIGNMENT (TOP VIEW)	21
FIGURE 3 : SLEEP MODE APPLICATION VIA UART	35
FIGURE 4 : SLEEP MODE APPLICATION WITH USB REMOTE WAKEUP	35
FIGURE 5 : SLEEP MODE APPLICATION WITH RI	36
FIGURE 6 : SLEEP MODE APPLICATION WITHOUT SUSPEND FUNCTION	37
FIGURE 7 : POWER SUPPLY LIMITS DURING BURST TRANSMISSION	39
FIGURE 8 : STAR STRUCTURE OF THE POWER SUPPLY	39
FIGURE 9 : REFERENCE CIRCUIT OF POWER SUPPLY	40
FIGURE 10 : TURN ON THE MODULE BY USING DRIVING CIRCUIT	41
FIGURE 11 : TURN ON THE MODULE BY USING KEYSTROKE	41
FIGURE 12 : TIMING OF TURNING ON MODULE	42
FIGURE 13 : TIMING OF TURNING OFF MODULE	43
FIGURE 14 : REFERENCE CIRCUIT OF RESET_N BY USING DRIVING CIRCUIT	44
FIGURE 15 : REFERENCE CIRCUIT OF RESET_N BY USING BUTTON	44
FIGURE 16 : TIMING OF RESETTING MODULE	45
FIGURE 17 : REFERENCE CIRCUIT OF (U)SIM INTERFACE WITH AN 8-PIN (U)SIM CARD CONNECTOR	46
FIGURE 18 : REFERENCE CIRCUIT OF (U)SIM INTERFACE WITH A 6-PIN (U)SIM CARD CONNECTOR	46
FIGURE 19 : REFERENCE CIRCUIT OF USB APPLICATION	48
FIGURE 20 : REFERENCE CIRCUIT WITH TRANSLATOR CHIP	50
FIGURE 21 : REFERENCE CIRCUIT WITH TRANSISTOR CIRCUIT	50
FIGURE 22 : PRIMARY MODE TIMING	51
FIGURE 23 : AUXILIARY MODE TIMING	52
FIGURE 24 : REFERENCE CIRCUIT OF PCM AND I2C APPLICATION WITH AUDIO CODEC	53
FIGURE 25 : REFERENCE CIRCUIT OF SD CARD INTERFACE	54
FIGURE 26 : REFERENCE CIRCUIT OF WIRELESS CONNECTIVITY INTERFACES WITH FC20 MODULE	57
FIGURE 27 : SIMPLIFIED BLOCK DIAGRAM FOR ETHERNET APPLICATION	60
FIGURE 28 : REFERENCE CIRCUIT OF SGMII INTERFACE WITH PHY AR8033 APPLICATION	61
FIGURE 29 : REFERENCE CIRCUIT OF THE NETWORK INDICATOR	62
FIGURE 30 : REFERENCE CIRCUITS OF STATUS	63
FIGURE 31 : REFERENCE CIRCUIT OF USB_BOOT INTERFACE	65
FIGURE 32 : TIMING SEQUENCE FOR ENTERING EMERGENCY DOWNLOAD MODE	65
FIGURE 33 : REFERENCE CIRCUIT OF RF ANTENNA INTERFACE	70
FIGURE 34 : MICROSTRIP DESIGN ON A 2-LAYER PCB	71
FIGURE 35 : COPLANAR WAVEGUIDE DESIGN ON A 2-LAYER PCB	71
FIGURE 36 : COPLANAR WAVEGUIDE DESIGN ON A 4-LAYER PCB (LAYER 3 AS REFERENCE GROUND)	71
.....	71
FIGURE 37 : COPLANAR WAVEGUIDE DESIGN ON A 4-LAYER PCB (LAYER 4 AS REFERENCE GROUND)	72
.....	72
FIGURE 38 : REFERENCE CIRCUIT OF GNSS ANTENNA	73
FIGURE 39 : DIMENSIONS OF THE U.FL-R-SMT CONNECTOR (UNIT: MM)	75
FIGURE 40 : MECHANICALS OF U.FL-LP CONNECTORS	75

FIGURE 41 : SPACE FACTOR OF MATED CONNECTOR (UNIT: MM)	76
FIGURE 42 : REFERENCED HEATSINK DESIGN (HEATSINK AT THE TOP OF THE MODULE)	100
FIGURE 43 : REFERENCED HEATSINK DESIGN (HEATSINK AT THE BACKSIDE OF CUSTOMERS' PCB).....	101
FIGURE 44 : MODULE TOP AND SIDE DIMENSIONS.....	102
FIGURE 45 : MODULE BOTTOM DIMENSIONS (BOTTOM VIEW)	103
FIGURE 46 : RECOMMENDED FOOTPRINT (TOP VIEW)	104
FIGURE 47 : TOP VIEW OF THE MODULE	105
FIGURE 48 : BOTTOM VIEW OF THE MODULE.....	105
FIGURE 49 : REFLOW SOLDERING THERMAL PROFILE	107
FIGURE 50 : TAPE SPECIFICATIONS	108
FIGURE 51 : REEL SPECIFICATIONS	109
FIGURE 52 : TAPE AND REEL DIRECTIONS	109

1 Introduction

This document defines EC21 module and describes its air interface and hardware interfaces which are connected with customers' applications.

This document can help customers quickly understand module interface specifications, electrical and mechanical details, as well as other related information of EC21 module. To facilitate its application in different fields, relevant reference design is also provided for customers' reference. Associated with application note and user guide, customers can use EC21 module to design and set up mobile applications easily.

PMN: LTE Module

1.1. Safety Information

The following safety precautions must be observed during all phases of operation, such as usage, service or repair of any cellular terminal or mobile incorporating EC21 module. Manufacturers of the cellular terminal should send the following safety information to users and operating personnel, and incorporate these guidelines into all manuals supplied with the product. If not so, Quectel assumes no liability for customers' failure to comply with these precautions.



Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) causes distraction and can lead to an accident. Please comply with laws and regulations restricting the use of wireless devices while driving.



Switch off the cellular terminal or mobile before boarding an aircraft. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. If the device offers an Airplane Mode, then it should be enabled prior to boarding an aircraft. Please consult the airline staff for more restrictions on the use of wireless devices on boarding the aircraft.



Wireless devices may cause interference on sensitive medical equipment, so please be aware of the restrictions on the use of wireless devices when in hospitals, clinics or other healthcare facilities.



Cellular terminals or mobiles operating over radio signals and cellular network cannot be guaranteed to connect in all possible conditions (for example, with unpaid bills or with an invalid (U)SIM card). When emergent help is needed in such conditions, please remember using emergency call. In order to make or receive a call, the cellular terminal or mobile must be switched on in a service area with adequate cellular signal strength.



The cellular terminal or mobile contains a transmitter and receiver. When it is ON, it receives and transmits radio frequency signals. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.



In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other cellular terminals. Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust or metal powders, etc.

2 Product Concept

2.1. General Description

EC21 is a series of LTE-FDD/LTE-TDD/WCDMA/GSM wireless communication module with receive diversity. It provides data connectivity on LTE-FDD, LTE-TDD, DC-HSDPA, HSPA+, HSDPA, HSUPA, WCDMA, EDGE and GPRS networks. It also provides GNSS¹⁾ and voice functionality²⁾ for customers' specific applications. EC21 contains 11 variants: EC21-E, EC21-A, EC21-V, EC21-AU, EC21-EU, EC21-EC, EC21-AUT, EC21-AUV, EC21-J, EC21-KL and EC21-AUX. Customers can choose a dedicated type based on the region or operator. The following table shows the frequency bands of EC21 series module.

Table 1: Supported Frequency Bands and GNSS Function of EC21 Series Module

Modules ²⁾	LTE Bands	WCDMA Bands	GSM Bands	Rx-diversity	GNSS ¹⁾
EC21-E	FDD: B1/B3/B5/B7/B8/B20	B1/B5/B8	900/1800MHz	Y	GPS, GLONASS, BeiDou/ Compass, Galileo, QZSS
EC21-A	FDD: B2/B4/B12	B2/B4/B5	N	Y	
EC21-V	FDD: B4/B13	N	N	Y	
EC21-AU³⁾	FDD: B1/B2/B3/B4/B5/B7/B8/ B28 TDD: B40	B1/B2/B5/B8	850/900/ 1800/1900MHz	Y	
EC21-EU	FDD: B1/B3/B7/B8/B20/B28A	B1/B8	900/1800MHz	Y	
EC21-AUT	FDD: B1/B3/B5/B7/B28	B1/B5	N	Y	N
EC21-EC	FDD: B1/B3/B7/B8/B20/B28A	B1/B8	900/1800MHz	Y	
EC21-AUV	FDD: B1/B3/B5/B8/B28	B1/B5/B8	N	Y	
EC21-J	FDD: B1/B3/B8/B18/B19/B26	N	N	Y	N

EC21-KL	FDD: B1/B3/B5/B7/B8	N	N	Y	N
EC21-AUX³⁾	FDD: B1/B2/B3/B4/B5/B7/B8/ B28 TDD: B40	B1/B2/B4/B5/ B8	850/900/ 1800/1900MHz	Y	Y

NOTES

- ¹⁾ GNSS function is optional.
- ²⁾ EC21 series module contains **Telematics** version and **Data-only** version. **Telematics** version supports voice and data functions, while **Data-only** version only supports data function.
- ³⁾ Band B2 of EC21-AU and EC21-AUX module does not support Rx-diversity.
- Y = Supported. N = Not supported.

With a compact profile of 29.0mm × 32.0mm × 2.4mm, EC21 can meet almost all requirements for M2M applications such as automotive, metering, tracking system, security, router, wireless POS, mobile computing device, PDA phone, tablet PC, etc.

EC21 is an SMD type module which can be embedded into applications through its 144-pin pads, including 80 LCC signal pads and 64 LGA pads.

2.2. Key Features

The following table describes the detailed features of EC21 module.

Table 2: Key Features of EC21 Module

Features	Description
Power Supply	Supply voltage: 3.3V~4.3V Typical supply voltage: 3.8V
Transmitting Power	Class 4 (33dBm±2dB) for GSM850 Class 4 (33dBm±2dB) for EGSM900 Class 1 (30dBm±2dB) for DCS1800 Class 1 (30dBm±2dB) for PCS1900 Class E2 (27dBm±3dB) for GSM850 8-PSK Class E2 (27dBm±3dB) for EGSM900 8-PSK Class E2 (26dBm±3dB) for DCS1800 8-PSK Class E2 (26dBm±3dB) for PCS1900 8-PSK Class 3 (24dBm+1/-3dB) for WCDMA bands

	Class 3 (23dBm±2dB) for LTE-FDD bands Class 3 (23dBm±2dB) for LTE-TDD bands
LTE Features	Support up to non-CA Cat 1 FDD and TDD Support 1.4/3/5/10/15/20MHz RF bandwidth Support MIMO in DL direction LTE-FDD: Max 10Mbps (DL)/Max 5Mbps (UL) LTE-TDD: Max 8.96Mbps (DL)/Max 3.1Mbps (UL)
UMTS Features	Support 3GPP R8 DC-HSDPA, HSPA+, HSDPA, HSUPA and WCDMA Support QPSK, 16-QAM and 64-QAM modulation DC-HSDPA: Max 42Mbps (DL) HSUPA: Max 5.76Mbps (UL) WCDMA: Max 384Kbps (DL)/Max 384Kbps (UL)
GSM Features	GPRS: Support GPRS multi-slot class 33 (33 by default) Coding scheme: CS-1, CS-2, CS-3 and CS-4 Max 107Kbps (DL)/Max 85.6Kbps (UL) EDGE: Support EDGE multi-slot class 33 (33 by default) Support GMSK and 8-PSK for different MCS (Modulation and Coding Scheme) Downlink coding schemes: CS 1-4 and MCS 1-9 Uplink coding schemes: CS 1-4 and MCS 1-9 Max 296Kbps (DL)/Max 236.8Kbps (UL)
Internet Protocol Features	Support TCP/UDP/PPP/FTP/FTPS/HTTP/HTTPS/NTP/PING/QMI/NITZ/SMTP/SSL/MQTT/CMUX/SMTPS/MMS*/FILE* protocols Support PAP (Password Authentication Protocol) and CHAP (Challenge Handshake Authentication Protocol) protocols which are usually used for PPP connections
SMS	Text and PDU mode Point-to-point MO and MT SMS cell broadcast SMS storage: ME by default
(U)SIM Interface	Support USIM/SIM card: 1.8V, 3.0V
Audio Features	Support one digital audio interface: PCM interface GSM: HR/FR/EFR/AMR/AMR-WB WCDMA: AMR/AMR-WB LTE: AMR/AMR-WB Support echo cancellation and noise suppression
PCM Interface	Used for audio function with external codec Support 16-bit linear data format Support long frame synchronization and short frame synchronization Support master and slave modes, but must be the master in long frame synchronization

USB Interface	Compliant with USB 2.0 specification (slave only); the data transfer rate can reach up to 480Mbps Used for AT command communication, data transmission, GNSS NMEA output, software debugging, firmware upgrade and voice over USB Support USB serial drivers for: Windows 7/8/8.1/10, Linux 2.6~5.4, Android 4.x/5.x/6.x/7.x/8.x/9.x, etc.
UART Interfaces	Main UART: Used for AT command communication and data transmission Baud rates reach up to 921600bps, 115200bps by default Support RTS and CTS hardware flow control Debug UART: Used for Linux console and log output 115200bps baud rate
SD Card Interface	Support SD 3.0 protocol
SGMII Interface	Support 10M/100M/1000M Ethernet work mode Support maximum 10Mbps (DL)/5Mbps (UL) for 4G network
Wireless Connectivity Interfaces	Support a low-power SDIO 3.0 interface for WLAN and UART/PCM interfaces for Bluetooth
Rx-diversity	Support LTE/WCDMA Rx-diversity
GNSS Features	Gen8C Lite of Qualcomm Protocol: NMEA 0183 Data update rate: 1Hz by default
AT Commands	Compliant with 3GPP TS 27.007, 27.005 and Quectel enhanced AT commands
Network Indication	Two pins including NET_MODE and NET_STATUS to indicate network connectivity status
Antenna Interfaces	Including main antenna interface (ANT_MAIN), Rx-diversity antenna interface (ANT_DIV) and GNSS antenna interface (ANT_GNSS)
Physical Characteristics	Size: (29.0±0.15)mm × (32.0±0.15)mm × (2.4±0.2)mm Weight: approx. 4.9g
Temperature Range	Operation temperature range: -35°C to +75°C¹⁾ Extended temperature range: -40°C to +85°C²⁾ Storage temperature range: -40°C to +90°C
Firmware Upgrade	USB interface or DFOTA
RoHS	All hardware components are fully compliant with EU RoHS directive

NOTES

1. ¹⁾ Within operation temperature range, the module is 3GPP compliant.
2. ²⁾ Within extended temperature range, the module remains the ability to establish and maintain a voice, SMS, data transmission, emergency call*, etc. There is no unrecoverable malfunction. There are also no effects on radio spectrum and no harm to radio network. Only one or more parameters like P_{out} might reduce in their value and exceed the specified tolerances. When the temperature returns to normal operation temperature levels, the module will meet 3GPP specifications again.
3. “*” means under development.

2.3. Evaluation Board

In order to help customers develop applications with EC21, Quectel supplies an evaluation board (UMTS<E EVB), USB to RS-232 converter cable, earphone, antenna and other peripherals to control or test the module. For more details, please refer to **document [8]**.

3 Application Interfaces

3.1. General Description

EC21 is equipped with 80 LCC pads plus 64 LGA pads that can be connected to cellular application platform. The subsequent chapters will provide detailed descriptions of the following interfaces/functions.

- Power supply
- (U)SIM interface
- USB interface
- UART interfaces
- PCM and I2C interfaces
- SD card interface
- ADC interfaces
- Status indication
- SGMII interface
- Wireless connectivity interfaces
- USB_BOOT interface

3.2. Pin Assignment

The following figure shows the pin assignment of EC21 module.

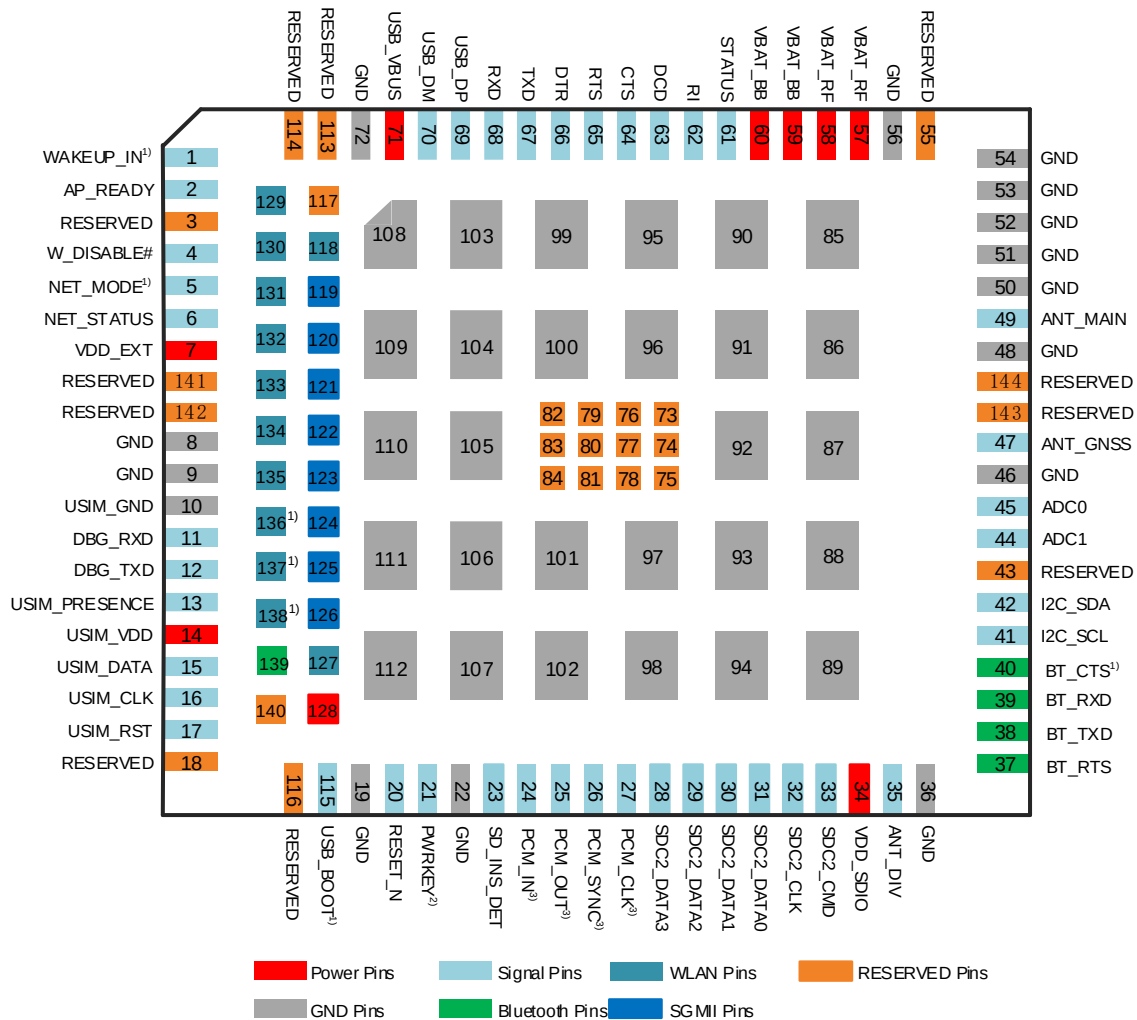


Figure 1: Pin Assignment (Top View)

NOTES

- ¹⁾ means pins WAKEUP_IN, NET_MODE, WLAN_EN, COEX_UART_RX, COEX_UART_TX, USB_BOOT and BT_CTS cannot be pulled up before startup.
- ²⁾ PWRKEY output voltage is 0.8V because of the diode drop in the Qualcomm chipset.
- ³⁾ means digital audio (PCM) is only supported on **Telematics** version.
- Pins 37~40, 118, 127 and 129~139 are used for wireless connectivity interfaces, among which pins 118, 127 and 129~138 are WLAN function pins, and the rest are Bluetooth (BT) function pins. BT function is under development.

5. Pins 119~126 and 128 are used for SGMII interface.
6. Pins 24~27 for PCM function are used for audio design on EC21 module and BT function on FC20 module.
7. Keep all RESERVED pins and unused pins unconnected.
8. GND pins 85~112 should be connected to ground in the design. RESERVED pins 73~84 should not be designed in schematic and PCB decal, and these pins should be served as a keepout area.

3.3. Pin Description

The following tables show the pin definition of EC21 module.

Table 3: I/O Parameters Definition

Type	Description
AI	Analog Input
AO	Analog Output
DI	Digital Input
DO	Digital Output
IO	Bidirectional
OD	Open Drain
PI	Power Input
PO	Power Output

Table 4: Pin Description

Power Supply					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
VBAT_BB	59, 60	PI	Power supply for module's baseband part	Vmax=4.3V Vmin=3.3V Vnorm=3.8V	It must be provided with sufficient current up to 0.8A.
VBAT_RF	57, 58	PI	Power supply for module's RF part	Vmax=4.3V Vmin=3.3V Vnorm=3.8V	It must be provided with sufficient current up to 1.8A in a burst

					transmission.
VDD_EXT	7	PO	Provide 1.8V for external circuit	V _{norm} =1.8V I _o max=50mA	Power supply for external GPIO's pull-up circuits. If unused, keep it open.
GND	8, 9, 19, 22, 36, 46, 48, 50~54, 56, 72, 85~112		Ground		

Power-on/off

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
PWRKEY	21	DI	Turn on/off the module	V _H =0.8V	The output voltage is 0.8V because of the diode drop in the Qualcomm chipset.
RESET_N	20	DI	Reset signal of the module	V _{IH} max=2.1V V _{IH} min=1.3V V _{IL} max=0.5V	If unused, keep it open.

Status Indication

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
STATUS	61	OD	Indicate the module operating status	The drive current should be less than 0.9mA.	An external pull-up resistor is required. If unused, keep it open.
NET_MODE	5	DO	Indicate the module's network registration mode	V _{OH} min=1.35V V _{OL} max=0.45V	1.8V power domain. It cannot be pulled up before startup. If unused, keep it open.
NET_STATUS	6	DO	Indicate the module's network activity status	V _{OH} min=1.35V V _{OL} max=0.45V	1.8V power domain. If unused, keep it open.

USB Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USB_VBUS	71	PI	USB connection detection	V _{max} =5.25V V _{min} =3.0V V _{norm} =5.0V	Typical: 5.0V If unused, keep it open.

USB_DP	69	IO	USB differential data bus (+)	USB 2.0 Compliant. Require differential impedance of 90Ω. If unused, keep it open.
USB_DM	70	IO	USB differential data bus (-)	USB 2.0 Compliant. Require differential impedance of 90Ω. If unused, keep it open.

(U)SIM Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USIM_GND	10		Specified ground for (U)SIM card		
USIM_PRESENCE	13	DI	(U)SIM card insertion detection	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V I _O max=50mA	1.8V power domain. If unused, keep it open.
USIM_VDD	14	PO	Power supply for (U)SIM card	For 1.8V (U)SIM: V _{max} =1.9V V _{min} =1.7V For 3.0V (U)SIM: V _{max} =3.05V V _{min} =2.7V	Either 1.8V or 3.0V is supported by the module automatically.
USIM_DATA	15	IO	Data signal of (U)SIM card	For 1.8V (U)SIM: V _{IL} max=0.6V V _{IH} min=1.2V V _{OL} max=0.45V V _{OH} min=1.35V For 3.0V (U)SIM: V _{IL} max=1.0V V _{IH} min=1.95V V _{OL} max=0.45V V _{OH} min=2.55V	
USIM_CLK	16	DO	Clock signal of (U)SIM card	For 1.8V (U)SIM: V _{OL} max=0.45V V _{OH} min=1.35V	

				For 3.0V (U)SIM: $V_{OLmax}=0.45V$ $V_{OHmin}=2.55V$
USIM_RST	17	DO	Reset signal of (U)SIM card	For 1.8V (U)SIM: $V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$ For 3.0V (U)SIM: $V_{OLmax}=0.45V$ $V_{OHmin}=2.55V$

Main UART Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
RI	62	DO	Ring indicator	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
DCD	63	DO	Data carrier detection	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
CTS	64	DO	Clear to send	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
RTS	65	DI	Request to send	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. If unused, keep it open.
DTR	66	DI	Data terminal ready, sleep mode control	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. Pulled up by default. Low level wakes up the module. If unused, keep it open.
TXD	67	DO	Transmit data	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
RXD	68	DI	Receive data	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. If unused, keep it open.

Debug UART Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
----------	---------	-----	-------------	--------------------	---------

DBG_TXD	12	DO	Transmit data	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
DBG_RXD	11	DI	Receive data	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. If unused, keep it open.
ADC Interfaces					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
ADC0	45	AI	General-purpose analog to digital converter	Voltage range: 0.3V to VBAT_BB	If unused, keep it open.
ADC1	44	AI	General-purpose analog to digital converter	Voltage range: 0.3V to VBAT_BB	If unused, keep it open.
PCM Interface¹⁾					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
PCM_IN	24	DI	PCM data input	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. If unused, keep it open.
PCM_OUT	25	DO	PCM data output	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
PCM_SYNC	26	IO	PCM data frame synchronization signal	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. In master mode, it is an output signal. In slave mode, it is an input signal. If unused, keep it open.
PCM_CLK	27	IO	PCM clock	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. In master mode, it is an output signal. In slave mode, it is an input signal. If unused, keep it open.
I2C Interface					

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
I2C_SCL	41	OD	I2C serial clock. Used for external codec		An external 1.8V pull-up resistor is required. If unused, keep it open.
I2C_SDA	42	OD	I2C serial data. Used for external codec		An external 1.8V pull-up resistor is required. If unused, keep it open.

SD Card Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
SDC2_DATA3	28	IO	SD card SDIO bus DATA3	1.8V signaling: $V_{OLmax}=0.45V$ $V_{OHmin}=1.4V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.58V$ $V_{IHmin}=1.27V$ $V_{IHmax}=2.0V$ 3.0V signaling: $V_{OLmax}=0.38V$ $V_{OHmin}=2.01V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.76V$ $V_{IHmin}=1.72V$ $V_{IHmax}=3.34V$	SDIO signal level can be selected according to SD card supported level, please refer to SD 3.0 protocol for more details. If unused, keep it open.
SDC2_DATA2	29	IO	SD card SDIO bus DATA2	1.8V signaling: $V_{OLmax}=0.45V$ $V_{OHmin}=1.4V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.58V$ $V_{IHmin}=1.27V$ $V_{IHmax}=2.0V$ 3.0V signaling: $V_{OLmax}=0.38V$ $V_{OHmin}=2.01V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.76V$ $V_{IHmin}=1.72V$	SDIO signal level can be selected according to SD card supported level, please refer to SD 3.0 protocol for more details. If unused, keep it open.

				$V_{IHmax}=3.34V$	
SDC2_ DATA1	30	IO	SD card SDIO bus DATA1	1.8V signaling: $V_{OLmax}=0.45V$ $V_{OHmin}=1.4V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.58V$ $V_{IHmin}=1.27V$ $V_{IHmax}=2.0V$ 3.0V signaling: $V_{OLmax}=0.38V$ $V_{OHmin}=2.01V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.76V$ $V_{IHmin}=1.72V$ $V_{IHmax}=3.34V$	SDIO signal level can be selected according to SD card supported level, please refer to SD 3.0 protocol for more details. If unused, keep it open.
SDC2_ DATA0	31	IO	SD card SDIO bus DATA0	1.8V signaling: $V_{OLmax}=0.45V$ $V_{OHmin}=1.4V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.58V$ $V_{IHmin}=1.27V$ $V_{IHmax}=2.0V$ 3.0V signaling: $V_{OLmax}=0.38V$ $V_{OHmin}=2.01V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.76V$ $V_{IHmin}=1.72V$ $V_{IHmax}=3.34V$	SDIO signal level can be selected according to SD card supported level, please refer to SD 3.0 protocol for more details. If unused, keep it open.
SDC2_CLK	32	DO	SD card SDIO bus clock	1.8V signaling: $V_{OLmax}=0.45V$ $V_{OHmin}=1.4V$ 3.0V signaling: $V_{OLmax}=0.38V$ $V_{OHmin}=2.01V$	SDIO signal level can be selected according to SD card supported level, please refer to SD 3.0 protocol for more details. If unused, keep it open.
SDC2_CMD	33	IO	SD card SDIO bus command	1.8V signaling: $V_{OLmax}=0.45V$ $V_{OHmin}=1.4V$ $V_{ILmin}=-0.3V$	SDIO signal level can be selected according to SD card supported level, please refer to

				$V_{ILmax}=0.58V$ $V_{IHmin}=1.27V$ $V_{IHmax}=2.0V$ 3.0V signaling: $V_{OLmax}=0.38V$ $V_{OHmin}=2.01V$ $V_{ILmin}=-0.3V$ $V_{ILmax}=0.76V$ $V_{IHmin}=1.72V$ $V_{IHmax}=3.34V$	SD 3.0 protocol for more details. If unused, keep it open.
SD_INS_DET	23	DI	SD card insertion detect	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. If unused, keep it open.
VDD_SDIO	34	PO	SD card SDIO bus pull-up power	$I_{Omax}=50mA$	1.8V/2.85V configurable. Cannot be used for SD card power. If unused, keep it open.

SGMII Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
EPHY_RST_N	119	DO	Ethernet PHY reset	For 1.8V: $V_{OLmax}=0.45V$ $V_{OHmin}=1.4V$ For 2.85V: $V_{OLmax}=0.35V$ $V_{OHmin}=2.14V$	1.8V/2.85V power domain. If unused, keep it open.
EPHY_INT_N	120	DI	Ethernet PHY interrupt	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. If unused, keep it open.
SGMII_MDATA	121	IO	SGMII MDIO (Management Data Input/Output) data	For 1.8V: $V_{OLmax}=0.45V$ $V_{OHmin}=1.4V$ $V_{ILmax}=0.58V$ $V_{IHmin}=1.27V$ For 2.85V: $V_{OLmax}=0.35V$	1.8V/2.85V power domain. If unused, keep it open.

				V _{OHmin} =2.14V V _{ILmax} =0.71V V _{IHmin} =1.78V	
SGMII_MCLK	122	DO	SGMII MDIO (Management Data Input/Output) clock	For 1.8V: V _{OLmax} =0.45V V _{OHmin} =1.4V For 2.85V: V _{OLmax} =0.35V V _{OHmin} =2.14V	1.8V/2.85V power domain. If unused, keep it open.
SGMII_TX_M	123	AO	SGMII transmission - minus		Connect with a 0.1μF capacitor, and is close to the PHY side. If unused, keep it open.
SGMII_TX_P	124	AO	SGMII transmission - plus		Connect with a 0.1μF capacitor, and is close to the PHY side. If unused, keep it open.
SGMII_RX_P	125	AI	SGMII receiving - plus		Connect with a 0.1μF capacitor, and is close to EC21 module. If unused, keep it open.
SGMII_RX_M	126	AI	SGMII receiving - minus		Connect with a 0.1μF capacitor, and is close to EC21 module. If unused, keep it open.
USIM2_VDD	128	PO	SGMII MDIO pull-up power source		Configurable power source. 1.8V/2.85V power domain. If unused, keep it open.

Wireless Connectivity Interfaces

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
SDC1_DATA3	129	IO	WLAN SDIO data bus D3	V _{OLmax} =0.45V V _{OHmin} =1.35V V _{ILmin} =-0.3V V _{ILmax} =0.6V	1.8V power domain. If unused, keep it open.

				V _{IH} min=1.2V V _{IH} max=2.0V	
SDC1_DATA2	130	IO	WLAN SDIO data bus D2	V _{OL} max=0.45V V _{OH} min=1.35V V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. If unused, keep it open.
SDC1_DATA1	131	IO	WLAN SDIO data bus D1	V _{OL} max=0.45V V _{OH} min=1.35V V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. If unused, keep it open.
SDC1_DATA0	132	IO	WLAN SDIO data bus D0	V _{OL} max=0.45V V _{OH} min=1.35V V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. If unused, keep it open.
SDC1_CLK	133	DO	WLAN SDIO bus clock	V _{OL} max=0.45V V _{OH} min=1.35V	1.8V power domain. If unused, keep it open.
SDC1_CMD	134	DO	WLAN SDIO bus command	V _{OL} max=0.45V V _{OH} min=1.35V	1.8V power domain. If unused, keep it open.
PM_ENABLE	127	DO	WLAN power control	V _{OL} max=0.45V V _{OH} min=1.35V	1.8V power domain. If unused, keep it open.
WAKE_ON_WIRELESS	135	DI	Wake up the host (EC21 module) by FC20 module.	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. Active low. If unused, keep it open.
WLAN_EN	136	DO	WLAN function control via FC20 module	V _{OL} max=0.45V V _{OH} min=1.35V	1.8V power domain. Active high. Cannot be pulled up before startup. If unused, keep it open.
COEX_UART_RX	137	DI	LTE/WLAN&BT coexistence signal	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. Cannot be pulled up before startup. If unused, keep it

					open.
COEX_UART_TX	138	DO	LTE/WLAN&BT coexistence signal	V _{OL} max=0.45V V _{OH} min=1.35V	1.8V power domain. Cannot be pulled up before startup. If unused, keep it open.
WLAN_SLP_CLK	118	DO	WLAN sleep clock		If unused, keep it open.
BT_RTS	37	DI	BT UART request to send	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. If unused, keep it open.
BT_TXD	38	DO	BT UART transmit data	V _{OL} max=0.45V V _{OH} min=1.35V	1.8V power domain. If unused, keep it open.
BT_RXD	39	DI	BT UART receive data	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. If unused, keep it open.
BT_CTS	40	DO	BT UART clear to send	V _{OL} max=0.45V V _{OH} min=1.35V	1.8V power domain. Cannot be pulled up before startup. If unused, keep it open.
BT_EN	139	DO	BT function control via FC20 module	V _{OL} max=0.45V V _{OH} min=1.35V	1.8V power domain. If unused, keep it open.

RF Interfaces

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
ANT_DIV	35	AI	Diversity antenna		50Ω impedance. If unused, keep it open.
ANT_MAIN	49	IO	Main antenna		50Ω impedance.
ANT_GNSS	47	AI	GNSS antenna		50Ω impedance. If unused, keep it open.

Other Interface Pins

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
----------	---------	-----	-------------	--------------------	---------

WAKEUP_IN	1	DI	Sleep mode control	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. Cannot be pulled up before startup. Low level wakes up the module. If unused, keep it open.
W_DISABLE#	4	DI	Airplane mode control	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. Pull-up by default. At low voltage level, module can enter airplane mode. If unused, keep it open.
AP_READY	2	DI	Application processor sleep state detection	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. If unused, keep it open.
USB_BOOT Interface					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USB_BOOT	115	DI	Force the module to enter emergency download mode.	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. Cannot be pulled up before startup. It is recommended to reserve test point.
RESERVED Pins					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
RESERVED	3, 18, 43, 55, 73~84, 113, 114, 116, 117, 140~144		Reserved		Keep these pins unconnected.

NOTE

¹⁾ PCM interface pins are used for audio design on EC25 module and BT function on FC20 module.

3.4. Operating Modes

The following table briefly outlines the operating modes to be mentioned in the following chapters.

Table 5: Overview of Operating Modes

Mode	Details	
Normal Operation	Idle	Software is active. The module has registered on the network, and it is ready to send and receive data.
	Talk/Data	Network connection is ongoing. In this mode, the power consumption is decided by network setting and data transfer rate.
Minimum Functionality Mode	AT+CFUN command can set the module to a minimum functionality mode without removing the power supply. In this case, both RF function and (U)SIM card will be invalid.	
Airplane Mode	AT+CFUN command or W_DISABLE# pin can set the module to airplane mode. In this case, RF function will be invalid.	
Sleep Mode	In this mode, the current consumption of the module will be reduced to the minimal level. During this mode, the module can still receive paging message, SMS, voice call and TCP/UDP data from the network normally.	
Power Down Mode	In this mode, the power management unit shuts down the power supply. Software goes inactive. The serial interface is not accessible. Operating voltage (connected to VBAT_RF and VBAT_BB) remains applied.	

3.5. Power Saving

3.5.1. Sleep Mode

EC21 is able to reduce its current consumption to a minimum value during the sleep mode. The following section describes power saving procedures of EC21 module.

3.5.1.1. UART Application

If the host communicates with module via UART interface, the following preconditions can let the module enter into sleep mode.

- Execute **AT+QSCLK=1** command to enable sleep mode.
- Drive DTR to high level.

The following figure shows the connection between the module and the host.

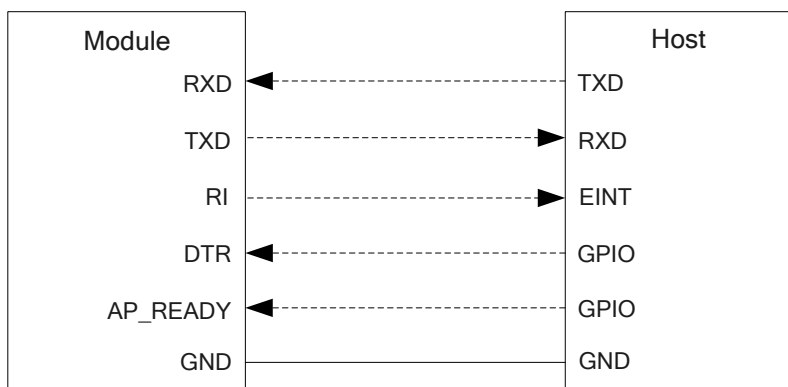


Figure 2: Sleep Mode Application via UART

- Driving the host DTR to low level will wake up the module.
- When EC21 has a URC to report, RI signal will wake up the host. Please refer to **Chapter 3.19** for details about RI behaviors.
- AP_READY will detect the sleep state of the host (can be configured to high level or low level detection). Please refer to **AT+QCFG="apready"** command for details.

3.5.1.2. USB Application with USB Remote Wakeup Function

If the host supports USB suspend/resume and remote wakeup functions, the following three preconditions must be met to let the module enter sleep mode.

- Execute **AT+QSCLK=1** command to enable sleep mode.
- Ensure the DTR is held at high level or keep it open.
- The host's USB bus, which is connected with the module's USB interface, enters suspend state.

The following figure shows the connection between the module and the host.

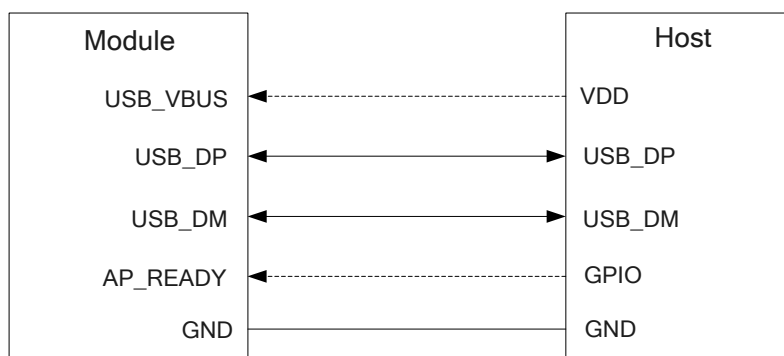


Figure 3: Sleep Mode Application with USB Remote Wakeup

- Sending data to EC21 via USB will wake up the module.
- When EC21 has a URC to report, the module will send remote wake-up signals via USB bus so as to wake up the host.

3.5.1.3. USB Application with USB Suspend/Resume and RI Function

If the host supports USB suspend and resume, but does not support remote wake-up function, the RI signal is needed to wake up the host.

There are three preconditions to let the module enter sleep mode.

- Execute **AT+QSCLK=1** command to enable sleep mode.
- Ensure the DTR is held at high level or keep it open.
- The host's USB bus, which is connected with the module's USB interface, enters suspend state.

The following figure shows the connection between the module and the host.

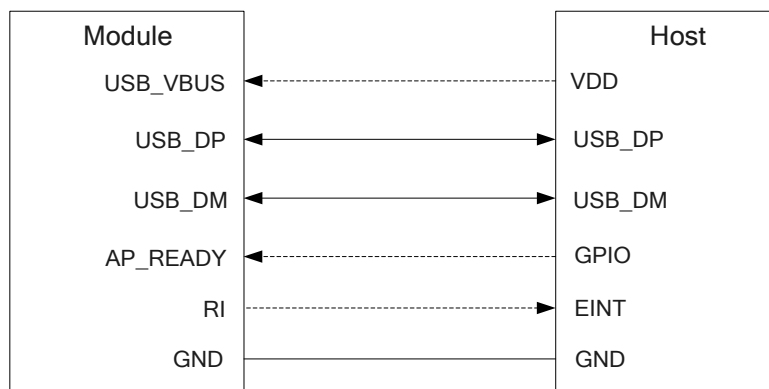


Figure 4: Sleep Mode Application with RI

- Sending data to EC21 via USB will wake up the module.
- When EC21 has a URC to report, RI signal will wake up the host.

3.5.1.4. USB Application without USB Suspend Function

If the host does not support USB suspend function, USB_VBUS should be disconnected via an additional control circuit to let the module enter sleep mode.

- Execute **AT+QSCLK=1** command to enable sleep mode.
- Ensure the DTR is held at high level or keep it open.
- Disconnect USB_VBUS.

The following figure shows the connection between the module and the host.

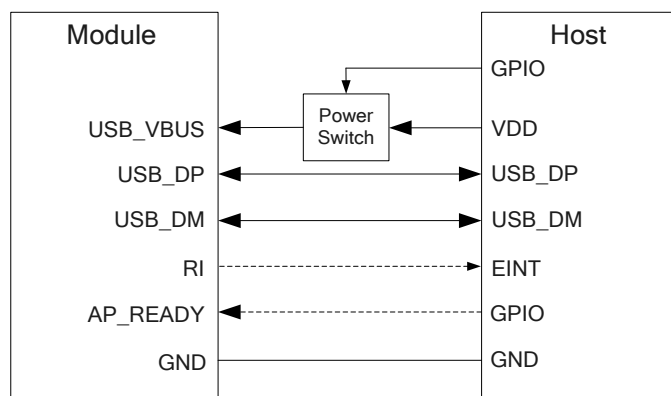


Figure 5: Sleep Mode Application without Suspend Function

Switching on the power switch to supply power to USB_VBUS will wake up the module.

NOTE

Please pay attention to the level match shown in dotted line between the module and the host. For more details about EC21 power management application, please refer to **document [1]**.

3.5.2. Airplane Mode

When the module enters airplane mode, the RF function will be disabled, and all AT commands related to it will be inaccessible. This mode can be set via the following ways.

Hardware:

The W_DISABLE# pin is pulled up by default. Driving it to low level will let the module enter airplane mode.

Software:

AT+CFUN command provides the choice of the functionality level through setting **<fun>** into 0, 1 or 4.

- **AT+CFUN=0:** Minimum functionality mode. Both (U)SIM and RF functions are disabled.
- **AT+CFUN=1:** Full functionality mode (by default).
- **AT+CFUN=4:** Airplane mode. RF function is disabled.

NOTES

1. The W_DISABLE# control function is disabled in firmware by default. It can be enabled by **AT+QCFG="airplanecontrol"** command.
2. The execution of **AT+CFUN** command will not affect GNSS function.

3.6. Power Supply

3.6.1. Power Supply Pins

EC21 provides four VBAT pins for connection with the external power supply. There are two separate voltage domains for VBAT.

- Two VBAT_RF pins for module's RF part.
- Two VBAT_BB pins for module's baseband part.

The following table shows the details of VBAT pins and ground pins.

Table 6: VBAT and GND Pins

Pin Name	Pin No.	Description	Min.	Typ.	Max.	Unit
VBAT_RF	57, 58	Power supply for module's RF part.	3.3	3.8	4.3	V
VBAT_BB	59, 60	Power supply for module's baseband part.	3.3	3.8	4.3	V
GND	8, 9, 19, 22, 36, 46, 48, 50~54, 56, 72, 85~112	Ground	-	0	-	V

3.6.2. Decrease Voltage Drop

The power supply range of the module is from 3.3V to 4.3V. Please make sure that the input voltage will never drop below 3.3V. The following figure shows the voltage drop during burst transmission in 2G network. The voltage drop will be less in 3G and 4G networks.

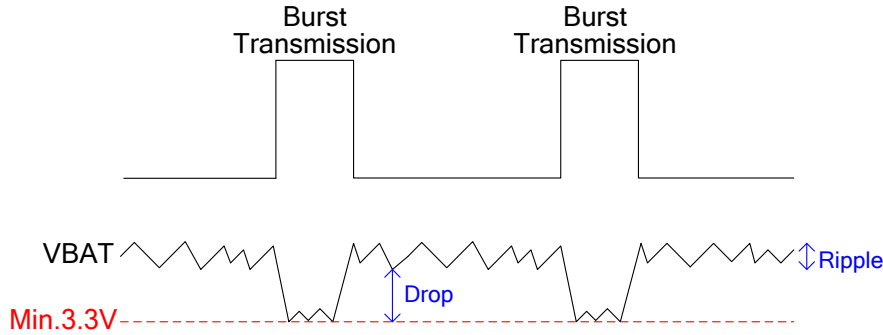


Figure 6: Power Supply Limits during Burst Transmission

To decrease voltage drop, a bypass capacitor of about 100μF with low ESR (ESR=0.7Ω) should be used, and a multi-layer ceramic chip (MLCC) capacitor array should also be reserved due to its ultra-low ESR. It is recommended to use three ceramic capacitors (100nF, 33pF, 10pF) for composing the MLCC array, and place these capacitors close to VBAT_BB/VBAT_RF pins. The main power supply from an external application has to be a single voltage source and can be expanded to two sub paths with star structure. The width of VBAT_BB trace should be no less than 1mm; and the width of VBAT_RF trace should be no less than 2mm. In principle, the longer the VBAT trace is, the wider it will be.

In addition, in order to avoid the damage caused by electric surge and ESD, it is suggested that a TVS diode with suggested low reverse stand-off voltage V_{RWM} 4.5V, low clamping voltage V_C and high reverse peak pulse current I_{PP} should be used. The following figure shows the star structure of the power supply.

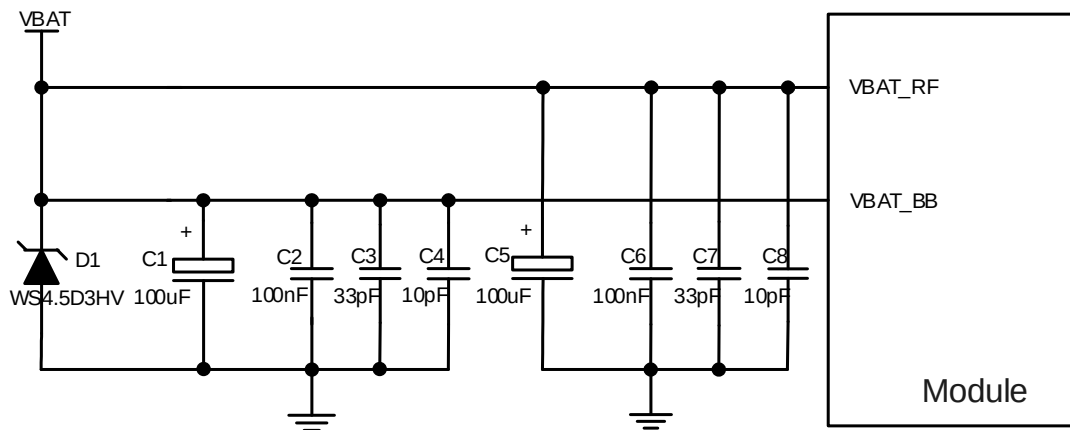


Figure 7: Star Structure of the Power Supply

3.6.3. Reference Design for Power Supply

Power design for the module is very important, as the performance of the module largely depends on the power source. The power supply should be able to provide sufficient current up to 2.0A at least. If the voltage drop between the input and output is not too high, it is suggested that an LDO should be used to

supply power for the module. If there is a big voltage difference between the input source and the desired output (VBAT), a buck converter is preferred to be used as the power supply.

The following figure shows a reference design for +5.0V input power source. The typical output of the power supply is about 3.8V and the maximum load current is 3.0A.

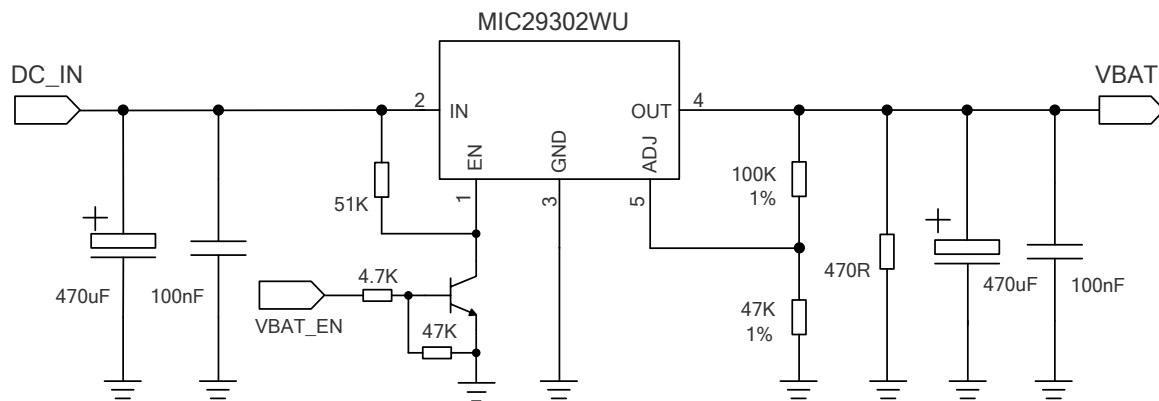


Figure 8: Reference Circuit of Power Supply

NOTE

In order to avoid damaging internal flash, please do not switch off the power supply when the module works normally. Only after the module is shut down by PWRKEY or AT command, then the power supply can be cut off.

3.6.4. Monitor the Power Supply

AT+CBC command can be used to monitor the VBAT_BB voltage value. For more details, please refer to *document [2]*.

3.7. Power-on/off Scenarios

3.7.1. Turn on Module Using the PWRKEY

The following table shows the pin definition of PWRKEY.

Table 7: Pin Definition of PWRKEY

Pin Name	Pin No.	I/O	Description	Comment
PWRKEY	21	DI	Turn on/off the module	The output voltage is 0.8V because of the diode drop in the Qualcomm chipset.

When EC21 is in power down mode, it can be turned on to normal mode by driving the PWRKEY pin to a low level for at least 500ms. It is recommended to use an open drain/collector driver to control the PWRKEY. After STATUS pin (require external pull-up resistor) outputs a low level, PWRKEY pin can be released. A simple reference circuit is illustrated in the following figure.

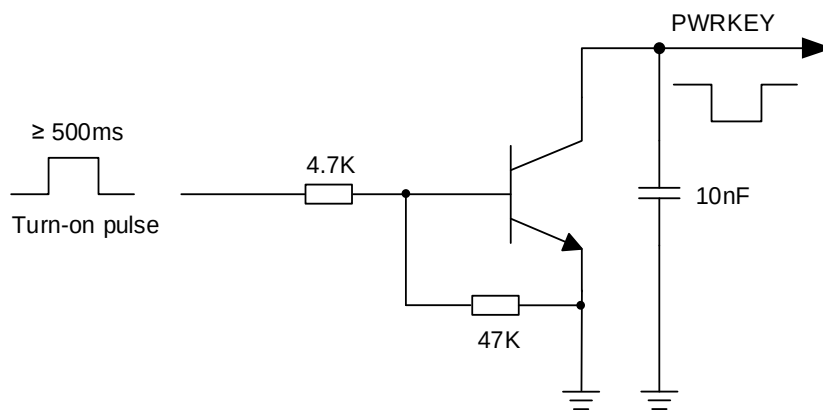


Figure 9: Turn on the Module by Using Driving Circuit

The other way to control the PWRKEY is using a button directly. When pressing the key, electrostatic strike may generate from finger. Therefore, a TVS component is indispensable to be placed nearby the button for ESD protection. A reference circuit is shown in the following figure.

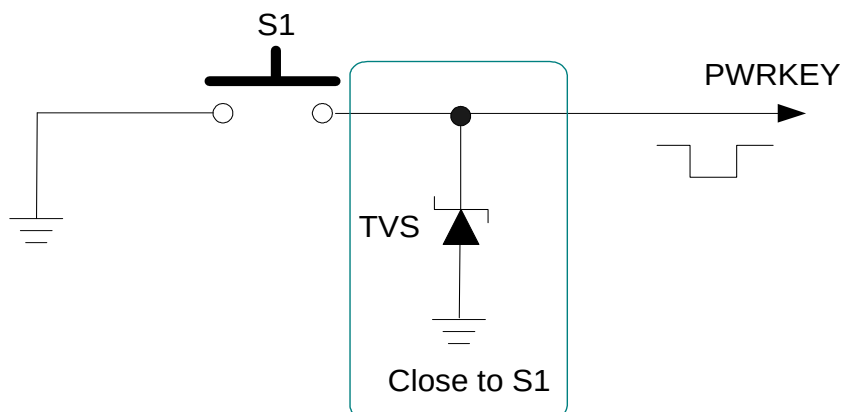


Figure 10: Turn on the Module by Using Keystroke

The power-on scenario is illustrated in the following figure.

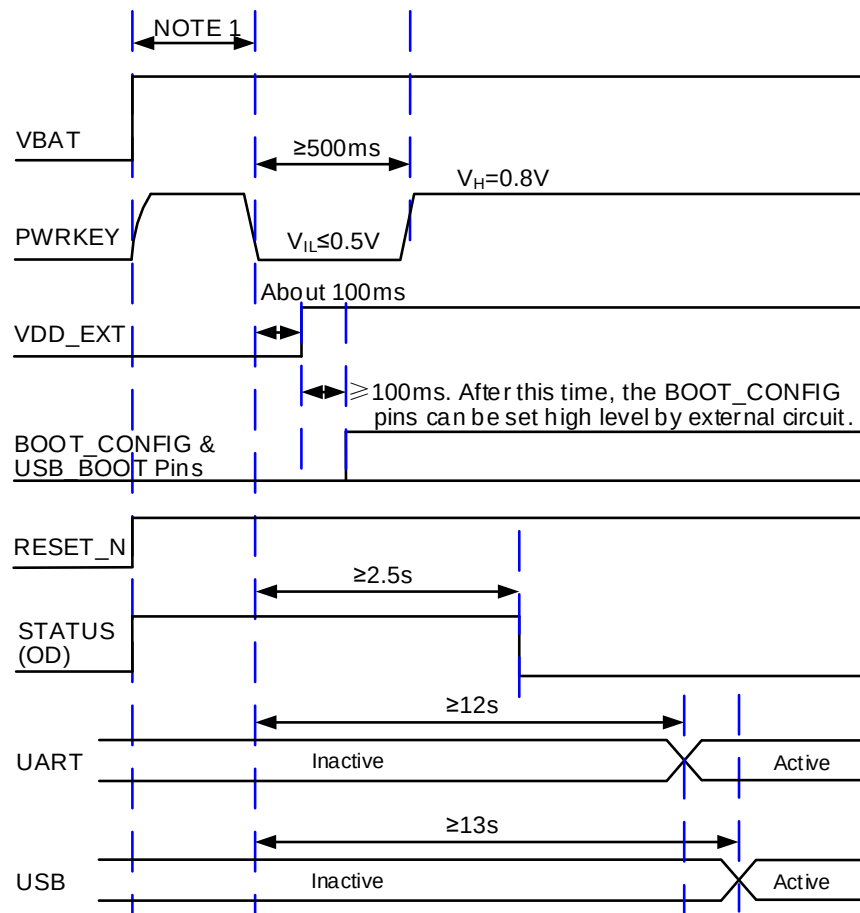


Figure 11: Timing of Turning on Module

NOTES

1. Please make sure that VBAT is stable before pulling down PWRKEY pin. It is recommended that the time between powering up VBAT and pulling down PWRKEY pin is no less than 30ms.
2. PWRKEY can be pulled down directly to GND with a recommended 10kΩ resistor if module needs to be powered on automatically and shutdown is not needed.

3.7.2. Turn off Module

The following procedures can be used to turn off the module normally:

- Use the PWRKEY pin.
- Use **AT+QPOWD** command.

3.7.2.1. Turn off Module Using the PWRKEY Pin

Driving the PWRKEY pin to a low level voltage for at least 650ms, the module will execute power-off procedure after the PWRKEY is released. The power-off scenario is illustrated in the following figure.

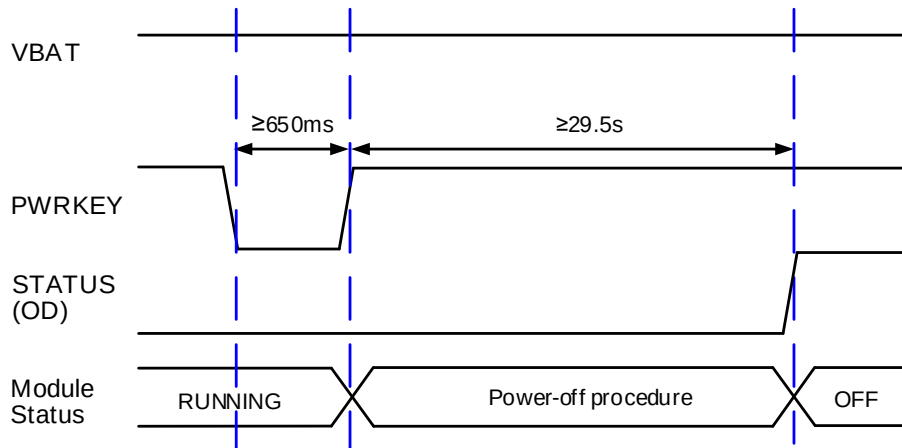


Figure 12: Timing of Turning off Module

3.7.2.2. Turn off Module Using AT Command

It is also a safe way to use **AT+QPOWD** command to turn off the module, which is similar to turning off the module via PWRKEY pin.

Please refer to **document [2]** for details about **AT+QPOWD** command.

NOTE

1. In order to avoid damaging internal flash, please do not switch off the power supply when the module works normally. Only after the module is shut down by PWRKEY or AT command, then the power supply can be cut off.
2. When turning off module with the AT command, please keep PWRKEY at high level after the execution of the command. Otherwise the module will be turned on again after successfully turn-off.

3.8. Reset Module

The RESET_N pin can be used to reset the module. The module can be reset by driving RESET_N to a low level voltage for time between 150ms and 460ms.

Table 8: Pin Definition of RESET_N

Pin Name	Pin No.	I/O	Description	Comment
RESET_N	20	DI	Reset the module	1.8V power domain

The recommended circuit is similar to the PWRKEY control circuit. An open drain/collector driver or button can be used to control the RESET_N.

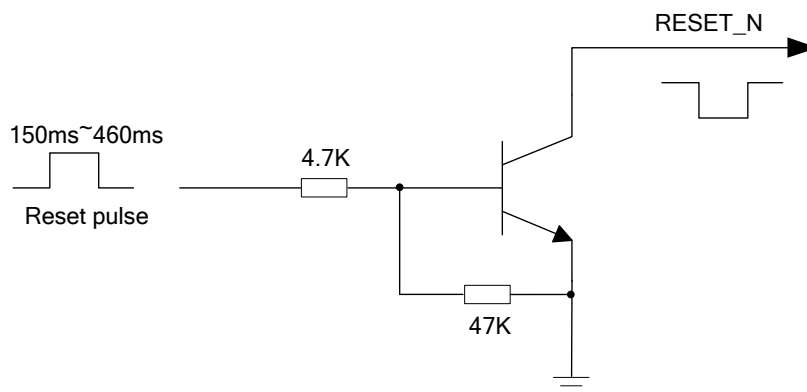


Figure 13: Reference Circuit of RESET_N by Using Driving Circuit

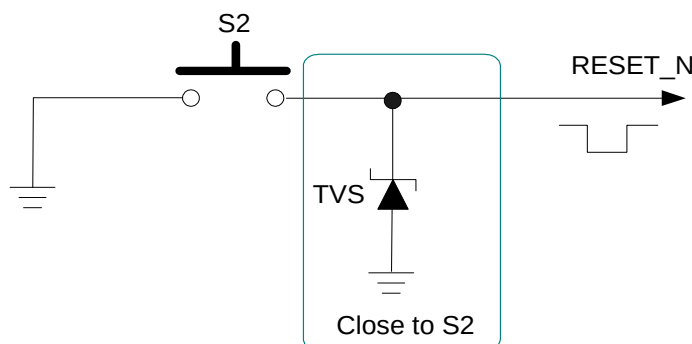


Figure 14: Reference Circuit of RESET_N by Using Button

The reset scenario is illustrated in the following figure.

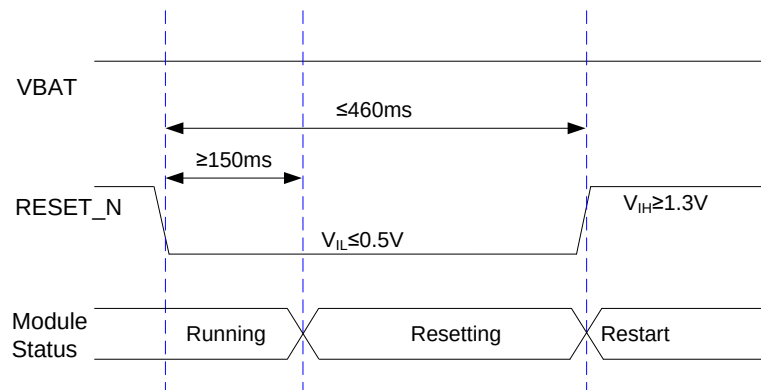


Figure 15: Timing of Resetting Module

NOTES

1. Use RESET_N only when failed to turn off the module by **AT+QPOWD** command and PWRKEY pin.
2. Ensure that there is no large capacitance on PWRKEY and RESET_N pins.

3.9. (U)SIM Interface

The (U)SIM interface circuitry meets ETSI and IMT-2000 requirements. Both 1.8V and 3.0V (U)SIM cards are supported.

Table 9: Pin Definition of (U)SIM Interface

Pin Name	Pin No.	I/O	Description	Comment
USIM_VDD	14	PO	Power supply for (U)SIM card	Either 1.8V or 3.0V is supported by the module automatically.
USIM_DATA	15	IO	Data signal of (U)SIM card	
USIM_CLK	16	DO	Clock signal of (U)SIM card	
USIM_RST	17	DO	Reset signal of (U)SIM card	
USIM_PRESENCE	13	DI	(U)SIM card insertion detection	1.8V power domain. If unused, keep it open.
USIM_GND	10		Specified ground for (U)SIM card	

The following figure shows a reference design for (U)SIM interface with an 8-pin (U)SIM card connector.

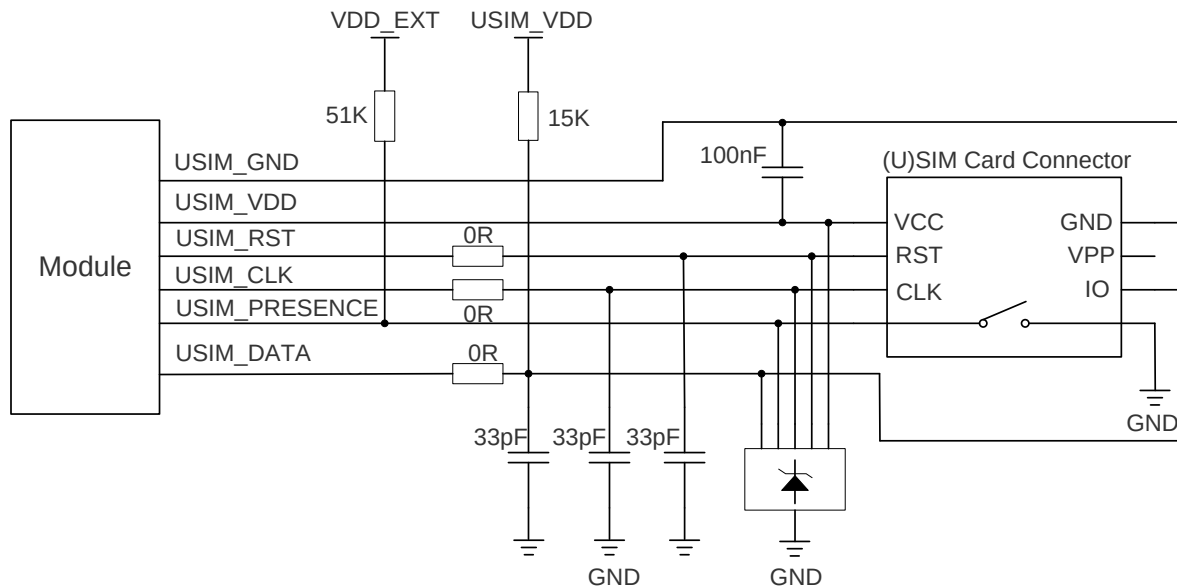


Figure 16: Reference Circuit of (U)SIM Interface with an 8-pin (U)SIM Card Connector

Figure 17: Reference Circuit of (U)SIM Interface with a 6-pin (U)SIM Card Connector

In order to enhance the reliability and availability of the (U)SIM card in customers' applications, please follow the criteria below in (U)SIM circuit design:

- Keep placement of (U)SIM card connector to the module as close as possible. Keep the trace length as less than 200mm as possible.
- Keep (U)SIM card signals away from RF and VBAT traces.
- Make sure the bypass capacitor between USIM_VDD and USIM_GND less than 1 μ F, and place it as close to (U)SIM card connector as possible. If the ground is complete on customers' PCB, USIM_GND can be connected to PCB ground directly.
- To avoid cross-talk between USIM_DATA and USIM_CLK, keep them away from each other and shield them with surrounded ground.
- In order to offer good ESD protection, it is recommended to add a TVS diode array whose parasitic capacitance should not be more than 15pF. The 0 Ω resistors should be added in series between the module and the (U)SIM card to facilitate debugging. The 33pF capacitors are used for filtering interference of EGSM900. Please note that the (U)SIM peripheral circuit should be close to the (U)SIM card connector.
- The pull-up resistor on USIM_DATA line can improve anti-jamming capability when long layout trace and sensitive occasion are applied, and should be placed close to the (U)SIM card connector.

3.10. USB Interface

EC21 contains one integrated Universal Serial Bus (USB) interface which complies with the USB 2.0 specification and supports high-speed (480Mbps) and full-speed (12Mbps) modes. The USB interface can only serves as a slave device and is used for AT command communication, data transmission, GNSS NMEA sentences output, software debugging, firmware upgrade and voice over USB. The following table shows the pin definition of USB interface.

Table 10: Pin Description of USB Interface

Pin Name	Pin No.	I/O	Description	Comment
USB_DP	69	IO	USB differential data bus (+)	Require differential impedance of 90 Ω
USB_DM	70	IO	USB differential data bus (-)	Require differential impedance of 90 Ω
USB_VBUS	71	PI	USB connection detection	Typical 5.0V
GND	72		Ground	

For more details about the USB 2.0 specifications, please visit <http://www.usb.org/home>.

The USB interface is recommended to be reserved for firmware upgrade in customers' designs. The following figure shows a reference circuit of USB interface.

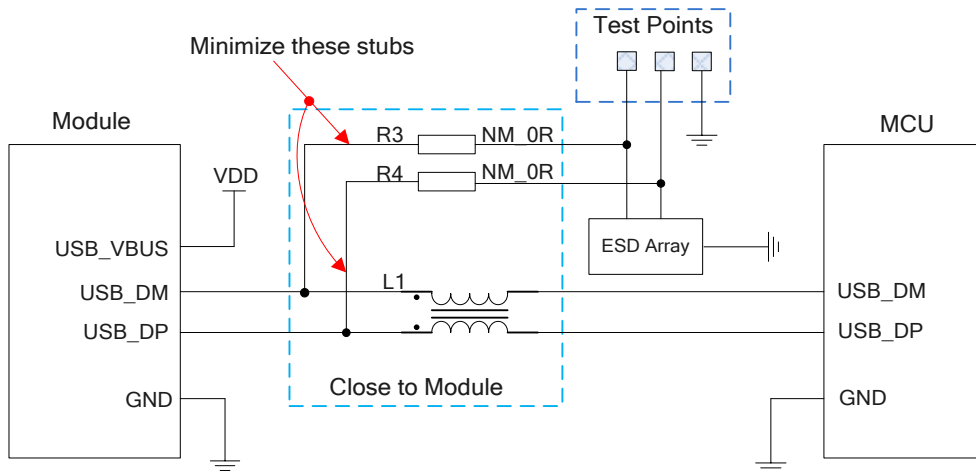


Figure 18: Reference Circuit of USB Application

A common mode choke L1 is recommended to be added in series between the module and customer's MCU in order to suppress EMI spurious transmission. Meanwhile, the 0Ω resistors (R3 and R4) should be added in series between the module and the test points so as to facilitate debugging, and the resistors are not mounted by default. In order to ensure the integrity of USB data line signal, L1/R3/R4 components must be placed close to the module, and also these resistors should be placed close to each other. The extra stubs of trace must be as short as possible.

The following principles should be complied with when design the USB interface, so as to meet USB 2.0 specification.

- It is important to route the USB signal traces as differential pairs with total grounding. The impedance of USB differential trace is 90Ω.
- Do not route signal traces under crystals, oscillators, magnetic devices and RF signal traces. It is important to route the USB differential traces in inner-layer with ground shielding on not only upper and lower layers but also right and left sides.
- Junction capacitance of the ESD protection component might cause influences on USB data lines, so please pay attention to the selection of the component. Typically, the stray capacitance should be less than 2pF.
- Keep the ESD protection components to the USB connector as close as possible.

3.11. UART Interfaces

The module provides two UART interfaces: the main UART interface and the debug UART interface. The following shows their features.

- The main UART interface supports 4800bps, 9600bps, 19200bps, 38400bps, 57600bps, 115200bps, 230400bps, 460800bps and 921600bps baud rates, and the default is 115200bps. It also supports RTS and CTS hardware flow control, and can be used for data transmission and AT command communication.
- The debug UART interface supports 115200bps baud rate. It is used for Linux console and log output.

The following tables show the pin definition of the UART interfaces.

Table 11: Pin Definition of Main UART Interface

Pin Name	Pin No.	I/O	Description	Comment
RI	62	DO	Ring indicator	1.8V power domain
DCD	63	DO	Data carrier detection	
CTS	64	DO	Clear to send	
RTS	65	DI	Request to send	
DTR	66	DI	Data terminal ready, sleep mode control	
TXD	67	DO	Transmit data	
RXD	68	DI	Receive data	

Table 12: Pin Definition of Debug UART Interface

Pin Name	Pin No.	I/O	Description	Comment
DBG_TXD	12	DO	Transmit data	1.8V power domain
DBG_RXD	11	DI	Receive data	

The logic levels are described in the following table.

Table 13: Logic Levels of Digital I/O

Parameter	Min.	Max.	Unit
V _{IL}	-0.3	0.6	V

V_{IH}	1.2	2.0	V
V_{OL}	0	0.45	V
V_{OH}	1.35	1.8	V

The module provides 1.8V UART interface. A level translator should be used if customers' application is equipped with a 3.3V UART interface. A level translator TXS0108EPWR provided by *Texas Instruments* is recommended. The following figure shows a reference design.

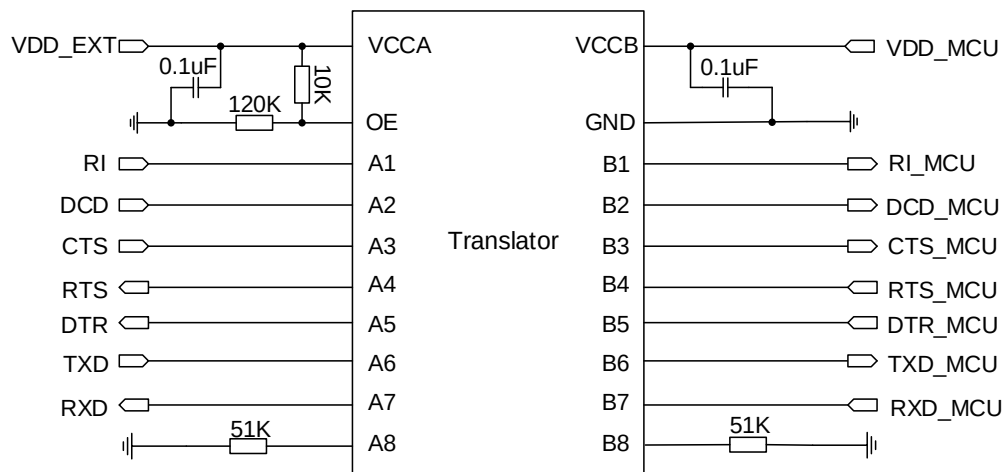


Figure 19: Reference Circuit with Translator Chip

Please visit <http://www.ti.com> for more information.

Another example with transistor translation circuit is shown as below. For the design of circuits in dotted lines, please refer to that of circuits in solid lines, but please pay attention to the direction of connection.

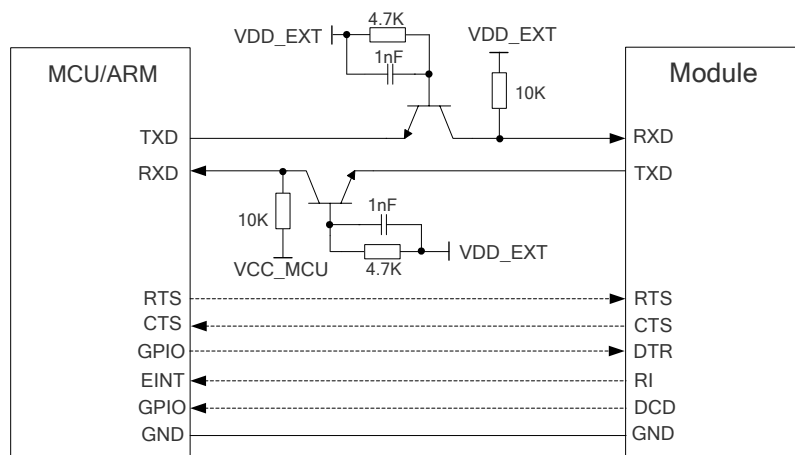


Figure 20: Reference Circuit with Transistor Circuit

NOTE

Transistor circuit solution is not suitable for applications with high baud rates exceeding 460Kbps.

3.12. PCM and I2C Interfaces

EC21 provides one Pulse Code Modulation (PCM) digital interface for audio design, which supports the following modes and one I2C interface:

- Primary mode (short frame synchronization, works as both master and slave)
- Auxiliary mode (long frame synchronization, works as master only)

In primary mode, the data is sampled on the falling edge of the PCM_CLK and transmitted on the rising edge. The PCM_SYNC falling edge represents the MSB. In this mode, the PCM interface supports 256kHz, 512kHz, 1024kHz or 2048kHz PCM_CLK at 8kHz PCM_SYNC, and also supports 4096kHz PCM_CLK at 16kHz PCM_SYNC.

In auxiliary mode, the data is sampled on the falling edge of the PCM_CLK and transmitted on the rising edge. The PCM_SYNC rising edge represents the MSB. In this mode, the PCM interface operates with a 256kHz, 512kHz, 1024kHz or 2048kHz PCM_CLK and an 8kHz, 50% duty cycle PCM_SYNC.

EC21 supports 16-bit linear data format. The following figures show the primary mode's timing relationship with 8kHz PCM_SYNC and 2048kHz PCM_CLK, as well as the auxiliary mode's timing relationship with 8kHz PCM_SYNC and 256kHz PCM_CLK.

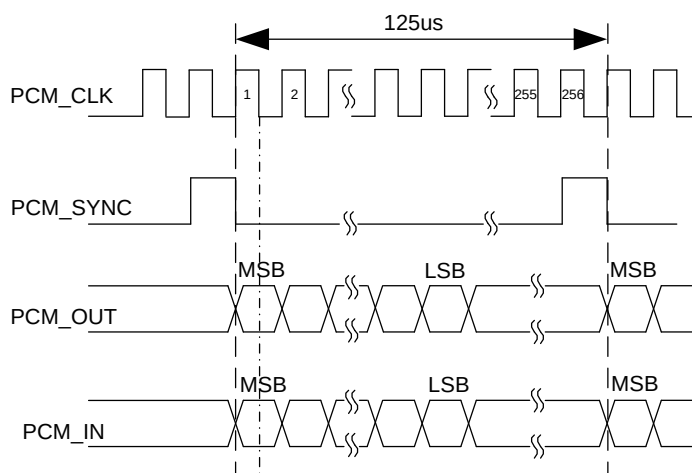


Figure 21: Primary Mode Timing

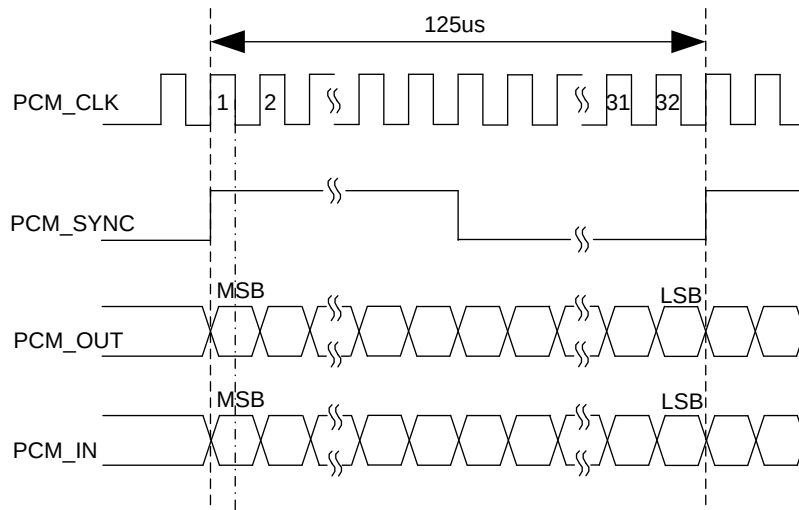


Figure 22: Auxiliary Mode Timing

The following table shows the pin definition of PCM and I2C interfaces which can be applied on audio codec design.

Table 14: Pin Definition of PCM and I2C Interfaces

Pin Name	Pin No.	I/O	Description	Comment
PCM_IN	24	DI	PCM data input	1.8V power domain
PCM_OUT	25	DO	PCM data output	1.8V power domain
PCM_SYNC	26	IO	PCM data frame synchronization signal	1.8V power domain
PCM_CLK	27	IO	PCM data bit clock	1.8V power domain
I2C_SCL	41	OD	I2C serial clock	An external 1.8V pull-up resistor is required.
I2C_SDA	42	OD	I2C serial data	An external 1.8V pull-up resistor is required.

Clock and mode can be configured by AT command, and the default configuration is master mode using short frame synchronization format with 2048kHz PCM_CLK and 8kHz PCM_SYNC. Please refer to **document [2]** for more details about **AT+QDAI** command.

The following figure shows a reference design of PCM and I2C interfaces with external codec IC.

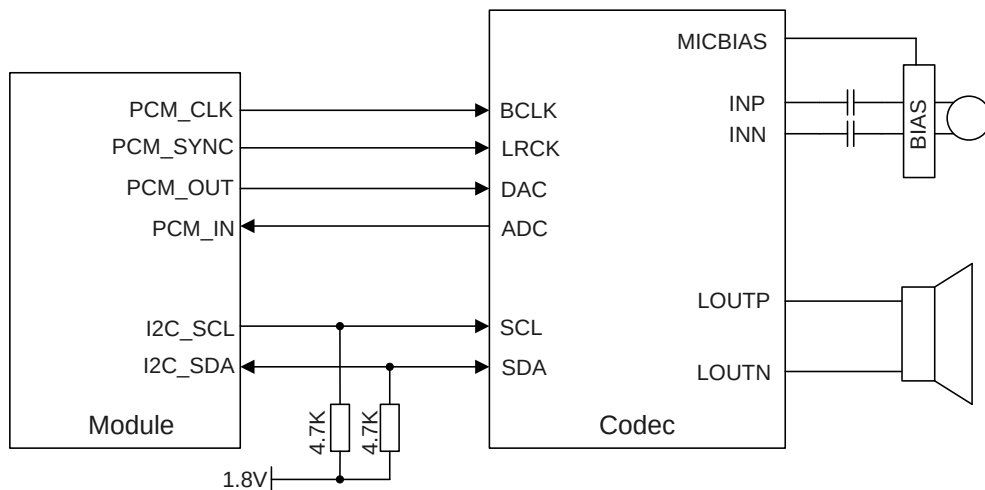


Figure 23: Reference Circuit of PCM and I2C Application with Audio Codec

NOTES

1. It is recommended to reserve an RC ($R=22\Omega$, $C=22pF$) circuits on the PCM lines, especially for PCM_CLK.
2. EC21 works as a master device pertaining to I2C interface.

3.13. SD Card Interface

EC21 supports SDIO 3.0 interface for SD card.

The following table shows the pin definition of SD card interface.

Table 15: Pin Definition of SD Card Interface

Pin Name	Pin No.	I/O	Description	Comment
SDC2_DATA3	28	IO	SD card SDIO bus DATA3	SDIO signal level can be selected according to SD card supported level, please refer to SD 3.0 protocol for more details. If unused, keep it open.
SDC2_DATA2	29	IO	SD card SDIO bus DATA2	
SDC2_DATA1	30	IO	SD card SDIO bus DATA1	
SDC2_DATA0	31	IO	SD card SDIO bus DATA0	
SDC2_CLK	32	DO	SD card SDIO bus clock	

SDC2_CMD	33	IO	SD card SDIO bus command	
VDD_SDIO	34	PO	SD card SDIO bus pull up power	1.8V/2.85V configurable. Cannot be used for SD card power. If unused, keep it open.
SD_INS_DET	23	DI	SD card insertion detection	1.8V power domain. If unused, keep it open.

The following figure shows a reference design of SD card.

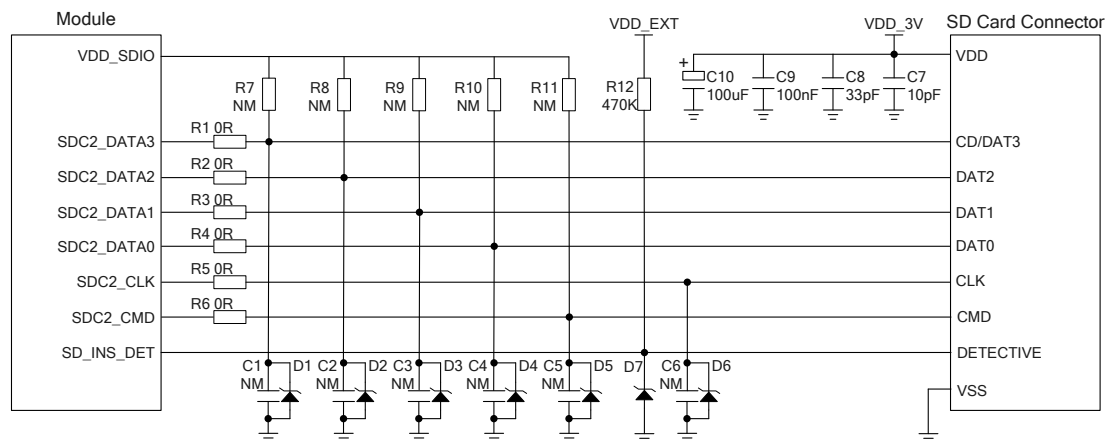


Figure 24: Reference Circuit of SD Card Interface

In SD card interface design, in order to ensure good communication performance with SD card, the following design principles should be complied with:

- SD_INS_DET must be connected.
- The voltage range of SD card power supply VDD_3V is 2.7V~3.6V and a sufficient current up to 0.8A should be provided. As the maximum output current of VDD_SDIO is 50mA which can only be used for SDIO pull-up resistors, an externally power supply is needed for SD card.
- To avoid jitter of bus, resistors R7~R11 are needed to pull up the SDIO to VDD_SDIO. Value of these resistors is among 10kΩ~100kΩ and the recommended value is 100kΩ. VDD_SDIO should be used as the pull-up power.
- In order to adjust signal quality, it is recommended to add 0Ω resistors R1~R6 in series between the module and the SD card. The bypass capacitors C1~C6 are reserved and not mounted by default. All resistors and bypass capacitors should be placed close to the module.
- In order to offer good ESD protection, it is recommended to add a TVS diode on SD card pins near the SD card connector with junction capacitance less than 15pF.
- Keep SDIO signals far away from other sensitive circuits/signals such as RF circuits, analog signals, etc., as well as noisy signals such as clock signals, DC-DC signals, etc.

- It is important to route the SDIO signal traces with total grounding. The impedance of SDIO data trace is 50Ω (±10%).
- Make sure the adjacent trace spacing is two times of the trace width and the load capacitance of SDIO bus should be less than 15pF.
- It is recommended to keep the trace length difference between CLK and DATA/CMD less than 1mm and the total routing length less than 50mm. The total trace length inside the module is 27mm, so the exterior total trace length should be less than 23mm.

3.14. Wireless Connectivity Interfaces

EC21 supports a low-power SDIO 3.0 interface for WLAN and UART/PCM interfaces for BT function.

The following table shows the pin definition of wireless connectivity interfaces.

Table 16: Pin Definition of Wireless Connectivity Interfaces

Pin Name	Pin No.	I/O	Description	Comment
WLAN Part				
SDC1_DATA3	129	IO	WLAN SDIO data bus D3	1.8V power domain
SDC1_DATA2	130	IO	WLAN SDIO data bus D2	1.8V power domain
SDC1_DATA1	131	IO	WLAN SDIO data bus D1	1.8V power domain
SDC1_DATA0	132	IO	WLAN SDIO data bus D0	1.8V power domain
SDC1_CLK	133	DO	WLAN SDIO bus clock	1.8V power domain
SDC1_CMD	134	IO	WLAN SDIO bus command	1.8V power domain
WLAN_EN	136	DO	WLAN function control via FC20 module.	1.8V power domain Active high. Cannot be pulled up before startup. If unused, keep it open.
Coexistence and Control Part				
PM_ENABLE	127	DO	WLAN power control	1.8V power domain. Active high.
WAKE_ON_WIRELESS	135	DI	Wake up the host (EC21 module) by FC20 module	1.8V power domain

COEX_UART_RX	137	DI	LTE/WLAN&BT coexistence signal	1.8V power domain. Cannot be pulled up before startup. If unused, keep it open.
COEX_UART_TX	138	DO	LTE/WLAN&BT coexistence signal	1.8V power domain. Cannot be pulled up before startup. If unused, keep it open.
WLAN_SLP_CLK	118	DO	WLAN sleep clock	
BT Part				
BT_RTS	37	DI	BT UART request to send	1.8V power domain
BT_TXD	38	DO	BT UART transmit data	1.8V power domain
BT_RXD	39	DI	BT UART receive data	1.8V power domain
BT_CTS	40	DO	BT UART clear to send	1.8V power domain Cannot be pulled up before startup. If unused, keep it open.
PCM_IN ¹⁾	24	DI	PCM data input	1.8V power domain
PCM_OUT ¹⁾	25	DO	PCM data output	1.8V power domain
PCM_SYNC ¹⁾	26	IO	PCM data frame synchronization signal	1.8V power domain
PCM_CLK ¹⁾	27	IO	PCM data bit clock	1.8V power domain
BT_EN	139	DO	BT function control via FC20 module.	1.8V power domain Active high.

The following figure shows a reference design of wireless connectivity interfaces with Quectel FC20 module.

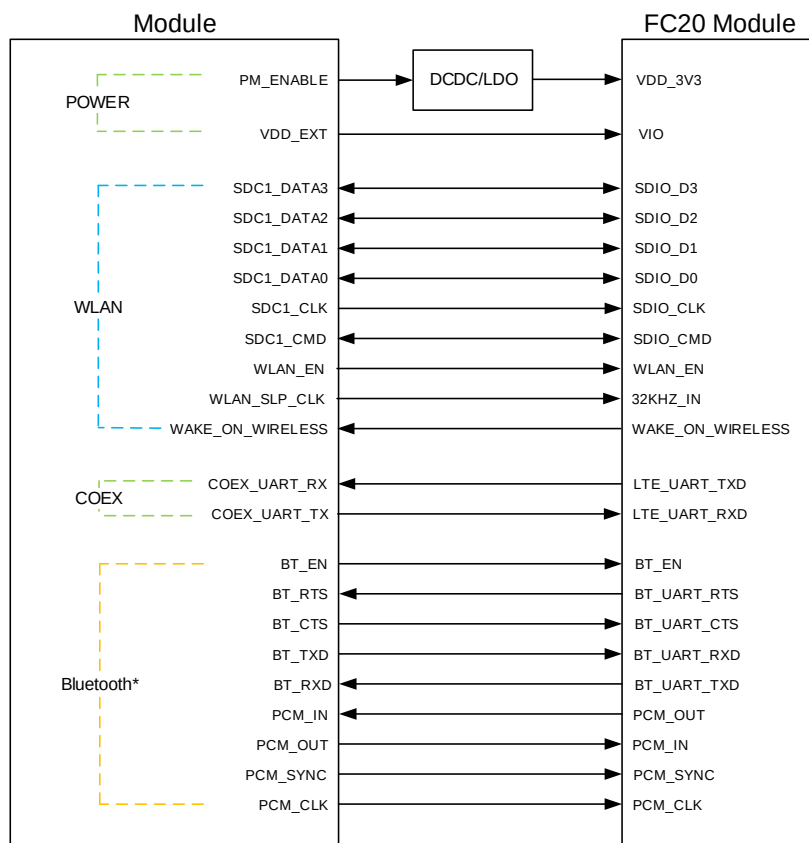


Figure 25: Reference Circuit of Wireless Connectivity Interfaces with FC20 Module

NOTES

1. FC20 module can only be used as a slave device.
2. When BT function is enabled on EC21 module, PCM_SYNC and PCM_CLK pins are only used to output signals. BT function is under development.
3. ¹⁾ Pins 24~27 for PCM function are used for audio design on EC25 module and BT function on FC20 module.
4. For more information about wireless connectivity interfaces, please refer to **document [5]**.

3.14.1. WLAN Interface

EC21 provides a low power SDIO 3.0 interface and control interface for WLAN design.

SDIO interface supports the SDR mode, and the maximum frequency is up to 50MHz.

As SDIO signals are very high-speed, in order to ensure the SDIO interface design corresponds with the SDIO 3.0 specification, please comply with the following principles:

- It is important to route the SDIO signal traces with total grounding. The impedance of SDIO signal trace is $50\Omega \pm 10\%$.
- Keep SDIO signals far away from other sensitive circuits/signals such as RF circuits, analog signals, etc., as well as noisy signals such as clock signals, DC-DC signals, etc.
- It is recommended to keep matching length between CLK and DATA/CMD less than 1mm and total routing length less than 50mm.
- Keep termination resistors within $15\Omega \sim 24\Omega$ on clock lines near the module and keep the route distance from the module clock pins to termination resistors less than 5mm.
- Make sure the adjacent trace spacing is 2 times of the trace width and bus capacitance is less than 15pF.

3.14.2. BT Interface*

EC21 supports a dedicated UART interface and a PCM interface for BT application.

Further information about BT interface will be provided in future version of this document.

NOTE

“(★)” means under development.

3.15. ADC Interfaces

The module provides two analog-to-digital converter (ADC) interfaces. **AT+QADC=0** command can be used to read the voltage value on ADC0 pin. **AT+QADC=1** command can be used to read the voltage value on ADC1 pin. For more details about these AT commands, please refer to **document [2]**. In order to improve the accuracy of ADC, the trace of ADC should be surrounded by ground.

Table 17: Pin Definition of ADC Interfaces

Pin Name	Pin No.	Description
ADC0	45	General-purpose analog to digital converter
ADC1	44	General-purpose analog to digital converter

The following table describes the characteristic of ADC function.

Table 18: Characteristic of ADC

Parameter	Min.	Typ.	Max.	Unit
ADC0 Voltage Range	0.3		VBAT_BB	V
ADC1 Voltage Range	0.3		VBAT_BB	V
ADC Resolution		15		bits

NOTES

1. ADC input voltage must not exceed that of VBAT_BB.
2. It is prohibited to supply any voltage to ADC pins when VBAT power supply is removed.
3. It is recommended to use a resistor divider circuit for ADC application.

3.16. SGMII Interface

EC21 includes an integrated Ethernet MAC with an SGMII interface and two management interfaces. The key features of the SGMII interface are shown below:

- IEEE802.3 compliant
- Support 10M/100M/1000M Ethernet work mode
- Support maximum 10Mbps (DL)/5Mbps (UL) for 4G network
- Support VLAN tagging
- Support IEEE1588 and Precision Time Protocol (PTP)
- Can be used to connect to external Ethernet PHY like AR8033, or to an external switch
- Management interfaces support dual voltage 1.8V/2.85V

The following table shows the pin definition of SGMII interface.

Table 19: Pin Definition of SGMII Interface

Pin Name	Pin No.	I/O	Description	Comment
Control Signal Part				
EPHY_RST_N	119	DO	Ethernet PHY reset	1.8V/2.85V power domain
EPHY_INT_N	120	DI	Ethernet PHY interrupt	1.8V power domain
SGMII_MDATA	121	IO	SGMII MDIO (Management Data	1.8V/2.85V power domain

Input/Output) data				
SGMII_MCLK	122	DO	SGMII MDIO (Management Data Input/Output) clock	1.8V/2.85V power domain
USIM2_VDD	128	PO	SGMII MDIO pull-up power source	Configurable power source. 1.8V/2.85V power domain.
SGMII Signal Part				
SGMII_TX_M	123	AO	SGMII transmission - minus	Connect with a 0.1μF capacitor, and is close to the PHY side.
SGMII_TX_P	124	AO	SGMII transmission - plus	
SGMII_RX_P	125	AI	SGMII receiving - plus	Connect with a 0.1μF capacitor, and is close to EC21 module.
SGMII_RX_M	126	AI	SGMII receiving - minus	

The following figure shows the simplified block diagram for Ethernet application.

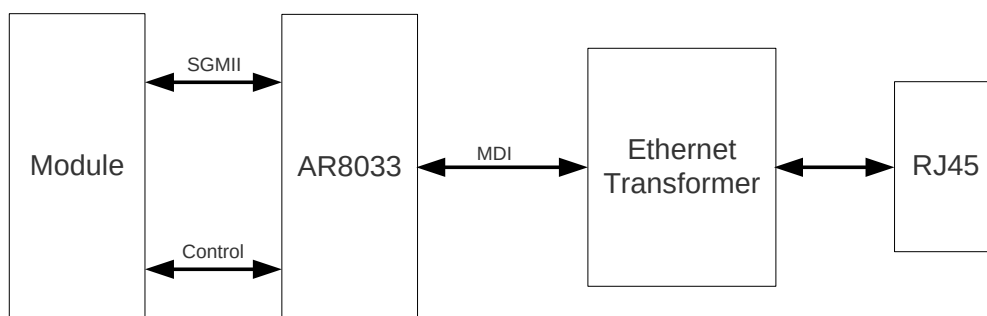


Figure 26: Simplified Block Diagram for Ethernet Application

The following figure shows a reference design of SGMII interface with PHY AR8033 application.

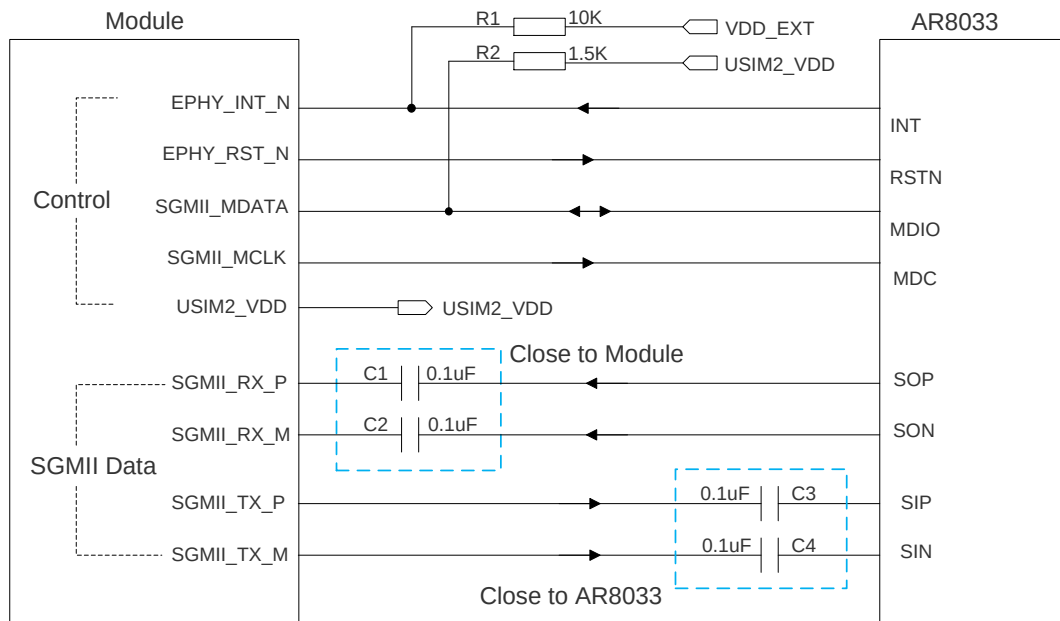


Figure 27: Reference Circuit of SGMII Interface with PHY AR8033 Application

In order to enhance the reliability and availability in customers' applications, please follow the criteria below in the Ethernet PHY circuit design:

- Keep SGMII data and control signals away from other sensitive circuits/signals such as RF circuits, analog signals, etc., as well as noisy signals such as clock signals, DC-DC signals, etc.
- Keep the maximum trace length less than 10 inch and keep skew on the differential pairs less than 20mil.
- The differential impedance of SGMII data trace is $100\Omega \pm 10\%$, and the reference ground of the area should be complete.
- Make sure the trace spacing between SGMII RX and TX is at least 3 times of the trace width, and the same to the adjacent signal traces.

3.17. Network Status Indication

The network indication pins can be used to drive network status indication LEDs. The module provides two pins which are NET_MODE and NET_STATUS. The following tables describe the pin definition and logic level changes in different network status.

Table 20: Pin Definition of Network Connection Status/Activity Indicator

Pin Name	Pin No.	I/O	Description	Comment
NET_MODE	5	DO	Indicate the module's network registration mode	1.8V power domain. Cannot be pulled up before startup
NET_STATUS	6	DO	Indicate the module's network activity status	1.8V power domain

Table 21: Working State of Network Connection Status/Activity Indicator

Pin Name	Logic Level Changes	Network Status
NET_MODE	Always High	Registered on LTE network
	Always Low	Others
NET_STATUS	Flicker slowly (200ms High/1800ms Low)	Network searching
	Flicker slowly (1800ms High/200ms Low)	Idle
	Flicker quickly (125ms High/125ms Low)	Data transfer is ongoing
	Always High	Voice calling

A reference circuit is shown in the following figure.

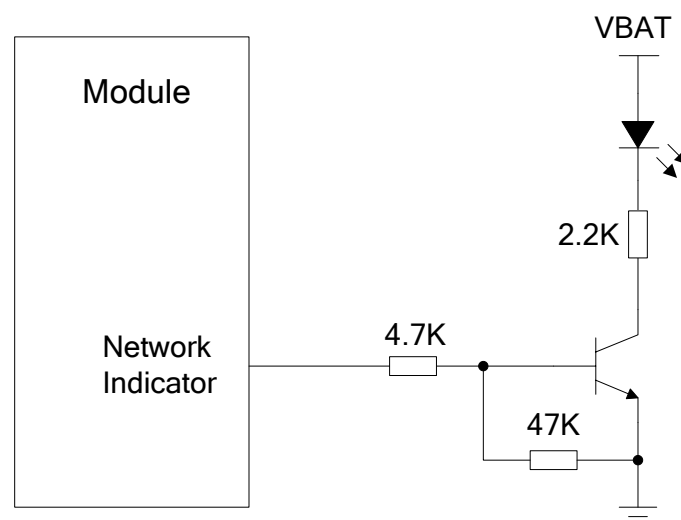


Figure 28: Reference Circuit of the Network Indicator

3.18. STATUS

The STATUS pin is an open drain output for indicating the module's operation status. It can be connected to a GPIO of DTE with a pull-up resistor, or as LED indication circuit as below. When the module is turned on normally, the STATUS will present the low state. Otherwise, the STATUS will present high-impedance state.

Table 22: Pin Definition of STATUS

Pin Name	Pin No.	I/O	Description	Comment
STATUS	61	OD	Indicate the module's operation status	An external pull-up resistor is required. If unused, keep it open.

The following figure shows different circuit designs of STATUS, and customers can choose either one according to customers' application demands.

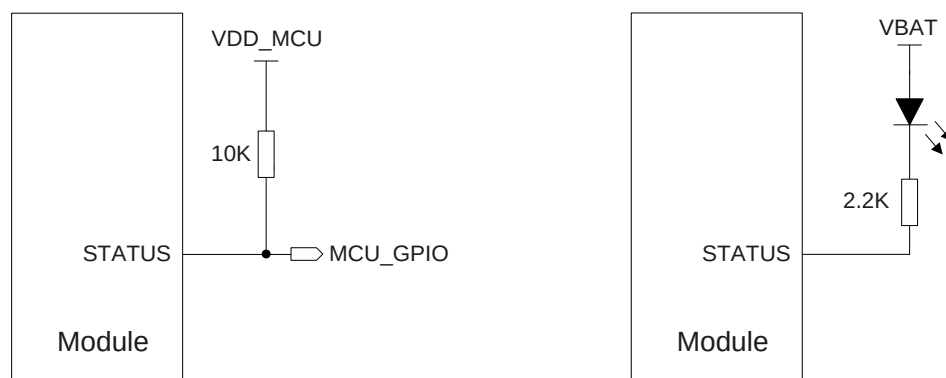


Figure 29: Reference Circuits of STATUS

NOTE

The status pin cannot be used as indication of module shutdown status when VBAT power supply is removed.

3.19. Behaviors of RI

AT+QCFG="risignalttype","physical" command can be used to configure RI behavior.

No matter on which port a URC is presented, the URC will trigger the behaviors of RI pin.

NOTE

URC can be outputted from UART port, USB AT port and USB modem port through configuration via **AT+QURCCFG** command. The default port is USB AT port.

In addition, RI behavior can be configured flexibly. The default behaviors of the RI is shown as below.

Table 23: Behaviors of RI

State	Response
Idle	RI keeps at high level
URC	RI outputs 120ms low pulse when a new URC returns

The RI behavior can be changed by **AT+QCFG="urc/ri/ring"** command. Please refer to **document [2]** for details.

3.20. USB_BOOT Interface

EC21 provides a USB_BOOT pin. Customers can pull up USB_BOOT to 1.8V before VDD_EXT is powered up, and the module will enter emergency download mode when it is powered on. In this mode, the module supports firmware upgrade over USB interface.

Table 24: Pin Definition of USB_BOOT Interface

Pin Name	Pin No.	I/O	Description	Comment
USB_BOOT	115	DI	Force the module to enter emergency download mode	1.8V power domain. Active high. It is recommended to reserve test points.

The following figure shows a reference circuit of USB_BOOT interface.

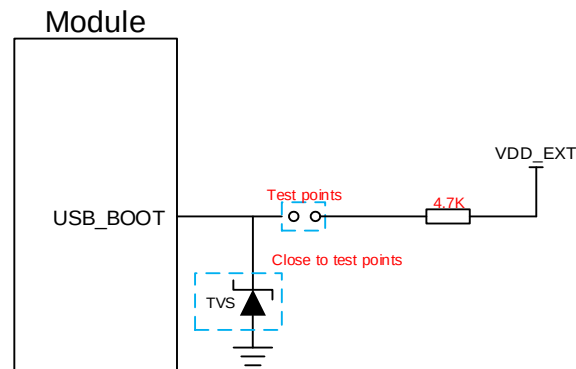


Figure 30: Reference Circuit of USB_BOOT Interface

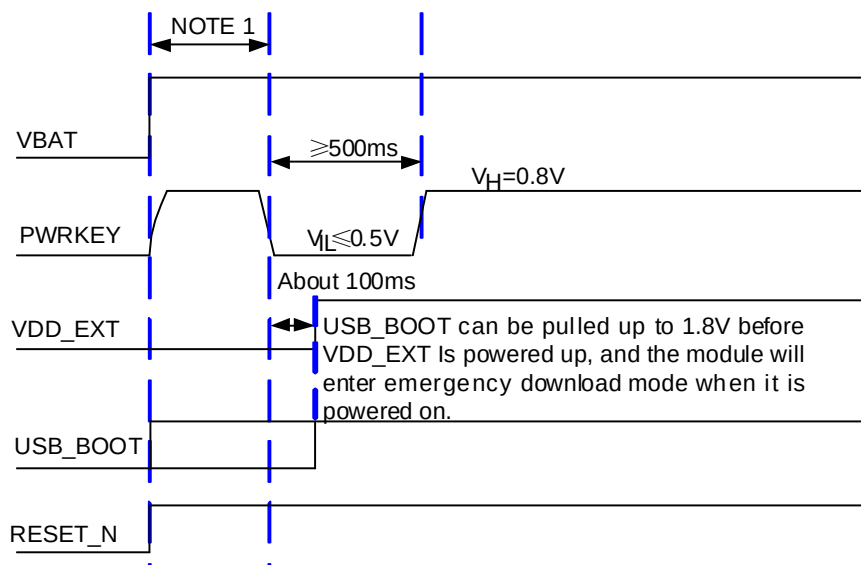


Figure 31: Timing Sequence for Entering Emergency Download Mode

NOTES

1. Please make sure that VBAT is stable before pulling down PWRKEY pin. It is recommended that the time between powering up VBAT and pulling down PWRKEY pin is no less than 30ms.
2. When using MCU to control module to enter the emergency download mode, please follow the above timing sequence. It is not recommended to pull up USB_BOOT to 1.8V before powering up VBAT. Connect the test points as shown in **Figure 31** can manually force the module to enter download mode.

4 GNSS Receiver

4.1. General Description

EC21 includes a fully integrated global navigation satellite system solution that supports Gen8C-Lite of Qualcomm (GPS, GLONASS, BeiDou/Compass, Galileo and QZSS).

EC21 supports standard NMEA-0183 protocol, and outputs NMEA sentences at 1Hz data update rate via USB interface by default.

By default, EC21 GNSS engine is switched off. It has to be switched on via AT command. For more details about GNSS engine technology and configurations, please refer to **document [3]**.

4.2. GNSS Performance

The following table shows the GNSS performance of EC21.

Table 25: GNSS Performance

Parameter	Description	Conditions	Typ.	Unit
Sensitivity (GNSS)	Cold start	Autonomous	-146	dBm
	Reacquisition	Autonomous	-157	dBm
	Tracking	Autonomous	-157	dBm
TTFF (GNSS)	Cold start @open sky	Autonomous	35	s
		XTRA enabled	18	s
	Warm start @open sky	Autonomous	26	s
		XTRA enabled	2.2	s

	Hot start @open sky	Autonomous	2.5	s
		XTRA enabled	1.8	s
Accuracy (GNSS)	CEP-50	Autonomous @open sky	<2.5	m

NOTES

1. Tracking sensitivity: the minimum GNSS signal power at which the module can maintain lock (keep positioning for at least 3 minutes continuously).
2. Reacquisition sensitivity: the minimum GNSS signal power required for the module to maintain lock within 3 minutes after loss of lock.
3. Cold start sensitivity: the minimum GNSS signal power at which the module can fix position successfully within 3 minutes after executing cold start command.

4.3. Layout Guidelines

The following layout guidelines should be taken into account in customers' designs.

- Maximize the distance among GNSS antenna, main antenna and Rx-diversity antenna.
- Digital circuits such as (U)SIM card, USB interface, camera module and display connector should be kept away from the antennas.
- Use ground vias around the GNSS trace and sensitive analog signal traces to provide coplanar isolation and protection.
- Keep 50Ω characteristic impedance for the ANT_GNSS trace.

Please refer to **Chapter 5** for GNSS antenna reference design and antenna installation information.

5 Antenna Interfaces

EC21 antenna interfaces include a main antenna interface, an Rx-diversity antenna interface which is used to resist the fall of signals caused by high speed movement and multipath effect, and a GNSS antenna interface. The antenna ports have an impedance of 50Ω.

5.1. Main/Rx-diversity Antenna Interfaces

5.1.1. Pin Definition

The pin definition of main antenna and Rx-diversity antenna interfaces is shown below.

Table 26: Pin Definition of RF Antennas

Pin Name	Pin No.	I/O	Description	Comment
ANT_MAIN	49	IO	Main antenna	50Ω impedance
ANT_DIV	35	AI	Receive diversity antenna	50Ω impedance. If unused, keep it open.

5.1.2. Operating Frequency

Table 27: Module Operating Frequencies

3GPP Band	Transmit	Receive	Unit
GSM850	824~849	869~894	MHz
EGSM900	880~915	925~960	MHz
DCS1800	1710~1785	1805~1880	MHz
PCS1900	1850~1910	1930~1990	MHz
WCDMA B1	1920~1980	2110~2170	MHz

WCDMA B2	1850~1910	1930~1990	MHz
WCDMA B4	1710~1755	2110~2155	MHz
WCDMA B5	824~849	869~894	MHz
WCDMA B8	880~915	925~960	MHz
LTE-FDD B1	1920~1980	2110~2170	MHz
LTE-FDD B2	1850~1910	1930~1990	MHz
LTE-FDD B3	1710~1785	1805~1880	MHz
LTE-FDD B4	1710~1755	2110~2155	MHz
LTE-FDD B5	824~849	869~894	MHz
LTE-FDD B7	2500~2570	2620~2690	MHz
LTE-FDD B8	880~915	925~960	MHz
LTE-FDD B12	699~716	729~746	MHz
LTE-FDD B13	777~787	746~756	MHz
LTE-FDD B18	815~830	860~875	MHz
LTE-FDD B19	830~845	875~890	MHz
LTE-FDD B20	832~862	791~821	MHz
LTE-FDD B26	814~849	859~894	MHz
LTE-FDD B28	703~748	758~803	MHz
LTE-TDD B40	2300~2400	2300~2400	MHz

5.1.3. Reference Design of RF Antenna Interface

A reference design of ANT_MAIN and ANT_DIV antenna pads is shown as below. A π -type matching circuit should be reserved for better RF performance. The capacitors are not mounted by default.

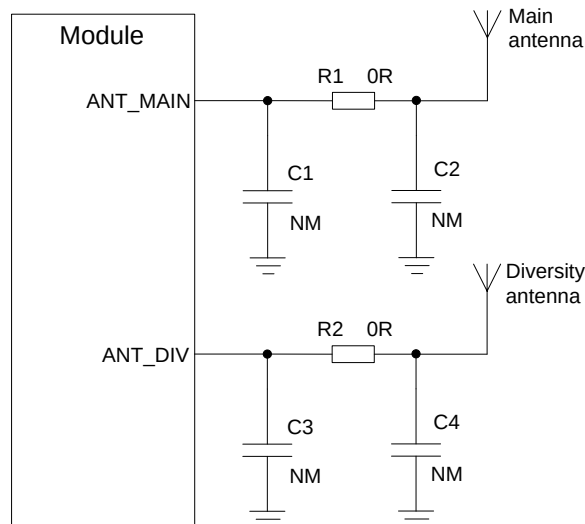


Figure 32: Reference Circuit of RF Antenna Interface

NOTES

1. Keep a proper distance between the main antenna and the Rx-diversity antenna to improve the receiving sensitivity.
2. ANT_DIV function is enabled by default. **AT+QCFG="divctl",0** command can be used to disable receive diversity. Please refer to **document [2]** for details.
3. Place the π -type matching components (R1&C1&C2, R2&C3&C4) as close to the antenna as possible.

5.1.4. Reference Design of RF Layout

For user's PCB, the characteristic impedance of all RF traces should be controlled as 50Ω. The impedance of the RF traces is usually determined by the trace width (W), the materials' dielectric constant, height from the reference ground to the signal layer (H), and the space between the RF trace and the ground (S). Microstrip and coplanar waveguide are typically used in RF layout to control characteristic impedance. The following figures are reference designs of microstrip or coplanar waveguide with different PCB structures.

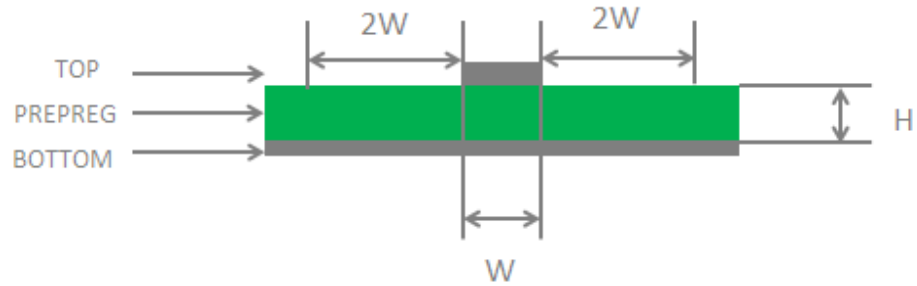


Figure 33: Microstrip Design on a 2-layer PCB

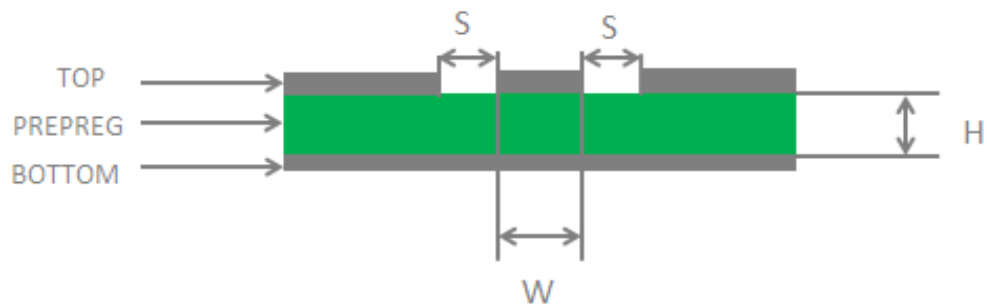


Figure 34: Coplanar Waveguide Design on a 2-layer PCB

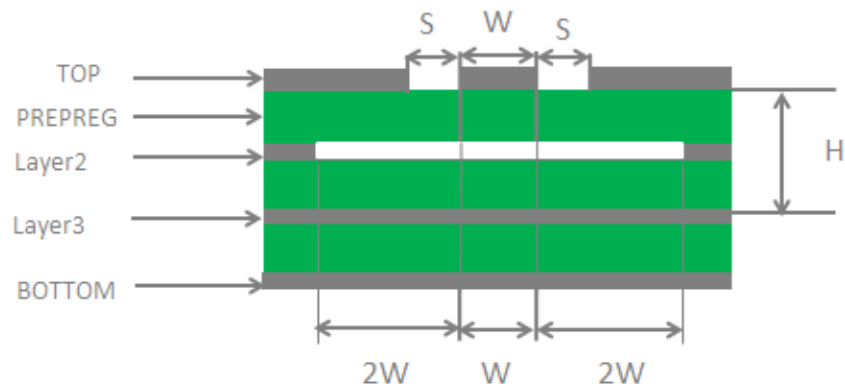


Figure 35: Coplanar Waveguide Design on a 4-layer PCB (Layer 3 as Reference Ground)

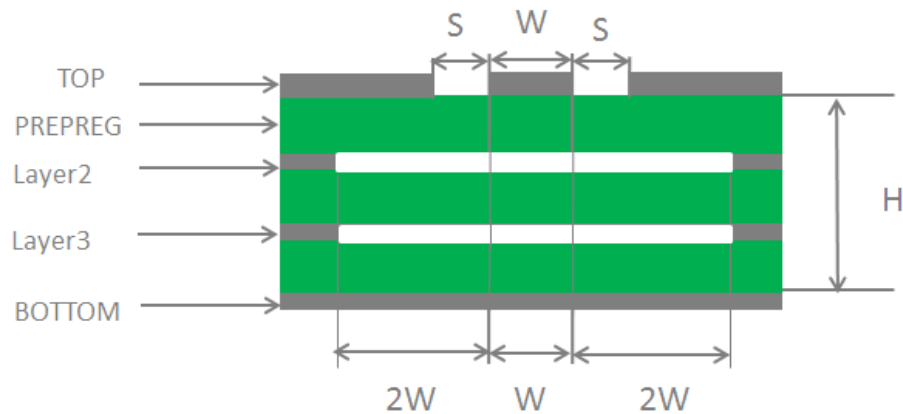


Figure 36: Coplanar Waveguide Design on a 4-layer PCB (Layer 4 as Reference Ground)

In order to ensure RF performance and reliability, the following principles should be complied with in RF layout design:

- Please use an impedance simulation tool to control the characteristic impedance of RF traces as 50Ω .
- The GND pins adjacent to RF pins should not be designed as thermal relief pads, and should be fully connected to ground.
- The distance between the RF pins and the RF connector should be as short as possible, and all the right angle traces should be changed to curved ones.
- There should be clearance area under the signal pin of the antenna connector or solder joint.
- The reference ground of RF traces should be complete. Meanwhile, adding some ground vias around RF traces and the reference ground could help to improve RF performance. The distance between the ground vias and RF traces should be no less than two times the width of RF signal traces ($2 \times W$).

For more details about RF layout, please refer to **document [6]**.

5.2. GNSS Antenna Interface

The following tables show the pin definition and frequency specification of GNSS antenna interface.

Table 28: Pin Definition of GNSS Antenna Interface

Pin Name	Pin No.	I/O	Description	Comment
ANT_GNSS	47	AI	GNSS antenna	50Ω impedance. If unused, keep it open.

Table 29: GNSS Frequency

Type	Frequency	Unit
GPS	1575.42±1.023	MHz
GLONASS	1597.5~1605.8	MHz
Galileo	1575.42±2.046	MHz
BeiDou (Compass)	1561.098±2.046	MHz
QZSS	1575.42	MHz

A reference design of GNSS antenna is shown as below.

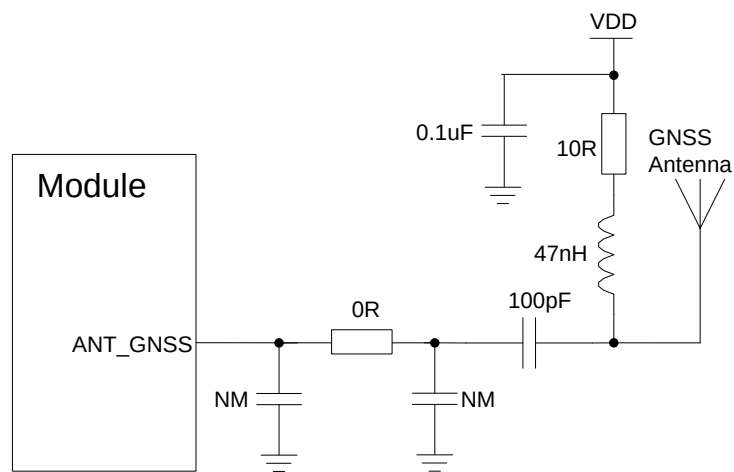


Figure 37: Reference Circuit of GNSS Antenna

NOTES

1. An external LDO can be selected to supply power according to the active antenna requirement.
2. If the module is designed with a passive antenna, then the VDD circuit is not needed.

5.3. Antenna Installation

5.3.1. Antenna Requirement

The following table shows the requirements on main antenna, Rx-diversity antenna and GNSS antenna.

Table 30: Antenna Requirements

Type	Requirements
GNSS ¹⁾	Frequency range: 1559MHz~1609MHz Polarization: RHCP or linear VSWR: < 2 (Typ.) Passive antenna gain: > 0dBi Active antenna noise figure: < 1.5dB Active antenna gain: > 0dBi Active antenna embedded LNA gain: < 17dB
GSM/WCDMA/LTE	VSWR: ≤ 2 Efficiency: > 30% Max input power: 50W Input impedance: 50Ω Cable insertion loss: < 1dB (GSM850, EGSM900, WCDMA B5/B8, LTE-FDD B5/B8/B12/B13/B18/B19/B20/B26/B28) Cable insertion loss: < 1.5dB (DCS1800, PCS1900, WCDMA B1/B2/B4, LTE B1/B2/B3/B4) Cable insertion loss: < 2dB (LTE-FDD B7, LTE-TDD B40)

NOTE

¹⁾ It is recommended to use a passive GNSS antenna when LTE B13 or B14 is supported, as the use of active antenna may generate harmonics which will affect the GNSS performance.

5.3.2. Recommended RF Connector for Antenna Installation

If RF connector is used for antenna connection, it is recommended to use U.FL-R-SMT connector provided by Hirose.

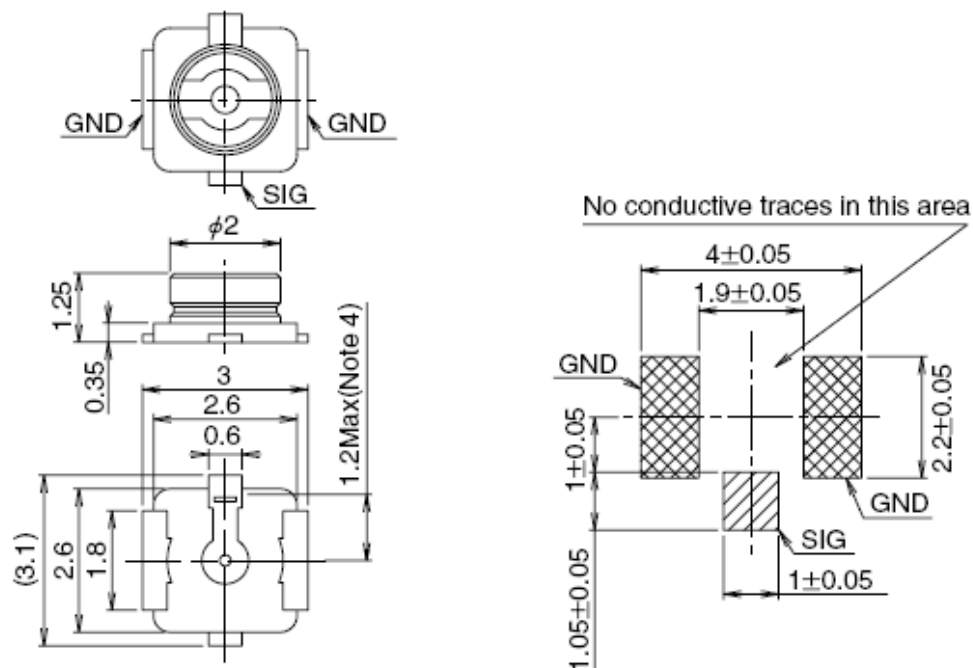


Figure 38: Dimensions of the U.FL-R-SMT Connector (Unit: mm)

U.FL-LP serial connectors listed in the following figure can be used to match the U.FL-R-SMT.

Part No.	U.FL-LP-040	U.FL-LP-066	U.FL-LP(V)-040	U.FL-LP-062	U.FL-LP-088
Mated Height	2.5mm Max. (2.4mm Nom.)	2.5mm Max. (2.4mm Nom.)	2.0mm Max. (1.9mm Nom.)	2.4mm Max. (2.3mm Nom.)	2.4mm Max. (2.3mm Nom.)
Applicable cable	Dia. 0.81mm Coaxial cable	Dia. 1.13mm and Dia. 1.32mm Coaxial cable	Dia. 0.81mm Coaxial cable	Dia. 1mm Coaxial cable	Dia. 1.37mm Coaxial cable
Weight (mg)	53.7	59.1	34.8	45.5	71.7
RoHS	YES				

Figure 39: Mechanicals of U.FL-LP Connectors

The following figure describes the space factor of mated connector.

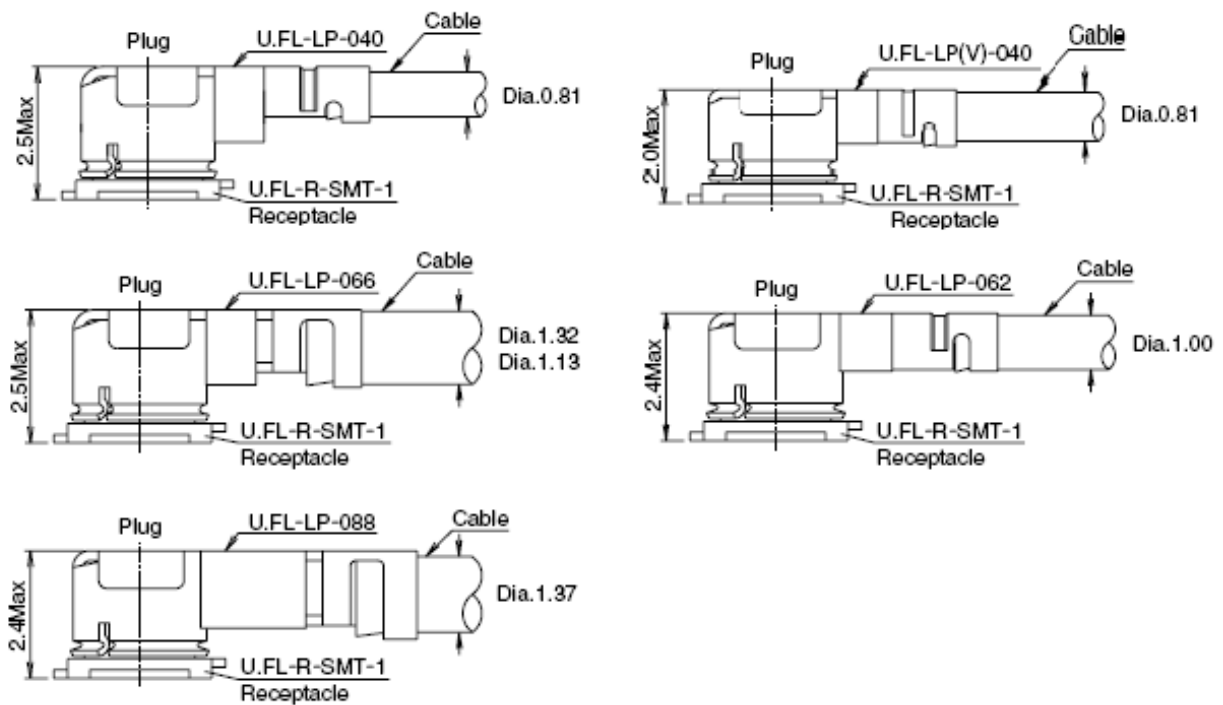


Figure 40: Space Factor of Mated Connector (Unit: mm)

For more details, please visit <http://www.hirose.com>.

6 Electrical, Reliability and Radio Characteristics

6.1. Absolute Maximum Ratings

Absolute maximum ratings for power supply and voltage on digital and analog pins of the module are listed in the following table.

Table 31: Absolute Maximum Ratings

Parameter	Min.	Max.	Unit
VBAT_RF/VBAT_BB	-0.3	4.7	V
USB_VBUS	-0.3	5.5	V
Peak Current of VBAT_BB	0	0.8	A
Peak Current of VBAT_RF	0	1.8	A
Voltage at Digital Pins	-0.3	2.3	V
Voltage at ADC0	0	VBAT_BB	V
Voltage at ADC1	0	VBAT_BB	V

6.2. Power Supply Ratings

Table 32: Power Supply Ratings

Parameter	Description	Conditions	Min.	Typ.	Max.	Unit
VBAT	VBAT_BB and VBAT_RF	The actual input voltages must be kept between the minimum and maximum values.	3.3	3.8	4.3	V
	Voltage drop during burst transmission	Maximum power control level on EGSM900			400	mV
I _{VBAT}	Peak supply current (during transmission slot)	Maximum power control level on EGSM900		1.8	2.0	A
USB_VBUS	USB connection detection		3.0	5.0	5.25	V

6.3. Operation and Storage Temperatures

The operation and storage temperatures are listed in the following table.

Table 33: Operation and Storage Temperatures

Parameter	Min.	Typ.	Max.	Unit
Operation Temperature Range ¹⁾	-35	+25	+75	°C
Extended Temperature Range ²⁾	-40		+85	°C
Storage Temperature Range	-40		+90	°C

NOTES

- ¹⁾ Within operation temperature range, the module is 3GPP compliant.
- ²⁾ Within extended temperature range, the module remains the ability to establish and maintain a voice, SMS, data transmission, emergency call*, etc. There is no unrecoverable malfunction. There are also no effects on radio spectrum and no harm to radio network. Only one or more parameters like P_{out} might reduce in their value and exceed the specified tolerances. When the temperature

returns to the normal operation temperature levels, the module will meet 3GPP specifications again.

3. “*” means under development.

6.4. Current Consumption

The values of current consumption are shown below.

Table 34: EC21-E Current Consumption

Parameter	Description	Conditions	Typ.	Unit
I _{VBAT}	OFF state	Power down	13	μA
		AT+CFUN=0 (USB disconnected)	1.4	mA
		EGSM900 @DRX=9 (USB disconnected)	1.8	mA
		DCS1800 @DRX=9 (USB disconnected)	1.8	mA
	Sleep state	WCDMA PF=64 (USB disconnected)	2.4	mA
		WCDMA PF=128 (USB disconnected)	1.9	mA
		LTE-FDD PF=64 (USB disconnected)	3.2	mA
		LTE-FDD PF=128 (USB disconnected)	2.1	mA
	Idle state (GNSS OFF)	EGSM900 @DRX=5 (USB disconnected)	22.0	mA
		EGSM900 @DRX=5 (USB connected)	32.0	mA
		WCDMA PF=64 (USB disconnected)	22.5	mA
		WCDMA PF=64 (USB connected)	32.7	mA
	GPRS data transfer (GNSS OFF)	LTE-FDD PF=64 (USB disconnected)	22.5	mA
		LTE-FDD PF=64 (USB connected)	32.5	mA
		EGSM900 4DL/1UL @32.3dBm	220	mA
		EGSM900 3DL/2UL @32.18dBm	387	mA
		EGSM900 2DL/3UL @30.3dBm	467	mA

	EGSM900 1DL/4UL @29.4dBm	555	mA
	DCS1800 4DL/1UL @29.6dBm	185	mA
	DCS1800 3DL/2UL @29.1dBm	305	mA
	DCS1800 2DL/3UL @28.8dBm	431	mA
	DCS1800 1DL/4UL @29.1dBm	540	mA
EDGE data transfer (GNSS OFF)	EGSM900 4DL/1UL @26dBm	148	mA
	EGSM900 3DL/2UL @26dBm	245	mA
	EGSM900 2DL/3UL @25dBm	338	mA
	EGSM900 1DL/4UL @25dBm	432	mA
	DCS1800 4DL/1UL @26dBm	150	mA
	DCS1800 3DL/2UL @25dBm	243	mA
	DCS1800 2DL/3UL @25dBm	337	mA
	DCS1800 1DL/4UL @25dBm	430	mA
WCDMA data transfer (GNSS OFF)	WCDMA B1 HSDPA @22.5dBm	659	mA
	WCDMA B1 HSUPA @21.11dBm	545	mA
	WCDMA B5 HSDPA @23.5dBm	767	mA
	WCDMA B5 HSUPA @21.4dBm	537	mA
	WCDMA B8 HSDPA @22.41dBm	543	mA
	WCDMA B8 HSUPA @21.2dBm	445	mA
LTE data transfer (GNSS OFF)	LTE-FDD B1 @23.45dBm	807	mA
	LTE-FDD B3 @23.4dBm	825	mA
	LTE-FDD B5 @23.4dBm	786	mA
	LTE-FDD B7 @23.86dBm	887	mA
	LTE-FDD B8 @23.5dBm	675	mA
	LTE-FDD B20 @23.57dBm	770	mA

GSM voice call	EGSM900 PCL=5 @33.08dBm	264.0	mA
	DCS1800 PCL=0 @29.75dBm	190.0	mA
WCDMA voice call	WCDMA B1 @23.69dBm	683	mA
	WCDMA B5 @23.61dBm	741	mA
	WCDMA B8 @23.35dBm	564	mA

Table 35: EC21-A Current Consumption

Parameter	Description	Conditions	Typ.	Unit
I _{BAT}	OFF state	Power down	10	μA
	Sleep state	AT+CFUN=0 (USB disconnected)	1.25	mA
		WCDMA PF=64 (USB disconnected)	2.03	mA
		WCDMA PF=128 (USB disconnected)	1.65	mA
		LTE-FDD PF=64 (USB disconnected)	2.31	mA
		LTE-FDD PF=128 (USB disconnected)	1.85	mA
	Idle state (GNSS OFF)	WCDMA PF=64 (USB disconnected)	23.1	mA
		WCDMA PF=64 (USB connected)	32.8	mA
		LTE-FDD PF=64 (USB disconnected)	22.8	mA
		LTE-FDD PF=64 (USB connected)	32.8	mA
	WCDMA data transfer (GNSS OFF)	WCDMA B2 HSDPA @21.54dBm	479.0	mA
		WCDMA B2 HSUPA @22.19dBm	530.0	mA
		WCDMA B4 HSDPA @22.15dBm	539.0	mA
		WCDMA B4 HSUPA @21.82dBm	531.0	mA
		WCDMA B5 HSDPA @22.22dBm	454.0	mA
		WCDMA B5 HSUPA @21.45dBm	433.0	mA
	LTE data transfer	LTE-FDD B2 @23.11dBm	721.0	mA

(GNSS OFF)	LTE-FDD B4 @23.16dBm	748.0	mA
	LTE-FDD B12 @23.25dBm	668.0	mA
WCDMA voice call	WCDMA B2 @22.97dBm	565.0	mA
	WCDMA B4 @22.91dBm	590.0	mA
	WCDMA B5 @23.06dBm	493.0	mA

Table 36: EC21-V Current Consumption

Parameter	Description	Conditions	Typ.	Unit
I _{BAT}	OFF state	Power down	10	μA
	Sleep state	AT+CFUN=0 (USB disconnected)	1.07	mA
		LTE-FDD PF=64 (USB disconnected)	2.85	mA
		LTE-FDD PF=128 (USB disconnected)	2.26	mA
	Idle state (GNSS OFF)	LTE-FDD PF=64 (USB disconnected)	22.0	mA
		LTE-FDD PF=64 (USB connected)	32.0	mA
	LTE data transfer (GNSS OFF)	LTE-FDD B4 @22.77dBm	762.0	mA
		LTE-FDD B13 @23.05dBm	533.0	mA

Table 37: EC21-AUT Current Consumption

Parameter	Description	Conditions	Typ.	Unit
I _{BAT}	OFF state	Power down	10	μA
	Sleep state	AT+CFUN=0 (USB disconnected)	0.99	mA
		WCDMA PF=64 (USB disconnected)	2.1	mA
		WCDMA PF=128 (USB disconnected)	1.7	mA
		LTE-FDD PF=64 (USB disconnected)	2.9	mA
		LTE-FDD PF=128 (USB disconnected)	2.4	mA

Idle state (GNSS OFF)	WCDMA PF=64 (USB disconnected)	22.0	mA
	WCDMA PF=64 (USB connected)	32.0	mA
	LTE-FDD PF=64 (USB disconnected)	23.6	mA
	LTE-FDD PF=64 (USB connected)	33.6	mA
WCDMA data transfer (GNSS OFF)	WCDMA B1 HSDPA @22.59dBm	589.0	mA
	WCDMA B1 HSUPA @22.29dBm	623.0	mA
	WCDMA B5 HSDPA @22.22dBm	511.0	mA
	WCDMA B5 HSUPA @21.64dBm	503.0	mA
LTE data transfer (GNSS OFF)	LTE-FDD B1 @23.38dBm	813.0	mA
	LTE-FDD B3 @22.87dBm	840.0	mA
	LTE-FDD B5 @23.12dBm	613.0	mA
	LTE-FDD B7 @22.96dBm	761.0	mA
	LTE-FDD B28 @23.31dBm	650.0	mA
WCDMA voice call	WCDMA B1 @24.21dBm	687.0	mA
	WCDMA B5 @23.18dBm	535.0	mA

Table 38: EC21-AUV Current Consumption

Parameter	Description	Conditions	Typ.	Unit
I _{BAT}	OFF state	Power down	10	μA
	Sleep state	AT+CFUN=0 (USB disconnected)	1.15	mA
		WCDMA PF=64 (USB disconnected)	2.06	mA
		WCDMA PF=128 (USB disconnected)	1.65	mA
		LTE-FDD PF=64 (USB disconnected)	2.46	mA
		LTE-FDD PF=128 (USB disconnected)	1.86	mA
	Idle state	WCDMA PF=64 (USB disconnected)	22.0	mA

(GNSS OFF)	WCDMA PF=64 (USB connected)	32.0	mA
	LTE-FDD PF=64 (USB disconnected)	23.5	mA
	LTE-FDD PF=64 (USB connected)	33.5	mA
WCDMA data transfer (GNSS OFF)	WCDMA B1 HSDPA @22.59dBm	623.0	mA
	WCDMA B1 HSUPA @22.47dBm	628.0	mA
	WCDMA B5 HSDPA @22.95dBm	605.0	mA
	WCDMA B5 HSUPA @22.87dBm	610.0	mA
	WCDMA B8 HSDPA @22.37dBm	549.0	mA
	WCDMA B8 HSUPA @22.09dBm	564.0	mA
LTE data transfer (GNSS OFF)	LTE-FDD B1 @23.28dBm	789.0	mA
	LTE-FDD B3 @23.2dBm	768.0	mA
	LTE-FDD B5 @23.05dBm	669.0	mA
	LTE-FDD B8 @23.21dBm	693.0	mA
	LTE-FDD B28 @22.9dBm	795.0	mA
WCDMA voice call	WCDMA B1 @23.43dBm	672.0	mA
	WCDMA B5 @23.32dBm	616.0	mA
	WCDMA B8 @23.31dBm	592.0	mA

Table 39: EC21-J Current Consumption

Parameter	Description	Conditions	Typ.	Unit
I _{BAT}	OFF state	Power down	10	μA
		AT+CFUN=0 (USB disconnected)	0.85	mA
	Sleep state	LTE-FDD PF=64 (USB disconnected)	2.20	mA
		LTE-FDD PF=128 (USB disconnected)	1.46	mA
	Idle state	LTE-FDD PF=64 (USB disconnected)	23.5	mA

(GNSS OFF)	LTE-FDD PF=64 (USB connected)	33.8	mA
	LTE-FDD B1 @23.35dBm	734.0	mA
	LTE-FDD B3 @22.95dBm	778.0	mA
	LTE-FDD B8 @22.81dBm	722.0	mA
	LTE-FDD B18 @23.15dBm	677.0	mA
	LTE-FDD B19 @23.17dBm	688.0	mA
	LTE-FDD B26 @23.37dBm	723.0	mA

Table 40: EC21-KL Current Consumption

Parameter	Description	Conditions	Typ.	Unit
I _{VBAT}	OFF state	Power down	10	μA
	Sleep state	AT+CFUN=0 (USB disconnected)	1.08	mA
		LTE-FDD PF=64 (USB disconnected)	2.1	mA
		LTE-FDD PF=128 (USB disconnected)	1.4	mA
	Idle state (GNSS OFF)	LTE-FDD PF=64 (USB disconnected)	24.8	mA
		LTE-FDD PF=64 (USB connected)	33.5	mA
	LTE data transfer (GNSS OFF)	LTE-FDD B1 @23.0dBm	771.0	mA
		LTE-FDD B3 @23.36dBm	780.0	mA
		LTE-FDD B5 @23.56dBm	628.0	mA
		LTE-FDD B7 @23.32dBm	754.0	mA
		LTE-FDD B8 @23.33dBm	680.0	mA

Table 41: EC21-EU Current Consumption

Parameter	Description	Conditions	Typ.	Unit
I _{VBAT}	OFF state	Power down	12.8	μA

Sleep state	AT+CFUN=0 (USB disconnected)	1.8	mA
	GSM DRX=2 (USB disconnected)	3.0	mA
	GSM DRX=9 (USB disconnected)	2.2	mA
	WCDMA PF=64 (USB disconnected)	3.1	mA
	WCDMA PF=128 (USB disconnected)	2.6	mA
	LTE-FDD PF=64 (USB disconnected)	3.3	mA
	LTE-FDD PF=128 (USB disconnected)	2.6	mA
Idle state (GNSS OFF)	EGSM900 @DRX=5 (USB disconnected)	17.6	mA
	EGSM900 @DRX=5 (USB connected)	27.7	mA
	WCDMA PF=64 (USB disconnected)	17.9	mA
	WCDMA PF=64 (USB connected)	27.9	mA
	LTE-FDD PF=64 (USB disconnected)	17.9	mA
	LTE-FDD PF=64 (USB connected)	28.0	mA
GPRS data transfer (GNSS OFF)	EGSM900 4DL/1UL @33.80dBm	264.3	mA
	EGSM900 3DL/2UL @32.57dBm	419.8	mA
	EGSM900 2DL/3UL @30.26dBm	481.5	mA
	EGSM900 1DL/4UL @28.94dBm	553.2	mA
	DCS1800 4DL/1UL @31.13dBm	178.3	mA
	DCS1800 3DL/2UL @30.28dBm	293.6	mA
	DCS1800 2DL/3UL @28.21dBm	354.3	mA
	DCS1800 1DL/4UL @27.05dBm	424.7	mA
EDGE data transfer (GNSS OFF)	EGSM900 4DL/1UL @27.08dBm	147.1	mA
	EGSM900 3DL/2UL @25.91dBm	240.0	mA
	EGSM900 2DL/3UL @23.83dBm	296.2	mA
	EGSM900 1DL/4UL @22.73dBm	357.1	mA

		DCS1800 4DL/1UL @26.65dBm	138.7	mA
		DCS1800 3DL/2UL @25.61dBm	227.4	mA
		DCS1800 2DL/3UL @23.46dBm	302.8	mA
		DCS1800 1DL/4UL @22.19dBm	381.7	mA
WCDMA data transfer (GNSS OFF)		WCDMA B1 HSDPA @23.26dBm	605.0	mA
		WCDMA B1 HSUPA @23.09dBm	615.3	mA
		WCDMA B8 HSDPA @23.27dBm	544.0	mA
		WCDMA B8 HSUPA @22.67dBm	536.1	mA
LTE data transfer (GNSS OFF)		LTE-FDD B1 @24.50dBm	798.7	mA
		LTE-FDD B3 @23.67dBm	751.8	mA
		LTE-FDD B7 @23.75dBm	878.7	mA
		LTE-FDD B8 @22.81dBm	592.6	mA
		LTE-FDD B20 @24.08dBm	777.8	mA
		LTE-FDD B28A @23.34dBm	748.1	mA
GSM voice call		GSM900 PCL=5 @33.85dBm	279.9	mA
		DCS1800 PCL=0 @31.20dBm	189.5	mA
WCDMA voice call		WCDMA B1 @24.06dBm	681.0	mA
		WCDMA B8 @24.17dBm	593.0	mA

Table 42: EC21-EC Current Consumption

Parameter	Description	Conditions	Typ.	Unit
I _V BAT	OFF state	Power down	7	μA
	Sleep state	AT+CFUN=0 (USB disconnected)	0.9	mA
		GSM DRX=2 (USB disconnected)	2.0	mA
		GSM DRX=9 (USB disconnected)	1.3	mA

	WCDMA PF=64 (USB disconnected)	1.9	mA
	WCDMA PF=128 (USB disconnected)	1.6	mA
	LTE-FDD PF=64 (USB disconnected)	2.3	mA
	LTE-FDD PF=128 (USB disconnected)	1.6	mA
Idle state (GNSS OFF)	GSM DRX=5 (USB disconnected)	16.8	mA
	GSM DRX=5 (USB connected)	27.3	mA
	WCDMA PF=64 (USB disconnected)	17.9	mA
	WCDMA PF=64 (USB connected)	26.3	mA
	LTE-FDD PF=64 (USB disconnected)	18.0	mA
	LTE-FDD PF=64 (USB connected)	27.9	mA
GPRS data transfer (GNSS OFF)	EGSM900 4DL/1UL @33.65dBm	270.8	mA
	EGSM900 3DL/2UL @33.41dBm	491.2	mA
	EGSM900 2DL/3UL @30.08dBm	496.3	mA
	EGSM900 1DL/4UL @28.75dBm	566.0	mA
	DCS1800 4DL/1UL @30.05dBm	167.7	mA
	DCS1800 3DL/2UL @29.99dBm	273.1	mA
	DCS1800 2DL/3UL @29.79dBm	378.8	mA
	DCS1800 1DL/4UL @29.85dBm	488.0	mA
EDGE data transfer (GNSS OFF)	EGSM900 4DL/1UL PCL=8 @24.73dBm	164.3	mA
	EGSM900 3DL/2UL PCL=8 @24.47dBm	277.6	mA
	EGSM900 2DL/3UL PCL=8 @24.99dBm	389.8	mA
	EGSM900 1DL/4UL PCL=8 @24.77dBm	504.2	mA
	DCS1800 4DL/1UL PCL=2 @25.91dBm	149.6	mA
	DCS1800 3DL/2UL PCL=2 @25.71dBm	243.4	mA
	DCS1800 2DL/3UL PCL=2 @25.97dBm	327.5	mA

		DCS1800 1DL/4UL PCL=2 @25.93dBm	423.4	mA
		WCDMA B1 HSDPA @22.72dBm	581.4	mA
		WCDMA B1 HSUPA @22.59dBm	601.4	mA
	WCDMA data transfer (GNSS OFF)	WCDMA B8 HSDPA @22.76dBm	496.7	mA
		WCDMA B8 HSUPA @22.64dBm	493.1	mA
		LTE-FDD B1 @23.83dBm	744.6	mA
		LTE-FDD B3 @24.32dBm	715.2	mA
	LTE data transfer (GNSS OFF)	LTE-FDD B7 @24.47dBm	744.4	mA
		LTE-FDD B8 @24.07dBm	586.0	mA
		LTE-FDD B20 @23.56dBm	721.0	mA
		LTE-FDD B28A @23.73dBm	806.6	mA
	GSM voice call	EGSM900 PCL=5 @33.29dBm	269.3	mA
		DCS1800 PCL=0 @29.69dBm	158.1	mA
	WCDMA voice call	WCDMA B1 @23.75dBm	636.6	mA
		WCDMA B8 @23.67dBm	546.5	mA

Table 43: EC21-AUX Current Consumption

Parameter	Description	Conditions	Typ.	Unit
	OFF state	Power down	7	μA
I _V BAT	Sleep state	AT+CFUN=0 (USB disconnected)	1.00	mA
		GSM DRX=2 (USB disconnected)	1.91	mA
		GSM DRX=9 (USB disconnected)	1.31	mA
		WCDMA PF=64 (USB disconnected)	2.19	mA
		WCDMA PF=128 (USB disconnected)	1.91	mA
		LTE-FDD PF=64 (USB disconnected)	2.74	mA

Idle state (GNSS OFF)	LTE-FDD PF=128 (USB disconnected)	2.12	mA
	LTE-TDD PF=64 (USB disconnected)	2.68	mA
	LTE-TDD PF=128 (USB disconnected)	2.16	mA
	GSM DRX=5 (USB disconnected)	16.6	mA
	GSM DRX=5 (USB connected)	33.7	mA
	WCDMA PF=64 (USB disconnected)	16.7	mA
	WCDMA PF=64 (USB connected)	33.7	mA
	LTE-FDD PF=64 (USB disconnected)	16.9	mA
	LTE-FDD PF=64 (USB connected)	34.0	mA
	LTE-TDD PF=64 (USB disconnected)	17.0	mA
	LTE-TDD PF=64 (USB connected)	34.0	mA
	GSM850 4DL/1UL @32.41dBm	236.2	mA
	GSM850 3DL/2UL @31.48dBm	380.2	mA
	GSM850 2DL/3UL @29.31dBm	446.2	mA
	GSM850 1DL/4UL @28.21dBm	527.7	mA
	EGSM900 4DL/1UL @33.06dBm	259.0	mA
	EGSM900 3DL/2UL @31.74dBm	398.0	mA
	EGSM900 2DL/3UL @29.32dBm	448.0	mA
	EGSM900 1DL/4UL @28.30dBm	532.0	mA
GPRS data transfer (GNSS OFF)	DCS1800 4DL/1UL @29.20dBm	149.0	mA
	DCS1800 3DL/2UL @28.16dBm	225.0	mA
	DCS1800 2DL/3UL @26.05dBm	283.0	mA
	DCS1800 1DL/4UL @25.14dBm	357.0	mA
	PCS1900 4DL/1UL @29.39dBm	159.7	mA
	PCS1900 3DL/2UL @28.06dBm	234.6	mA

	PCS1900 2DL/3UL @26.01dBm	289.0	mA
	PCS1900 1DL/4UL @25.20dBm	363.9	mA
EDGE data transfer (GNSS OFF)	GSM850 4DL/1UL PCL=8 @26.86dBm	169.9	mA
	GSM850 3DL/2UL PCL=8 @25.76dBm	284.1	mA
	GSM850 2DL/3UL PCL=8 @23.68dBm	387.2	mA
	GSM850 1DL/4UL PCL=8 @22.39dBm	498.7	mA
	EGSM900 4DL/1UL PCL=8 @27.01dBm	171.0	mA
	EGSM900 3DL/2UL PCL=8 @25.82dBm	286.0	mA
	EGSM900 2DL/3UL PCL=8 @23.64dBm	389.0	mA
	EGSM900 1DL/4UL PCL=8 @22.46dBm	500.0	mA
	DCS1800 4DL/1UL PCL=2 @25.90dBm	133.0	mA
	DCS1800 3DL/2UL PCL=2 @24.98dBm	220.0	mA
	DCS1800 2DL/3UL PCL=2 @22.92dBm	308.0	mA
	DCS1800 1DL/4UL PCL=2 @21.82dBm	403.0	mA
	PCS1900 4DL/1UL PCL=2 @25.36dBm	132.4	mA
	PCS1900 3DL/2UL PCL=2 @25.07dBm	220.9	mA
	PCS1900 2DL/3UL PCL=2 @23.13dBm	307.2	mA
	PCS1900 1DL/4UL PCL=2 @21.82dBm	402.8	mA
WCDMA data transfer (GNSS OFF)	WCDMA B1 HSDPA @22.78dBm	530.0	mA
	WCDMA B1 HSUPA @22.12dBm	542.0	mA
	WCDMA B2 HSDPA @22.54dBm	556.3	mA
	WCDMA B2 HSUPA @22.17dBm	542.4	mA
	WCDMA B4 HSDPA @23.27dBm	491.0	mA
	WCDMA B4 HSUPA @23.19dBm	504.0	mA
	WCDMA B5 HSDPA @23.18dBm	480.4	mA

LTE data transfer (GNSS OFF)	WCDMA B5 HSUPA @22.90dBm	490.0	mA
	WCDMA B8 HSDPA @22.32dBm	504.0	mA
	WCDMA B8 HSUPA @22.26dBm	528.0	mA
	LTE-FDD B1 @23.48dBm	690.0	mA
	LTE-FDD B2 @22.85dBm	696.7	mA
	LTE-FDD B3 @23.45dBm	655.0	mA
	LTE-FDD B4 @23.16dBm	603.0	mA
	LTE-FDD B5 @23.61dBm	558.0	mA
	LTE-FDD B7 @23.40dBm	704.0	mA
	LTE-FDD B8 @23.57dBm	663.0	mA
	LTE-FDD B28A @23.49dBm	763.0	mA
	LTE-FDD B28B @23.65dBm	780.0	mA
	LTE-TDD B40 @23.66dBm	340.3	mA
	GSM850 PCL=5 @32.45dBm	234.9	mA
	EGSM900 PCL=5 @32.81dBm	249.0	mA
	DCS1800 PCL=0 @29.28dBm	143.0	mA
	PCS1900 PCL=0 @29.47dBm	154.5	mA
	WCDMA B1 @23.44dBm	568.0	mA
	WCDMA B2 @23.15dBm	614.0	mA
WCDMA voice call	WCDMA B4 @23.20dBm	497.0	mA
	WCDMA B5 @23.23dBm	492.0	mA
	WCDMA B8 @23.05dBm	553.0	mA

Table 44: GNSS Current Consumption of EC21 Series Module

Parameter	Description	Conditions	Typ.	Unit
I _{VBAT} (GNSS)	Searching (AT+CFUN=0)	Cold start @Passive Antenna	58	mA
		Lost state @Passive Antenna	58	mA
	Tracking (AT+CFUN=0)	Instrument Environment	33	mA
		Open Sky @Passive Antenna	35	mA
		Open Sky @Active Antenna	43	mA

6.5. RF Output Power

The following table shows the RF output power of EC21 module.

Table 45: RF Output Power

Frequency	Max.	Min.
GSM850/EGSM900	33dBm±2dB	5dBm±5dB
DCS1800/PCS1900	30dBm±2dB	0dBm±5dB
GSM850/EGSM900 (8-PSK)	27dBm±3dB	5dBm±5dB
DCS1800/PCS1900 (8-PSK)	26dBm±3dB	0dBm±5dB
WCDMA bands	24dBm+1/-3dB	< -49dBm
LTE-FDD bands	23dBm±2dB	< -39dBm
LTE-TDD bands	23dBm±2dB	< -39dBm

NOTE

In GPRS 4 slots TX mode, the maximum output power is reduced by 3.0dB. The design conforms to the GSM specification as described in **Chapter 13.16** of 3GPP TS 51.010-1.

6.6. RF Receiving Sensitivity

The following tables show the conducted RF receiving sensitivity of EC21 series module.

Table 46: EC21-E Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
EGSM900	-109.0dBm	/	/	-102.0dBm
DCS1800	-109.0dBm	/	/	-102.0dbm
WCDMA B1	-110.5dBm	/	/	-106.7dBm
WCDMA B5	-110.5dBm	/	/	-104.7dBm
WCDMA B8	-110.5dBm	/	/	-103.7dBm
LTE-FDD B1 (10MHz)	-98.0dBm	-98.0dBm	-101.5dBm	-96.3dBm
LTE-FDD B3 (10MHz)	-96.5dBm	-98.5dBm	-101.5dBm	-93.3dBm
LTE-FDD B5 (10MHz)	-98.0dBm	-98.5dBm	-101.0dBm	-94.3dBm
LTE-FDD B7 (10MHz)	-97.0dBm	-97.0dBm	-99.5dBm	-94.3dBm
LTE-FDD B8 (10MHz)	-97.0dBm	-97.0dBm	-101.0dBm	-93.3dBm
LTE-FDD B20 (10MHz)	-97.5dBm	-99.0dBm	-102.5dBm	-93.3dBm

Table 47: EC21-A Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
WCDMA B2	-110.0dBm	/	/	-104.7dBm
WCDMA B4	-110.0dBm	/	/	-106.7dBm
WCDMA B5	-110.5dBm	/	/	-104.7dBm
LTE-FDD B2 (10MHz)	-98.0dBm	-98.0dBm	-101.0dBm	-94.3dBm
LTE-FDD B4 (10MHz)	-97.5dBm	-99.0dBm	-101.0dBm	-96.3dBm
LTE-FDD B12 (10MHz)	-97.2dBm	-98.0dBm	-101.0dBm	-93.3dBm

Table 48: EC21-V Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
LTE-FDD B4 (10MHz)	-97.5dBm	-99.0dBm	-101.0dBm	-96.3dBm
LTE-FDD B13 (10MHz)	-97.7dBm	-97.0dBm	-100.0dBm	-93.3dBm

Table 49: EC21-AUT Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
WCDMA B1	-110.0dBm	/	/	-106.7dBm
WCDMA B5	-110.5dBm	/	/	-104.7dBm
LTE-FDD B1 (10MHz)	-98.5dBm	-98.0dBm	-101.0dBm	-96.3dBm
LTE-FDD B3 (10MHz)	-98.0dBm	-97.0dBm	-100.0dBm	-93.3dBm
LTE-FDD B5 (10MHz)	-98.0dBm	-99.0dBm	-102.5dBm	-94.3dBm
LTE-FDD B7 (10MHz)	-97.0dBm	-97.0dBm	-98.5dBm	-94.3dBm
LTE-FDD B28 (10MHz)	-97.0dBm	-99.0dBm	-102.0dBm	-94.8dBm

Table 50: EC21-KL Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
LTE-FDD B1 (10MHz)	-98.0dBm	-99.5dBm	-100.5dBm	-96.3dBm
LTE-FDD B3 (10MHz)	-97.0dBm	-97.5dBm	-99.5dBm	-93.3dBm
LTE-FDD B5 (10MHz)	-98.0dBm	-99.5dBm	-100.5dBm	-94.3dBm
LTE-FDD B7 (10MHz)	-96.0dBm	-96.0dBm	-98.5dBm	-94.3dBm
LTE-FDD B8 (10MHz)	-97.0dBm	-99.0dBm	-101.0dBm	-93.3dBm

Table 51: EC21-J Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
LTE-FDD B1 (10MHz)	-97.5dBm	-98.7dBm	-100.2dBm	-96.3dBm
LTE-FDD B3 (10MHz)	-96.5dBm	-97.1dBm	-100.5dBm	-93.3dBm
LTE-FDD B8 (10MHz)	-98.4dBm	-99.0dBm	-101.2dBm	-93.3dBm
LTE-FDD B18 (10MHz)	-99.5dBm	-99.0dBm	-101.7dBm	-96.3dBm
LTE-FDD B19 (10MHz)	-99.2dBm	-99.0dBm	-101.4dBm	-96.3dBm
LTE-FDD B26 (10MHz)	-99.5dBm	-99.0dBm	-101.5dBm	-93.8dBm

Table 52: EC21-AUV Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
WCDMA B1	-109.5dBm	/	/	-106.7dBm
WCDMA B5	-111.0dBm	/	/	-104.7dBm
WCDMA B8	-111.0dBm	/	/	-103.7dBm
LTE-FDD B1 (10MHz)	-97.7dBm	-97.5dBm	-101.3dBm	-96.3dBm
LTE-FDD B3 (10MHz)	-98.2dBm	-98.6dBm	-102.7dBm	-93.3dBm
LTE-FDD B5 (10MHz)	-98.7dBm	-98.2dBm	-102.5dBm	-94.3dBm
LTE-FDD B8 (10MHz)	-98.2dBm	-98.2dBm	-102.3dBm	-93.3dBm
LTE-FDD B28 (10MHz)	-98.0dBm	-98.7dBm	-102.1dBm	-94.8dBm

Table 53: EC21-AU Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
GSM850	-109.0dBm	/	/	-102.0dBm
EGSM900	-109.0dBm	/	/	-102.0dBm
DCS1800	-109.0dBm	/	/	-102.0dBm

PCS1900	-109.0dBm	/	/	-102.0dBm
WCDMA B1	-110.0dBm	/	/	-106.7dBm
WCDMA B2	-110.0dBm	/	/	-104.7dBm
WCDMA B5	-111.0dBm	/	/	-104.7dBm
WCDMA B8	-111.0dBm	/	/	-103.7dBm
LTE-FDD B1 (10MHz)	-97.2dBm	-97.5dBm	-100.2dBm	-96.3dBm
LTE-FDD B2 (10MHz)	-98.2dBm	/	/	-94.3dBm
LTE-FDD B3 (10MHz)	-98.7dBm	-98.6dBm	-102.2dBm	-93.3dBm
LTE-FDD B4 (10MHz)	-97.7dBm	-97.4dBm	-100.2dBm	-96.3dBm
LTE-FDD B5 (10MHz)	-98.0dBm	-98.2dBm	-101.0dBm	-94.3dBm
LTE-FDD B7 (10MHz)	-97.7dBm	-97.7dBm	-101.2dBm	-94.3dBm
LTE-FDD B8 (10MHz)	-99.2dBm	-98.2dBm	-102.2dBm	-93.3dBm
LTE-FDD B28 (10MHz)	-98.6dBm	-98.7dBm	-102.0dBm	-94.8dBm
LTE-TDD B40 (10MHz)	-97.2dBm	-98.4dBm	-101.2dBm	-96.3dBm

Table 54: EC21-EU Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
EGSM900	-109.0dBm	/	/	-102.0dBm
DCS1800	-109.0dBm	/	/	-102.0dbm
WCDMA B1	-110.5dBm	/	/	-106.7dBm
WCDMA B8	-110.5dBm	/	/	-103.7dBm
LTE-FDD B1 (10MHz)	-98.2dBm	-99dBm	-101.7dBm	-96.3dBm
LTE-FDD B3 (10MHz)	-98.7dBm	-99.5dBm	-101.2dBm	-93.3dBm
LTE-FDD B7 (10MHz)	-96.8dBm	-98.5dBm	-100.7dBm	-94.3dBm
LTE-FDD B8 (10MHz)	-98.7dBm	-100dBm	-101.7dBm	-93.3dBm

LTE-FDD B20 (10MHz)	-98.2dBm	-99.5dBm	-101.8dBm	-93.3dBm
LTE-FDD B28A (10MHz)	-98.8dBm	-100dBm	-101.5dBm	-94.8dBm

Table 55: EC21-EC Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
EGSM900	-108.8dBm	/	/	-102.0dBm
DCS1800	-109.0dBm	/	/	-102.0dbm
WCDMA B1	-110.5dBm	/	/	-106.7dBm
WCDMA B8	-110.5dBm	/	/	-103.7dBm
LTE-FDD B1 (10MHz)	-98.0dBm	-98.0dBm	-101.0dBm	-96.3dBm
LTE-FDD B3 (10MHz)	-96.5dBm	-98.5dBm	-100.0dBm	-93.3dBm
LTE-FDD B7 (10MHz)	-97.0dBm	-95.5dBm	-99.5dBm	-94.3dBm
LTE-FDD B8 (10MHz)	-97.0dBm	-97.0dBm	-101.0dBm	-93.3dBm
LTE-FDD B20 (10MHz)	-97.5dBm	-99.0dBm	-101.0dBm	-93.3dBm
LTE-FDD B28 (10MHz)	-98.6dBm	-98.7dBm	-101.5dBm	-94.8dBm

Table 56: EC21-AUX Conducted RF Receiving Sensitivity

Frequency Bands	Primary	Diversity	SIMO ¹⁾	3GPP (SIMO)
GSM850	-109.0dBm	/	/	-102.0dBm
EGSM900	-109.0dBm	/	/	-102.0dBm
DCS1800	-109.0dBm	/	/	-102.0dBm
PCS1900	-109.0dBm	/	/	-102.0dBm
WCDMA B1	-110.0dBm	-109.5dBm	-112dBm	-106.7dBm
WCDMA B2	-110.5dBm	/	/	-104.7dBm
WCDMA B4	-110.0dBm	-110dBm	-112dBm	-104.7dBm

WCDMA B5	-111.0dBm	-112dBm	-113dBm	-104.7dBm
WCDMA B8	-111.0dBm	-112dBm	-113dBm	-103.7dBm
LTE-FDD B1 (10MHz)	-98.0dBm	-97.7dBm	-101.2dBm	-96.3dBm
LTE-FDD B2 (10MHz)	-98.5dBm	/	/	-94.3dBm
LTE-FDD B3 (10MHz)	-99.0dBm	-98.8dBm	-102.2dBm	-93.3dBm
LTE-FDD B4 (10MHz)	-97.7dBm	-97.6dBm	-100.2dBm	-96.3dBm
LTE-FDD B5 (10MHz)	-98.5dBm	-98.2dBm	-101.0dBm	-94.3dBm
LTE-FDD B7 (10MHz)	-97.7dBm	-97.7dBm	-101.2dBm	-94.3dBm
LTE-FDD B8 (10MHz)	-99.0dBm	-98.5dBm	-102.2dBm	-93.3dBm
LTE-FDD B28 (10MHz)	-98.0dBm	-98.7dBm	-101.5dBm	-94.8dBm
LTE-TDD B40 (10MHz)	-97.5dBm	-98.2dBm	-101.2dBm	-96.3dBm

NOTE

¹⁾ SIMO is a smart antenna technology that uses a single antenna at the transmitter side and two antennas at the receiver side, which can improve RX performance.

6.7. Electrostatic Discharge

The module is not protected against electrostatics discharge (ESD) in general. Consequently, it is subject to ESD handling precautions that typically apply to ESD sensitive components. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any application that incorporates the module.

The following table shows the module's electrostatics discharge characteristics.

Table 57: Electrostatics Discharge Characteristics (25°C, 45% Relative Humidity)

Tested Interfaces	Contact Discharge	Air Discharge	Unit
VBAT, GND	±5	±10	kV
All Antenna Interfaces	±4	±8	kV

Other Interfaces	±0.5	±1	kV
------------------	------	----	----

6.8. Thermal Consideration

In order to achieve better performance of the module, it is recommended to comply with the following principles for thermal consideration:

- On customers' PCB design, please keep placement of the module away from heating sources, especially high power components such as ARM processor, audio power amplifier, power supply, etc.
- Do not place components on the opposite side of the PCB area where the module is mounted, in order to facilitate adding of heatsink when necessary.
- Do not apply solder mask on the opposite side of the PCB area where the module is mounted, so as to ensure better heat dissipation performance.
- The reference ground of the area where the module is mounted should be complete, and add ground vias as many as possible for better heat dissipation.
- Make sure the ground pads of the module and PCB are fully connected.
- According to customers' application demands, the heatsink can be mounted on the top of the module, or the opposite side of the PCB area where the module is mounted, or both of them.
- The heatsink should be designed with as many fins as possible to increase heat dissipation area. Meanwhile, a thermal pad with high thermal conductivity should be used between the heatsink and module/PCB.

The following shows two kinds of heatsink designs for reference and customers can choose one or both of them according to their application structure.

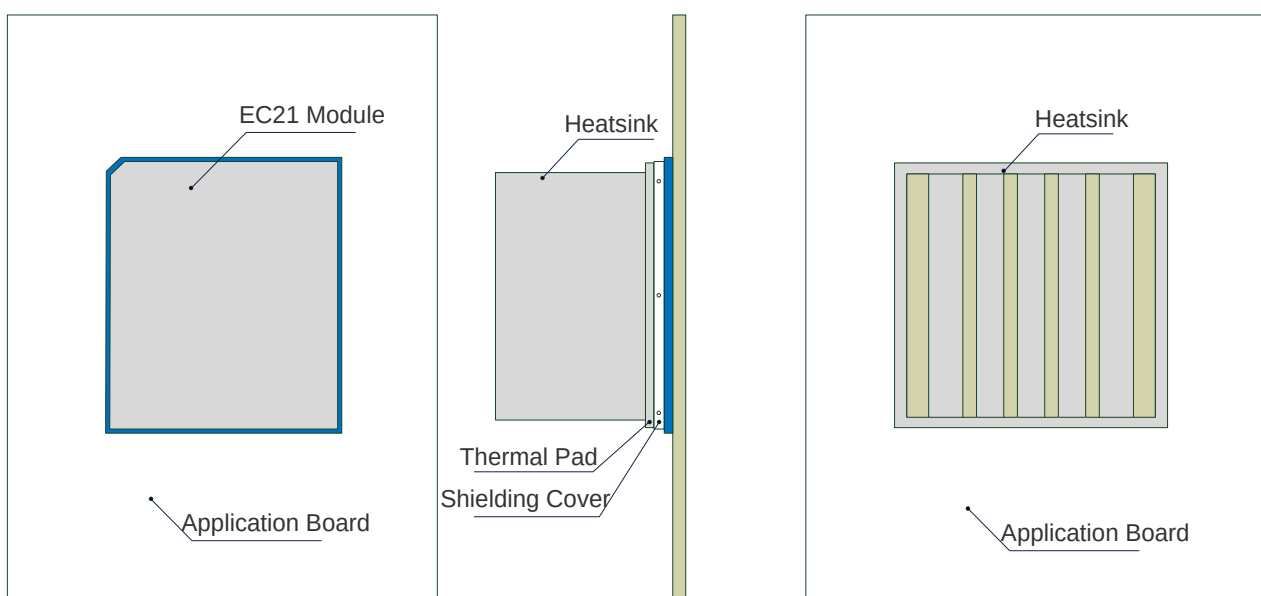


Figure 41: Referenced Heatsink Design (Heatsink at the Top of the Module)

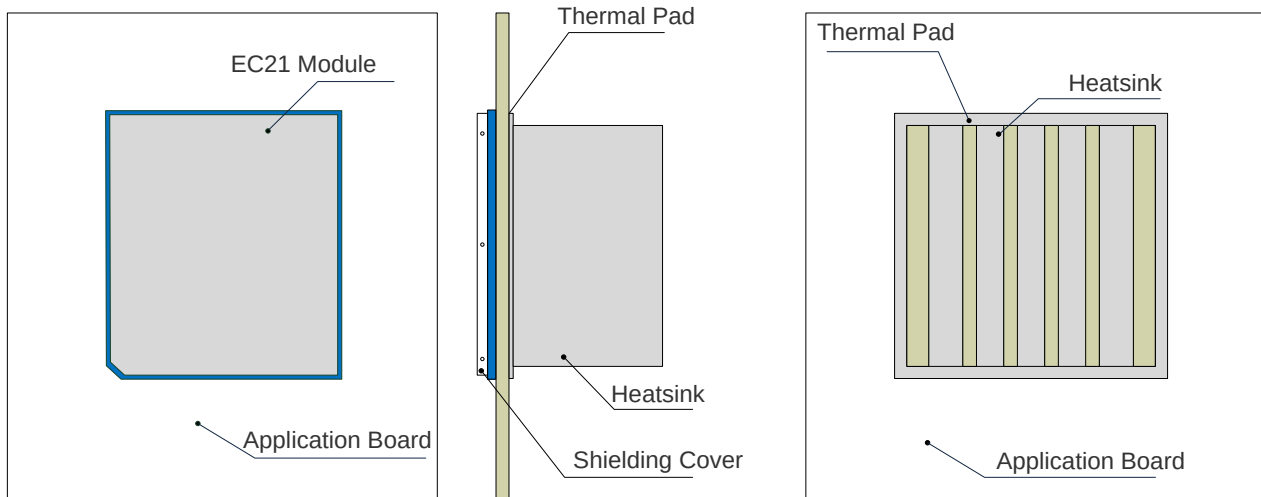


Figure 42: Referenced Heatsink Design (Heatsink at the Backside of Customers' PCB)

NOTES

1. The module offers the best performance when the internal BB chip stays below 105°C. When the maximum temperature of the BB chip reaches or exceeds 105°C, the module works normal but provides reduced performance (such as RF output power, data rate, etc.). When the maximum BB chip temperature reaches or exceeds 115°C, the module will disconnect from the network, and it will recover to network connected state after the maximum temperature falls below 115°C. Therefore, the thermal design should be maximally optimized to make sure the maximum BB chip temperature always maintains below 105°C. Customers can execute **AT+QTEMP** command and get the maximum BB chip temperature from the first returned value.
2. For more detailed guidelines on thermal design, please refer to **document [7]**.

7 Mechanical Dimensions

This chapter describes the mechanical dimensions of the module. All dimensions are measured in mm, and the dimensional tolerances are $\pm 0.05\text{mm}$ unless otherwise specified.

7.1. Mechanical Dimensions of the Module

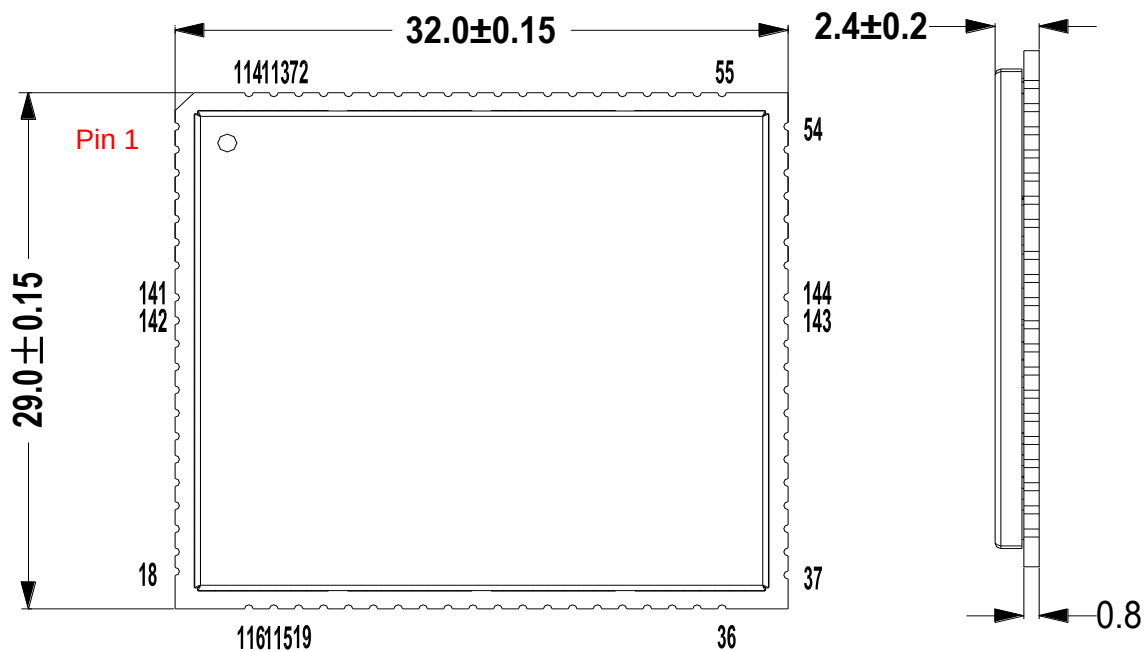


Figure 43: Module Top and Side Dimensions

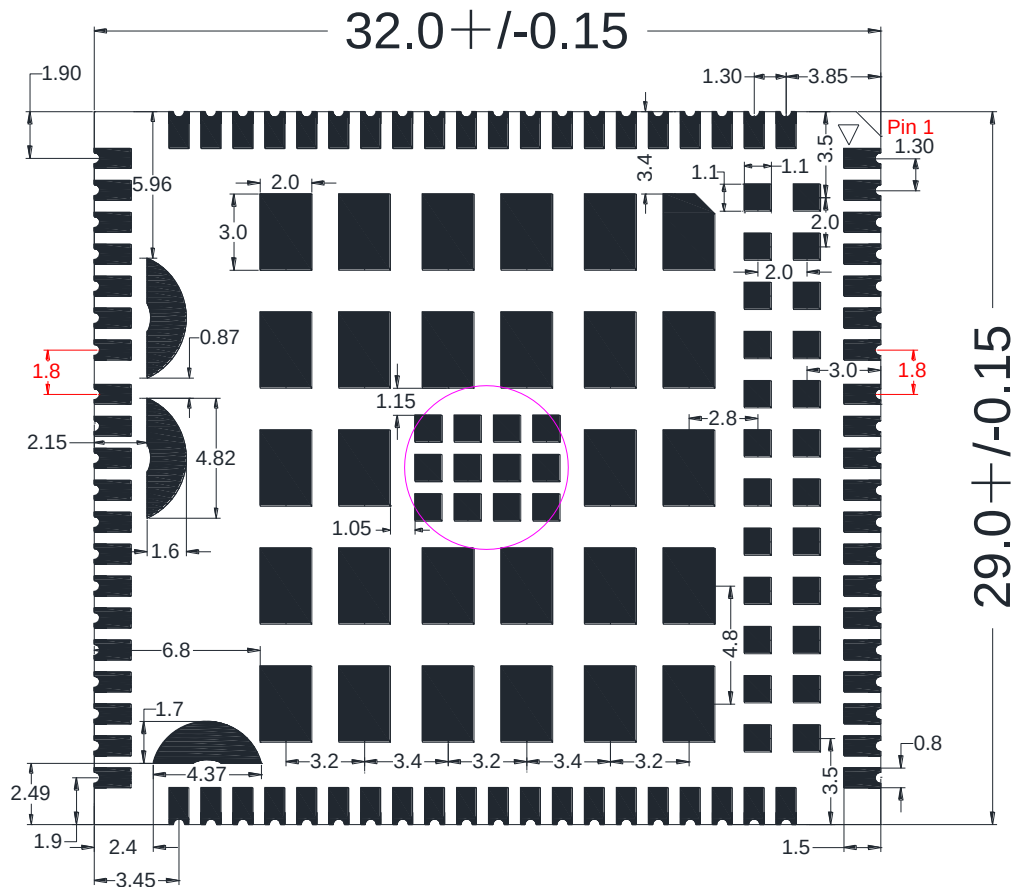


Figure 44: Module Bottom Dimensions (Bottom View)

7.2. Recommended Footprint

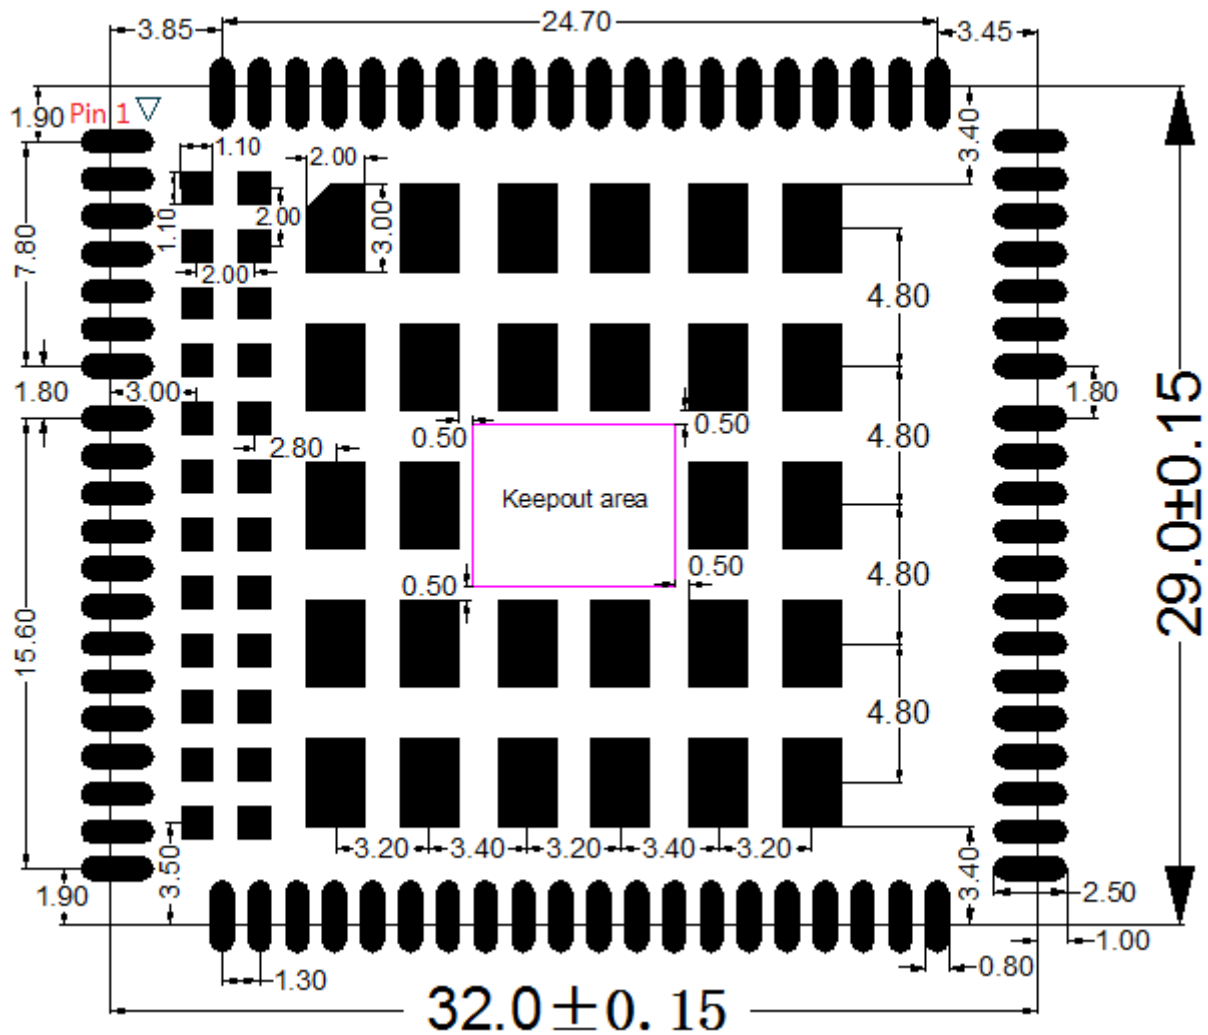


Figure 45: Recommended Footprint (Top View)

NOTES

1. The keepout area should not be designed.
2. For easy maintenance of the module, please keep about 3mm between the module and other components in the host PCB.

7.3. Design Effect Drawings of the Module



Figure 46: Top View of the Module

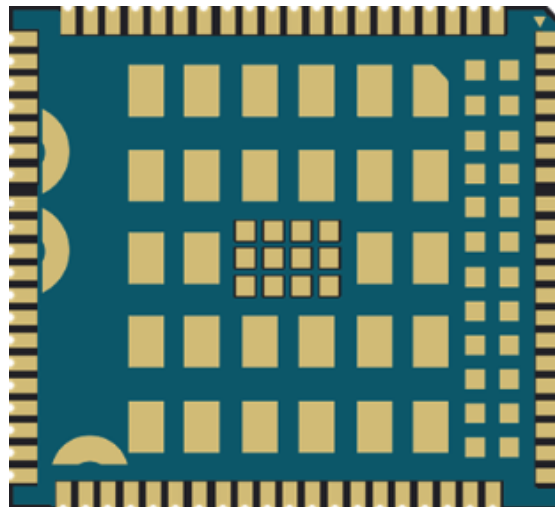


Figure 47: Bottom View of the Module

NOTE

These are renderings of EC21 module. For authentic appearance, please refer to the module that you receive from Quectel.

8 Storage, Manufacturing and Packaging

8.1. Storage

EC21 is stored in a vacuum-sealed bag. It is rated at MSL 3, and its storage restrictions are listed below.

1. Shelf life in vacuum-sealed bag: 12 months at <40°C/90%RH.
2. After the vacuum-sealed bag is opened, devices that will be subjected to reflow soldering or other high temperature processes must be:
 - Mounted within 168 hours at the factory environment of ≤30°C/60%RH.
 - Stored at <10%RH.
3. Devices require baking before mounting, if any circumstances below occurs:
 - When the ambient temperature is 23°C±5°C and the humidity indicator card shows the humidity is >10% before opening the vacuum-sealed bag.
 - Device mounting cannot be finished within 168 hours at factory conditions of ≤30°C/60%RH.
4. If baking is required, devices may be baked for 8 hours at 120°C±5°C.

NOTE

As the plastic package cannot be subjected to high temperature, it should be removed from devices before high temperature (120°C) baking. If shorter baking time is desired, please refer to *IPC/JEDECJ-STD-033* for baking procedure.

8.2. Manufacturing and Soldering

Push the squeegee to apply the solder paste on the surface of stencil, thus making the paste fill the stencil openings and then penetrate to the PCB. The force on the squeegee should be adjusted properly so as to produce a clean stencil surface on a single pass. To ensure the module soldering quality, the thickness of stencil for the module is recommended to be 0.18mm~0.20mm. For more details, please refer to **document [4]**.

It is suggested that the peak reflow temperature is 238°C~245°C, and the absolute maximum reflow temperature is 245°C. To avoid damage to the module caused by repeated heating, it is strongly recommended that the module should be mounted after reflow soldering for the other side of PCB has been completed. The recommended reflow soldering thermal profile (lead-free reflow soldering) and related parameters are shown below.

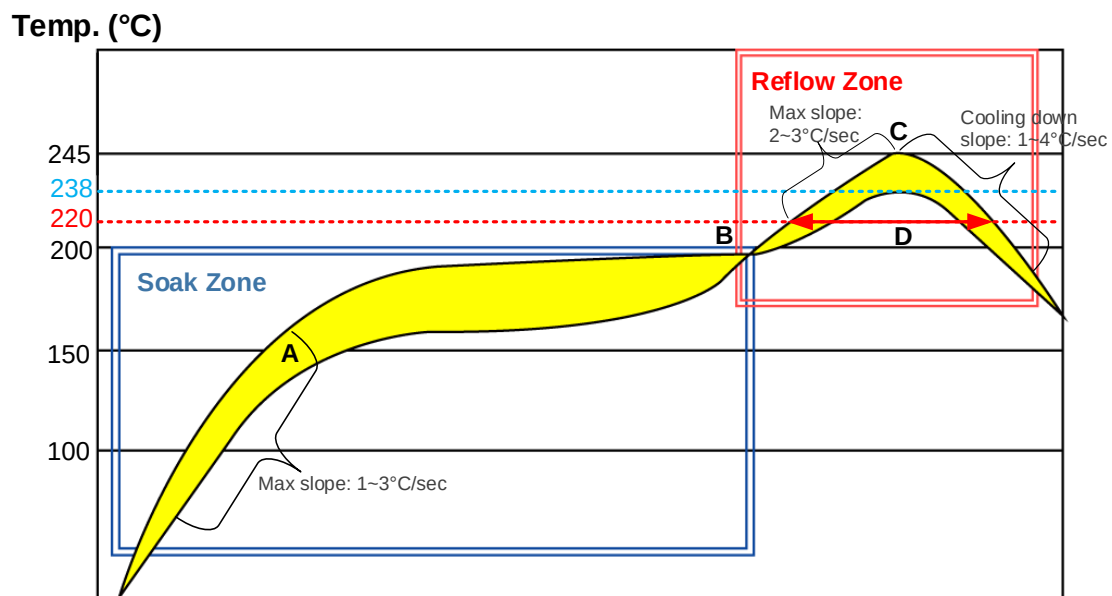


Figure 48: Reflow Soldering Thermal Profile

Table 58: Recommended Thermal Profile Parameters

Factor	Recommendation
Soak Zone	
Max slope	1~3°C/sec
Soak time (between A and B: 150°C and 200°C)	60~120sec
Reflow Zone	

Max slope	2~3°C/sec
Reflow time (D: over 220°C)	40~60sec
Max temperature	238~245°C
Cooling down slope	1~4°C/sec
Reflow Cycle	
Max reflow cycle	1

8.3. Packaging

EC21 is packaged in tap and reel carriers. Each reel is 11.88m long and contains 250 modules. The figure below shows the package details, measured in mm.

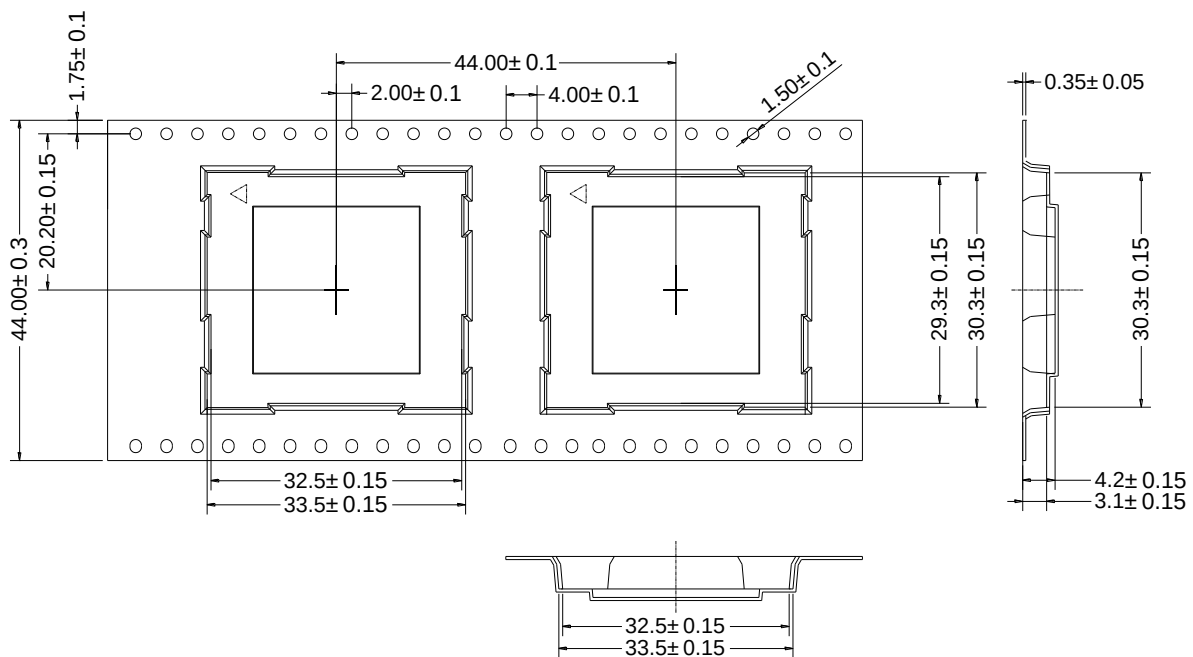


Figure 49: Tape Specifications

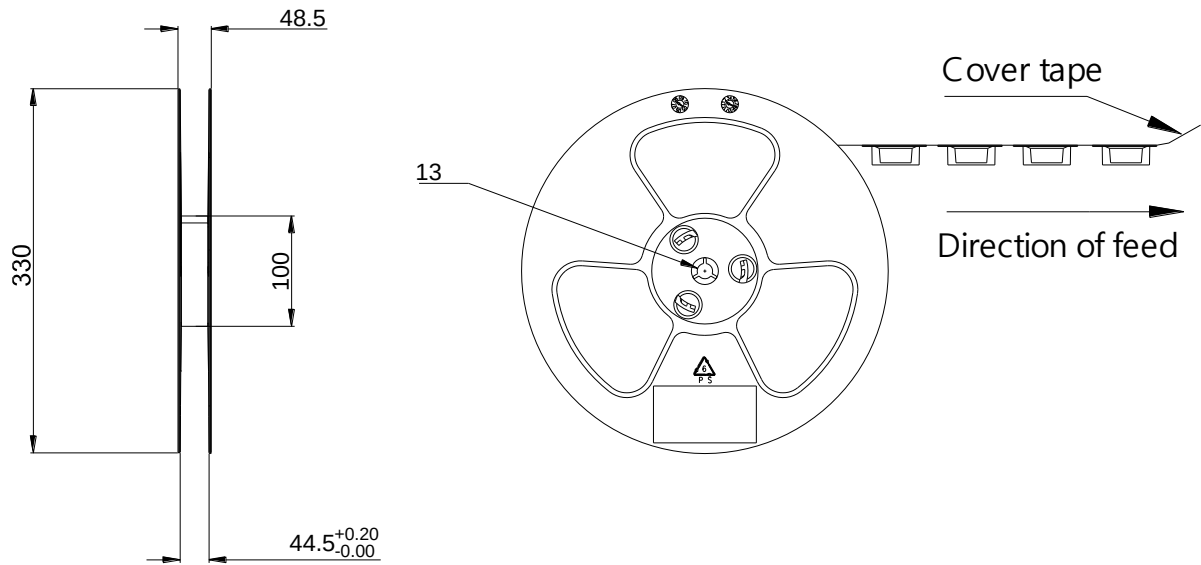


Figure 50: Reel Specifications

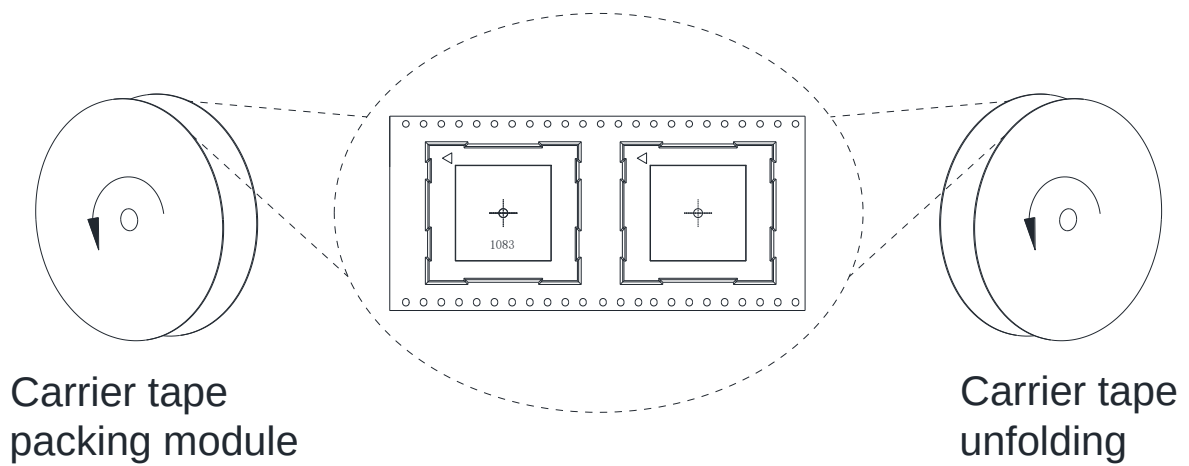


Figure 51: Tape and Reel Directions

9 Appendix A References

Table 59: Related Documents

SN	Document Name	Remark
[1]	Quectel_EC2x&EGxx_Power_Management_Application_Note	Power management application note for EC25, EC21, EC20 R2.0, EC20 R2.1, EG95, EG91 and EG25-G modules
[2]	Quectel_LTE_Standard_AT_Commands_Manual	AT commands manual for LTE Standard modules
[3]	Quectel_LTE_Standard_GNSS_AT_Commands_Manual	GNSS AT Commands Manual for LTE Standard modules
[4]	Quectel_Module_Secondary_SMT_User_Guide	Module secondary SMT user guide
[5]	Quectel_EC21_Reference_Design	EC21 reference design
[6]	Quectel_RF_Layout_Application_Note	RF layout application note
[7]	Quectel_LTE_Module_Thermal_Design_Guide	Thermal design guide for LTE standard, LTE-A and Automotive modules
[8]	Quectel_UMTS<E_EVB_User_Guide	UMTS<E EVB user guide for UMTS<E modules

Table 60: Terms and Abbreviations

Abbreviation	Description
AMR	Adaptive Multi-rate
bps	Bits Per Second
CHAP	Challenge Handshake Authentication Protocol
CS	Coding Scheme
CSD	Circuit Switched Data
CTS	Clear To Send

DC-HSPA+	Dual-carrier High Speed Packet Access
DFOTA	Delta Firmware Upgrade Over The Air
DL	Downlink
DTR	Data Terminal Ready
DTX	Discontinuous Transmission
EFR	Enhanced Full Rate
ESD	Electrostatic Discharge
FDD	Frequency Division Duplex
FR	Full Rate
GLONASS	GLObalnaya NAVigatsionnaya Sputnikovaya Sistema, the Russian Global Navigation Satellite System
GMSK	Gaussian Minimum Shift Keying
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
GSM	Global System for Mobile Communications
HR	Half Rate
HSPA	High Speed Packet Access
HSDPA	High Speed Downlink Packet Access
HSUPA	High Speed Uplink Packet Access
I/O	Input/Output
Inorm	Normal Current
LED	Light Emitting Diode
LNA	Low Noise Amplifier
LTE	Long Term Evolution
MIMO	Multiple Input Multiple Output
MO	Mobile Originated

MS	Mobile Station (GSM engine)
MT	Mobile Terminated
PAP	Password Authentication Protocol
PCB	Printed Circuit Board
PDU	Protocol Data Unit
PPP	Point-to-Point Protocol
QAM	Quadrature Amplitude Modulation
QPSK	Quadrature Phase Shift Keying
RF	Radio Frequency
RHCP	Right Hand Circularly Polarized
Rx	Receive
SGMII	Serial Gigabit Media Independent Interface
SIM	Subscriber Identification Module
SIMO	Single Input Multiple Output
SMS	Short Message Service
TDD	Time Division Duplexing
TDMA	Time Division Multiple Access
TD-SCDMA	Time Division-Synchronous Code Division Multiple Access
TX	Transmitting Direction
UL	Uplink
UMTS	Universal Mobile Telecommunications System
URC	Unsolicited Result Code
(U)SIM	(Universal) Subscriber Identity Module
Vmax	Maximum Voltage Value
Vnorm	Normal Voltage Value

V _{min}	Minimum Voltage Value
V _{IHmax}	Maximum Input High Level Voltage Value
V _{IHmin}	Minimum Input High Level Voltage Value
V _{ILmax}	Maximum Input Low Level Voltage Value
V _{ILmin}	Minimum Input Low Level Voltage Value
V _{Imax}	Absolute Maximum Input Voltage Value
V _{Imin}	Absolute Minimum Input Voltage Value
V _{OHmax}	Maximum Output High Level Voltage Value
V _{OHmin}	Minimum Output High Level Voltage Value
V _{OLmax}	Maximum Output Low Level Voltage Value
V _{OLmin}	Minimum Output Low Level Voltage Value
VSWR	Voltage Standing Wave Ratio
WCDMA	Wideband Code Division Multiple Access
WLAN	Wireless Local Area Network

10 Appendix B GPRS Coding Schemes

Table 61: Description of Different Coding Schemes

Scheme	CS-1	CS-2	CS-3	CS-4
Code Rate	1/2	2/3	3/4	1
USF	3	3	3	3
Pre-coded USF	3	6	6	12
Radio Block excl. USF and BCS	181	268	312	428
BCS	40	16	16	16
Tail	4	4	4	-
Coded Bits	456	588	676	456
Punctured Bits	0	132	220	-
Data Rate Kb/s	9.05	13.4	15.6	21.4

11 Appendix C GPRS Multi-slot Classes

Thirty-three classes of GPRS multi-slot modes are defined for MS in GPRS specification. Multi-slot classes are product dependent, and determine the maximum achievable data rates in both the uplink and downlink directions. Written as 3+1 or 2+2, the first number indicates the amount of downlink timeslots, while the second number indicates the amount of uplink timeslots. The active slots determine the total number of slots the GPRS device can use simultaneously for both uplink and downlink communications.

The description of different multi-slot classes is shown in the following table.

Table 62: GPRS Multi-slot Classes

Multislot Class	Downlink Slots	Uplink Slots	Active Slots
1	1	1	2
2	2	1	3
3	2	2	3
4	3	1	4
5	2	2	4
6	3	2	4
7	3	3	4
8	4	1	5
9	3	2	5
10	4	2	5
11	4	3	5
12	4	4	5
13	3	3	NA

14	4	4	NA
15	5	5	NA
16	6	6	NA
17	7	7	NA
18	8	8	NA
19	6	2	NA
20	6	3	NA
21	6	4	NA
22	6	4	NA
23	6	6	NA
24	8	2	NA
25	8	3	NA
26	8	4	NA
27	8	4	NA
28	8	6	NA
29	8	8	NA
30	5	1	6
31	5	2	6
32	5	3	6
33	5	4	6

12 Appendix D EDGE Modulation and Coding Schemes

Table 63: EDGE Modulation and Coding Schemes

Coding Scheme	Modulation	Coding Family	1 Timeslot	2 Timeslot	4 Timeslot
CS-1:	GMSK	/	9.05kbps	18.1kbps	36.2kbps
CS-2:	GMSK	/	13.4kbps	26.8kbps	53.6kbps
CS-3:	GMSK	/	15.6kbps	31.2kbps	62.4kbps
CS-4:	GMSK	/	21.4kbps	42.8kbps	85.6kbps
MCS-1	GMSK	C	8.80kbps	17.60kbps	35.20kbps
MCS-2	GMSK	B	11.2kbps	22.4kbps	44.8kbps
MCS-3	GMSK	A	14.8kbps	29.6kbps	59.2kbps
MCS-4	GMSK	C	17.6kbps	35.2kbps	70.4kbps
MCS-5	8-PSK	B	22.4kbps	44.8kbps	89.6kbps
MCS-6	8-PSK	A	29.6kbps	59.2kbps	118.4kbps
MCS-7	8-PSK	B	44.8kbps	89.6kbps	179.2kbps
MCS-8	8-PSK	A	54.4kbps	108.8kbps	217.6kbps
MCS-9	8-PSK	A	59.2kbps	118.4kbps	236.8kbps

Important Notice to OEM integrators

1. This module is limited to OEM installation ONLY.
2. This module is limited to installation in mobile or fixed applications, according to Part 2.1091(b).
3. The separate approval is required for all other operating configurations, including portable configurations with respect to Part 2.1093 and different antenna configurations
4. For FCC Part 15.31 (h) and (k): The host manufacturer is responsible for additional testing to verify compliance as a composite system. When testing the host device for compliance with Part 15 Subpart B, the host manufacturer is required to show compliance with Part 15 Subpart B while the transmitter module(s) are installed and operating. The modules should be transmitting and the evaluation should confirm that the module's intentional emissions are compliant (i.e. fundamental and out of band emissions). The host manufacturer must verify that there are no additional unintentional emissions other than what is permitted in Part 15 Subpart B or emissions are complaint with the transmitter(s) rule(s). The Grantee will provide guidance to the host manufacturer for Part 15 B requirements if needed.

Important Note

notice that any deviation(s) from the defined parameters of the antenna trace, as described by the instructions, require that the host product manufacturer must notify to Quectel that they wish to change the antenna trace design. In this case, a Class II permissive change application is required to be filed by the USI, or the host manufacturer can take responsibility through the change in FCC ID XMR201606EC21A procedure followed by a Class II permissive change application.

End Product Labeling

When the module is installed in the host device, the FCC/IC ID label must be visible through a window on the final device or it must be visible when an access panel, door or cover is easily re-moved. If not, a second label must be placed on the outside of the final device that contains the following text: "Contains FCC ID: XMR201606EC21A"

"Contains IC: 10224A-201611EC21A"

The FCC ID/IC ID can be used only when all FCC/IC compliance requirements are met.

Antenna Installation

- (1) The antenna must be installed such that 20 cm is maintained between the antenna and users,
- (2) The transmitter module may not be co-located with any other transmitter or antenna.
- (3) Only antennas of the same type and with equal or less gains as shown below may be used with this module. Other types of antennas and/or higher gain antennas may require additional authorization for operation.

Antenna Gain	WCDMA Band 2: 1.59dBi WCDMA Band 4: 2dBi WCDMA Band 5: 2.13dBi	LTE Band 2: 1.59dBi LTE Band 4: 2dBi LTE Band 12: 3.26dBi
---------------------	--	---

In the event that these conditions cannot be met (for example certain laptop configurations or co-location with another transmitter), then the FCC/IC authorization is no longer considered valid and the FCC ID/IC ID cannot be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC/IC authorization.

Manual Information to the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module. The end user manual shall include all required regulatory information/warning as show in this manual.

List of applicable FCC rules

This module has been tested and found to comply with part 22, part 24, part 27, part 90, requirements for Modular Approval.

The modular transmitter is only FCC authorized for the specific rule parts (i.e., FCC transmitter rules) listed on the grant, and that the host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. If the grantee markets their product as being Part 15 Subpart B compliant (when it also contains unintentional-radiator digital circuitry), then the grantee shall provide a notice stating that the final host product still requires Part 15 Subpart B compliance testing with the modular transmitter installed.

Integration instructions for host product manufacturers according to KDB 996369 D03 OEM Manual v01

2.2 List of applicable FCC rules

FCC Part 15 Subpart C 15.247 & 15.209 & 15.407.

2.3 Specific operational use conditions

The module can be used for mobile applications with a maximum 4.84dBi antenna. The host manufacturer installing this module into their product must ensure that the final compos it product complies with the FCC requirements by a technical assessment or evaluation to the FCC rules, including the transmitter operation. The host manufacturer has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module The end user manual shall include all required regulatory information/warning as show in this manual.

2.4 Limited module procedures

Not applicable The module is a Single module and complies with the requirement of FCC Part 15 212.

2.5 Trace antenna designs

Not applicable The module has its own antenna, and doesn't need a hosts printed board micro strip trace antenna etc.

2.6 RF exposure considerations

The module must be installed in the host equipment such that at least 20cm is maintained between the antenna and users" body; and if RF exposure statement or module layout is changed, then the host product manufacturer required to take responsibility of the module through a change in FCC ID or new application The FCC ID of the module cannot be used on the final product In these circumstances, the host manufacturer will be responsible for reevaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

2.7 Antennas

Antenna Specification are as follows:

Type: External Antenna

Gain: 3.6 dBi Max

This device is intended only for host manufacturers under the following conditions: The transmitter module may not be co-located with any other transmitter or antenna; The module shall be only used with the internal antenna(s) that has been originally tested and certified with this module. The antenna must be either permanently attached or employ a "unique" antenna coupler.

As long as the conditions above are met, further transmitter test will not be required However, the host manufacturer is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc).

2.8 Label and compliance information

Host product manufacturers need to provide a physical or e-label stating "Contains FCC ID: XMR201606EC21A" with their finished product.

2.9 Information on test modes and additional testing requirements

Host manufacturer must perform test of radiated & conducted emission and spurious emission, e.t.c according to the actual test modes for a stand-alone modular transmitter in a host, as well as for multiple simultaneously transmitting modules or other transmitters in a host product. Only when all the test results of test modes comply with FCC requirements, then the end product can be sold legally.

2.10 Additional testing, Part 15 Subpart B disclaimer

The modular transmitter is only FCC authorized for FCC Part 15 Subpart C 15.247 & 15 209 &15.407 and that the host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. If the grantee markets their product as being Part 15 Subpart B compliant (when it also contains unintentional-radiator

digital circuitry), then the grantee shall provide a notice stating that the final host product still requires Part 15 Subpart B compliance testing with the modular transmitter installed.

This device is intended only for OEM integrators under the following conditions: (For module device use)

- 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- 2) The transmitter module may not be co-located with any other transmitter or antenna.

As long as 2 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

IC

Industry Canada Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Radiation Exposure Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

This device is intended only for OEM integrators under the following conditions: (For module device use)

- 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- 2) The transmitter module may not be co-located with any other transmitter or antenna.

As long as 2 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

Cet appareil est conçu uniquement pour les intégrateurs OEM dans les conditions suivantes: (Pour utilisation de dispositif module)

- 1) L'antenne doit être installée de telle sorte qu'une distance de 20 cm est respectée entre l'antenne et les

utilisateurs, et

2) Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.

Tant que les 2 conditions ci-dessus sont remplies, des essais supplémentaires sur l'émetteur ne seront pas nécessaires. Toutefois, l'intégrateur OEM est toujours responsable des essais sur son produit final pour toutes exigences de conformité supplémentaires requis pour ce module installé.

IMPORTANT NOTE:

In the event that these conditions can not be met (for example certain laptop configurations or colocation with another transmitter), then the Canada authorization is no longer considered valid and the IC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate Canada authorization.

NOTE IMPORTANTE:

Dans le cas où ces conditions ne peuvent être satisfaites (par exemple pour certaines configurations d'ordinateur portable ou de certaines co-localisation avec un autre émetteur), l'autorisation du Canada n'est plus considéré comme valide et l'ID IC ne peut pas être utilisé sur le produit final. Dans ces circonstances, l'intégrateur OEM sera chargé de réévaluer le produit final (y compris l'émetteur) et l'obtention d'une autorisation distincte au Canada.

End Product Labeling

This transmitter module is authorized only for use in device where the antenna may be installed such that 20 cm may be maintained between the antenna and users. The final end product must be labeled in a visible area with the following: "Contains IC:10224A-201611EC21A".

Plaque signalétique du produit final

Ce module émetteur est autorisé uniquement pour une utilisation dans un dispositif où l'antenne peut être installée de telle sorte qu'une distance de 20cm peut être maintenue entre l'antenne et les utilisateurs. Le produit final doit être étiqueté dans un endroit visible avec l'inscription suivante: "Contient des IC: 10224A-201611EC21A".

Manual Information To the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

Manuel d'information à l'utilisateur final

L'intégrateur OEM doit être conscient de ne pas fournir des informations à l'utilisateur final quant à la façon d'installer ou de supprimer ce module RF dans le manuel de l'utilisateur du produit final qui intègre ce module.

Le manuel de l'utilisateur final doit inclure toutes les informations réglementaires requises et avertissements comme indiqué dans ce manuel.