



R29 SERIES DOOR PHONE

Administrator Guide

About This Manual

Thank you for choosing Akuvox R29C door phone. This manual is intended for the administrators who need to properly configure the door phone. This manual applies to 29.30.2.907 version, and it provides all the configurations for the functions and features of R29C door phone. Please visit Akuvox forum or consult technical support for any new information or the latest firmwares.

Introduction of Icons and Symbols



Warning:

- **Always abide by this information in order to prevent the persons from injury.**



Caution:

- **Always abide by this information in order to prevent the damages to the device.**



Note:

- **Informative information and advice from the efficient use of the device.**

Related Documentation

You are advised to refer to the related documents for more technical information via the link below:

<https://knowledge.akuvox.com>

Table of Contents

1. Product Overview	1
2. Change Log	1
3. Model Differences	2
4. Introduction to Configuration Menu	4
5. Access the Device	7
6. Language and Time Setting	10
6.1. Language Setting	10
6.1.1. Language Setting on the Device	10
6.1.2. Language Setting on the Device Web Interface.	10
6.2. Time Setting	11
6.2.1. Time Setting on the Device	11
6.2.2. Time Setting on the Device Web Interface	12
7. LED&LCD Setting	13
7.1. Infrared LED Setting on the Device	13
7.2. Infrared LED Setting on the Web Interface	15
7.3. LED Setting on Card Reader Area	16
7.4. LCD Screen Brightness Setting	17
7.5. LCD Heat Control	18
7.6. LED White Light Setting	18
7.7. Screen Display configuration	19
7.7.1. Home Screen Display Setting	19
7.7.2. Await Screen Setting	20
7.7.2.1. Await Screen Setting on the Device	20
7.7.2.2. Await Screen Setting on the Web Interface	22

7.7.3. Upload Screen Saver	22
7.7.4. Upload Home Screen Background Pictures	23
7.7.5. Upload Background Picture in the Time-displaying Area	24
7.8. Upload Device Booting Image	25
7.9. Upload Device Logo	26
7.10. Configuration for Scenario-based Screen Display Mode	26
7.10.1. Building Mode Home Screen Configuration	28
7.10.2. Villa Mode Home Screen Configuration	30
7.10.3. Alphanumeric Mode Home Screen Configuration	32
7.11. Volume and Tone Configuration	34
7.11.1. Volume Configuration	34
7.11.2. Open Door Tone Configuration	36
7.11.3. Contact List Guiding Tone Configuration	37
7.12. Upload Tones	37
8. Network Setting	39
8.1. Device Network Connection Setting	39
8.2. Device Local RTP configuration	41
8.3. Device Deployment in Network	42
8.4. NAT Setting	43
9. Intercom Call Configuration	44
9.1. IP call & IP Call Configuration	44
9.2. SIP Call & SIP Call Configuration	44
9.2.1. SIP Account Registration	45
9.2.2. SIP Call DND&Return Code Configuration	46
9.2.3. SIP Server Configuration	47
9.2.4. Outbound Proxy Server configuration	48
9.2.5. Data Transmission Type Configuration	49

9.2.6. SIP Hacking Protection	50
9.3. Dial Options Configuration	51
9.3.1. Quick Dial By number Replacement	51
9.3.2. Quick Dial Using Configured Dial Name	53
9.3.3. Import/Export the Speed Dial Contacts	54
9.3.4. Speed Dial on the Home Screen	54
9.4. Group Speed Dial	57
9.5. Dial Key Order	58
9.6. Call Auto-answer Configuration	58
9.7. Sequence Call Configuration	59
9.8. Web Call Configuration	60
9.9. Call Settings	61
9.9.1. Maximum Call Duration Setting	61
9.9.2. Maximum Dial Duration Setting	61
9.9.3. Hang Up After Open Door	62
9.9.4. Two-way Video Call	63
10. Audio& Video Codec Configuration for SIP Calls	64
10.1. Audio Codec Configuration	64
10.2. Video Codec Configuration	65
11. Phone book Configuration	66
11.1. Phone book Configuration on the Device	66
11.2. Phone book Configuration on the Web Interface	68
11.2.1. Managing Contact Groups on the Web Interface	68
11.2.2. Contact Configuration on the Web Interface	69
11.2.2.1. Contact Management	70
11.2.2.2. Contacts Import and Export on the Web Interface ...	71
11.2.2.3. Contact List Setting	71

11.2.2.4. Contact List Display Setting	72
12. Door Access Control Configuration	74
12.1. Relay Switch Setting	74
12.2. Web Relay Setting	76
12.3. Door Access Schedule Management	77
12.3.1. Manage Relay Schedule	77
12.3.2. Configure Door Access Schedule	77
12.3.3. Create Door Access Schedule on the Web Interface	78
12.4. Relay schedule	79
12.4.1. Create Door Access Schedule on the Device	79
12.4.2. Import and Export Door Access Schedule	80
12.4.3. Edit the Door Access Schedule	80
12.4.3.1. Edit the Door Access Schedule on the Web Interface	80
12.4.3.2. Edit the Door Access Schedule on the Device	81
12.5. Door Unlock Configuration	82
12.5.1. Configure PIN Code for Door Unlock	82
12.5.2. Configure Public PIN code	82
12.5.3. Configure Private PIN Code on the Device	84
12.5.4. Configure Private PIN Code on the Web Interface	85
12.5.5. Configure Private PIN Access Mode	87
12.6. Configure Facial Recognition for Door Unlock	88
12.6.1. Configure Facial Recognition on the Device	88
12.6.2. Configure Facial Recognition on Web Interface	88
12.6.2.1. Basic Facial Recognition Configuration on the Web Interface	90
12.6.2.2. Facial Recognition Improvement	91
12.7. Configuring RF Card for Door Unlock	91

12.7.1. Configure RF Card on the Web Interface	92
12.7.2. Configure RF Card Code Format	93
12.7.3. IC/ID Card Control	94
12.7.4. NFC and Felica Card Setting	94
12.8. Mifare/Defire Care Encryption	95
12.9. Access Authentication	95
12.10. Unlock	96
12.10.1. Unlock by QR Code	96
12.10.2. Unlock by Bluetooth	97
12.10.3. Unlock by HTTP Command on Web Browser	98
12.10.4. Unlock by Exit Button on the Door	99
12.10.5. Unlock by Reception Icon	100
12.10.6. Unlock by DTMF code	101
12.10.6.1. DTMF White List	102
12.10.6.2. Unlock by Voice Assistant	103
12.10.7. Body Temperature Measurement for Door Access	105
12.10.7.1. Body Temperature Measurement Configuration ..	106
12.10.7.2. Ambient Temperature Configuration	109
13. Security	111
13.1. Tamper Alarm Setting	111
13.1.1. Tamper Alarm Configuration on the Device	111
13.1.2. Tamper Alarm Configuration on the Web Interface	112
13.2. Lock Security	112
13.3. Client Certificate Setting	113
13.3.1. Web Server Certificate	114
13.3.2. Client Certificate	114
13.4. Motion Detection	115

13.4.1. Motion Detection Setting on the Device	115
13.4.2. Motion Detection Setting on the Web Interface	116
13.5. Security Notification Setting	118
13.5.1. Email Notification Setting	118
13.5.2. FTP Notification setting	119
13.5.3. TFTP Notification Setting	120
13.5.4. SIP Call Notification	120
13.6. GDPR Setting	120
13.7. Package Delivery Notification	121
13.8. Action URL	121
14. Monitor and Image	123
14.1. Mjpeg Image Capturing	123
14.2. Live Stream	123
14.3. RTSP Stream Monitoring	125
14.3.1. RTSP Basic Setting	125
14.3.2. RTSP Stream Setting	126
14.4. ONVIF	127
14.5. Door Phone Camera Exposure Adjustment	128
15. Logs	130
15.1. Call Logs	130
15.2. Door Logs	131
16. Debug	132
16.1. System Log for Debugging	132
16.2. PCAP for Debugging	133
16.3. User Agent	134
17. Password Modification	135
17.1. Modifying Device Setting Password	135

17.2. Modifying Device Web Interface Password	136
18. Firmware Upgrade	138
19. Backup	139
20. Auto-provisioning via Configuration File	140
20.1. Provisioning Principle	140
20.2. Configuration Files for Auto-provisioning	141
20.3. AutoP Schedule	142
20.4. DHCP Provisioning Configuration	143
20.5. Static Provisioning Configuration	145
20.6. TR069	148
21. Device Integration with Third Party Device	150
21.1. Integration via Wiegand	150
21.2. Integration with Milestone	151
21.3. Integration via HTTP API	152
21.4. Lift Control Configuration	155
21.5. OSDP Setting	157
21.6. KeyKing Setting	158
21.7. Akuvox EC32 Lift Controller	158
21.8. ZKT Lift Controller	160
21.9. Mobile Community	160
22. System Reboot&Reset	162
22.1. Reboot	162
22.1.1. Reboot on the device	162
22.1.2. Reboot on the web interface	162
22.2. Reset	163
22.2.1. Reset on the Device	163
22.2.2. Reset on the Device Web Interface	164

23. Abbreviations	165
24. FAQ	167
25. Contact us	168

1. Product Overview




Akuvox R29C is an Android-based IP video door phone with a touch screen. It incorporates audio and video communications, access control and video surveillance. Its finely-tuned Android OS, Cloud and AI-based communication technology allow featured customization to better suit your operation habit. R29C have multiple ports, such as RS485 and Wiegand ports, can be used to easily integrate external digital systems, such as access control system and fire alarm system, helping to create a holistic control of building entrance and its surroundings and giving you a great sense of security via a variety of access such as card, NFC, QR code and newly added voice control door access in an accompaniment with body temperature measurement. R29C door phone is applicable to residential buildings, office buildings and their complex.

2. Change Log

The change log will be updated here along with the changes in the new software version.

3. Model Differences

	R29C
Model & Feature	
Display	7"
Touch Screen	√
Button	X
Housing Material	Aluminum
Relay In	3
Relay Out	3
Alarm In	X
RS485	√
PoE	√
Resolution	1280x800
Brightness	450nits
RAM	2G
ROM	16G
Card Reader	13.56MHZ & 128KHZ
Wi-Fi	√
Bluetooth	√

IP Rating	IP65
Temperature detection	X
Face recognition	√
LTE	X
USB	X
External SD card	X
Wall Mounting	√
Flush Mounting	√
Desk Mounting	X
Wall Mounting Dimension	√
Wall Mounting Dimension	√
POE Standby Power	7.8W
POE Full Load Consumption	1W
Power Adapter Standby Power	6.6W
Power Adapter Full Load Consumption	13W
Color Option	Silver

4. Introduction to Configuration Menu

- **Status:** this section gives you basic information such as product information, Network Information, and account information, etc.
- **Intercom:** this section covers Intercom call, LED& LCD setting, Relay, input control, Live stream, RTSP, ONVIF, motion detection, card setting, face recognition setting, tab&button display, camera, private PIN code, RS485 connection, etc.
- **Account:** this section concerns SIP account, SIP server, proxy server, transport protocol type, audio&video codec, DTMF, session timer, etc.,
- **Network:** this section mainly deals with DHCP&Static IP setting, RTP port setting, and device deployment, etc.
- **Phone:** this section includes Time&language, call feature, dial management, data import&export, door log, web relay.
- **Phone book:** this section involves Call log, phone book management.
- **Upgrade:** this section covers Firmware upgrade, device reset&reboot, configuration file auto-provisioning, PCAP.
- **Security:** this section is for Password modification.

- **Mode selection:**

1. **Discovery mode:** it is a plug and play configuration mode. Akuvox devices will configure themselves automatically when users power on the devices and connect them to the network. It is a super time-saving mode and it will greatly bring users convenience by reducing manual operations. This mode requires no prior configurations previously by the administrator.
2. **Cloud mode:** Akuvox Cloud is an all-in-one management system. Akuvox Cloud is a mobile service that allows audio, video, remote access control between smart phones and Akuvox intercoms. All configurations in the device will be issued automatically from cloud. If users decide to use Akuvox cloud, please contact Akuvox technical support, and they will help you configure the related settings before using.
3. **SDMC mode:** SDMC (SIP Device Management Controller) is a simple and comprehensive software for building management. It provides a topography for a community while offering you a graphical configuration interface for the door access, intercom, monitoring, alarm, etc. It is a convenient tool for property managers to manage, operate and maintain the community.

- **Tool selection**

Akuvox has many configuration tools for you to set up devices more conveniently. Here we list some common tools, please contact your administrator to get the tool if you need them.


1. **SDMC:** SDMC is suitable for the management of Akuvox devices in large communities, including access control, resident information, remote device control, etc.


2. **Akuvox PC Manager: distribute all configuration items in batch on a LAN.**
3. **IP scanner: it is used to search Akuvox device IP addresses on a LAN.**
4. **FacePro: manage face data in batch for the door phone on a LAN.**

5. Access the Device

Before configuring Akuvox R29C door phones, please make sure the device is installed correctly and connects a normal network. Using Akuvox IP scanner tool to search the device IP address in the same LAN. Then use the IP address to login in to the web browser by user name and password admin and admin. Or set up some basic settings on the device screen by pressing 9999 + Dial key + 3888(password) on the Dial screen.

You can also access the device Setting screen by clicking the time bar 10 times without entering the project password "9999" using the gesture control function which can be configured on the web Intercom > Basic> Basic interface.

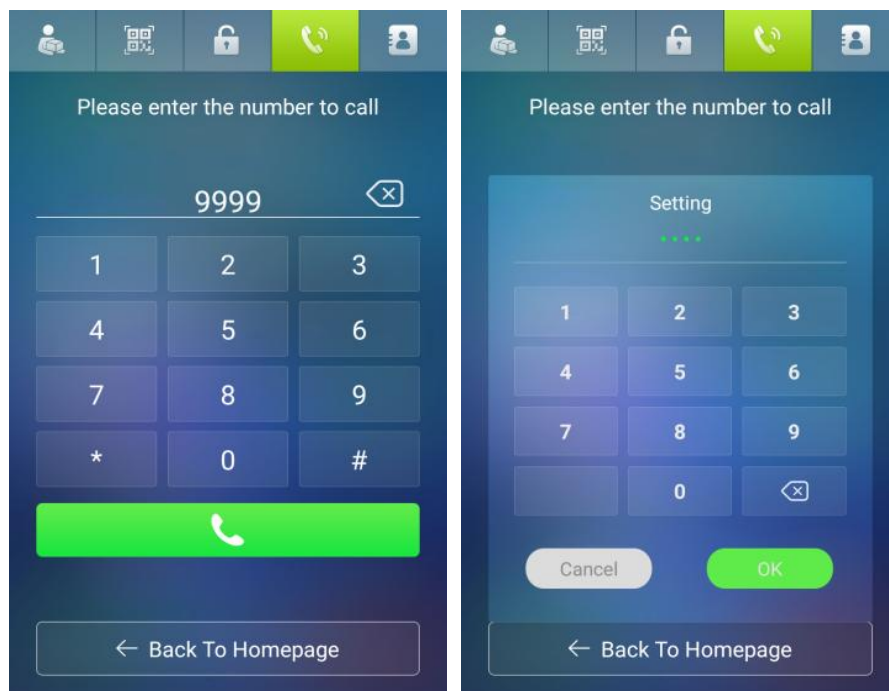

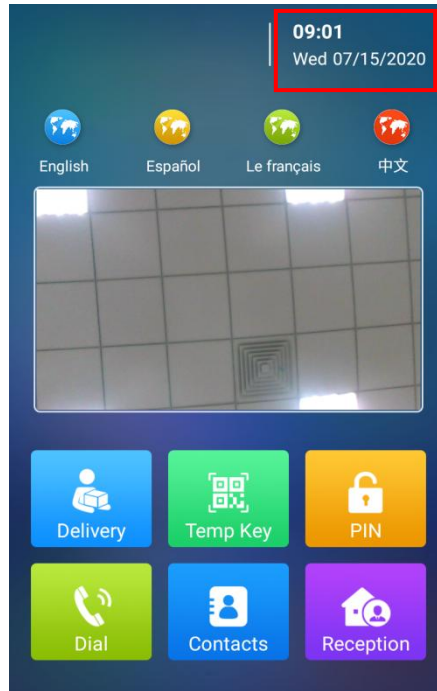

**Note:**

- You can also obtain the device IP address using the Akuvox IP scanner to log in to the device web interface. Please refer to the URL below for the IP scanner application:

<https://knowledge.akuvox.com/docs/how-to-obtain-ip-address-via-ip-scanner-1>

- Google Chrome browser is strongly recommended.
- The Initial user name and password are “admin” and please be case-sensitive to the user names and passwords entered.

6. Language and Time Setting

6.1. Language Setting

When you first set up the device, you might need to set the language to your need or you can do it later if needed. And the language can either be set up directly on the device or on the device web interface according to your preference.

6.1.1. Language Setting on the Device

To configure the language display on the device Language setting screen.



6.1.2. Language Setting on the Device Web Interface.

To configure the language display on the device web interface Phone > Time/Lang > LCD Language.




6.2. Time Setting

Time settings can be set up on the device and on the device web interface in terms of time zone, date and time format, etc.

6.2.1. Time Setting on the Device

To set up time settings on the device Time interface.

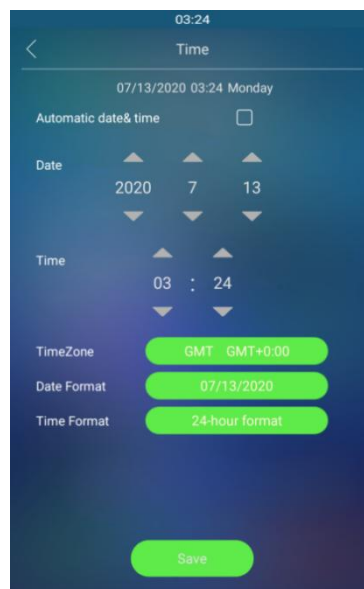

Parameter Set-up:

- **Automatic Date:** Automatic Date is switched on by default, which allows the date& time to be automatically set up and synchronized with the default time zone and the NTP server (Network Time Protocol). You can also set it up manually by checking off the square box and then entering

the time and date you want before pressing the Save tab for the validation.

- **Time Zone:** select the specific time zone depending on where the device is used and then press Confirm tab for the confirmation. The default time zone is GMT GMT+0.00.
- **Date Format:** select the date format as you like among three format options: “M-D-Y”; “D-M-Y”; “Y-M-D” and then press the Confirm tab for the confirmation.
- **Time Format:** you can either select 12 hour or 24 hour time format as you like, and then press the Confirm tab for the confirmation.

6.2.2. Time Setting on the Device Web Interface

Time setting on the web interface also allows you to set up the NTP server address that you obtained to automatically synchronize your time and date. And when your time zone is selected, the device will automatically notify the NTP server of its time zone so that the NTP server can synchronize the time zone setting in your device. To configure the time setting on the web Phone >Time/Lang >Time interface.

Time

Automatic Date&Time

TimeZone GMT+12:00 McMurdo ▼

Date Format 2022/02/10 ▼

Time Format 24-hour format ▼

NTP Server pool.ntp.org

Parameter Set-up:


- **NTP Server:** enter the NTP server you obtained in the NTP server field.

7. LED&LCD Setting

7.1. Infrared LED Setting on the Device

Infrared LED is used to help you see the surrounding in front of the door phone through the door phone camera in the dark environment.


To configure the infrared LED setting on the device LED interface.

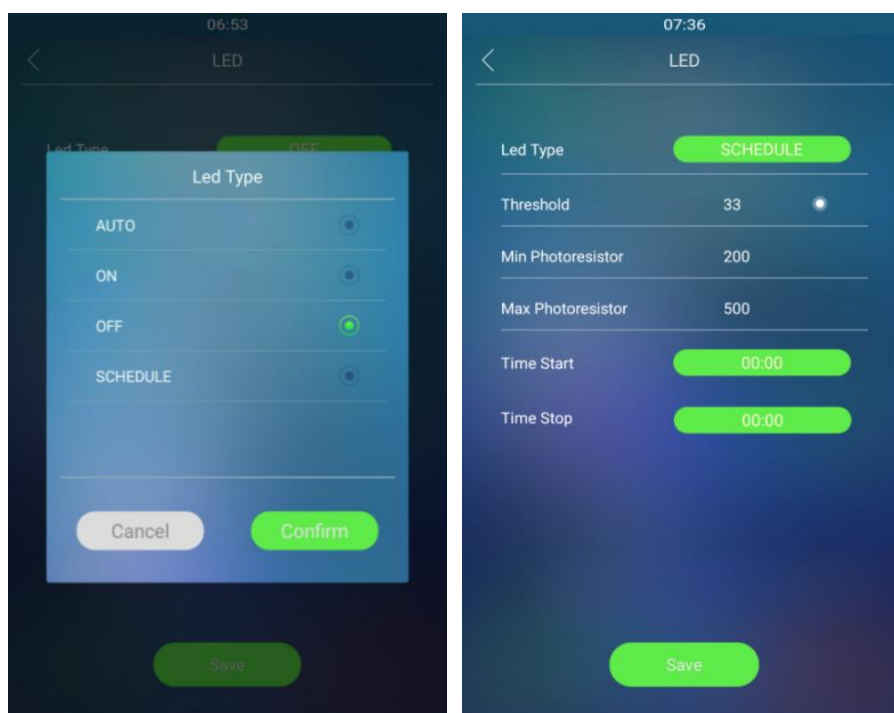

Parameter Set-up:

- **Auto:** select “Auto” if you want the Infrared LED light to be turned on automatically according to the setting.
- **ON:** select “ON” to enable the Infrared LED light to stay on permanently.
- **OFF:** select “OFF” to turn off the Infrared LED light.
- **SCHEDULE:** select “SCHEDULE” to turn on the infrared LED according to the time schedule.
- **LED Type:** you can see the LED type “Auto” “ON” “OFF” “Schedule” you selected.
- **Threshold:** refers to the current light intensity indicated by the photo-resistor value. The higher photo-resistor values correspond conversely to the lower light intensity and vice versa. The default photo-resistor value (Threshold) is “33”, however, you can tap the icon several times in order to obtain the actual photo-resistor value in a specific environment (the value fluctuation is about 5), and the value is what you based on to configure the minimum and maximum photo-resistor values.


- **Min/Max Photoresistor:** set the minimum and maximum photoresistor value based on the current actual photo-resistor value detected to control the ON-OFF of the LED light. You can set the maximum photoresistor value for the IR LED to be turned on and the minimum value for it to be turned off. While the default Minimum and maximum photoresistor value is "200" and "500" respectively.

 **Note:**

- Threshold value will not be shown on the screen unless you change the LED type to either "Auto" or "Schedule".

7.2. Infrared LED Setting on the Web Interface

You can also select the LED type on the device web Intercom > LED Setting > LED Fill Light interface if needed.

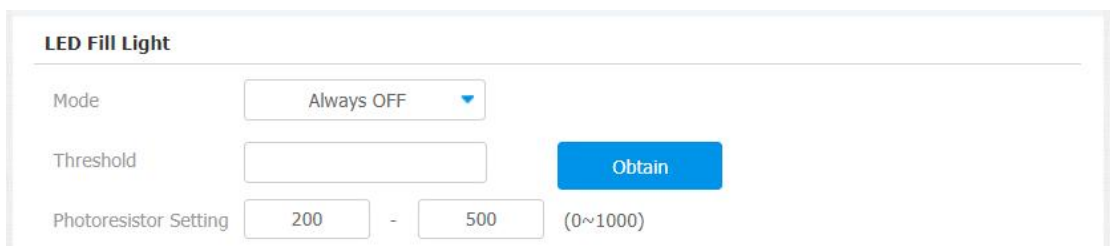

Parameter Set-up:

- **Mode:** you can see the LED type "Auto" "Always ON" "Always OFF" "Schedule" you selected.
- **Threshold:** refers to the current light intensity indicated by the photo-resistor value. The higher photo-resistor values correspond conversely to the lower light intensity and vice versa. The default photo-resistor value (Threshold) is "33", however, you can tap the icon several times in order to obtain the actual photo-resistor value in a

specific environment (the value fluctuation is about 5), and the value is what you based on to configure the minimum and maximum photo-resistor values.

- **Photoresistor Setting:** set the minimum and maximum photoresistor value based on the current actual photo-resistor value detected to control the ON-OFF of the LED light. You can set the maximum photoresistor value for the IR LED to be turned on and the minimum value for it to be turned off. While the default minimum and maximum photoresistor value are "200" and "500" respectively.

7.3. LED Setting on Card Reader Area

You can enable or disable the LED lighting on the card reader area as needed on the web Intercom > LED Setting > LED Control interface. Meanwhile, if you do not want to have the LED light on the card reader area stay on, you can also set the timing for the exact time span during which the LED light can be disabled in order to reduce the electrical power consumption.

The screenshot shows the 'LED Control' interface. It features a checkbox labeled 'Card LED Enabled' which is currently unchecked. Below this is a 'Time (H)' field with two input boxes: the first contains '18' and the second contains '23', separated by a hyphen. To the right of the second box is the text '(0~23)'. At the bottom of the form are two blue buttons: 'Submit' and 'Cancel'.

Parameter Set-up:

- **Card LED Enable:** click to enable or disable the card reader LED lighting in the Card LED Enable field.
- **Time (H):** enter the time span for the LED lighting to be valid, e.g. if the time span is from 18-22 it means LED light will stay on during the time span from 6:00 pm to 10:00 pm during one day (24 hours).

7.4. LCD Screen Brightness Setting

If you want to brighten up the screen in order to see the screen at greater ease in an environment with higher light intensity, you need to set up the related parameters in web Intercom > Advanced > LCD interface.

LCD

High Contrast

Backlight Mode

Backlight Brightness... (0~255)

Backlight Brightness... (0~255)

Backlight Brightness... (0~255)

Backlight Brightness... (0~255)

Screen Touch Mode

Parameter Set-up:

- **High Contrast:** click to enable or disable the high contrast function.
- **Backlight Brightness (day):** adjust the backlight of the screen during the daytime with the value ranging from (0-255). The larger value, the brighter screen.
- **Backlight Brightness Of Screensaver (Day):** adjust the backlight for the screensaver in the daytime with the value ranging from (0-255).
- **Backlight Brightness Night:** adjust the backlight for the screensaver in the night with the value ranging from (0-255).
- **Backlight Brightness Of Screensaver (night):** adjust the backlight for the screensaver in the nighttime with the value ranging from (0-255).
- **Backlight Mode:** click to select "Manual" or "Auto" mode for the backlight. Backlight will be adjusted automatically when "Auto" is selected and vice versa.
- **Screen Touch Mode:** there are two modes - Normal and Gloves. If you

choose Gloves, you can touch screen by wearing gloves, especially for those people in some cold area. Normal mode is default.

7.5. LCD Heat Control

To ensure the normal operation of the door phone in low-temperature environs, you can heat up the device's LCD screen according to your heat control setting. To set up the LCD heat control, navigate to Intercom > Basic > LCD Heat Control.

The screenshot shows the 'LCD Heat Control' configuration page. It contains the following fields and controls:

- Heat Switch:** A dropdown menu currently set to 'Disabled'.
- Heat Threshold:** A text input field containing '0', with a range of '-100~100C' indicated to the right.
- Interval:** A text input field containing '60', with a range of '0~65535s' indicated to the right.
- Buttons:** Two blue buttons labeled 'Submit' and 'Cancel' are positioned at the bottom of the form.

Parameter Set-up:

- **Heat Switch:** enable the heat control function if needed.
- **Heat Threshold:** set up the heat control threshold from -100 °C to 100 °C. For example, if you set it at 40 °C, then the device LCD screen will be automatically heated up to 40 °C when the LCD screen is detected lower than 40 °C. The device will stop the automatic heat-up when the temperature reached the threshold value.
- **Interval:** set up the automatic temperature detection interval for the device temperature. The device has a built-in temperature sensor.

7.6. LED White Light Setting

LED White light is used to reinforce the lighting for facial recognition as well as for the QR code access as needed in the dark environment. You can set the white light function properly on the device web Intercom > Advanced > White Light interface.

White Light

Mode

Limit Backlight Value (0~255)

White Light PWM Va... (0~100)

Parameter Set-up:

- **Mode:** enable the white light mode.
- **Max White Light Value:** set the white light value from 0-255, and the default white light value is "50".
- **White Light PWM Value:** set the white light PWM value from 0-100. PWM value affects the white light brightness that is set with the same white light value. For example, if the white light value remains the same, and you bring up the PWM value, you will get brighter white light. In short, the higher the PMW value is the brighter the light is.

7.7. Screen Display configuration

R29C door phone allow you to enjoy a variety of screen displays to enrich your visual and operational experience through the customized setting to your preference.

7.7.1. Home Screen Display Setting

You can configure the home screen background display and the foreground colors for Villa mode, Building mode and Office mode home screen display according to your preference in web Intercom > Advanced > UI interface.

UI

Foreground Color

Background Color

Parameter Set-up:

- **Foreground Color:** select among four foreground color options: "Default", "Black", "White", "Custom". The default foreground color is "White".
- **Background Color:** select among four foreground color options: "Default", "Black", "White", "Custom". The default foreground color is "Blue". If you select "Custom", you can customize your foreground and background color by adjusting the color and hue controller underneath and pressing the Submit tab for validation.


**Note:**

- If you want to select "Custom" you need to click the Submit tab before you can see a color and hue controller with which you can adjust the color to your preference, and you are required to click Submit tab again for the validation.

7.7.2. Await Screen Setting

7.7.2.1. Await Screen Setting on the Device

Await screen is mainly a function for screen protection. You can make the device to go into idle status for a predefined time span when there is no operation on the device or no one is detected approaching in device Await screen.

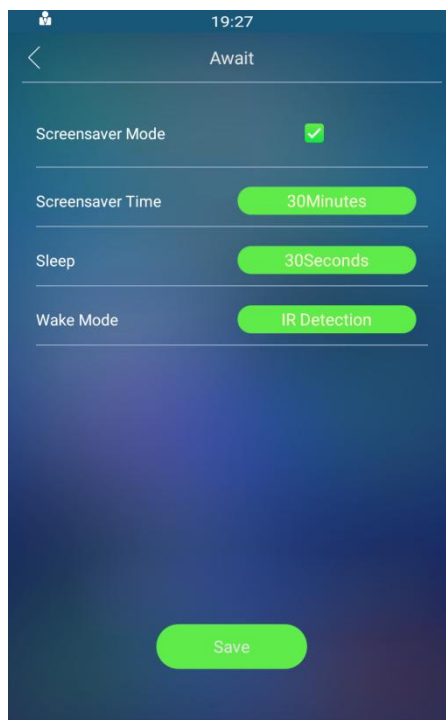

Parameter Set-up:

- **Screensaver Mode:** enable the screen saver mode if needed.
- **Screensaver Time:** set up the screen saver display duration from 5 second to 2 hours. The screensaver display will start when the device goes into sleep mode.
- **Sleep:** set up the sleep mode timing from 5 seconds to 30 min. For example, if you set it "10" seconds, then the device will go into sleep mode when detects no approaching object or no operation on the device. When the screen saver is disabled, the device screen will be turned off.
- **Wake Mode:** select the method for the screen awake mode. Select "IR Detection" if you want to awake the screen via IR detection. Select "Manual" if you want to awake the screen by touching the screen. Select video detection if you want to awake the screen by video-based motion detection.

7.7.2.2. Await Screen Setting on the Web Interface

You can also conduct the await screen configuration on the web

Intercom > Advanced > Standby Interface Display interface.

Standby Interface Display

Screensaver Mode

Screensaver Time 30Minutes

Sleep 30Seconds

Wake Mode IR Detection

Parameter Set-up:

- **Screensaver Mode:** enable the screen saver mode if needed.
- **Screensaver Time:** set up the screen saver display duration from 5 second to 2 hours. The screensaver display will start when the device goes into sleep mode.
- **Sleep:** set up the sleep mode timing from 5 seconds to 30 min. For example, if you set it "10" seconds, then the device will go into sleep mode when detects no approaching object or no operation on the device. When the screen saver is disabled, the device screen will be turned off.
- **Wake Mode:** select the method for the screen awake mode. Select "IR Detection" if you want to awake the screen via IR detection. Select "Manual" if you want to awake the screen by touching the screen. Select video detection if you want to awake the screen by video-based motion detection.

7.7.3. Upload Screen Saver

You can upload screen saver pictures separately or in batch to the device and to the device web Phone > Import/Export > Upload Screensaver Picture interface for publicity purpose or for a greater visual experience. You are allowed to upload a maximum of 5 pictures, and each picture will be displayed in rotation according to the ID order with specific time duration

(Play Time) you set.

Upload ScreenSaver Picture

ID	File Status	Play Time	Submit	Delete
1	File Exists	<input type="text" value="5"/>	<input type="button" value="Submit"/>	<input type="button" value="Delete"/>
2	File Exists	<input type="text" value="5"/>	<input type="button" value="Submit"/>	<input type="button" value="Delete"/>
3	File Exists	<input type="text" value="5"/>	<input type="button" value="Submit"/>	<input type="button" value="Delete"/>
4	File Exists	<input type="text" value="5"/>	<input type="button" value="Submit"/>	<input type="button" value="Delete"/>
5	File Exists	<input type="text" value="5"/>	<input type="button" value="Submit"/>	<input type="button" value="Delete"/>

Please Choose ScreenSaver ID for upload

Screensaver1

(Support Size:2M; format:jpg)

Parameter Set-up:

- **Play Time:** the time for playing the screensaver picture. The time range from 0 to 120 seconds. The picture will not be shown if the time is 0.

Note:

- The pictures uploaded should be in JPG format with 2M pixels maximum.
- The previous pictures with a specific ID order will be overwritten when repetitive designation of pictures to the same ID order.

7.7.4. Upload Home Screen Background Pictures

R29C door phones allow you to customize the home screen background picture display in the Building mode, Villa mode and Office mode on the

device web Phone > Import/Export > Import Contact Background(.png) interface.

Import Contact Background (.png)

Background Picture: TIME BACKGROUND.png

**Note:**

- The pictures uploaded should be in png format.
- This function can be applied to both home screen background and contact screen background.
- The recommended picture resolution is 800*1280.


7.7.5. Upload Background Picture in the Time-displaying Area

You can upload pictures on the web Phone > Import/Export > Time View Background (.png) interface as the background for the time-displaying area on the dial screen in Villa mode and Office mode.

Time View Background (.png)

(Max picture size: 1MB, Recommend resolution: 800*314.)

Picture Not selected any files

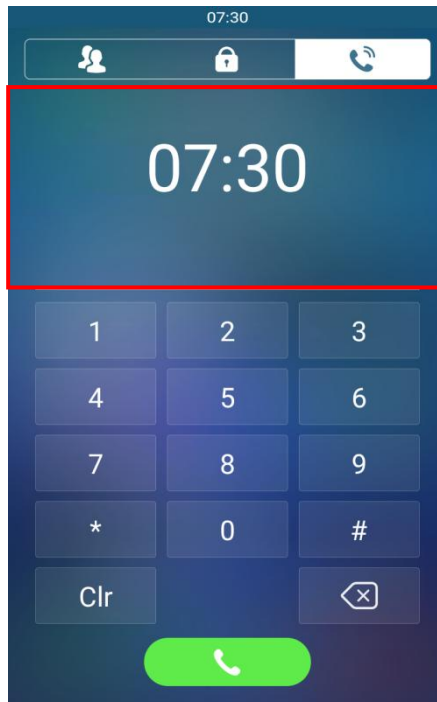**Note:**

- This function can only be applied in the Villa mode and Office mode.
- Pictures uploaded should be in png format with 1 MB in maximum.
- The idea picture size is 800*314 in order to achieve the best effect.

7.8. Upload Device Booting Image

You can upload the booting image to be displayed during the device's booting process if needed. To configure the configuration on the web Phone > Import/Export > Boot Animation (.png / .zip) interface.

Boot Animation (.png / .zip)

(Max .zip file size: 20MB; Max picture size: 1MB, Max resolution: 800*1280.)

File: [Select File](#) [Import](#) [Reset](#)

7.9. Upload Device Logo

You can upload the logo you like on the device. You can navigate to **Phone > Import/Export > Import Logo (.png)**.

Import Logo (.png)

(Max picture size: 1MB, Recommend resolution: 500*150.)

Logo Picture: [Select File](#) [Import](#) [Reset](#)


7.10. Configuration for Scenario-based Screen Display Mode

R29C door phones offer you four types of screen display modes for the application scenarios: **Building Mode, Office Mode, Villa Mode, and Alphanumeric Mode**. You can make the configuration on the device web **Intercom > Key/Display > Theme** interface to select the specific mode based on actual application scenarios.


Theme

Theme:

Please refer to the default home screen display of the application based modes below:

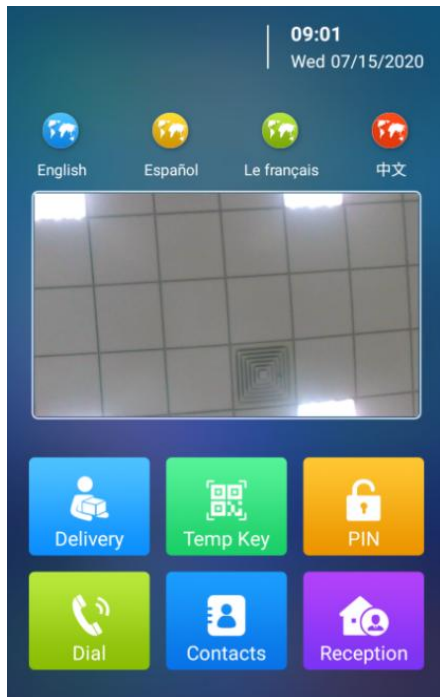

Building Mode Screen Display

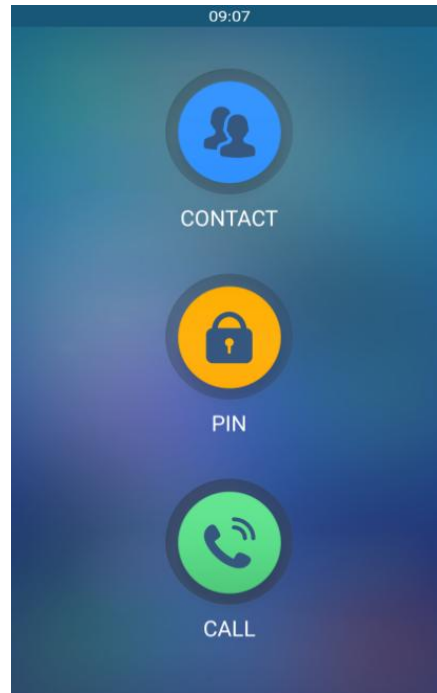

Villa Mode Screen Display



Alphanumeric Mode Screen Display

Office mode screen display is not shown here as it shares the similar home screen display with that of Villa mode, however, the two modes vary in terms of their dial screen displays that will be explained in the following sections.

7.10.1. Building Mode Home Screen Configuration

You can change the home screen display through the configuration of tab arrangement, and the language icon display as needed on the device web Intercom > Key/Display > Key In Homepage Of The Building Theme interface.

Key In Homepage Of The Building Theme

Voice Prompts


ID	Name	Type	Value
1	<input type="text"/>	<input type="text" value="Delivery"/>	<input type="text"/>
2	<input type="text"/>	<input type="text" value="Delivery"/>	<input type="text"/>
3	<input type="text"/>	<input type="text" value="Temp Key"/>	<input type="text"/>
4	<input type="text"/>	<input type="text" value="PIN"/>	<input type="text"/>
5	<input type="text"/>	<input type="text" value="Dial"/>	<input type="text"/>
6	<input type="text"/>	<input type="text" value="Contact"/>	<input type="text"/>

Tips When OpenDoor Failed

Parameter Set-up:

- **Type:** select the tab type corresponding to the ID order which indicates the tab position. For example, if you want to make the Temp Key tab to be displayed in position one of tab row one, you can click to select the type of the ID order 1. And you can change the other tab position accordingly.
- **Name:** enter a new name to replace the original type name, but it does not change the attribute of the type.
- **Value:** it is available for those features that need to be set up numbers, like the Speed Dial feature.


To configure the tab icons on the web Intercom > Key/Display >Select Icons interface.

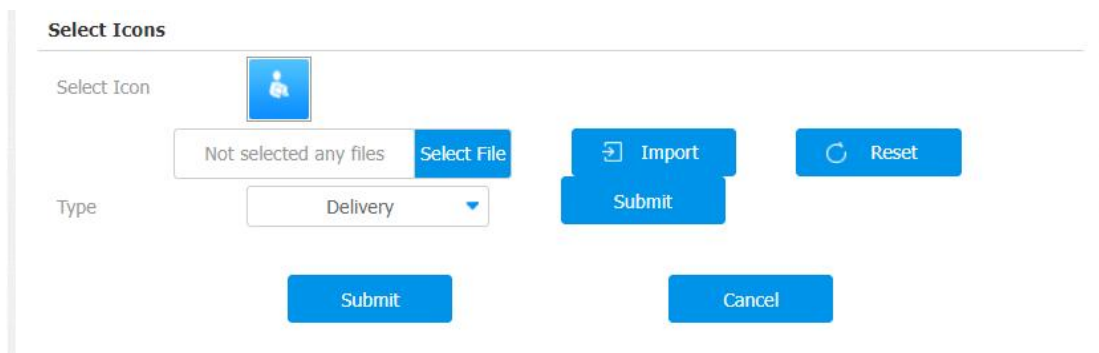

Parameter Set-up:

- **Type:** select the Type field for the tab type you need.
- **Select Icon:** select by clicking the tab icon you need.

To configure the language icon display on web Intercom > Key/Display > Language Setting Of The Building Theme interface.

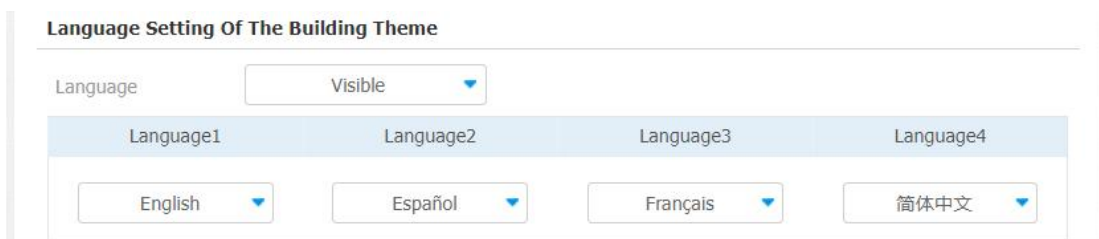

Parameter Set-up:

- **Language:** select “Visible” and “Invisible” respectively if you want the four language icons to be displayed or concealed on the home screen.
- **Language 1/2/3/4:** select the order the language display. For example, if you set the language 1 as English, then the English language will be displayed first from left to right on the screen.

7.10.2. Villa Mode Home Screen Configuration

You can configure the screen display for the layout of the Contact icon, PIN icon and Call (Dial) icon on the home screen in villa mode. In addition, you can set those icons as your home screen while configuring their respective smaller icons on the top of the screen in the villa mode according to your need on web Intercom > Key/Display > Key In Homepage Of The Office Theme And Villa Theme interface.


Key In Homepage Of The Office Theme And Villa Theme

Display Type:

ID	Type	Name	Visible
1	<input type="text" value="Contact"/>	<input type="text"/>	<input type="text" value="Visible"/>
2	<input type="text" value="PIN"/>	<input type="text"/>	<input type="text" value="Visible"/>
3	<input type="text" value="Call"/>	<input type="text"/>	<input type="text" value="Visible"/>

Parameter Set-up:

- **Display Type:** click to select home screen display type among the four options "Homepage" "Dial" "Contact" "Password". "Homepage" is for the default home screen display of three vertical round icons, while "Dial"(Call icon), "Contact" icon and "Password" (PIN icon) as a whole can be set up as a home screen. For example, if you switch from building mode to Villa mode, while your previous villa mode home screen display type is "Homepage" then the three round icons for Contact, PIN and Call will be all displayed. However, if your previous display type is any one of the "Dial" "Contact" "Password" types then any one of the icons for Dial, Contact and Password will be displayed in highlight together on the top of the home screen with the other two as the home screen display instead of the three round icons for the "homepage".
- **Type:** set the type of icon you want to display on the villa mode home screen.
- **Name:** name the icons on the villa mode home screen.
- **Visible:** select "Visible" or "Invisible" for the three icons.

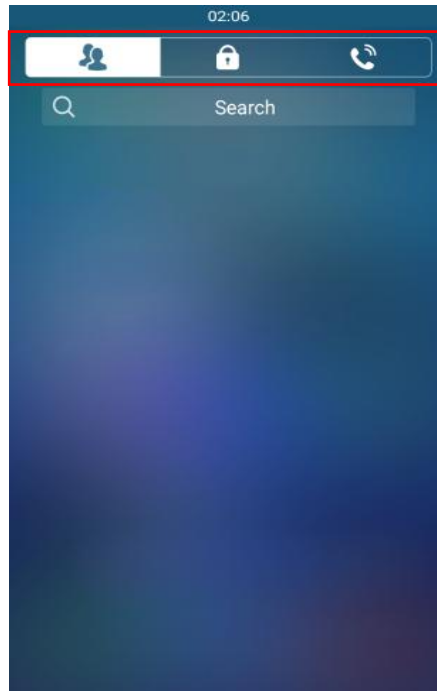**Note:**

- “Homepage” type screen display will be denied if all of the icons are set “ Invisible”.

7.10.3. Alphanumeric Mode Home Screen Configuration

Alphanumeric Mode is used in the apartment with room number that carries both English alphabetic and numbers. You can navigate to Intercom > Key/Display > Display Setting Of The Alphanumeric Theme.

Display Setting Of The Alphanumeric Theme

Page	Name (English)	Name (traditional Chinese)	Default Keypad
Homepage	Touch screen to continue	點擊屏幕繼續	
Choose Tower or Concierge	Please choose Tower or Concierge	請選擇座號或者管理處	Alphabet
Choose Floor	Please choose floor and press	請選擇樓層及按	Digital
Choose Flat	Please choose flat and press	請選擇單位及按	Alphabet
Enter PIN	Please enter the PIN code and	請輸入密碼然後按	
Scan QR Code	Please scan the QR code	請掃描二維碼	

Name (English)	Name (traditional Chinese)	Type
Concierge	管理處	Speed Dial
QR Code	二維碼	Temp Key
PIN	密碼	PIN


Alphabet Keypad A B C D E F G H I J K L M
 N O P Q R S T U V W X Y Z

Enabled Items Speed Dial Temp Key PIN Tower Floor Flat

Parameter Set-up:

- **Name:** create the prompts to be displayed in the different screens "Home page", "Choose Tower or Concierge", "Choose Floor", "Enter PIN", "Scan QR Code".
- **Default Keypad:** select numerical keypad or alphabetical keypad for "Tower" and "Flat" keypad.
- **Name:** change the icon names for Concierge, QR Code, and PIN if needed.
- **Alphabet Keypad:** select the letters you want to display on the keypad.

- **Enable Items:** select to show or hide Speed dial tab (Concierge), Temp Key tab (QR code), PIN tab, and Floor and Flat.

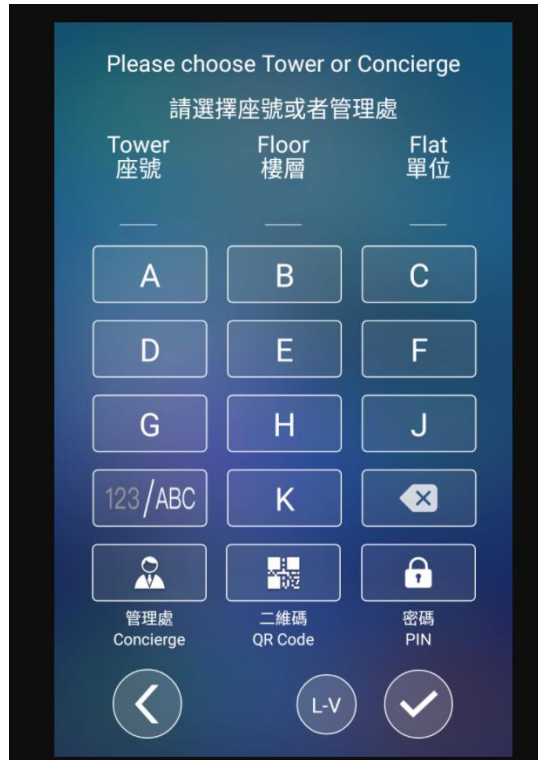


7.11. Volume and Tone Configuration

Volume and tone configuration in R29C refers to the Call volume, the AD volume, key volume and Mic volume and open door tone configuration. Moreover, you can upload the tone you like to enrich your personalized user experience.

7.11.1. Volume Configuration

To set up the volumes on the device Volume screen.

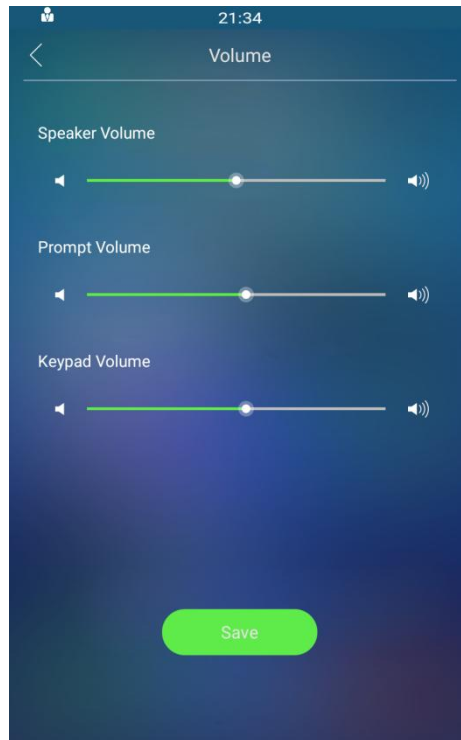

Parameter Set-up:

- **Speaker Volume:** adjust the speaker volume.
- **Prompt Volume:** adjust the announcement volume. The announcement can be, for example the open door success announcement, ringback sound and other prompt sounds.
- **Keypad Volume:** adjust the volume for the button touch sound.

To set up the volume on the web interface, navigate to Phone > Audio > Volume Control.

Volume Control		
Mic Volume	<input type="text" value="60"/>	(1~127)
Speaker Volume	<input type="text" value="8"/>	(1~15)
Keypad Volume	<input type="text" value="8"/>	(0~15)
Tamper Alarm Volume	<input type="text" value="7"/>	(1~15)
Prompt Volume	<input type="text" value="8"/>	(0~15)

Parameter Set-up:

- **Mic Volume:** adjust the volume of your voice to be heard.
- **Speaker Volume:** adjust the speaker volume during the call.
- **Keypad Volume:** adjust the volume for the button touch sound.
- **Tamper Alarm Volume:** set the tamper alarm volume.
- **Prompt Volume:** set the prompt volume.

In addition, **Call Volume** can be configured on the web **Phone > Call Feature > Others** interface to allow you to adjust the volume when you are answering the call.



Others

Return Code When ... 486(Busy Here)

Call Volume

Submit Cancel

**Note:**

- When the Call volume on the above web interface is enabled, you are allowed to adjust the call volume during the call session.

7.11.2. Open Door Tone Configuration

You can enable or disable various types of Open Door Tones on web **Phone > Audio > Open Door Tone Setting** interface.

Open Door Tone Setting

Open Door Succeed...

Open Door Failed Te...

Open Door Inside To...

Open Door Outside ...

Open Door Failed To...

Parameter Set-up:

- **Open Door Tone:** click the “Enable” and “Disable” depending on if you want to hear the tone or not.

7.11.3. Contact List Guiding Tone Configuration

You can select the guiding tone on the contact list screen if needed. You can navigate to **Phone > Audio > Guiding Tone of Contact List**.

Guiding Tone Of Contact List

Guiding Tone Mode

Parameter Set-up:

- **Guiding Tone Mode:** select Apartment or Building guiding tone for the contact list screen.

7.12. Upload Tones

You can upload various types of tones for door openings and tones for the various type of icons etc.

Upload Tone (.wav)


ID	Type	Select File	Import	Reset
1	Open Door Outside	Not selected any files Select File	Import	Reset
2	Open Door Inside	Not selected any files Select File	Import	Reset
3	Hello	Not selected any files Select File	Import	Reset
4	Calling	Not selected any files Select File	Import	Reset
5	Delivery	Not selected any files Select File	Import	Reset
6	Temp Key	Not selected any files Select File	Import	Reset
7	PIN	Not selected any files Select File	Import	Reset
8	Dial	Not selected any files Select File	Import	Reset
9	Contacts	Not selected any files Select File	Import	Reset

[Reset All](#)

8. Network Setting

8.1. Device Network Connection Setting

You can check for the door phone's network connection info and configure the default DHCP mode (Dynamic Host Configuration Protocol) and static IP connection for the device either on the device or on the device web interface. To check and configure the network connection on the device Setting screen.

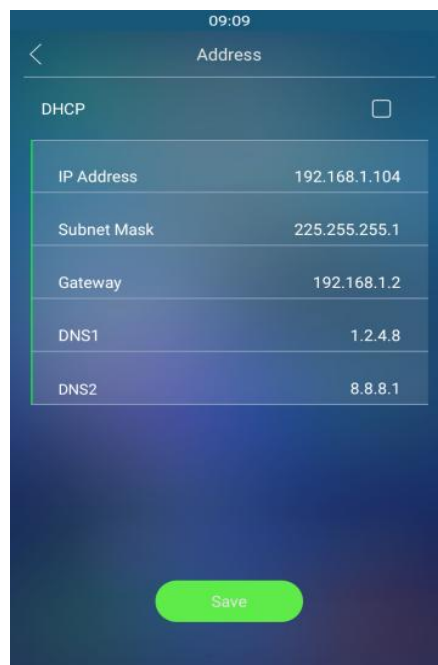

Parameter Set-up:

- **DHCP:** select the DHCP mode by checking off the DHCP box. DHCP mode is the default network connection. If the DHCP mode is selected, then the door phone will be assigned by the DHCP server with IP address, subnet mask, default gateway, and DNS server address automatically.
- **Static IP:** select the static IP mode by checking off the DHCP square box. When static IP mode is selected, then the IP address, subnet mask, default gateway, and DNS servers address have to be manually configured according to your actual network environment.

- **IP Address:** set up the IP Address if the static IP mode is selected.
- **Subnet Mask:** set up the subnet Mask according to your actual network environment.
- **Default Gateway:** set up the correct gateway default gateway according to the IP address of the default gateway.
- **DNS1/DNS2:** set up DNS1/ DNS2 (Domain Name Server) according to your actual network environment. DNS1 is the primary DNS server address while DNS2 is the secondary server address and the door phone connects to the DNS2 server when the primary DNS server is unavailable.

To check the network on the web Status > Network information Interface.

Network Information			
Port Type	DHCP Auto	Link Status	Connected
IP Address	192.168.31.8	Subnet Mask	255.255.255.0
Gateway	192.168.31.1	Preferred DNS Server	192.168.31.1
Alternate DNS Server			

To check and configure network connection on the device web Network > Basic > LAN Port interface.

Basic

LAN Port

DHCP	<input checked="" type="checkbox"/>
Static IP	<input type="checkbox"/>
IP Address	192.168.1.104
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
Preferred DNS Server	192.168.1.1
Alternate DNS Server	192.168.1.1

8.2. Device Local RTP configuration

For the device network data transmission purpose, the device needs to be set up with a range of RTP ports (Real-time Transport Protocol) for establishing an exclusive range of data transmission in the network. To set up device local RTP on the device web Network > Advanced > Local RTP interface.

Local RTP

Starting RTP Port	11800	(1024~65535)
Max RTP Port	12000	(1024~65535)

Parameter Set-up:

- **Starting RTP Port:** enter the Port value in order to establish the start point for the exclusive data transmission range.
- **Max RTP Port:** enter the Port value in order to establish the endpoint for the exclusive data transmission range.

8.3. Device Deployment in Network

Door phones should be deployed before they can be properly configured in the network environment in terms of their location, operation mode, address and extension numbers as opposed to other devices for the device control and the convenience of the management. So you can do it on the web **Network > Advanced > Connect Setting** interface.

The screenshot shows the 'Connect Setting' configuration page. It includes the following fields and values:

- Server Mode:** Cloud
- Discovery Mode:**
- Device Address:** Five input boxes, each containing the number '1'.
- Device Extension:** Input box containing '1'.
- Device Location:** Input box containing 'Gate1'.

Parameter Set-up:

- **Server Mode:** it is automatically set up according to the actual device connection with a specific server in the network such as SDMC or Cloud and None. None is the default factory setting indicating the device is not in any server type, therefore you are allowed to choose Cloud, SMDC in discovery mode.
- **Discovery Mode:** click “Enable” to turn on the discovery mode of the device so that it can be discovered by other devices in the network, and click “Disable” if you want to conceal the device so as not to be discovered by other devices. After turning off the discovery mode, you need to restart the device to take effect.
- **Device Address:** specify the device address by entering device location information from the left to the right: Community, Unit, Stair, Floor, Room in sequence.
- **Device Extension:** enter the device extension number for the device you installed.
- **Device Location:** enter the location in which the device is installed and used.

8.4. NAT Setting

NAT (Network Address Translation) allows hosts in an organization's private intranet to transparently connect to hosts in the public domain. There is no need for internal hosts to have registered Internet addresses. It is a way to translate the internal private network IP address into a legal network IP address technology. To set up NAT, you can do it on the web Account > Advanced > NAT interface.



The screenshot shows the NAT configuration page with the following settings:

- NAT**
- UDP Keep Alive Mes...
- UDP Alive Msg Inter... (5~60s)
- RPort

Parameter Set-up:

- **UDP Keep Alive Messages:** if enabled, the device will send out the message to the SIP server so that the SIP server will recognize if the device is in online status.
- **UDP Alive Msg Interval:** set the message sending time interval from 5-60 seconds, the default is 30 seconds.
- **RPort:** enable the Rport when the SIP server is in WAN (Wide Area Network).

9. Intercom Call Configuration

Intercom call in the device can be configured to allow you to perform a variety of customized intercom calls such as IP call and SIP call for different application scenarios.

9.1. IP call & IP Call Configuration

IP calls can be made directly on the intercom device by entering the IP number on the device. And you can also disable the direct IP call if you allow no IP call to be made on the device web Phone > Call Feature > Direct IP interface.



Direct IP

Enabled

Port (1~65535)

Parameter Set-up:


- **Enabled:** click “Enable” or “Disable” to turn the direct IP call on or off. For example, if you do not allow direct IP call to be made on the device, you can click “disable” to terminate the function.
- **Direct IP Port:** the direct IP Port is “5060” by default with the port range from 1-65535. And you enter any values within the range other than the 5060, you are required to check if the value entered is consistent with the corresponding value on the device you wish to establish a data transmission with.

9.2. SIP Call & SIP Call Configuration

You can make SIP calls (Session Initiation Protocol) in the same way as you do for making the IP calls on the device. However, SIP call parameters related to its account, server, and transport type need to be configured first before you can make calls on the device.

9.2.1. SIP Account Registration

R29C door phones support two SIP accounts that can all be registered according to your applications. You can, for example, switch between them if any one of the accounts failed and become invalid. The SIP account can be configured on the device screen and on the device web interface. To configure the SIP account on the device Account screen.

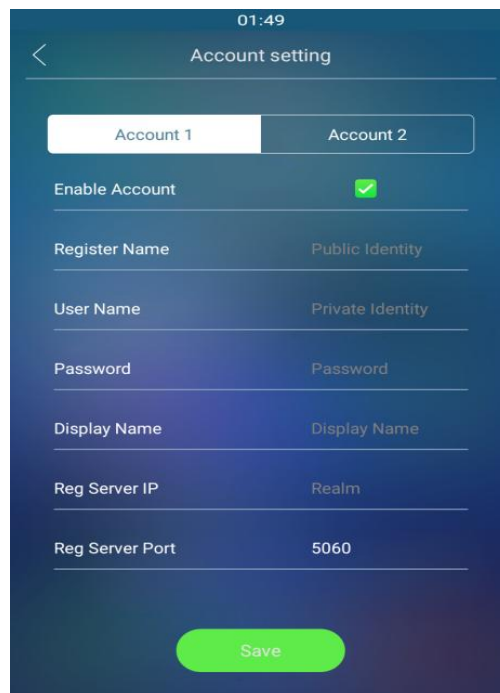

Parameter set-up:

- **Account 1/Account 2:** select Account 1 or Account 2. Account 1 is the default SIP account.
- **Reg Server port:** enter the SIP server port for communication. The SIP port is "5060" by default.

Other parameter settings for SIP account registration can not be configured on the Account setting screen as they can only be configured on the device web Account > Basic > SIP Account interface.

SIP Account	
Status	Registration Failed
Account	Account 1
Account Enabled	<input checked="" type="checkbox"/>
Display Label	5926100037
Display Name	Gate1
Register Name	5926100037
User Name	5926100037
Password	*****

Parameter set-up:

- **Status:** check to see if the SIP account is registered or not.
- **Account Enabled:** click "Enable" or "Disable" to activate or deactivate the registered SIP account.
- **Display Name:** configure the name, for example, the device's name to be shown on the device being called to.
- **User Name:** enter the user name obtained from the SIP account administrator.
- **Account:** select the exact account (Account 1&2) to be configured.
- **Display Label:** configure the device label to be shown on the device screen.
- **Register Name:** enter the SIP account register Name obtained from the SIP account administrator.
- **Password:** enter the password obtained from the SIP account administrator.

9.2.2. SIP Call DND&Return Code Configuration

DND (Do not disturb) setting allows you not to be disturbed by any unwanted incoming SIP calls. You can set up DND related parameters properly on the device web Phone > Call Feature > DND interface to block SIP calls you do not intend to answer. In the meantime, you can also define the code to be sent to the SIP server when you want to reject the call.

The screenshot shows a web interface for configuring DND settings. It is divided into two sections: 'DND' and 'Others'. In the 'DND' section, there is a checkbox labeled 'Enabled' which is currently unchecked. Below it is a dropdown menu labeled 'Return Code When ...' with the value '486(Busy Here)' selected. In the 'Others' section, there is a similar dropdown menu labeled 'Return Code When ...' also with '486(Busy Here)' selected.

Parameter Set-up:

- **Enabled:** enable or disable the DND function. DND function is disabled by default.
- **Return Code When DND:** select what code should be sent to the calling device via the SIP server. 404 for “Not found”; 480 for “Temporary unavailable”; 486 for “busy here”.
- **Return Code When Refuse:** select code to be sent to the caller side via the SIP server when you rejected the incoming call.

9.2.3. SIP Server Configuration

Two SIP servers can be set up for the device in order to achieve call session through the SIP servers between intercom devices. SIP server 2 serves as a backup to SIP server 1. To do it, on the device web Account > Basic > Preferred SIP Server/ Alternate SIP Server.

Preferred SIP Server		
Server IP	<input type="text" value="39.108.62.163"/>	
Port	<input type="text" value="5070"/>	(1024~65535)
Registration Period	<input type="text" value="1800"/>	(30~65535s)
Alternate SIP Server		
Server IP	<input type="text"/>	
Port	<input type="text" value="5060"/>	(1024~65535)
Registration Period	<input type="text" value="1800"/>	(30~65535s)

Parameter Set-up:

- **Server IP:** enter the Server's IP address number or its URL.
- **Port:** set up SIP server port for data transmission.
- **Registration Period:** set up SIP account registration time span. SIP re-registration will start automatically if the account registration fails during the registration time span. The default registration period is "1800", ranging from 30-65535s.

9.2.4. Outbound Proxy Server configuration

An outbound proxy server is used to receive all initiating request messages and route them to the designated SIP server in order to establish call session via port-based data transmission. To configure the outbound Proxy server on device web Account > Basic > Outbound Proxy Server interface.

Outbound Proxy Server

Outbound Enabled

Server IP

Port (1024~65535)

Backup Server IP

Port (1024~65535)

Parameter Set-up:

- **Outbound Enabled:** click “Enable” and “Disable” to turn on or turn off the outbound proxy server.
- **Server IP:** enter the SIP address of the outbound proxy server.
- **Port:** enter the Port number to establish call session via the outbound proxy server.
- **Backup Server IP:** set up Backup Server IP for the back up outbound proxy server.
- **Port:** enter the Port number to establish call session via the backup outbound proxy server.

9.2.5. Data Transmission Type Configuration

SIP messages can be transmitted in three data transmission protocols: UDP (User Datagram Protocol), TCP(Transmission Control Protocol), TLS (Transport Layer Security) and DNS-SRV. In the meantime, you can also identify the server from which the data come from. To do the configuration on the device web Account > Basic > Transport Type interface.

Transport Type

Transport Type

- UDP
- TCP
- TLS
- DNS-SRV

Parameter Set-up:

- **UDP:** select "UDP" for unreliable but very efficient transport layer protocol. UDP is the default transport protocol.
- **TCP:** select "TCP" for Reliable but less-efficient transport layer protocol.
- **TLS:** select "TLS" for Secured and Reliable transport layer protocol.
- **DNS-SRV:** select "DNS-SRV" to obtain DNS record for specifying the location of servers. And SRV not only records the server address but also the server port. Moreover, SRV can also be used to configure the priority and the weight of the server address.

9.2.6. SIP Hacking Protection

Internet phone eavesdropping is a kind of network attack, which aims to eavesdrop on the communication sessions of others in an unauthorized way. Attackers can use this malicious activity to capture and read content containing sensitive and confidential information. SIP hacking prevents SIP calls from hacking on the Internet.

The screenshot shows a configuration page titled "Call". It contains four settings:

Max Local SIP Port	<input type="text" value="56592"/>	(1024~65535)
Min Local SIP Port	<input type="text" value="56582"/>	(1024~65535)
Auto Answer	<input checked="" type="checkbox"/>	
Prevent SIP Hacking	<input checked="" type="checkbox"/>	

Parameters Set-up:


- **Prevent SIP Hacking:** enable to active this feature during using sip call. This feature is only available for SIP call, not IP call.

9.3. Dial Options Configuration

R29C offers a variety of Dial options that allows you to have fast dial experience while relieving you off memory burden due to long and complex dial numbers.

9.3.1. Quick Dial By number Replacement

If you want to replace the long and complex dial number with a shorter number that can be memorized at greater ease and convenience for making calls, you can configure the dial number replacement on the device and on the device web interface. You can replace multiple device dial numbers such as IP address with only one short number. To configure the number replacement on the device ReplaceRule screen.

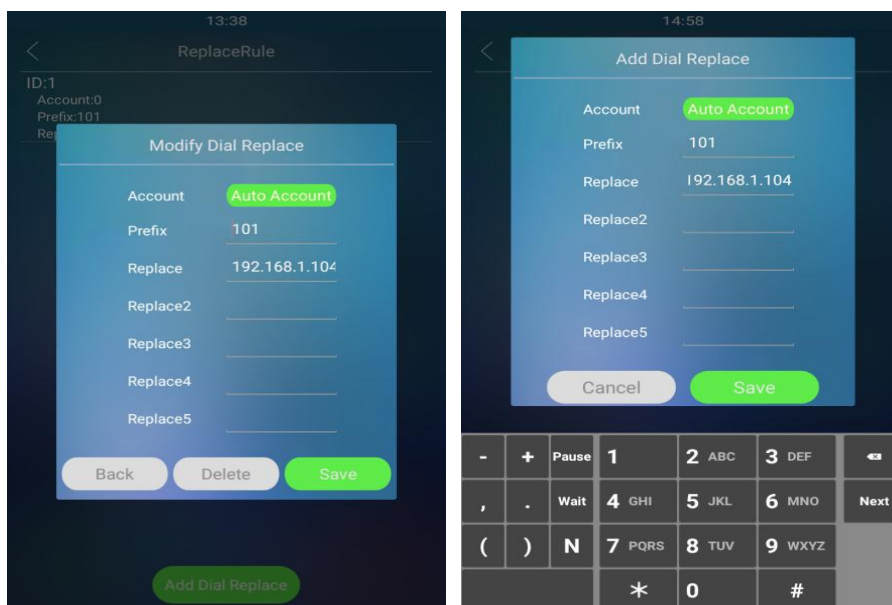

Parameter Set-up:

- **Account:** select the account to which you want to apply dial number replacement. The account is "Auto" by default (to call out from the account in which the dial number has been registered). You can select either account 1 or account 2 from which the number can be dialed out. if

you have registered the dial number in both Account 1 and Account 2, then the number will be called out from Account 1 by default.

- **Prefix:** enter the short number to replace the dial number you wish to replace.
- **Replace 1/2/3/4/5:** enter the dial number(s) you wish to replace. It supports up to 5 number maximum for the replacement on the device configuration. For example, if you replace five original dial numbers with a common short number such as "101" then the five intercom devices with the dial number will be called to at the same time when you dial 101.

To configure the setting on the web Phone > Dial Plan > Rules Management interface.

Dial Plan

Rules Management

Not selected any files
Select File

↶ Import

↷ Export

<input type="checkbox"/> Index	Account	Prefix	Replace 1	Replace 2	Replace 3	Replace 4	Replace 5
<input checked="" type="checkbox"/> 1	Auto	1111	192.168.31.3				
<input type="checkbox"/> 2							
<input type="checkbox"/> 3							
<input type="checkbox"/> 4							

✖ Delete

+ Add

✎ Edit

⏪ Prev

1/1

⏩ Next

1

Page

Rules Modify >>

Account

Replace 1

Replace 3

Replace 5

Prefix

Replace 2

Replace 4


Submit
Cancel

**Note:**

- The square box for each line of "Prefix" should be checked before you can see the Edit tab, which you click to carry out the modification.

9.3.2. Quick Dial Using Configured Dial Name

You can create one dial name on the Quick Dial screen in both villa mode and office mode on the device directly. You can press the dial icon by the dial name to make calls.

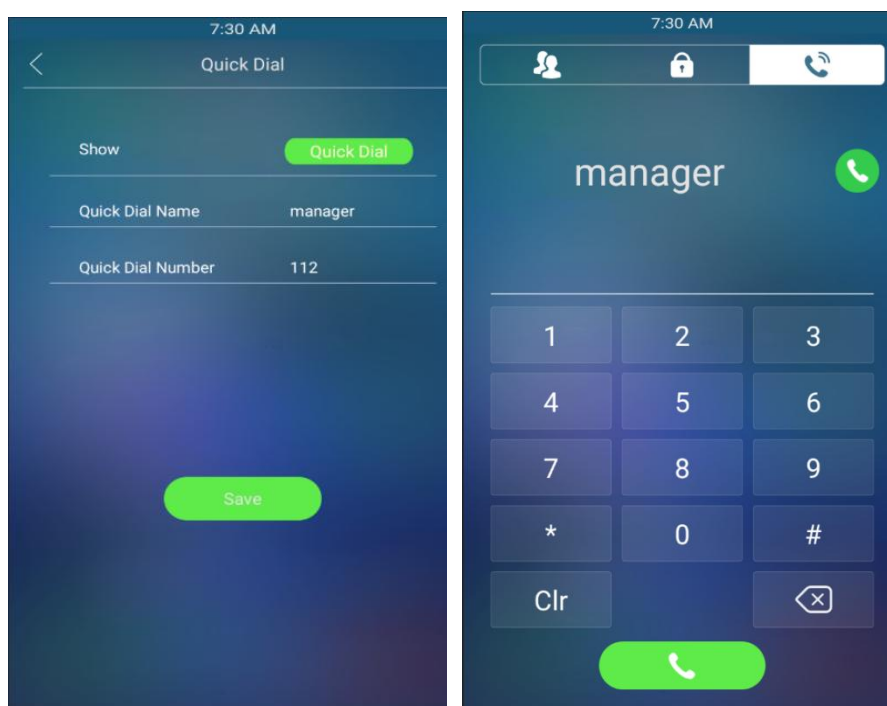**Parameter Set-up:**

- **Show:** select the Quick Dial in order to conceal the time display. If you select the clock option, then the time will be displayed on the time screen.

- **Quick Dial Name:** create a quick dial name such as “Manager” according to your need.
- **Quick Dial number:** enter the quick dial number, which can be a SIP number or an IP address number.

**Note:**

- This function cannot be applied in Building Mode.

9.3.3. Import/Export the Speed Dial Contacts

To import and export the speed dial contacts, navigate to Phone > Speed Dial > Import/Export Speed Dial Contacts(.xml).



9.3.4. Speed Dial on the Home Screen

Speed dial is a function that allows you to create a tab or a combination of organized tabs to be displayed on the device's dial screen. You can make calls by pressing the specific tabs to make speedy calls without entering any dial numbers. To configure the speed dial on the web Phone > Speed Dial > Speed Dial Contacts Management interface.

Speed Dial Theme

Speed Dial Theme


Speed Dial Contacts Management

Index	Name	Number	Submit	Clear
1	<input type="text" value="Ryan"/>	<input type="text" value="1001"/>	<input type="button" value="Submit"/>	<input type="button" value="Clear"/>
2	<input type="text" value="Jim"/>	<input type="text" value="1002"/>	<input type="button" value="Submit"/>	<input type="button" value="Clear"/>
3	<input type="text"/>	<input type="text"/>	<input type="button" value="Submit"/>	<input type="button" value="Clear"/>

Parameter Set-up:

- **Speed Dial Theme:** select speed dial tab layout among 9 options to your preference. Each option offers you the different layout of dial tabs along with changes of the soft keypad arrangement on the dial screen. The 9 options are explained as follows:

Options	Descriptions
Standard	select "Standard" if you want to display the time and key pad only with no dial tabs.
Auto	select "Auto" if you want to select the dial tab layout that does match with any one of the other 8 options. For example, if you want to create 3dial tabs, 5 dial tabs or 7 tabs etc., that does not match with other options.
1 Key	select "1 Key" if you display only one dial tab with no keypad.
1 Key + Keypad	select "1 Key+Keypad" if you want to display one dial tab with key pad.
2 Keys+ Keypad	select "2 Key+Keypad" if you want to display two dial tabs with keypad.
8 Keys	select " 8 Keys"if you want to display 8 dial tabs with no keypad.
16 Keys	select"16 keys" if you want to display 16 dial tabs with no keypad.
64 Keys	select " 64 keys" if you want to display 64 dial tabs with no keypad.

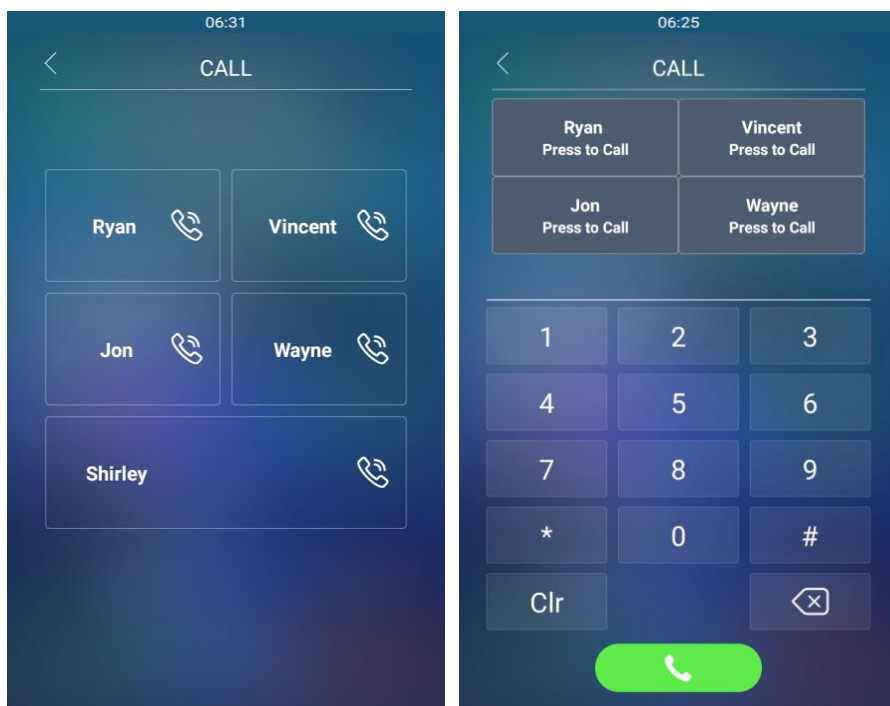**Note:**

- This function cannot be applied in Building Mode.
- Keypad will not be displayed if the number of the dial tabs is over 4 tabs.

9.4. Group Speed Dial

R29C allows you to make speed dial to the contacts in one contact group. So When you press the reception icon on the door phone, you can dial the all contact numbers in the group at the same. You can navigate to Intercom > Key/Display > Speed Dial Setting.



Speed Dial Setting

Group

Parameter Set-up:

- **Group:** select “disable” to disable the speed dial function. And select the specific contact group if you want to make speed dial to the contacts in the selected contact group.

9.5. Dial Key Order

You can select a normal or disordered key display on the door phone. You can select the disordered key display for the security concern. You can navigate to Intercom > Key/Display > Keypad Display Mode of PIN Interface.



Keypad Display Mode Of PIN Interface

Display Mode

Parameter Set-up:

- **Display Mode:** select the key order display. Select the disorder key display to better protect your PIN code from being seen by others as you enter the PIN code.

9.6. Call Auto-answer Configuration

You can define how quickly the door phone should respond in answering the incoming SIP/IP call automatically by setting up the time related parameters. In addition, you can also define the mode in which the calls are to be answered. (video mode or audio mode) To do the configuration on the web Account > Advanced > Call interface.

Call

Max Local SIP Port (1024~65535)

Min Local SIP Port (1024~65535)

Auto Answer

Prevent SIP Hacking

After the Auto Answer is enabled, navigate to Phone > Call Feature > Auto Answer.

Auto Answer

Auto Answer Delay (0~5 Sec)

Mode

Parameter Set-up:

- **Auto Answer:** enable the Auto Answer function.
- **Auto Answer Delay:** set up the delay time (from 0-5 sec.) before the call can be answered automatically. For example, if you set the delay time as 1 second, then the call will be answered in 1 second automatically.
- **Mode:** set up the video or audio mode you preferred for the automatic call answering.

9.7. Sequence Call Configuration

Sequence call is a function supported by Akuvox cloud which releases a group of sequence call numbers for the application. You can call the targeted group of sequence calls (e.g. your extension numbers in your kitchen, bedroom, etc.) in sequential orders until the call is answered. Sequence call will complete as soon as the call is answered by any of the targeted extension devices. To do the configuration in web Intercom > Basic > Sequence Call interface.

Sequence Call

Enabled

Time Out(Sec)

Parameter Set-up:

- **Enable:** this function is controlled by Akuvox SmartPlus. You can check whether it is enabled or not.
- **Timeout(Sec):** to check the call time interval in between the sequence call number in a targeted sequence Call group. For example, if you set the time interval as 10 seconds, then the call (if not answered in 10 Sec.) will be terminated automatically and be transferred sequentially to the next sequence call number in the targeted sequence call group.

**Note:**

- **Sequence Call function should be supported by SmartPlus, please contact Akuvox technical support for more information.**

9.8. Web Call Configuration

In addition, to make IP/SIP calls directly on the device, you can also make the call on the device web Intercom > Basic > Web Call interface without approaching the device physically for testing purpose, etc.

Web Call

Web Call(Ready)

**Note:**

- "Auto" as the default value in the field is not clickable for selection. It enables the door phone to select an appropriate SIP account to call out.

9.9. Call Settings

9.9.1. Maximum Call Duration Setting

R29C door phone allows you to set up the call time duration in receiving the call from the calling device as the caller side might forget to hang up the intercom device. When the call time duration is reached, the door phone will terminate the calling automatically. To do this configuration in device web Intercom > Basic > Max Call Time interface.

Max Call Time

Max Call Time (2~30 Min)

Parameter Set-up:

- **Max Call Time:** enter the call time duration according to your need (Ranging from 2-30 min.). The default call time duration is 5 min.

9.9.2. Maximum Dial Duration Setting

Maximum Dial duration consists of the Maximum dial-in time duration and the maximum dial-out time. Maximum dial in time refers to the maximum time duration before the door phone hangs up the call if the call is not answered by the door phone. On the contrary, Maximum dial-out time refers to the maximum time duration before the door phone hangs up itself automatically when the call from the door phone is not answered by the intercom device being called to. To do this configuration on the device web

Intercom > Basic > Max Dial Time interface.

Max Dial Time		
Dial In Time	<input type="text" value="60"/>	(5~120 Sec)
Dial Out Time	<input type="text" value="60"/>	(5~120 Sec)

Parameter Set-up:

- **Dial In Time:** enter the dial in time duration for your door phone (ranging from 30-120 sec.) for example, if you set the dial in time duration is 60 seconds in your door phone, then the door phone will hang up the incoming call automatically if the call is not answered by the door phone in 60 seconds. 60 seconds is the dial in time duration by default.
- **Dial Out Time:** enter the dial in time duration for your door phone (ranging from 5-120 sec.) for example, if you set the dial out time duration is 60 seconds in your door phone, then the door phone will hang out the call it dialed out automatically if the call is not answered by the device being called.

9.9.3. Hang Up After Open Door

This feature is used to hang up the call automatically after the door is released during a call. So the caller or callee does not need to click the Hang up key again. To do this configuration on the web Intercom > Basic > Hang Up After Open Door interface.

Hang Up After Open Door		
Type	<input type="text" value="DTMF Or HTTP"/>	
Time Out	<input type="text" value="5"/>	(0~15 Sec)


Parameter Set-up :

- **Type:** select the open door type. The door can be unlocked via the "DTMF", "HTTP" command, "DTMF Or HTTP", and "DTMF, HTTP or Input".
- **Timeout:** the time out value can be set up from 1 second to 15 seconds.

5 seconds is default. The call will be automatically hang up within this value after the door is opened.

9.9.4. Two-way Video Call

R29C allows you to have two way video call with the callee so that you can see the callee's video image. You can navigate to Intercom > Basic.

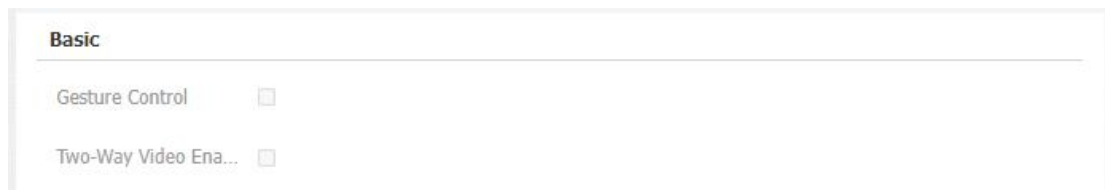


Parameter Set-up:

- **Two-Way Video Enable:** enable the two-way video, which allows you to see the callee's video image on the door phone during a video call.

10. Audio & Video Codec Configuration for SIP Calls

10.1. Audio Codec Configuration


R29C supports four types of Codec (PCMU, PCMA, G729, G722) for encoding and decoding the audio data during the call session. Each type of Codec varies in terms of sound quality. You can select the specific codec with different bandwidths and sample rates flexibly according to the actual network environment on the device web Account > Advanced > SIP Account interface.

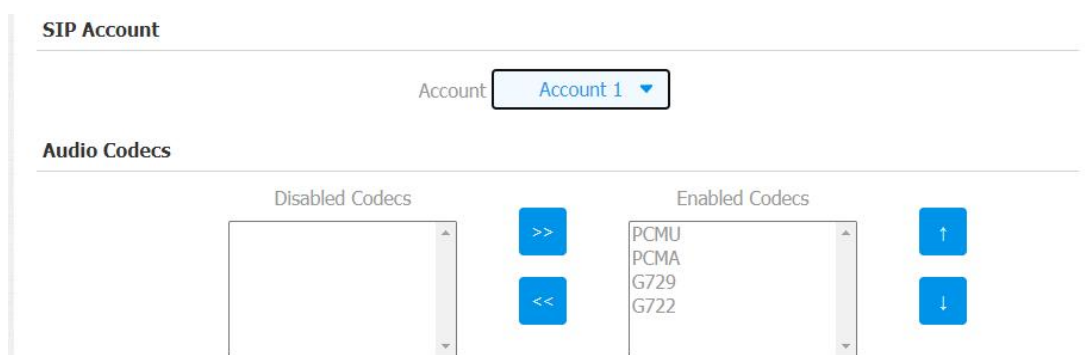

Codec Type	Bandwidth Consumption	Sample Rate
PCMA	64 kbit/s	8kHz
PCMU	64 kbit/s	8kHz
G729	8 kbit/s	8kHz
G722	64 kbit/s	16kHz

10.2. Video Codec Configuration

R29C support H264 codec that provides a better video quality at a much lower bit rate with different video quality and payload. To do the configuration on device web Account > Advanced > Video Codec interface.

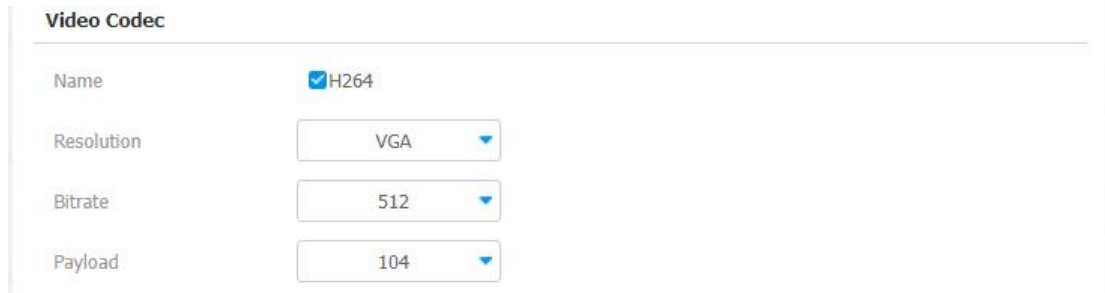

The screenshot shows the 'Video Codec' configuration page. It has a title 'Video Codec' and a horizontal line below it. There are four rows of settings:

- Name:** A checkbox labeled 'H264' is checked.
- Resolution:** A dropdown menu showing 'VGA'.
- Bitrate:** A dropdown menu showing '512'.
- Payload:** A dropdown menu showing '104'.


Parameter Set-up:


- **Name:** Check to select the H264 video codec format for the door phone video stream. H264 is the video codec by default.
- **Resolution:** select the code resolution for the video quality among four options: "QCIF", "CIF", "VGA", "4CIF" and "720P" according to your actual network environment. The default code resolution is 4CIF.
- **Bitrate:** select the video stream bit rate (Ranging from 320-2048). The greater the bitrate, the data transmitted in every second is greater in amount therefore the video will be clearer. While the default code bitrate is 2048.
- **Payload:** select the payload type (ranging from 90-118) to configure the audio/video configuration file. The default payload is 104.

11. Phone book Configuration

11.1. Phone book Configuration on the Device

You can configure the phone book in terms of adding and modifying groups or contacts on the device directly. To configure the phone book on the device Contact screen.

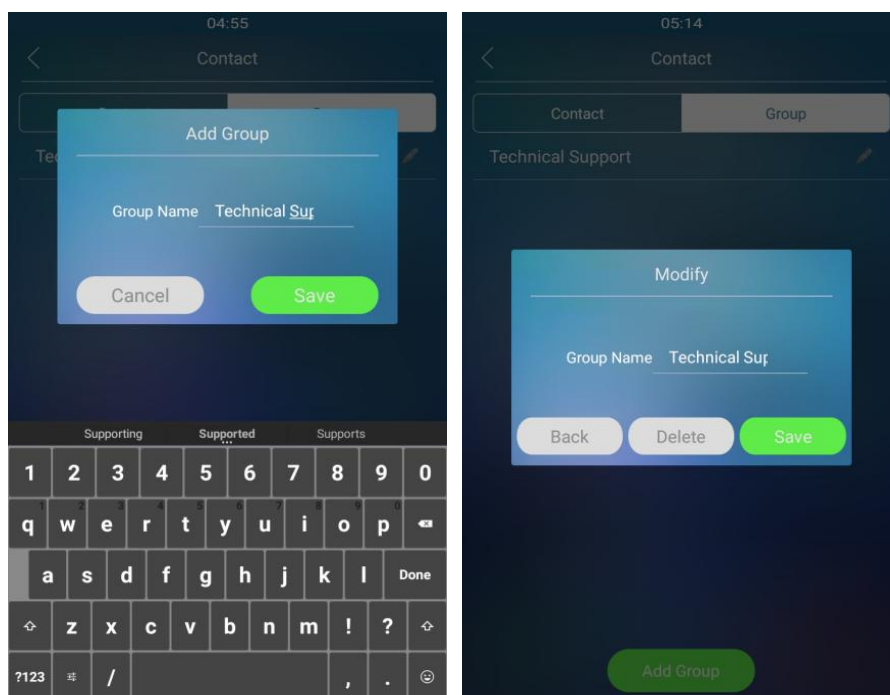

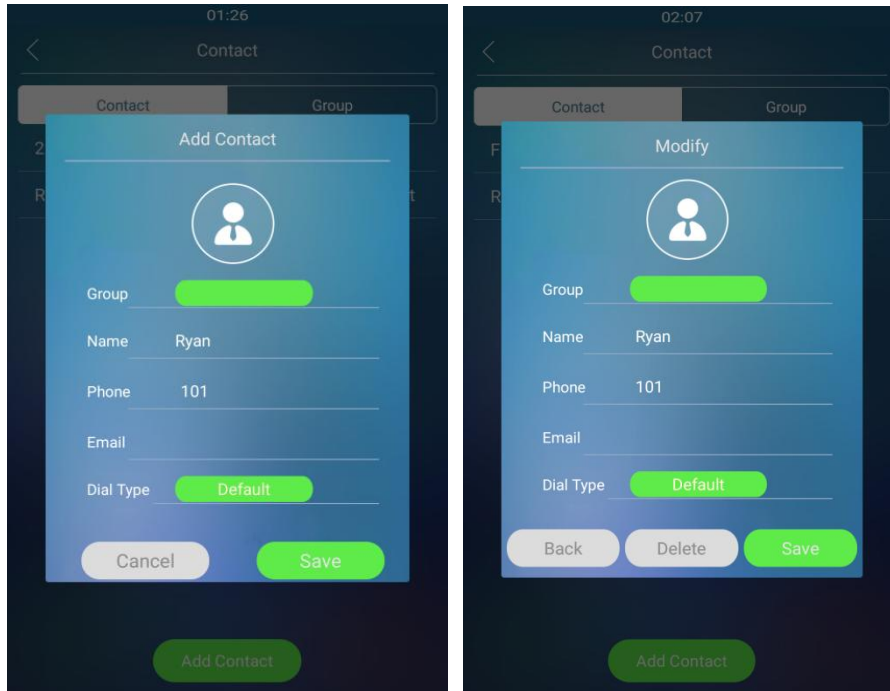**Parameter Set-up:**

- **Group:** click the green tab to select the group name you have created. You cannot select the group name if no group name has been created.
- **Name:** enter the contact name, which is required.
- **Phone:** enter the phone number of the contact, which is required.
- **Email:** enter the contact's Email, which is optional.
- **Dial Type:** select and assign the group name to an account. If you select the default option, then the contact number will be called out from SIP account 1 if the contact numbers are set up in both SIP Account 1 and 2.

**Note:**

- Only the SIP numbers of the contacts can be called out through the SIP account. IP numbers are not valid for this application.
- Group must be created first before you can select or change the Group in Add Contact screen and Modify screen.

**Note:**

- You can swipe your finger left and right on the contact screen to switch between contact and group setting without pressing their respective tabs.

11.2. Phone book Configuration on the Web Interface

11.2.1. Managing Contact Groups on the Web Interface

You can configure contact and contact groups by adding and editing them on the web **Contact > Contact List > Group** interface.

Group		
<input type="checkbox"/>	Index	Name
<input checked="" type="checkbox"/>	1	Technical Dep..
<input type="checkbox"/>	2	
<input type="checkbox"/>	3	

Group

<input type="checkbox"/>	Index	Name
<input checked="" type="checkbox"/>	1	Technical Sup..
<input type="checkbox"/>	2	Sales

1/1

Group Setting

Name:

11.2.2. Contact Configuration on the Web Interface

Contact can also be configured on the web Contact > Contact List > Contact Setting interface where you can also upload the contact pictures if needed.

Contacts Setting

Name:

Phone:

Email:

Group:

Dial Account:

Lift Floor Number:

Photo Note: **Please upload the photo before editing contact if necessary**

Parameter Set-up:

- **Name:** the name of the contact.
- **Phone:** the phone number of the contact. It supports IP address and SIP number.
- **Email:** the email address of contact.

- **Group:** choose a default or pre-configure group for the contact. Or choose Hidden Contacts to hide this contact.
- **Dial Account:** choose one high priority account to call out the contact.
- **Lift Floor Number:** Enter the floor number of the contact if needed.

Note:

- The recommend contact picture size is 2M and .jpg, png format.

11.2.2.1. Contact Management

You can search, display, edit and delete the contacts in your phone book. Moreover, you can also dial out using the contact number directly. To do this configuration on device web Contact > Contact List > Local Contact List.

Local Contacts List

Contacts List Display:


Search:

<input type="checkbox"/>	Index	Name	Phone	Group	Dial Account	Email	FloorNum	Priority Of Call
<input checked="" type="checkbox"/>	1	Ryan	1003	Default	Default		0	NULL
<input type="checkbox"/>	2							
<input type="checkbox"/>	3							
<input type="checkbox"/>	4							
<input type="checkbox"/>	5							
<input type="checkbox"/>	6							
<input type="checkbox"/>	7							
<input type="checkbox"/>	8							
<input type="checkbox"/>	9							
<input type="checkbox"/>	10							

1/1

11.2.2.2. Contacts Import and Export on the Web Interface

When the contact becomes so many that you can not afford to manage each contact one by one manually, you can import and export the contacts in batch on the device web Phone > Import/Export > Import/Export Config&Contacts interface.

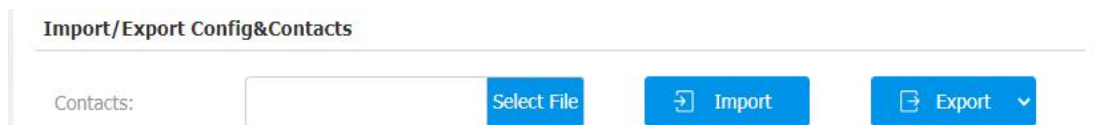

Import/Export Config&Contacts

Contacts:




Note:

- The contact file format for import should be in .vcf, .csv or .xml format while the contact file format for export should be .vcf format only. And the maximum contact import size is 3000.

11.2.2.3. Contact List Setting

To configure contacts list setting, navigate to Contacts > Contact List > Contact List Setting.

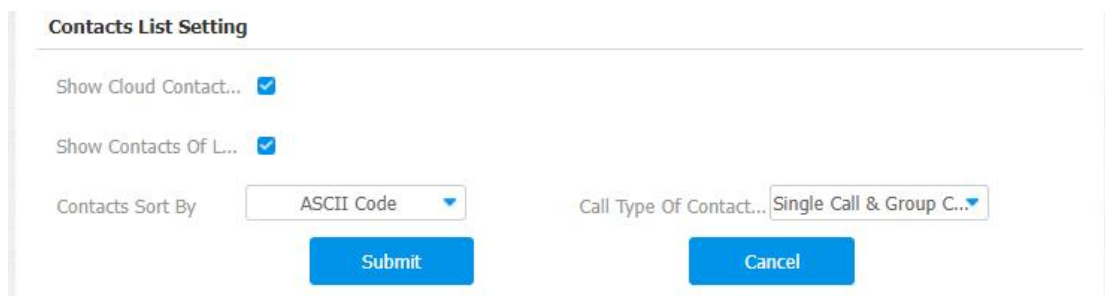

Contacts List Setting

Show Cloud Contact...

Show Contacts Of L...

Contacts Sort By

Call Type Of Contact...

Parameter Set-up:

- **Show Cloud Contacts Enabled:** enable it if you want the contacts synchronized from SmartPlus to be displayed on the contact screen.
- **Show Contacts Of Local Group:** enable it if you the local contacts to be displayed on the contact screen.
- **Contacts Sort By:** select display order of the contacts. Select "ASCII Code" if you want the contacts to be displayed in an order based on ASCII code; select "Room Number" if you want the contacts to be displayed in an order based on room numbers. Select "Import".
- **Call Type Of Contact:** if you select "Single Call & Group Call", you are allowed to make the call to individual contact person or to a contact group on the door phone. If you select "Only Single Call", you are only allowed to make the call to individual contact person. If you select "Only Group Call", you are only allowed to make calls to a contact group.

11.2.2.4. Contact List Display Setting

If you want to customize your contact list display to your desired visual preference. You can go to the web Intercom > Basic > Door Setting General interface to do the configuration.

Door Setting General

Click Tenants To Dial...

Expand Tenants List ...

Hide Group Label Fo...

Contact List Search ...

Local Tenants Profile... Enabled ▼


DialPad Input Numb... Default ▼

Parameter Set-up:

- **Click Tenants To Dial:** select Enable or Disable the dial-out by pressing the contact tab. When it is enabled you can press anywhere on the

contact tab to dial out. When it is disabled, you need to press the Call icon in the middle of the tab to dial out.

- **Expand Contact List View Mode:** select “Enable” or “Disable” to control contact tab size. For example, if you select “Enable” then the contact tab will be widened. And the tab will turn to normal size when the function is disabled.
- **Hide Group Label For Contact List:** select enable or disable to control the display of the group label. If you select disable, then only the contact tab will be displayed while the group tab will be concealed and vice versa.
- **Contact List Search Box Visible:** select Visible or Invisible to control the display of the “Tap here to search field” on the top of the screen. If you select “invisible”, then the “Tap here to search field” will be concealed.
- **Local Tenants Profile Display Mode:** enable or disable the function. If the function is enabled the uploaded contact profile picture is displayed next to the contact's name, if disabled the picture will not be displayed. Select “Auto” if you want to display the default contact picture.
- **DialPad Input Number Limit:** set the limit of numbers that can be entered on the dial pad. You can select 4,6,8,10 digits.

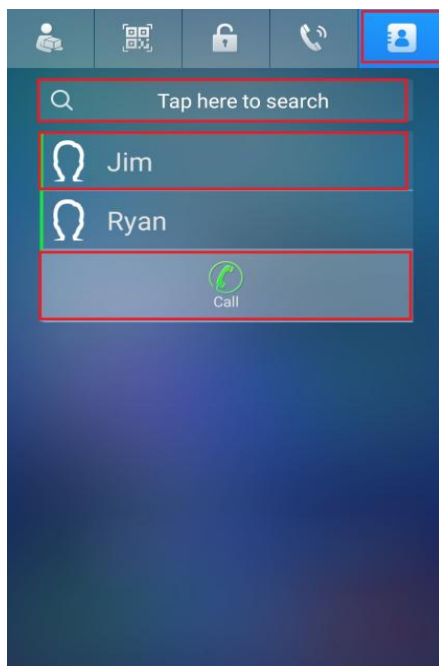

12. Door Access Control Configuration

12.1. Relay Switch Setting

You can configure the relay switch(es) for the door access on the web Intercom > Relay > Relay interface.

Relay			
Relay ID	RelayA	RelayB	RelayC
Type	Default state	Default state	Default state
Mode	Monostable	Monostable	Monostable
Trigger Delay(Sec)	0	0	0
Hold Delay(Sec)	5	5	5
DTMF Mode	1 Digit DTMF		
1 Digit DTMF	#	1	2
2~4 Digits DTMF	010	012	013
Relay Status	RelayA: Low	RelayB: Low	RelayC: Low
Relay Name	Relay1	RelayB	RelayC

Parameter Set-up:

- **Relay ID:** you are allowed to set up three relay switches in total for the door access control.
- **Type:** if Default state is selected, the Relay Status shows Low which means the door is closed, the Relay Status shows High which means the door is opened. If Invert State is selected, the Relay Status shows High which means the door is closed, and Low means the door is opened.
- **Mode:** there are two modes Monostable and Bistable. If Monostable is selected, the relay status will be automatically reset within the relay delay time after the relay is triggered. If Bistable is selected, relay status will be reset after the relay is triggered again.

- **Trigger Delay (Sec):** set the relay trigger delay timing (Ranging from 1-10 Sec.) For example, if you set the delay time as "5" sec. then the relay will not be triggered until 5 seconds after you press "unlock" tab.
- **Hold Delay (Sec):** set the relay hold delay timing (Ranging from 1-10 Sec.) For example, if you set the hold delay time as "5" Sec. Then the relay will resume the initial state after maintaining the triggered state for 5s.
- **DTMF Option:** select the number of DTMF digits for the door access control (Ranging from 1-4 digits) For example, you can select 1 digit DTMF code or 2-digit DTMF code, etc., according to your need.
- **DTMF:** set the 1-digit DTMF code within range from (0-9 and *,#) if the DTMF Option is set as "1-digit".
- **Multiple DTMF:** set the DTMF code according to the DMTP Option setting. For example, you are required to set the 3-digits DTMF code if DTMP Option is set as 3-digits.
- **Relay Status:** relay status is low by default which means normally closed(NC) If the relay status is high, then it is in Normally Open status(NO).
- **Relay Name:** name the relay switch according to your need. For example, you can name the relay switch according to where the relay switch is located for convenience.

**Note:**

- Only the external devices connected to the relay switch need to be powered by powered adapters as the relay switch does not supply power.

12.2. Web Relay Setting

In addition to the relay that is connected to the door phone, you can also control the door access using the network-based web relay. To do the configuration on device web Phone > Web Relay interface.

Web Relay

Web Relay

Type	<input type="text" value="Disabled"/>	IP Address	<input type="text"/>
User Name	<input type="text"/>	Password	<input type="password" value="*****"/>

Web Relay Action Setting

Action ID	Web Relay Action	Web Relay Key	Web Relay Extension
Action ID 01	<input type="text"/>	<input type="text"/>	<input type="text"/>
Action ID 02	<input type="text"/>	<input type="text"/>	<input type="text"/>
Action ID 03	<input type="text"/>	<input type="text"/>	<input type="text"/>

Parameter Set-up:

- **Type:** select among three options Disabled, WebRelay and Both. Select Webrelay to enable the web relay. Select Disable to disable the web relay. Select Both to enable both local relay and web relay.
- **IP Address:** enter the web relay IP address provided by the web relay manufacturer.
- **User Name:** enter the User name provided by the web relay manufacturer.
- **Password:** enter the password provided by the web relay manufacturer. The passwords are authenticated via HTTP and you can define the passwords using http get in Action.
- **Web Relay Action:** enter the specific web relay action command provided by the web relay manufacturer for different actions.
- **Web Relay Key:** enter the configured DTMF code, which when the door is unlocked via DTMF code, the action command will be sent to the web relay automatically.


- **Web Relay Extension:** enter the relay extension information, which can be a SIP Account user name of an intercom device such as an indoor monitor, so that the specific action command will be sent when unlock is performed on the intercom device, while this setting is optional. And please refer to the example below:
<http://admin:admin@192.168.1.2/state.xml?relayState=2>.

12.3. Door Access Schedule Management

You are required to configure and make a schedule for the user-based door access via RF card, Private PIN and Facial recognition.

12.3.1. Manage Relay Schedule

Set the corresponding relay always open at a specific time. This feature is designed for some specific scenarios, for example, the time after school, or for morning work time. To do the configuration on the web Intercom Relay > Relay Schedule interface.

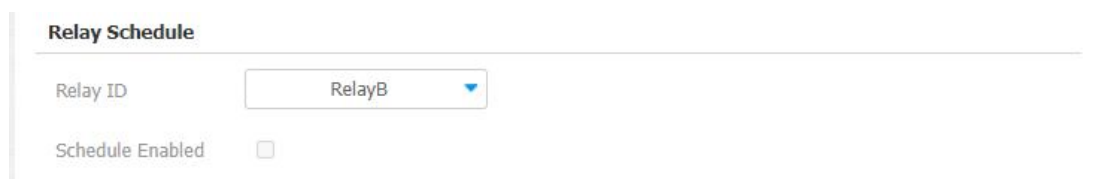

Relay Schedule

Relay ID

Schedule Enabled

Parameter Set-up:

- **Relay ID:** choose on the relay you need to set up.
- **Schedule Enabled:** it is disable by default. Only choose to enable it, and you can select the schedule. For creating the schedule, please refer to the door access schedule configuration.

12.3.2. Configure Door Access Schedule

You can create door access schedules so that they can be later conveniently applied to the door access control intended for the individual users or a group of users created. Moreover, you can edit your door access schedule if

needed.

You can manage the door access schedule on the device and the device's web interface.

12.3.3. Create Door Access Schedule on the Web Interface

You can create the door access schedule on the daily or monthly basis and you can also create schedule that allows you to plan for a longer period of time in addition to running the door access schedule on the daily or monthly basis. Path: Intercom > Schedule > Schedule Setting.

To create a daily schedule:

The screenshot shows the 'Schedule Setting' form with the following fields and options:

- Schedule Type:** A dropdown menu set to 'Daily'.
- Schedule Name:** An empty text input field.
- Date Time:** Four time selection boxes (HH:MM) separated by a colon and a hyphen, all set to '00'.
- Buttons:** A blue '+ Add' button and a blue 'Reset' button.

To create a weekly schedule

The screenshot shows the 'Schedule Setting' form with the following fields and options:

- Schedule Type:** A dropdown menu set to 'Weekly'.
- Schedule Name:** An empty text input field.
- Day of Week:** Seven checkboxes for 'Mon', 'Tue', 'Wed', 'Thur', 'Fri', 'Sat', and 'Sun', all of which are checked. There is also an unchecked 'Check All' checkbox.
- Date Time:** Four time selection boxes (HH:MM) separated by a colon and a hyphen, all set to '00'.
- Buttons:** A blue '+ Add' button and a blue 'Reset' button.

To create a longer period schedule

Schedule Setting

Schedule Type: Normal

Schedule Name:

Date Range: 2022 2 9 ... 2022 2 9

Day of Week: Mon Tue Wed Thur
 Fri Sat Sun Check All

Date Time: 00 : 00 - 00 : 00

+ Add Reset

After access control schedule is set up, you can assign the schedule to **Intercom > Relay > Relay Schedule**.

12.4. Relay schedule

Set the corresponding relay always open in a specific time. This feature is designed for some specific scenario, for example, the time after school, or for morning work time. To do the configuration on the web **Intercom > Relay > Relay Schedule** interface.

Relay Schedule

Relay ID: RelayA

Schedule Enabled:

All Schedules: 1001:Always
1002:Never
1:local0000

Enabled Schedules: 1001:Always

>>
<<

12.4.1. Create Door Access Schedule on the Device

You can also create a door access schedule on the device. Path: **Schedule > Add Schedule**.

23:31
Add Schedule

Mode Normal

Name Please enter the name

Start Date 2022/02/09

End Date 2022/02/09

Day ...

Start Time 00:00

End Time 00:00

Save

12.4.2. Import and Export Door Access Schedule

In addition to creating a door access schedule separately, you can also conveniently import or export the schedules in order to maximize your door access schedule management efficiency. Path: Intercom > Schedule > Import/Export Schedule(.xml).

Schedule

Import/Export Schedule(.xml)

Not selected any files Select File Import Export

12.4.3. Edit the Door Access Schedule

12.4.3.1. Edit the Door Access Schedule on the Web Interface

If you want to edit or delete your door access schedule the created, you can edit or delete the configured schedule separately or in batch on the web interface. Path: Intercom > Schedule > Schedule Management.

Schedule Management


All

Index	Schedule ID	Source	Mode	Name	Date	Day of Week	Time
1	1002	Local	Daily	Never	-	-	-
2	1001	Local	Daily	Always	-	-	00:00:00-23:59:59
3	5030	Cloud	Daily	Akuvox	-	-	08:00:00-23:59:59
4	5024	Cloud	Daily	Resident-Building ..	-	-	00:00-23:59
5							
6							
7							
8							
9							
10							

1/1

12.4.3.2. Edit the Door Access Schedule on the Device

You can also edit or delete the door access schedule on the device. Path: **Schedule > Schedule.**

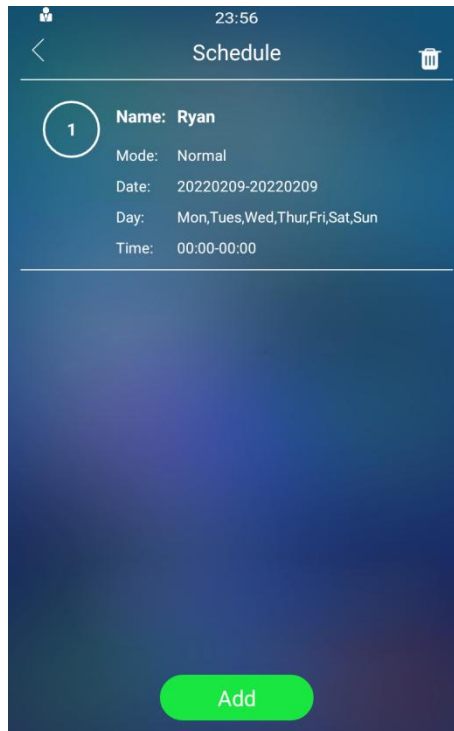

12.5. Door Unlock Configuration

R29C offers you three types of door access via PIN code, RF card and Facial recognition. You can configure them on the device and web interface. Moreover, you can import or export the configured files to maximize your RF card configuration efficiency.

12.5.1. Configure PIN Code for Door Unlock

You can create and modify both public PIN code and private PIN code for the door access on the R29C door phone.

12.5.2. Configure Public PIN code

You can configure and modify public PIN codes on the device and on the device's web interface. To set up the Public PIN code, navigate to Intercom > PIN Setting > Public PIN.

Public PIN

Enabled

PIN Code (3~8 digits)

Parameter Set-up:

- **Enabled:** tick the checkbox to enable the Public PIN code application.
- **PIN Code:** set the PIN code with digit limit ranging from "3-8".

To set up a Public PIN code on the device, go to Password > Public Key Password.

00:10

Password

Project Passwd Public Key Passwd

Public Key Passwd

Old Passwd Old Passwd

New Passwd New Passwd

Passwd Confirm New Passwd

Save

Note:

- Public PIN code will not valid until the function is turned on.



Note:

- APT+PIN can only be applicable when the device is added to the Akuvox SmartPlus.

12.5.3. Configure Private PIN Code on the Device

You can configure door access by Private PIN code for the resident on the device by entering the user's name and the PIN code for the door access.

Path: User > Add User.

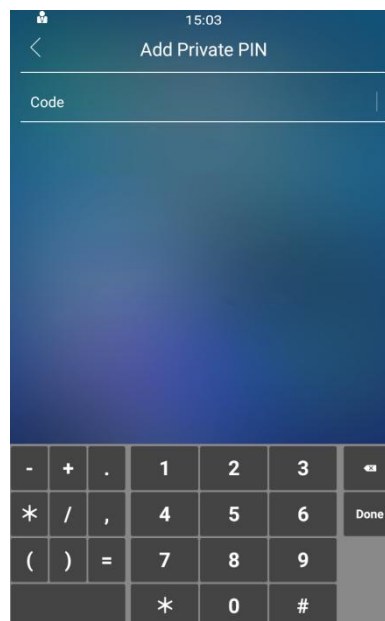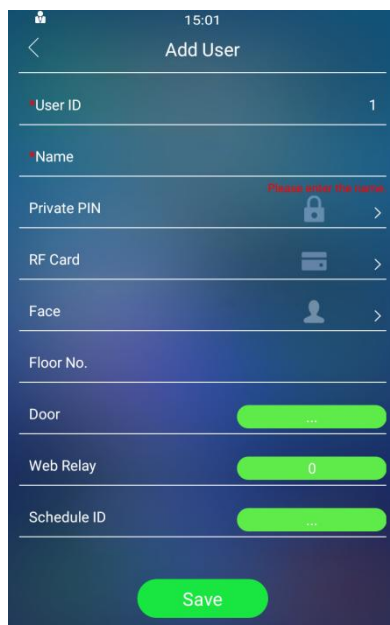

Note:

- User's name must be entered first before you can create the PIN code.

12.5.4. Configure Private PIN Code on the Web Interface

On the web interface, you can not only set up PIN code but also set and select the door access schedule that you created for the validity of the PIN Code access during a certain time span you scheduled. Path: Intercom > User.

User

<input type="checkbox"/>	Index	Source	User ID	Name	Private PIN	RF Card	Face	Floor No.	Web Relay	Schedule-Relay	Edit
<input type="checkbox"/>	1	Local	1	Ryan			✘		0	1001-123	
<input type="checkbox"/>	2	Local	12213	Jim			✘	0	0	1001-1	
<input type="checkbox"/>	3	Cloud	5926100035	Ryan Chen	123123	123123	✘		0	5024-1	
<input type="checkbox"/>											
<input type="checkbox"/>											
<input type="checkbox"/>											
<input type="checkbox"/>											
<input type="checkbox"/>											
<input type="checkbox"/>											
<input type="checkbox"/>											

Selected: 0/3

 Total: 3
 1/1
 Go To Page

User

User Basic

User ID	<input type="text" value="2"/>
Name	<input type="text"/>

Private PIN

Code	<input type="text"/>
------	----------------------

Parameter Set-up:

- **User ID:** enter user's ID.
- **Name:** enter the user name (resident's name).
- **Code:** enter the user's private PIN.

After user information and PIN code are entered, you can scroll down to Access Setting and configure private PIN code access control.

Access Setting

Relay	<input checked="" type="checkbox"/> RelayA <input type="checkbox"/> RelayB <input type="checkbox"/> RelayC
Web Relay	<input type="text" value="49"/>
Building	<input type="text"/>
Floor No.	<input type="text" value="None"/>
Room No.	<input type="text"/>

All Schedules

1001:Always
1002:Never
1:Ryan

Schedules Selected

1001:Always

Parameter Set-up:

- **Relay:** select the relay(s) that you want to apply the private PIN code for the door unlock.
- **Web relay:** select the specific number of web relay action commands you have set up on the web interface.
- **Building:** select the building that you want to apply the private PIN code for the door unlock.
- **Floor NO:** enter the resident's floor number.
- **Room:** enter the resident's floor number.
- **Schedule:** select from the created door access schedule on the right box and move the one to be applied to the user(s)-specific PIN code door access to the box on the right side.

**Note:**

- This step is applicable to door access by RF card and facial recognition credentials as they are identical in configuration.

12.5.5. Configure Private PIN Access Mode

R29C offers you two types of access modes for private PIN code access, namely "PIN" and "APT#+PIN". Path: Intercom > PIN Setting > Private PIN.

The screenshot shows the 'PIN Setting' configuration page. Under the 'Private PIN' section, the 'Enabled' checkbox is checked. The 'Authorization Mode' dropdown menu is set to 'PIN'.

Parameter Set-up:


- **Enabled:** enable the private PIN access mode.

- **Authorization Mode:** select access mode between “ PIN” and “APT#+PIN”. if you select “PIN” then you are only required to enter the PIN code directly for the door access, while if you select “ APT#+PIN”, then you are required to enter the Apartment Number first before entering your PIN code for the door access.

12.6. Configure Facial Recognition for Door Unlock

12.6.1. Configure Facial Recognition on the Device

You can configure door access by facial recognition on the device by entering the user's name and registering your facial ID on the device for door access. Path: User > User List > Add User.

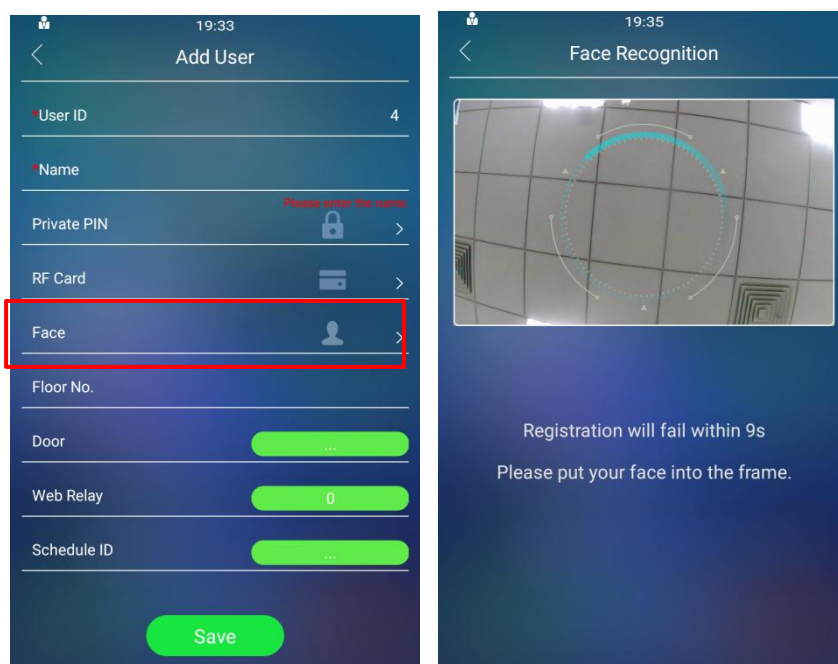

12.6.2. Configure Facial Recognition on Web Interface

You can import the face data to the device on the web interface. Path: Intercom > User > User

The screenshot displays the 'User' management interface. At the top, there is a search bar with 'User ID / Name' and a dropdown menu set to 'All'. To the right are 'Search', 'Reset', and an 'Add' button, which is highlighted with a red box. Below this is the 'User Basic' section, also highlighted with a red box, containing 'User ID' (4) and 'Name' fields. The 'Private PIN' section has a 'Code' field. The 'RF Card' section has a 'Code' field and an 'Obtain' button. Below that is a '+Add' button. The 'Face' section is highlighted with a red box, showing 'Status' as 'Unregistered' and a 'Photo' field with 'Not selected any files', a 'Select File' button, and a 'Reset' button.

Parameter Set-up:

- **Status:** It will show “Registered” when the picture uploaded conforms to the format and standard otherwise it would show “ Unregistered” as the default. However, the status will be changed back to “Unregistered” if the picture uploaded is cleared when you press the Reset tab.
- **Photo(jpg/png):** select the picture with jpg or png format to be uploaded to the device and press if you want to clear the picture uploaded.

**Note:**

- Pictures to be uploaded should be in jpg or png format.

12.6.2.1. Basic Facial Recognition Configuration on the Web Interface

R29C door phone allow you to adjust facial recognition accuracy, recognition intervals according to your actual need. And you can also improve the recognition quality and user experience through the basic facial recognition setting on the device web Intercom > Face Setting > Face Basic interface.

Face Basic

Facial Recognition E...

Offline Learning Ena...

Facial Recognition M... Normal ▾

Face Living Recognit... Normal ▾

Facial Recognition I... 3 ▾

Tips When Succeed Default ▾

Parameter set-up:

- **Face Recognition:** click on Enable to turn on the facial recognition function. Facial recognition is enabled by default.
- **Facial Recognition Matching Level:** click to select the facial recognition accuracy level among four options: Low, Normal, High, Highest. For example, if you select Highest then there will be the least possibility that someone else will be mistaken for you by mistake or in another way round in the facial recognition.
- **Face Living Recognition Matching Level:** select Anti-spoofing level among four options: Low, Normal, High, Highest. For example, if you select "Highest" then there will be the least possibility that the device

will be fooled by digital images or pictures of any kind.

- **Facial Recognition Interval:** select time interval between every two facial recognition from 1-8 minutes. For example, if you select "5" then you have to wait for 5 minutes. before you are allowed to perform the facial recognition again.
- **Offline Learning:** select Enable if you want to improve the device recognizing capability, focusing on the major facial characteristics while sidelining the minor changes that occurred to your face. Facial recognition accuracy improves as the number of facial recognition increases.
- **Tips when Succeed:** customize the tips which will be shown up when the relay is triggered by face recognition successfully.

12.6.2.2. Facial Recognition Improvement

If you want to improve the facial recognition accuracy and user experience, you can do it by allowing your data and debug information to be uploaded to Akuvox Cloud. To do the configuration on device web Intercom > Face Setting > Face Experience Improvement interface.

Face Experience Improvement

Face Experience Im...


Export Log

12.7. Configuring RF Card for Door Unlock

You can add an RF card for the specific user for the door unlock on the web interface and on the device.

12.7.1. Configure RF Card on the Web Interface

You can tap the an RF card on the card reader and click obtain to add RF card for the user. Path: Intercom > User.

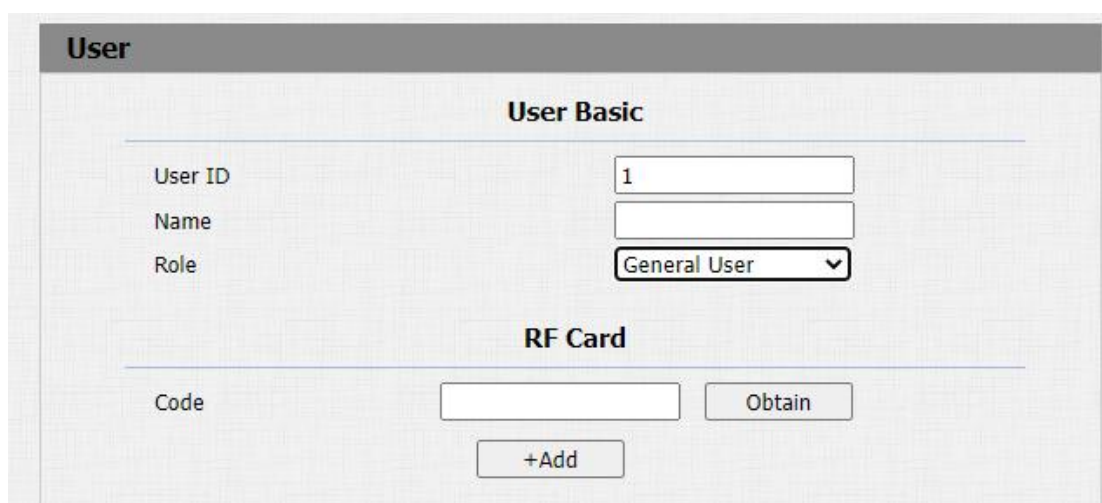

Parameter Set-up:

- **User ID:** enter the user ID.
- **Name:** enter the user name.
- **Role:** select the roles: general users or administrator.
- **Code:** place the card on the device card reader area and click obtain.


**Note:**

- Please refer to PIN code access schedule selection for the RF card user(s)-specific door access.

**Note:**

- RF card with 13.56 MHz and 128 KHz can be applicable to the door phone for door access.

To add RF card on the device, you can go to **User > Add User > Add RF Card**.

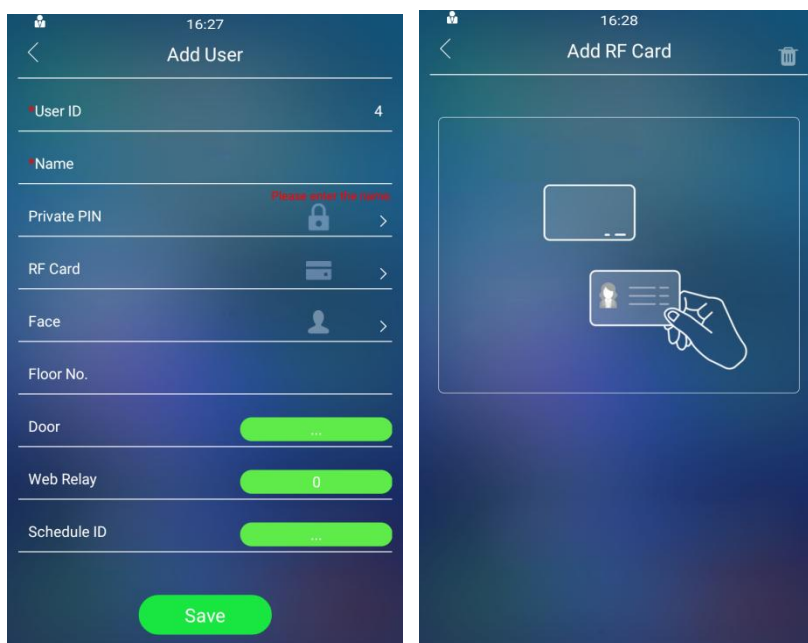

12.7.2. Configure RF Card Code Format

If you want to integrate with the third party intercom system in terms of RF card door access, you can change the RF card code format to be identical to that applied in the third party system. Path: Intercom > Card Setting > RFID.

RFID

IC Card Display Mode

ID Card Display Mode

Parameter Set-up:

- **IC/ID Card Display Mode:** select the card format for the ID Card for the door access among five format options: 8H10D; 6H3D5D(W26); 6H8D; 8HN; 8HR. The card code format is 8HN by default in the door phone.

12.7.3. IC/ID Card Control

You can enable or disable the IC and ID card function if needed. You can navigate to Intercom > Card Setting > Card Type Support.

Card Type Support

IC Support Enabled

ID Support Enabled

12.7.4. NFC and Felica Card Setting

NFC and Felica card are the two types of cards that need to be enabled before you can use them as these two types of cards are not so frequently used as opposed to the conventional RF card such as IC cards and ID cards. To enable or disable the cards on the device web Intercom > Card Setting interface.

Card Type Support

NFC Enable Felica Enable

**Note:**

- As these two types of cards are in conflict with each other when being applied at the same time, therefore either one type of card should be disabled.

12.8. Mifare/Defire Care Encryption

Mifare card and Defire card can be encrypted for greater security. To encrypt the card, you can navigate to Intercom > Card setting > Mifare/Defire Card Encryption.

Mifare/Defire Card Encryption

Enabled

Sector / Block /

Block Key

Parameter Set-up:

- **Enabled:** enable the Mifare/Defire Card Encryption.
- **Sector/Block:** enter the sector and block that you want the card number to be written into in the Mifare/Defire Card. For example, you can write the card number into sector 3 and block 3 in the card.
- **Block Key:** enter the block password for access.

12.9. Access Authentication


You can set up several access authentication modes. you can navigate to Intercom > Key/Display > Access Authentication Mode of The Building Theme.

Access Authentication Mode of The Building Theme

Authentication Mode Any method**Parameter Set-up:**

- **Authentication Mode:** select “Any method” if you allow all the access methods to unlock the door. Select “ Face + PIN” if you want to apply dual access methods (Face + PIN) for the door unlock. Select “ Face + RF Card” if you want to apply dual access methods (Face+ RF Card) for the door unlock.

To configure it on the device, go to **Authentication > Authentication mode**.

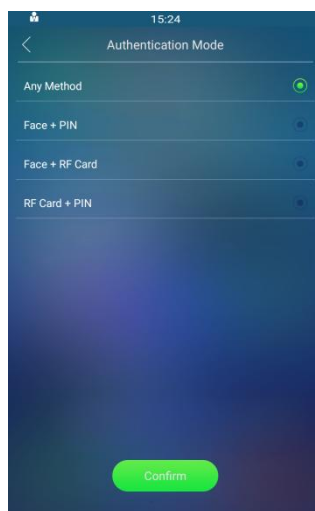

12.10. Unlock

12.10.1. Unlock by QR Code

QR code is another option for door access. If you want to apply for QR code access, you need to enable the QR code function on the device web Intercom > Relay > Open Relay via QR Code interface.

Open Relay Via QR Code

Enabled

Note:

- The function should work with Akuvox cloud. For more information, please contact Akuvox technical support.

12.10.2. Unlock by Bluetooth

You can also gain door access by mobile phone with Bluetooth which is used together with Akuvox SmartPlus. You can shake the mobile phone closer to the door phone for door access. To configure Bluetooth on the device web Intercom > BLE > BLE Basic interface.

BLE Basic

BLE Enable BLE Mode

Rssi Threshold (-85~-50db)

Delay (Sec)

BLE Basic

Enabled

Rssi Threshold (-85~-50db)


Open Door Interval ...

Parameter Set-up:

- **Enabled:** enable or disable the Bluetooth function. Bluetooth is turned off by default. On R29Z/R29ZL it is enabled by default.
- **Rssi Threshold:** select the signal receiving strength from -85~-50db in absolute terms, The higher value it is, the greater strength it has. The default value is 72db in absolute terms.
- **Open Door Interval (Sec):** select the time interval between every two Bluetooth door accesses.

12.10.3. Unlock by HTTP Command on Web Browser

You can unlock the door remotely without approaching the device physically for the door access by typing in the created HTTP command (URL) on the web browser Intercom > Relay > Open Relay via HTTP to trigger the relay when you are not available by the door for the door access.

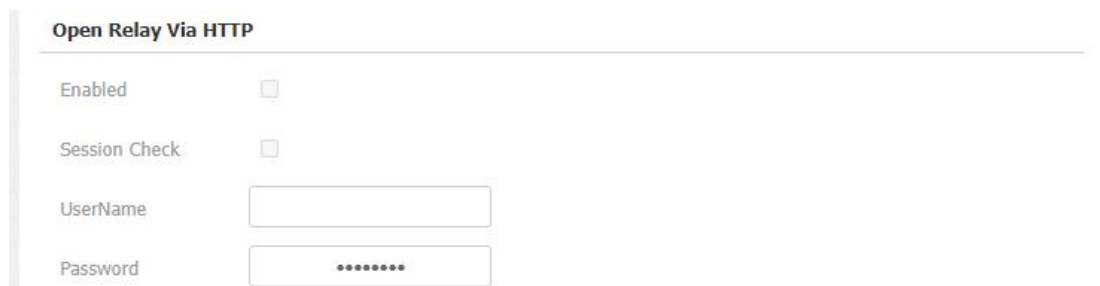

Open Relay Via HTTP

Enabled

Session Check

UserName

Password

Parameter Set-up:

- **Enable:** enable the HTTP command TO unlock function by clicking on Enable field.
- **Session Check:** enable it to protect data transmission security.
- **UserName:** enter the user name of the device web interface, for example, "Admin".
- **Password:** enter the password for the HTTP command. For example, "12345".

Please refer to the following example:

<http://192.168.35.127/fcgi/do?action=OpenDoor&UserName=admin&Password=12345&DoorNum=1>



Note:

- DoorNum in the HTTP command above refers to the relay number #1 to be triggered for the door access.

12.10.4. Unlock by Exit Button on the Door

When you need to open the door from inside using the Exit button installed by the door, you can configure the door phone Input A/B/C to trigger the three relay switches maximum for the door access on the device web Intercom > Input > Input A/B/C interface.

Input A

Enabled

Trigger Electrical Level

Action To Execute FTP Email SIP Call HTTP TFTP

HTTP URL

Action Delay (0~300 Sec)

Trigger When Signal...

Execute Relay

Door Status DoorA: High


Parameter Set-up:

- **Enabled:** enable the function if needed.

- **Trigger Electrical Level:** select the trigger electrical level options between “High” and “Low” according to the actual operation on the exit button.
- **Action To Execute:** select the method to carry out the action among four options: FTP, Email, HTTP, TFTP.
- **Http URL:** enter the URL if you select the HTTP to carry out the action.
- **Action Delay:** set up the delay time when the action is carried out. For example, if you set the action delay time at 5 seconds, then the corresponding actions will be carried out 5 minutes after your press the button.
- **Trigger When Signal Is Hold:** if enabled, action will be triggered if the door is not closed before timeout.
- **Execute Relay:** set up relays to be triggered by the actions.
- **Door Status:** display the status of the input signal.

12.10.5. Unlock by Reception Icon

R29C door phone provide residents and visitors quick door access by pressing the Reception on the home screen of the door phone. To do the configuration on device web Intercom > Key/Display > Reception Action In Building interface.

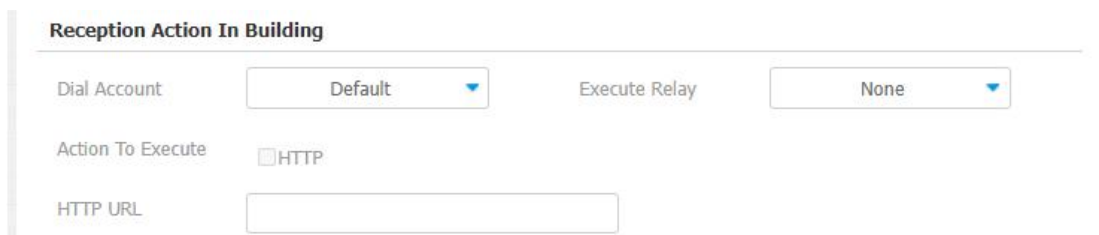

Reception Action In Building

Dial Account: Default

Execute Relay: None


Action To Execute: HTTP

HTTP URL:

Parameter Set-up:

- **Dial Account:** select the SIP account for the application. If you select “default” then account one will be selected automatically.

- **Execute Relay:** select the relay(s) to be triggered by pressing the Reception Icon.
- **Action To Execute:** check the HTTP option. When this feature is triggered, the door phone will send the HTTP command to the third party system.
- **HTTP URL:** enter the URL command to be sent for the door access. For example:
<http://192.168.35.127/fcgi/do?action=OpenDoor&UserName=admin&Password=12345&DoorNum=1>

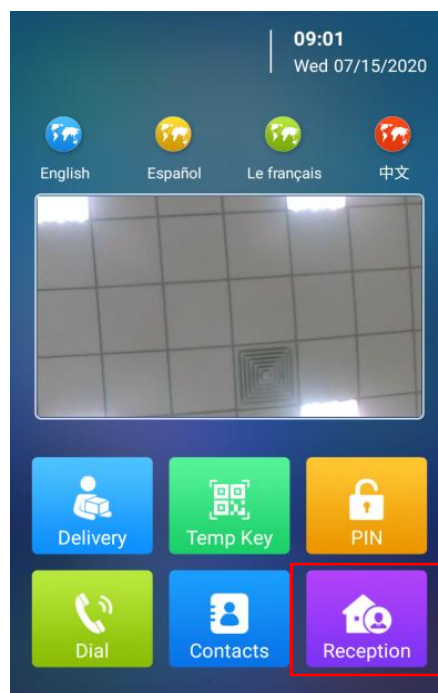

12.10.6. Unlock by DTMF code

DTMF codes can be configured on the door phone web Account > Advanced > DTMF interface and set up identical DTMF code on the corresponding intercom devices such as indoor monitor, which allows residents to enter the DTMF code on the soft keypad or press DTMF code attached to unlock tab on the screen to unlock the door for visitors etc., during a call.

DTMF


Type

How To Notify DTMF

Payload (96~127)

Parameter Set-up:

- **Type:** select DTMF type among five options: " Inband", " RFC2833", " Info+Inband" and "Info+RFC2833" according to your need.
- **How to Notify DTMF:** select among four options: "Disable" " DTMF" "DTMF-Relay" "Telephone-Event" according to your need.
- **Payload:** select the payload (rang from 96-127) for data transmission identification.

 **Note:**

- Please refer to the chapter Relay Switch Setting for the specific DTMF code setting.
- Intercom devices involved must be consistent in the DTMF type otherwise DTMF code cannot be applied.

12.10.6.1. DTMF White List

In order to secure the door access via DTMF codes, you can set up the DTMF whitelist on the device web Intercom > Relay > DTMF interface so that only the caller numbers you designated in the door phone can use the DTMF code to gain door access.

DTMF

Whitelist Enable

DTMF

Assigned The Autho...

Parameter Set-up:

- **Assigned The Authority For:** select “All” to allow all numbers for the DTMF door unlock; select “None” to deny all numbers for the DTMF door unlock; select “Only Contact List” to only allow the contact number in your door phone.

12.10.6.2. Unlock by Voice Assistant

Voice assistant in the R29C allow you to get door access without pressing the buttons on the device for convenience or for the hygiene concern etc. Once the specific voice command is used, the voice assistant can help transfer the command into the specific action for the door access. To do the configuration on device web Intercom > Basic > Voice Assistant Setting interface.

Voice Assistant Setting

Voice Assistant

Enabled Time

Day Mon Tue Wed Thur
 Fri Sat Sun Check All

Time : - :


Parameter Set-up:

- **Voice Assistant:** enable the voice assistant function if you want to apply the function.
- **Enable Time:** select between the two options “Always” and “ Schedule”. If you select “Always” the voice assistant will be always enabled and if

you select “ Schedule” the voice assistant will be valid according to the schedule you set up.

- **Day of Week: select the day(s) on which the voice assistant is valid, or you can select “ Check All” when you want the function to be valid throughout the week.**
- **Time: select the start time and end time for the validity of the voice assistant.**

The voice assistant function on the device is shown as below:

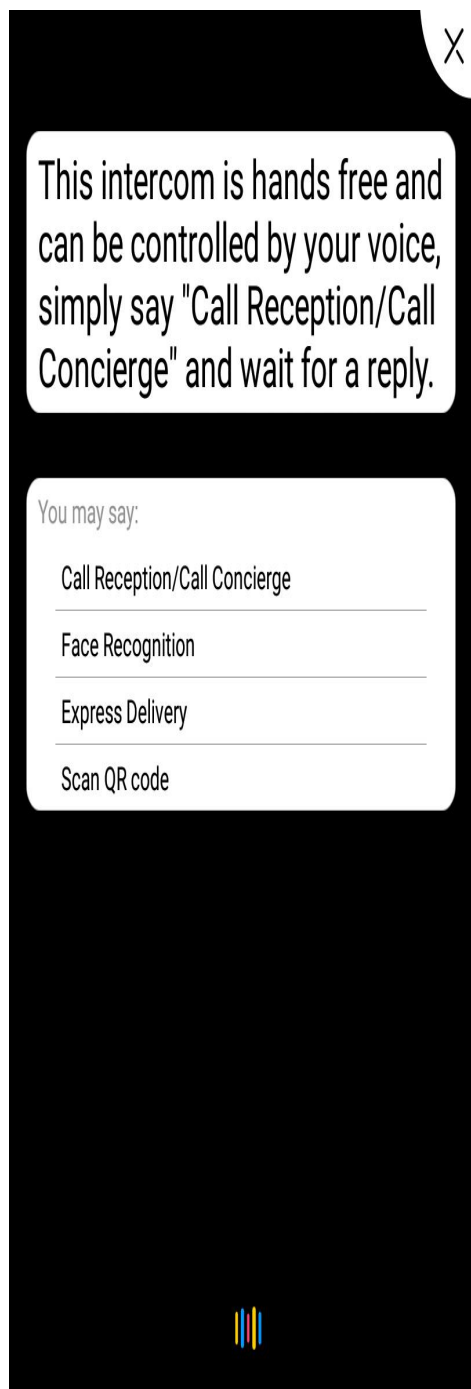

Call Reception/ Call Concierge	This voice command is used to call to Reception or concierge for the door access as the voice assistant will automatically initiate the call using the configured number.
Face recognition	This voice command helps to skip to face recognition on the home screen for the door access.
Express Delivery	This voice command helps you to skip to the dial screen where you are required to scan the QR code in front the camera or the enter the temporary PIN for the door access.
Scan QR code	When this voice command is used, the screen will skip to the dial screen where you are required to hold the QR code up to the camera for the door access.

12.10.7. Body Temperature Measurement for Door Access

R29C provides you with an optional body temperature measurement function designed to be applied in the situation where the measurement becomes necessary for the safety of the residents and visitors etc. Residents and visitors are required to go through temperature measurement along with optional mask detection check before they are allowed for door access.

12.10.7.1. Body Temperature Measurement Configuration

You can configure the body temperature measurement function on the device web Intercom > Body Temperature > Measuring Body Temperature interface in terms of defining the normal temperature as well as making the schedule for the validity of the function etc.

Measuring Body Temperature

Mode

Mask Detection

Temperature Unit

Normal Body Tempe... (Below 99.14 °F)

(If the detected temperature is lower than 93.2 °F, the device will prompt low temperature, please try again later)

Action To Execute SIP/IP Call

SIP/IP Call Number

Open Relay DoorA DoorB DoorC

Day Mon Tue Wed Thur
 Fri Sat Sun Check All

Time : - :

Measuring Body Temperature

Mode

Mask Detection

Temperature Unit

Normal Body Tempe... (Below 99.14 °F)

Low Temperature (Below 93.20 °F)

(If the detected temperature is lower than 93.20 °F, the device will prompt low temperature, please try again later)

Action For Abnormal...

Action For Low Body...

Action To Execute SIP/IP Call HTTP

Low Temperature Ac... SIP/IP Call HTTP

Action For Normal B...

Timeout (Sec)

Execute Relay DoorA DoorB DoorC

Day Mon Tue Wed Thur

Fri Sat Sun Check All

Time : - :

Voice Prompts Please approach Please wear a mask Normal Temperature

Low Temperature Abnormal Temperature

Recognition Tips

OpenDoor Succeede...

OpenDoor Failed Tips

Parameter Set-up:

- **Mode:** select either "Forehead" mode or "Wrist" mode for temperature measurement according to your need.
- **Mask Detection:** select "Enable" or "Disable" to turn on or turn off the mask detection. When enabled, the device will check if the visitor is wearing a mask or not while reminding the visitor with the announcement "please wear a mask" while visitors wearing a mask will be prompted either "Keep face in the frame" or "Keep wrist close to the sensor" depending on the mode that is selected. Warning alarm will be triggered

when the body temperature measured is detected higher than the defined normal body temperature.

- **Temperature Unit:** select “Centigrade” or “Fahrenheit” you like.
- **Normal Body Temperature:** set the body temperature to the predefined body temperature as the measuring basis in either Fahrenheit or Celsius. For example, if you set the temperature at 37.3 degrees Celsius as the normal temperature, then anybody temperature measured higher than 37.3 degrees Celsius will be deemed as an abnormal temperature, while the temperature lower than 34 degrees Celsius will be deemed as low body temperature.
- **Low Temperature:** set the low temperature.
- **Action for Abnormal Body Temperature:** if “Action to Execute” is selected, then you can be notified via SIP/IP call when abnormal temperature and low temperature is detected or an HTTP command will be sent to a designated place when the abnormal temperature is selected. If “Go to Home Page” is selected, the door phone will go back to the home screen when an abnormal temperature is detected.
- **Action for Low Body Temperature:** if “Try again later” is selected, you will be prompted “Try again later” if low body temperature is detected. If “Go To Homepage” is selected” the door phone will go back to the home screen if a low body temperature is detected.
- **Timeout:** select the timeout from 1 to 8 seconds. For example, if you select “3” seconds, then then the door phone will go back from the face recognition screen to the body temperature screen if timeout is reached on the face recognition due to no operation or no face is detected for 3 seconds.
- **Execute Relay:** select the relay switches to be triggered.
- **Day:** select the day on which the relay(s) is valid for the application. Or you can select “Check All” option to make the application valid throughout the week.
- **Time:** select the start time and end time for the validity of the application during a day.
- **Voice Prompts:** select the voice prompt you need.

- **Recognition Tips:** customize the tips which will be shown up when the unit detects a face.
- **OpenDoor Succeeded Tips:** customize the tips which will be shown up when the relay triggered by face recognition successfully.
- **OpenDoor Failed Tips:** customize the tips which will be shown up when the relay is triggered by face recognition failed.

12.10.7.2. Ambient Temperature Configuration

In order to offset the minor variations on the temperature as affected by the ambient temperature in the different places where the device is installed or in the different times of a day, you are required to configure the temperature setting on the basis of time segments during a day on the device web Intercom > Body Temperature > Ambient Temperature Setting interface.

Ambient Temperature Setting

ID	Start Time	End Time	Ambient Temperature
1	02 : 00	08 : 00	25.0 (10~40°C)
2	08 : 00	14 : 00	25.0 (10~40°C)
3	14 : 00	20 : 00	25.0 (10~40°C)
4	20 : 00	02 : 00	25.0 (10~40°C)

Parameter Set-up:

- **Start Time/End Time:** select the start time and end time temperature by referring to the actual temperature measured at the time segments ranging from 10- 40°C degree Celsius. For example, when you divide the time into four time segments, then each of the time segments will be six hours (24 hours a day), while the end time of one segment should be the start time of the next time segment. You can divide the time segments according to your need.

- **Ambient Temperature:** enter the ambient temperature degree. Accuracy can be ensured for the actual temperature value within the range from 10- 40 degrees Celsius.


13. Security

13.1. Tamper Alarm Setting

Tamper alarm function serves as a protection against any unauthorized removal of the devices by triggering off the temper alarm while sending out calls to the designated location. Tamper alarm will be triggered off when the door phone changes its gravity value as opposed to its original gravity value set up when the device is installed.

13.1.1. Tamper Alarm Configuration on the Device


Tamper alarm can be conveniently set up and adjusted directly on the door phone AntiAlarm screen. You can set up the gravity value as well as the adjusting the gravity sensor sensitivity according to your actual need.

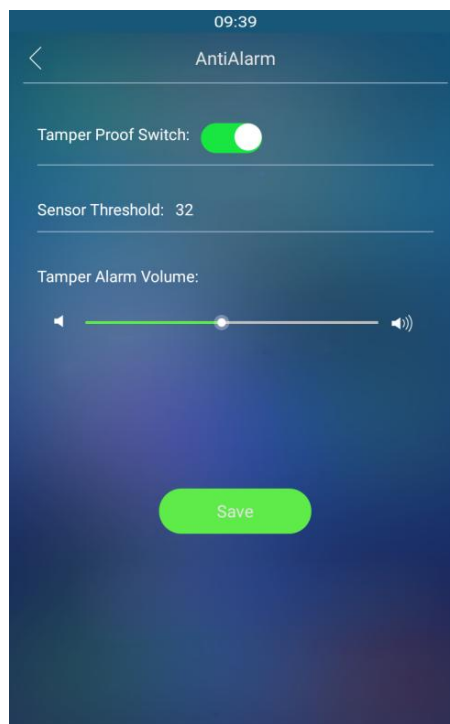

13.1.2. Tamper Alarm Configuration on the Web

Interface

You can also set up the temper alarm function in terms of switching on the function and setting up the gravity sensor sensitivity to suit your need on the device web Security > Basic > Tamper Alarm interface.

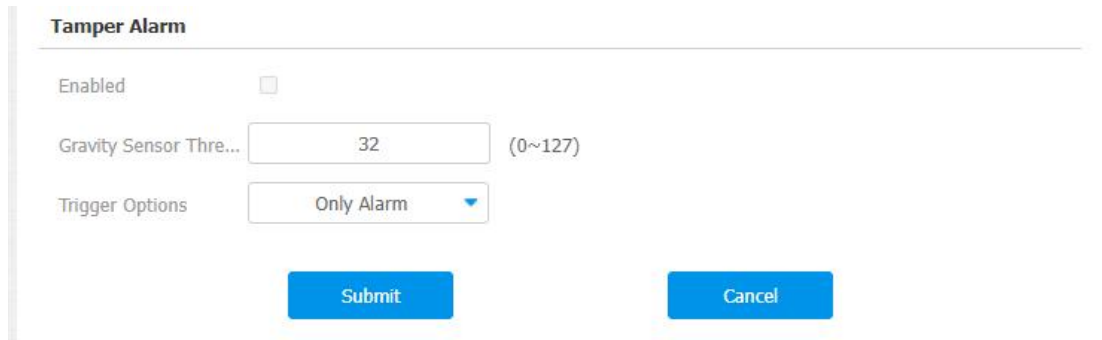

Tamper Alarm

Enabled

Gravity Sensor Thre... (0~127)


Trigger Options

Parameter Set-up:

- **Tamper Alarm:** enable the anti-theft alarm function.
- **Gravity Sensor Threshold:** set the threshold for the gravity sensory sensitivity. The lower the value is, the higher the value will be. The gravity sensor value is 32 by default.
- **Trigger Options:** select what can be triggered when the gravity sensor is triggered.

13.2. Lock Security

R29C can be connected with the third-party door locks and door sensor to ensure lock security. When the door sensor detects the door is not closed or is left ajar, it will immediately trigger the alarm for notification. On the device, go to Lock for the setting.

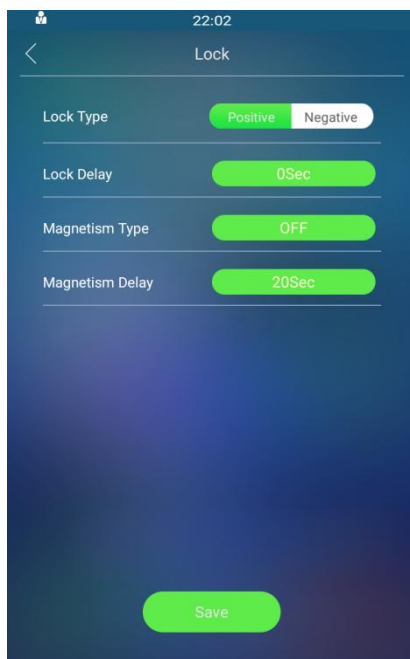

Parameter Set-up:

- **Lock Type:** select “Positive” for the lock that unlocks when the power is on and select “Negative” for the lock that unlocks when the power is off.
- **Lock Delay:** select door unlock delay time after you are granted the door access. The delay time range is from “0-10” seconds.
- **Magnetism Type:** select “OFF” if you want to disable the door sensor and alarm. To set alarm trigger type, you must select “ON-ALARM” and “OFF_ALARM” according to the type of lock you applied. Select “ON_ALARM” for a positive lock, while selecting “OFF_ALARM” alarm for a negative lock.
- **Magnetism Delay:** select the alarm delay time after its being triggered. The delay range is from “10-120” seconds.

13.3. Client Certificate Setting

Certificates can ensure communication integrity and privacy when deploying Akuvox door phones. So, when a user needs to establish SSL protocol, it is necessary to upload corresponding certificates for verification.


Web Server Certificate: it is the certificate that sends to clients for authentication when clients require an SSL connection with Akuvox door

phone. Currently, the format of the certificate that can be accepted by Akuvox door phone is *.PEM file.

Client Certificate: when Akuvox door phone required an SSL connection with a server, the phone must verify the server to make sure it can be trusted. and the server will send its certificate to the Akuvox door phone. Then the door phone will verify this certificate according to the client certificate list.


13.3.1. Web Server Certificate

To upload Web Server certificate on the device web interface Security > Advanced > Web Server Certificate.

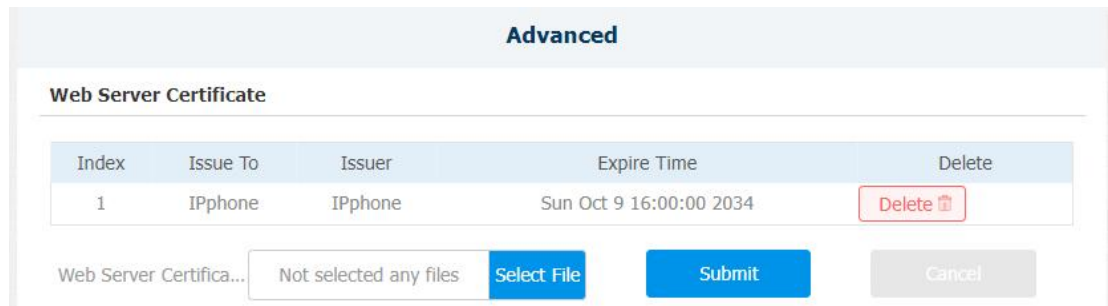

13.3.2. Client Certificate

To upload and configure client certificate on the same page.

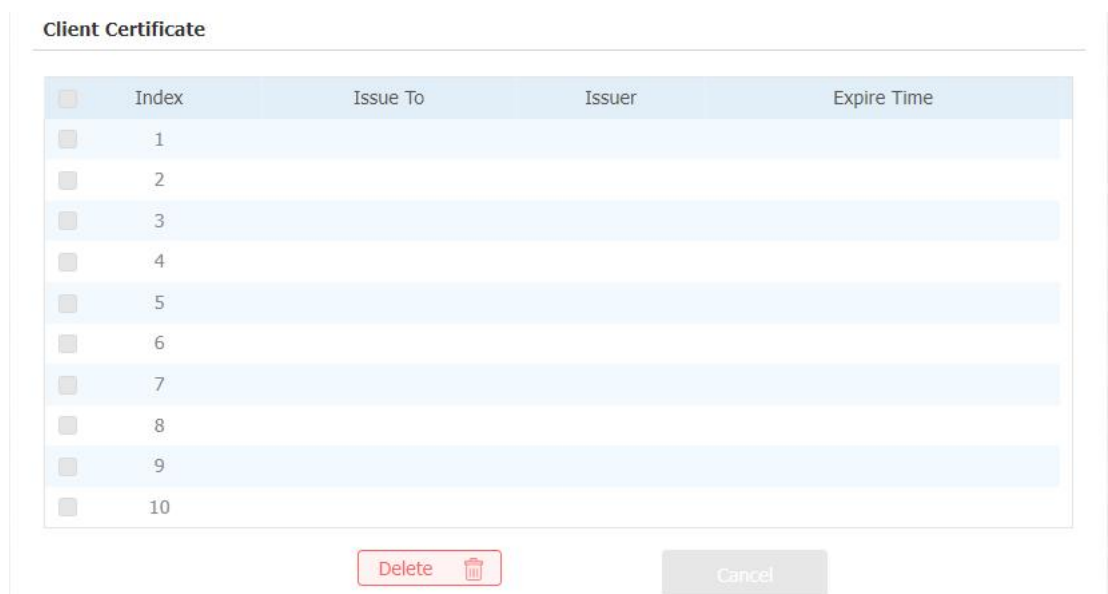

Parameter Set-up:


- **Index:** select the desired value from the drop-down list of Index. If you select Auto value, the uploaded certificate will be displayed in numeric order. If you select value from 1 to 10, the uploaded certificate will be displayed according to the value that the user selected.
- **Select File:** click Choose file browse local drive, and locate the desired certificate. (*.pem only)
- **Only Accept Trusted certificates:** if select Enabled, as long as the authentication success, the phone will verify the server certificate based on the client certificate list. If select Disabled, the phone will not verify the server certificate no matter whether the certificate is valid or not.

13.4. Motion Detection

Motion Detection is often used for unattended surveillance video and automatic alarms. The images collected by the camera at different frame rates will be calculated and compared by the CPU according to a certain algorithm. When the picture changes, if someone walks by, the lens is moved, the number obtained by the calculation and comparison result will exceed the threshold and indicate that the system can the corresponding processing is made automatically.

13.4.1. Motion Detection Setting on the Device

You can turn on the motion detection and set up the motion detection interval on the device Motion screen.

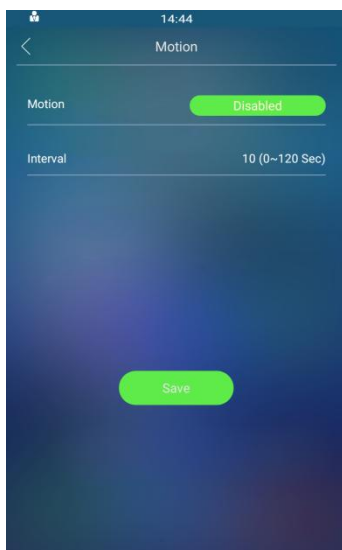

Parameter Set-up:

- **Interval:** IR detector receives an event, delays the number of seconds set by interval before triggering motion. When triggering, it will determine whether the time when the IR received the event is within 3 seconds from the time when the trigger was triggered. Interval is 0 second, it will not trigger motion. If the interval is 1-3 seconds, as long as the image movement is detected once in front of the IR detector, motion will be triggered. If interval time is over 3 seconds, for example, the interval is 10s, after the image movement is detected in front of the IR detector, the image movement is detected again within 7s-10s, that is, motion is triggered.

13.4.2. Motion Detection Setting on the Web Interface

On the device web Intercom > Motion > Motion Detection Options interface, you can not only configure the time interval but also the motion detection sensitivity and notification type when the motion detection action is triggered.

Motion Detection Options

Suspicious Moving O... Disabled

Timing Interval 10 (0~120 Sec)

Detection Accuracy 20 (0~6)

Action To Execute FTP Email SIP Call HTTP TFTP

HTTP URL

Action Relay None

Motion Detection Area

The width of detected area 0 % ~ 100 %

The height of detected area 0 % ~ 100 %

Submit
Cancel

Parameter Set-up:

- **Suspicious Moving Object Detection:** select “disable” to disable the motion detection. Select “IR detection” to enable the IR sensor based motion detection for the suspicious moving objects. And select “Video detection” to enable the video-based motion detection during the monitoring for the suspicious moving object.
- **Time Interval:** set the time interval in the same way as you do on the device.
- **Detection Accuracy:** set the detection accuracy for the detection sensitivity. The smaller value it is, the greater sensitivity. the default detection accuracy value is “20”.
- **Action To Execute:** select the notification type: FTP, Email, SIP Call, HTTP,TFTP. For example, If you select “FTP” then the notification will be sent in FTP to a designated serve while if you select “Email” then the notification will be sent in the form of emails when motion detection action is triggered.
- **Action relay:** select the relay to be triggered when a suspicious object is detected in the motion detection. Select “none” and no relay will be triggered.

the detection area is calculated by percentage (100%) from left to right. Pick the horizontal detection range anywhere from 0% to 100%, and pick the vertical detection range anywhere from 0% to 100%. After that, you will be able to get the exact detection area you want.

13.5. Security Notification Setting

13.5.1. Email Notification Setting

If you want to receive the security notification via email, you can configure the Email notification on the web Intercom > Action > Email Notification interface properly.

Email Notification

Sender's Email Addr...

Email SendName

Receiver's Email Addr...

Email RecvName

SMTP Server Address

SMTP User Name

SMTP Password

Email Subject

Email Content

Parameter Set-up:

- **Sender's Email Address:** enter the sender's email address from which the email notification will be sent out.
- **Email Send Name:** enter the name of the email sender.
- **Receiver's Email Address:** enter the receiver's email address.

- **Email RecvName:** enter the name of the email receiver.
- **SMTP Server Address:** enter the SMTP server address of the sender.
- **Port:** enter the port number from which the email is sent out.
- **SMTP User Name:** enter the SMTP user name, which is usually the same as sender's email address.
- **SMTP Password:** configure the password of the SMTP service, which is same as the sender's email address.
- **Email Subject:** enter the subject of the email.
- **Email Content:** compile the contents of emails according to your need.

13.5.2. FTP Notification setting

If you want to receive the security notification via FTP, you can configure the FTP notification on the web Intercom > Action > FTP Notification interface properly.



FTP Notification	<input type="checkbox"/>
FTP Server	<input type="text"/>
FTP User Name	<input type="text"/>
FTP Password	<input type="password"/>

Parameter Set-up:

- **FTP Server:** enter the address (URL) of the FTP server for the FTP notification.
- **FTP User Name:** enter the FTP server user name.
- **FTP Password:** enter the FTP server password.
- **FTP Path:** enter the folder name you created in the FTP server.

13.5.3. TFTP Notification Setting

If you want to receive the security notification via TFTP, you can configure the TFTP notification on the web Intercom > Action > TFTP Notification interface properly.



TFTP Notification

TFTP Server

Parameter Set-up:

- **TFTP server:** enter the address (URL) of the TFTP server for the TFTP notification.

13.5.4. SIP Call Notification

If you want to be notified via SIP call for the security notification, you can configure the SIP call notification on the web Intercom > Action > SIP Call Notification interface properly.



SIP Call Notification

SIP Call Number

SIP Caller Name

13.6. GDPR Setting

GDPR (General Data Protection Regulation) is used to encrypt the card data entered, if you want to better protect the card data you can set the GDPR function properly on the web Intercom > Advanced > Encrypted display of the card interface.

Encrypted display of the card

Enabled

Parameter Set-up:

- **Enabled:** enable or disable the GDPR function. If enabled, the card data will be encrypted automatically when an RF card is being added.

13.7. Package Delivery Notification

When your packages get delivered to your package room, you can be notified of the package delivered to you. To enable the function, you can go to **Intercom > Key/Display > Package Room**.

Delivery Setting Of Building Theme

Package Room

**Note:**

- This feature is only applicable to door phones that are connected to the Akuvox SmartPlus.

13.8. Action URL

R29C allows you to set up specific HTTP URL command that will be sent to the HTTP server for the predefined actions. Relevant actions will be initiated if there occurs any changes in the relay status, input status, PIN code, and RF card access for security purpose. Path: **Phone > Actions URL**.

Action URL

Active	<input type="checkbox"/>
Make Call	<input type="text"/>
Hang Up	<input type="text"/>
RelayA Triggered	<input type="text"/>
RelayB Triggered	<input type="text"/>
RelayC Triggered	<input type="text"/>
RelayA Closed	<input type="text"/>
RelayB Closed	<input type="text"/>
RelayC Closed	<input type="text"/>
InputA Triggered	<input type="text"/>
InputB Triggered	<input type="text"/>
InputC Triggered	<input type="text"/>
InputA Closed	<input type="text"/>
InputB Closed	<input type="text"/>
InputC Closed	<input type="text"/>
Valid Code Entered	<input type="text"/>
Invalid Code Entered	<input type="text"/>
Valid Card Entered	<input type="text"/>

14. Monitor and Image

14.1. Mjpeg Image Capturing

R29C allows you to capture the Mjpeg format monitoring image if needed. You can enable the Mjpeg function and set the image quality on the web Intercom > RTSP > Mjpeg interface.



Parameter Set-up:

- **Enable:** enable or disable the Mjpeg service.
- **Image Quality:** select the quality for the image capturing among seven options: QCIF, QVGA, CIF, VGA, 4CIF, 720P, 1080P.

After the Mjpeg service is enabled, you can capture the image from the door phone using the following three types of URL format:


- `http:// device ip:8080/picture.cgi`
- `http://device ip:8080/picture.jpg`
- `http://device ip:8080/jpeg.cgi`

For example, if you want to capture the jpg format image of the door phone with the IP address:192.168.1.104, you can enter "http://192.168.1.104:8080/picture.jpg" on the web browser.

14.2. Live Stream

If you want to check the real-time video from the R29C door phone, you can go to the device web Intercom > Live Stream interface to obtain the real-time video or you can also enter the correct URL on the web browser to obtain it

directly.

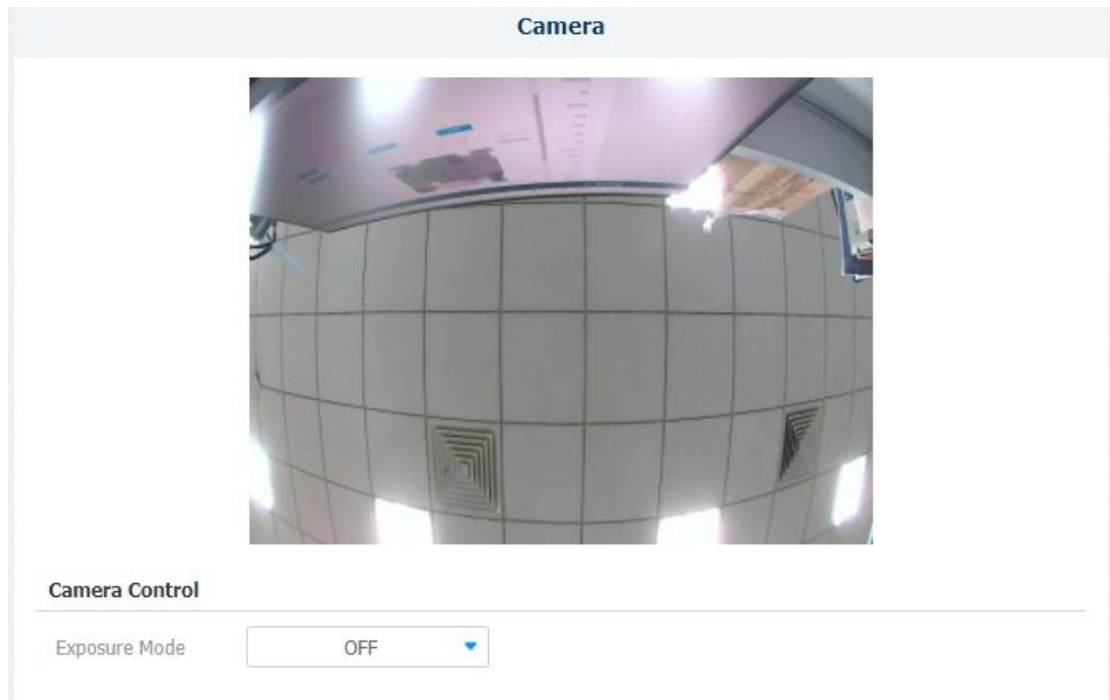

Enter the correct URL (http://IP_address:8080/video.cgi) on the web browser if you want to obtain the real-time video directly by going to the web interface.




14.3. RTSP Stream Monitoring

R29C support the RTSP stream that allows intercom devices such as an indoor monitor or the monitoring unit from the third party to monitor or obtain the real time audio/ video (RTSP stream) from the door phone using the correct URL.

14.3.1. RTSP Basic Setting

You are required to set up RTSP function on device web Intercom > RTSP > RTSP Basic interface in terms of RTSP Authorization, authentication and password, etc., before you are able to use the function.

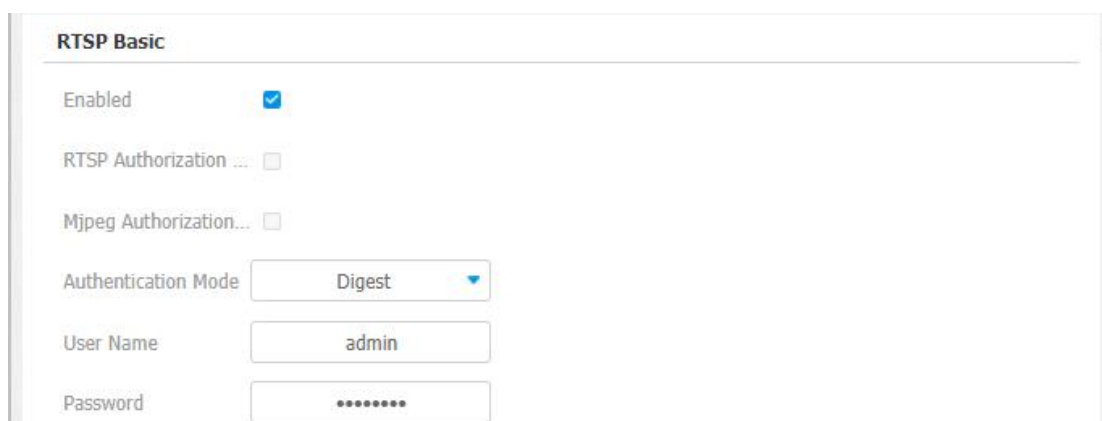

RTSP Basic

Enabled

RTSP Authorization

Mjpeg Authorization

Authentication Mode

User Name

Password

Parameter Set-up:

- **Enabled:** enable the RTSP if needed.
- **RTSP Authorization:** enable or disable the RTSP authorization. If you enable the RTSP Authorization, you are required to enter RTSP Authentication Type, RTSP Username, RTSP Password on the intercom device such as an indoor monitor for authorization.
- **Authentication Mode:** select RTSP authentication type between " Basic" and " Digest". "Basic " is the default authentication type.
- **User Name:** enter the name used for RTSP authorization.
- **Password:** enter the password for RTSP authorization.

14.3.2. RTSP Stream Setting

You can select the video codec format for the RTSP stream for the monitoring and configure video resolution and bit-rate etc., based on your actual network environment on the web Intercom > RTSP > RTSP stream interface.

The screenshot shows the 'RTSP Stream' configuration page. At the top, there is a 'Video Codecs' dropdown menu currently set to 'H.264'. Below this, the 'H.264 Video Parameters' section contains several settings, each with a dropdown menu: 'Video Resolution' is set to '4CIF', 'Video Framerate' is '25 fps', 'Video Bitrate' is '2048 kbps', '2nd Video Resolution' is 'VGA', '2nd Video Framerate' is '25 fps', and '2nd Video Bitrate' is '512 kbps'.

Parameter Set-up:

- **Video Codec:** select between two types of codec options: H.264 and Mjpeg according to your need.
- **Video Resolution:** select video resolutions among seven options: QCIF, QVGA, CIF, VGA, 4CIF, 720P, 1080P. The default video resolution is 720P. and the video from the door phone might not be able to be shown in the indoor monitor if the resolution is set higher than 720P.
- **Video Framerate:** 25fps is the video frame rate by default.
- **Video Bitrate:** select video bit-rate among six options: 128 kbps, 256kbps, 512kbps, 1024kbps, 2048 kbps, 4096kbps according to your network environment. The default video bit-rate is 2048 kbps.
- **2nd Video Resolution:** select video resolution for the second video stream channel. While the default video solution is VGA.
- **2nd Framerate:** 25fps is the video frame rate by default for the second video stream channel.

- **2nd Video Bitrate:** select video bit-rate among the six options for the second video stream channel. While the second video stream channel is 512 kbps by default.

**Note:**

- R29C supports two video stream channels for H.264 codec video stream.

14.4. ONVIF

Real-time video from the R29C door phone camera can be searched and obtained by the Akuvox indoor monitor or by third party devices such as NVR (Network Video Recorder) you can configure the ONVIF function in the door phone web Intercom > ONVIF >Basic Setting interface so that other device will be able to see the video from the door phone.

Basic Setting	
Discoverable	<input checked="" type="checkbox"/>
User Name	<input type="text" value="admin"/>
Password	<input type="password" value="*****"/>

Parameter Set-up:

- **Onvif Mode:** select "Discoverable" or "Non- Discoverable" to turn on or turn off the ONVIF mode. If you select "Discoverable" then the video from the door phone camera can be searched by other devices. ONVIF mode is "Discoverable" by default.
- **UserName:** enter the user name. The user name is "admin" by default.
- **Password:** enter the password. The password is "admin" by default.

After the setting is complete, you can enter the ONVIF URL on the third party

device to view the video stream.

For example: http://IP address:80/onvif/device_service




Note:

- Fill in the specific IP address of the door phone in the URL.

14.5. Door Phone Camera Exposure Adjustment

Door phone camera exposure can be turned on the web Intercom > Camera > Camera Control interface in order that indoor monitors or third part devices can obtain the video with improved quality.

Camera

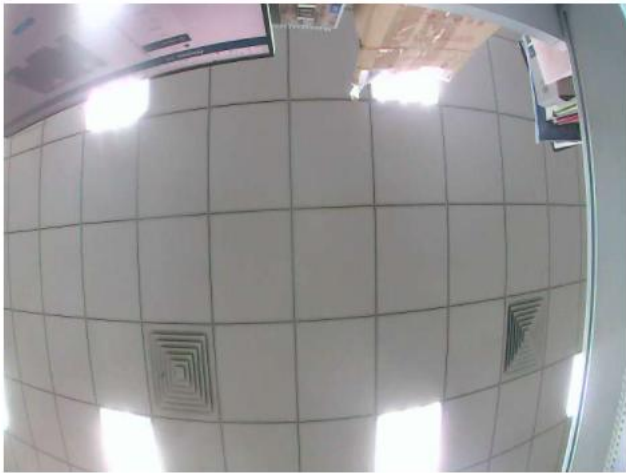

Camera Control

Exposure Mode


Parameter Set-up:

- **Exposure Mode: turn on the camera exposure mode if needed.**

15. Logs

15.1. Call Logs

If you want to check on the calls inclusive of the dial-out calls, received calls and missed calls in a certain period of time, you can check and search the call log on the device web Phone > Call Log interface and export the call log from the device if needed.

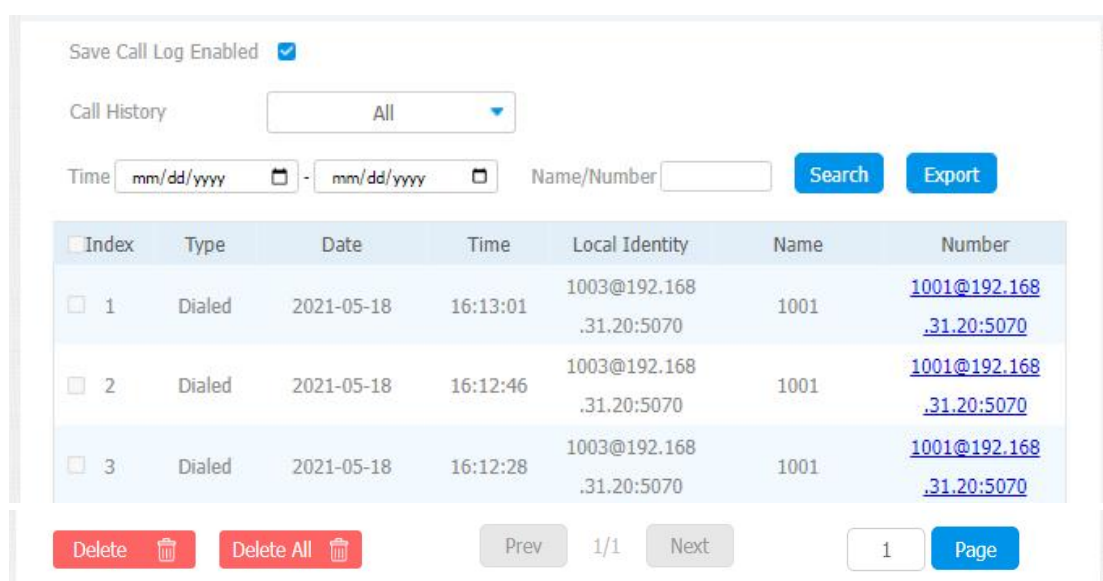

Parameter Set-up:

- **Save Call Log Enabled:** select "Enable" or "Disable " to turn on or turn off the call log function.
- **Call History:** select call history among four options: "All", "Dialed" "Received" "Missed" for the specific type of call log to be displayed.
- **Time:** select the specific time span of the call logs you want to search, check or export.
- **Name/Number:** select the "Name" and "Number" options to search call log by the name or by the SIP or IP number.

15.2. Door Logs

If you want to search and check on the various types of door access history, you can search and check the door logs on the device web Phone > Door log interface.

The screenshot shows the 'Door Log' interface. At the top, there is a 'Save Door Log Enable...' checkbox which is checked. To its right is an 'Export' button with a dropdown arrow. Below these are search filters: a dropdown menu set to 'All', two date pickers for 'Time' (format mm/dd/yyyy), and a text input for 'Name/Code'. A 'Search' button is to the right of the input. The main area contains a table with the following data:

Index	Name	Code	Type	Date	Time	Status	
<input type="checkbox"/>	1	FaceKey	Unknown	Face	2021-11-19	17:15:31	Failed
<input type="checkbox"/>	2	FaceKey	Unknown	Face	2021-11-18	19:23:14	Failed
<input type="checkbox"/>	3	FaceKey	Unknown	Face	2021-11-18	12:01:56	Failed
<input type="checkbox"/>	4	FaceKey	Unknown	Face	2021-11-15	13:51:39	Failed
<input type="checkbox"/>	5	FaceKey	Unknown	Face	2021-11-11	16:01:25	Failed
<input type="checkbox"/>	6	FaceKey	Unknown	Face	2021-11-11	15:36:42	Failed
<input type="checkbox"/>	7	FaceKey	Unknown	Face	2021-11-11	15:36:37	Failed
<input type="checkbox"/>	8	FaceKey	Unknown	Face	2021-11-11	15:36:30	Failed
<input type="checkbox"/>	9	FaceKey	Unknown	Face	2021-11-11	15:36:24	Failed
<input type="checkbox"/>	10	FaceKey	Unknown	Face	2021-11-11	15:36:18	Failed
<input type="checkbox"/>	11	FaceKey	Unknown	Face	2021-11-04	19:06:04	Failed
<input type="checkbox"/>	12		0016624075	Card	2021-11-04	15:14:17	Success
<input type="checkbox"/>	13		0016624075	Card	2021-11-04	15:02:17	Success
<input type="checkbox"/>	14	FaceKey	Unknown	Face	2021-11-04	14:18:47	Failed
<input type="checkbox"/>	15	FaceKey	Unknown	Face	2021-11-04	14:18:30	Failed

At the bottom of the interface, there are buttons for 'Delete' (with a trash icon), 'Delete All' (with a trash icon), 'Prev', '1/5', 'Next', and 'Page' (with a dropdown showing '1').

Parameter Set-up:

- **Save Door Log Enable:** select "Enable" or "Disable" to turn on or turn off the door log function.
- **Time:** select the specific time span of the door logs you want to search, check or export.
- **Name/Code:** select the "Name" and "Code" options to search door log by the name or by the PIN code.

16. Debug

16.1. System Log for Debugging

System log in the door phone can be used for debugging purpose. If you want to export the system out to a local PC or to a remote server for debugging, you can set up the function on the web Upgrade > Advanced > System Log interface.

The screenshot shows the 'System Log' configuration page. It includes a dropdown menu for 'LogLevel' currently set to '7'. Below it are two blue buttons with document icons and the text 'Export', labeled 'Export Log' and 'Export Debug Log'. There is a checkbox for 'Remote System Log ...' which is currently unchecked. At the bottom, there is a text input field for 'Remote System Serv...'.


Parameter Set-up:

- **LogLevel:** select log levels from 1 to 7 levels. You will be instructed by Akuvox technical staff about the specific log level to be entered for debugging purpose. The default log level is "3". the higher the level is, the more complete the log is.
- **Export Log:** click the Export tab to export the temporary debug log file to a local PC.
- **Export Debug Log:** click the Export tab to export debug log file to a local PC.
- **Remote System Log:** select "Enable" or "Disable" if you want to enable or disable the remote system log.
- **Remote System Server:** enter the remote server address to receive the device log. And the remote server address will be provided by Akuvox

technical support.

16.2. PCAP for Debugging

PCAP in R29C door phone is used to capture the data package going in and out of the devices for debugging and troubleshooting purpose. You can set up the PCAP on the device web Upgrade > Advanced > PCAP interface properly before using it.

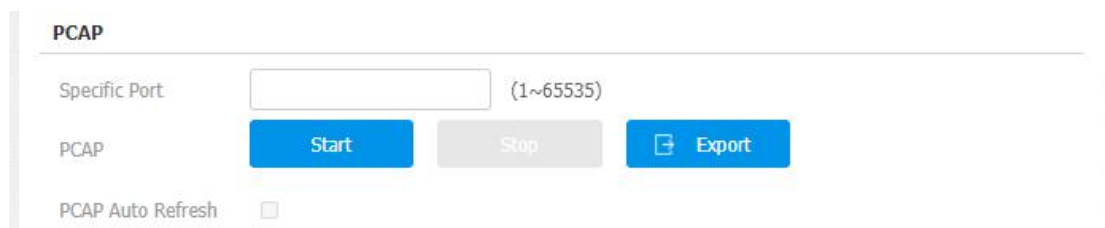

PCAP

Specific Port (1~65535)

PCAP

PCAP Auto Refresh

Parameter Set-up:

- **Specific Port:** select the specific ports from 1-65535 so that only the data packet from the specific port can be captured. You can leave the field blank by default.
- **PCAP:** click Start tab and Stop tab to capture a certain range of data packets before clicking Export tab to export the data packets to your Local PC.
- **PCAP Auto Refresh:** select "Enable" or "Disable" to turn on or turn off the PCAP auto fresh function. If you set it as "Enable" then the PCAP will continue to capture data packet even after the data packets reached their 50M maximum in capacity. If you set it as "Disable" the PCAP will stop data packet capturing when the data packet captured reached the maximum capturing capacity of 1MB.

16.3. User Agent

SIP user agent (UA) is an endpoint device that supports SIP, which is used to establish connections and enable sessions between two endpoint devices. And a UA is comprised of UAC (User Agent Client) and UAS (User Agent server) with the UAC used to issue requests and UAS used to issue a response. UA acts as a SIP service provider for the specific user (device). You can customize user agent field in the SIP message. if the user agent is set to a specific value, users can see the information from PCAP. If the user agent is blank, by default, users can see the company name "Akuvox", model number and firmware version from PCAP. Path: Account > Advanced > User Agent interface.



User Agent

User Agent


Parameter Set-up:

- **User Agent:** support to enter another specific value, Akuvox is by default.

17. Password Modification

17.1. Modifying Device Setting Password

Project passwords are what needs to be entered before you are allowed to enter the set password, which enables you to enter the device Password screen for the configuration and adjustment. You can change the project password on the device directly.

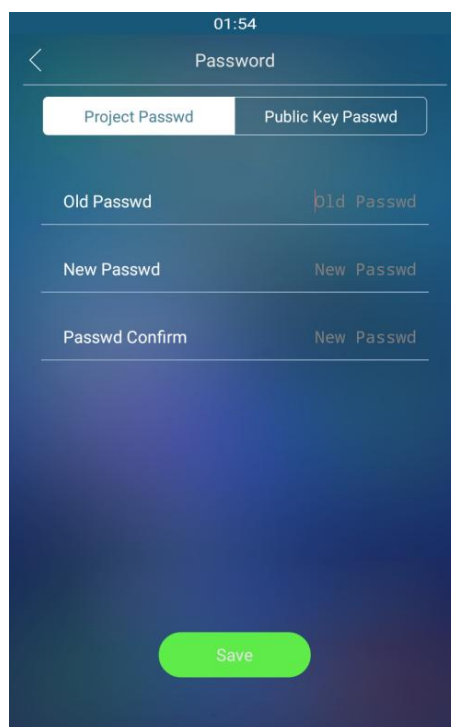

Note:

- The initial project password is "9999", which can be considered as the old password when you modify the project password for the first time.

To modify password on the web interface, navigate to Intercom > Basic > **AKUVOX SMART INTERCOM** www.akuvoy.com **135**

System PIN interface, you can access and change both the project passwords and set passwords if needed.

System PIN	
Step1 PIN	<input type="text" value="3888"/>
Step2 PIN	<input type="text" value="3888"/>

Parameter Set-up:

- **Step1PIN:** enter the four-digit project new password to replace the old one. The initial project password is "9999".
- **Step2 PIN:** enter the four-digit setting password to replace the old one. The initial setting password is "3888".

17.2. Modifying Device Web Interface Password

To modify device web interface password, navigate to Security > Basic > Web Password Modify.

Basic	
Web Password Modify	
User Name	<input type="text" value="admin"/> ▼ <input type="button" value="Change Password"/>
Account Status	
admin	Enabled
user	<input type="text" value="Enabled"/> ▼

Change Password

The password must be at least eight characters long containing one uppercase letter, one lowercase letter and one digit at least


User Name	user
Old Password	<input type="text"/>
New Password	<input type="text"/>
Confirm Password	<input type="text"/>

Parameter Set-up:

- **User Name:** modify the admin or user password if needed.
- **User:** enable the user account if needed.

18. Firmware Upgrade

Firmwares of different versions for the R29C door phone can be upgraded on the device web Upgrade > Basic interface.

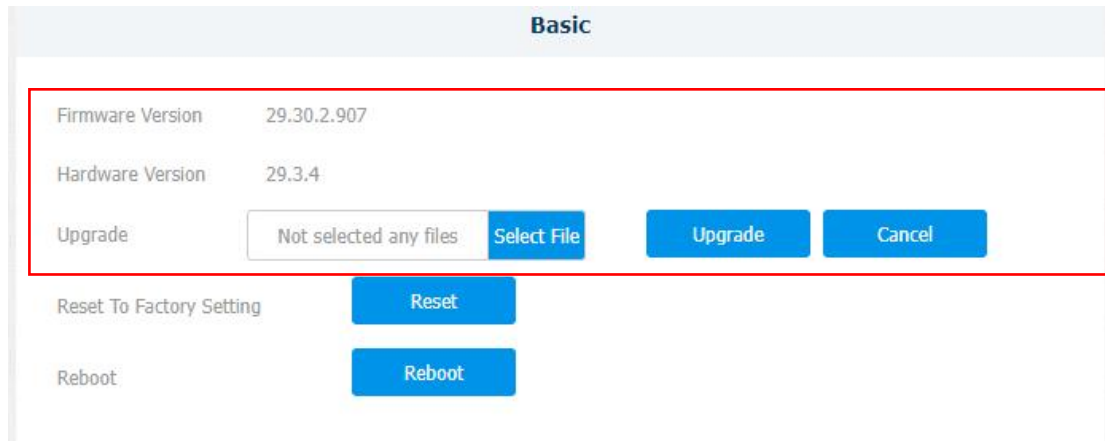


The screenshot shows the 'Basic' interface for firmware upgrade. It displays the current Firmware Version (29.30.2.907) and Hardware Version (29.3.4). Below this, there is an 'Upgrade' section with a file selection area showing 'Not selected any files', a 'Select File' button, and 'Upgrade' and 'Cancel' buttons. At the bottom, there are 'Reset To Factory Setting' and 'Reboot' options, each with a corresponding blue button.

**Note:**

- Firmware files should be .zip format for upgrade.

19. Backup

Configuration files can be imported to or exported out of the device to your local PC on the device web Upgrade > Advanced > Others interface if needed.

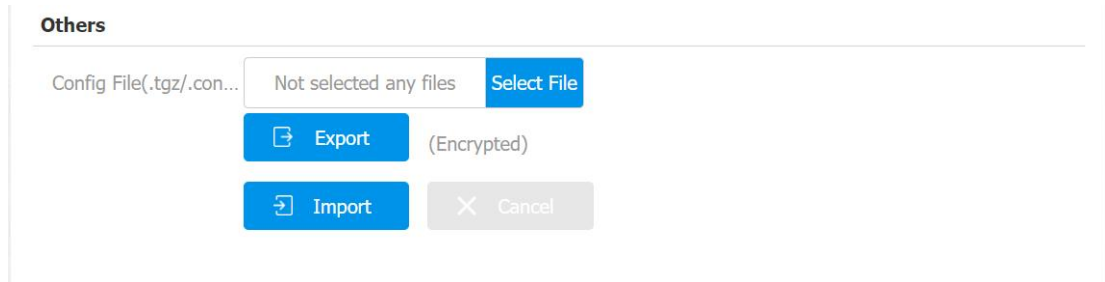


20. Auto-provisioning via Configuration File

Configurations and upgrading on R29C door phone can be done on the web interface via one-time auto-provisioning and scheduled auto-provisioning via configuration files, thus saving you from setting up configuration needed one by one manually on the door phone.

20.1. Provisioning Principle

Auto-provisioning is a feature used to configure or upgrade the devices in batch via third party servers. DHCP, PNP, TFTP, FTP, HTTPS are the protocols used by the Akuvox intercom devices to access the URL of the address of the third party server which stores configuration files and firmwares, which will then be used to update the firmware and the corresponding parameters on the door phone.

Please see the flow chart below:

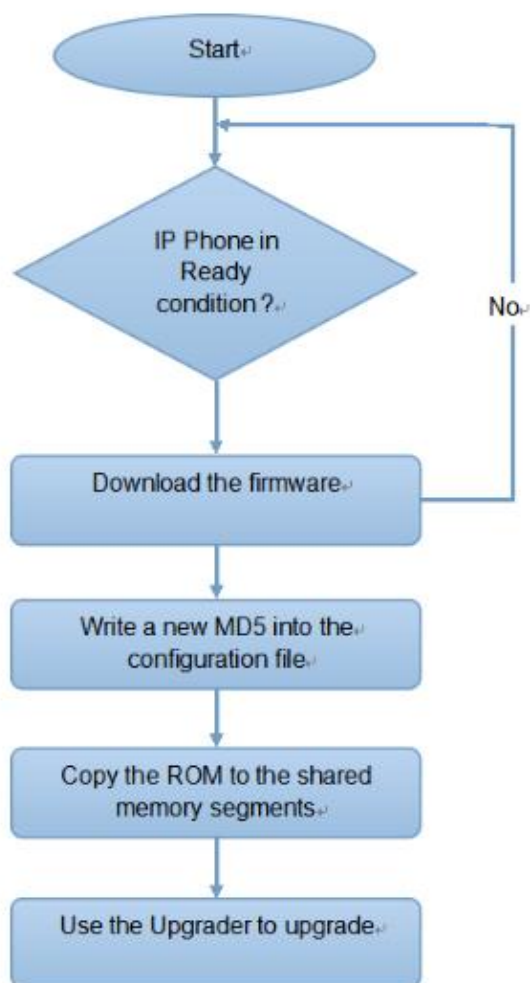

20.2. Configuration Files for Auto-provisioning

Configuration files have two formats for auto-provisioning. One is the general configuration files used for general provisioning and another one is MAC-based configuration provisioning.

The difference between the two types of configuration files is shown as below:

- **General configuration provisioning:** a general file is stored in a server from which all the related devices will be able to download the same configuration file to update parameters on the devices. For example : r000000000083.cfg.
- **MAC-based configuration provisioning:** MAC-based configuration files

are used for the auto-provisioning on a specific device as distinguished by its unique MAC number. And the configuration files named with the device MAC number will be matched automatically with the device MAC number before being downloaded for the provisioning on the specific device.

**Note:**

- If a server has these two types of configuration files, then IP devices will first access the general configuration files before accessing the MAC-based configuration files.

20.3. AutoP Schedule

Akuvox provides you with different Autop methods that enable the door phone to perform provisioning for itself at a specific time according to your schedule. To set up the schedule on the device web Upgrade > Advanced > Automatic Autop interface.

Automatic Autop

Mode: Repeatedly

Auto Clear MD5: Disabled

Schedule: Sunday

Hour(0~23): 22

Min(0~59): 0

Clear MD5: Submit

Export Autop Templ...: Export

Automatic Autop

Mode: Power On ▼

Schedule: Sunday ▼

22 (0~23 hour) 0 (0~59 min)

Clear MD5: Clear

Export Autop Templ...: Export

Parameter Set-up:

- **Mode:** select “Power on”, if you want the device to perform Autop every time it boots up. Select “ Repeatedly”, if you want the device to perform autop according to the schedule you set up. Select “Power On + Repeatedly” if you want to combine Power On Mode and Repeatedly mode that will enable the device to perform Autop every time it boots up or according to the schedule you set up. Select “Hourly Repeat” if you want the device to perform Autop every hour.
- **Schedule:** if “Repeatedly” is selected, you can set up the time schedule for the AutoP.

20.4. DHCP Provisioning Configuration

Auto-provisioning URL can also be obtained using the DHCP option which allows the device to send a request to a DHCP server for a specific DHCP option code. If you want to use Custom Option as defined by users with option code range from 128-255), you are required to configure DHCP Custom Option on the web Upgrade > Advanced > Automatic Autop interface.

Automatic Autop


Mode:

Schedule:

(0~23 hour) (0~59 min)

Clear MD5:

Export Autop Templ...

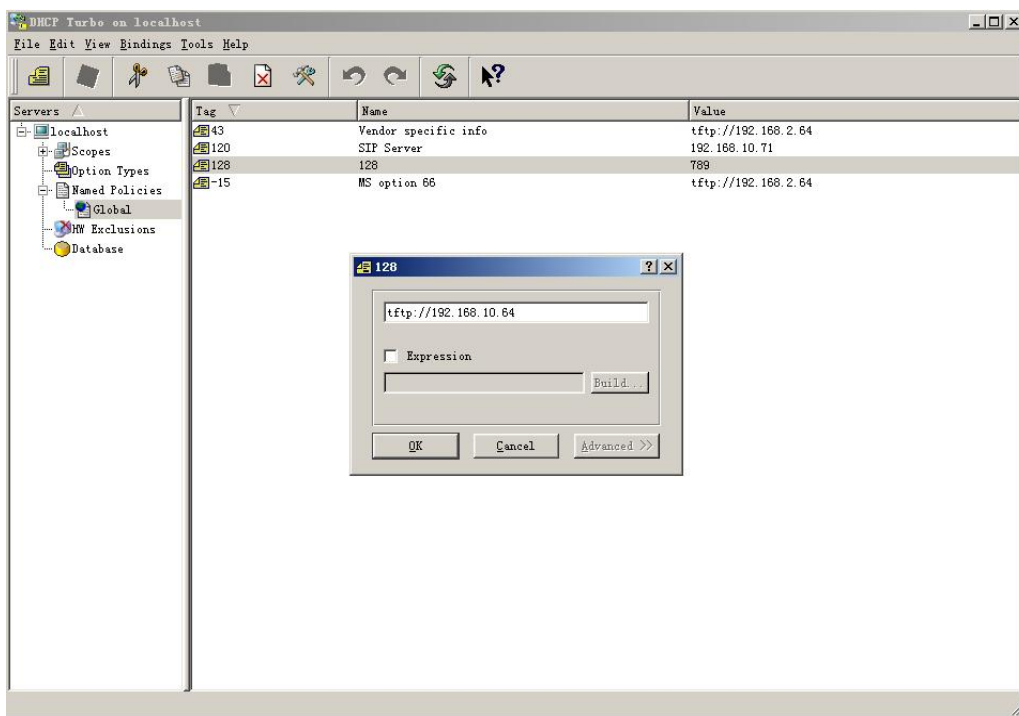

Note:

- The custom Option type must be a string. The value is the URL of the TFTP server.

DHCP Option

Custom Option

(128~254)

(DHCP Option 66/43 is Enabled by Default)

Parameter set-up:

- **Custom Option:** enter the DHCP code that matched with the corresponding URL so that the device will find the configuration file server for the configuration or upgrading.
- **DHCP Option 66:** if none of the above is set, the device will automatically use DHCP Option 66 for getting the upgrade server URL. This is done within the software and the user does not need to specify this. To make it work, you need to configure the DHCP server for option 66 with the updated server URL in it.
- **DHCP Option 43:** if the device does not get an URL from DHCP Option 66, it will automatically use DHCP Option 43. This is done within the software and the user does not need to specify this. To make it work, you need to configure the DHCP server for option 43 with the updated server URL in it.

**Note:**

- The general configuration file for the in-batch provisioning is with the format "r0000000000xx.cfg" taking R29C as an example "r000000000029.cfg" (10 "zeros" in total while the MAC-based configuration file for the specific device provisioning is with the format MAC_Address of the device.cfg, for example, "0C110504AE5B.cfg."

20.5. Static Provisioning Configuration

You can manually set up a specific server URL for downloading the firmware

or configuration file on the device web interface. If an autop schedule is set up, the door phone will perform the auto provisioning at a specific time according to autop schedule you set up. In addition, TFTP, FTP, HTTP, and HTTPS are the protocols that can be used for upgrading the device firmware and configuration. To download the Autop template on Upgrade > Advanced > Automatic Autop, and setup Autop server on Upgrade > Advanced > Manual Autop interface.

Automatic Autop

Mode

Schedule

(0~23 hour) (0~59 min)

Clear MD5

Export Autop Templ...

Manual Autop

URL User Name

Password Common AES Key

AES Key(MAC)

Parameter Set-up:

- **URL:** set up tftp, http, https, ftp server address for the provisioning.
- **User Name:** set up a user name if the server needs a user name to be accessed otherwise leave it blank.
- **Password:** set up a password if the server needs a password to be accessed otherwise leave it blank.
- **Common AES Key:** set up AES code for the intercom to decipher general Auto Provisioning configuration file.

- **AES Key (MAC): set up AES code for the intercom to decipher the MAC-based auto provisioning configuration file.**

**Note:**

- **AES is one type of encryption, it should be configured only when the config file is encrypted with AES, otherwise leave the field blank.**

**Note:****Server Address format:**

- **TFTP: tftp://192.168.0.19/**
- **FTP: ftp://192.168.0.19/ (allows anonymous login)**
ftp://username:password@192.168.0.19/(requires a user name and password)
- **HTTP: http://192.168.0.19/ (use the default port 80)**
http://192.168.0.19:8080/ (use other ports, such as 8080)
- **HTTPS: https://192.168.0.19/ (use the default port 443)**

**Note:**

- **Akuvox do not provide user specified server.**
- **Please prepare TFTP/FTP/HTTP/HTTPS server by yourself.**

20.6. TR069

TR-069 (Technical Report 069) provides the communication between Customer-Premises Equipment (CPE) and Auto-Configuration Servers (ACS). It includes both a safe auto configuration and the control of other CPE management functions within an integrated framework. For door phones, the administrators can manage all the devices on a common TR-069 Platform. IP phones can be easily and securely configured on the TR-069 platform to make mass deployment more efficient. You can Navigate to Network > Advanced > TR069.

TR069			
	Enabled	<input type="checkbox"/>	
	Version	<input type="text" value="1.0"/>	
ASC	URL	<input type="text"/>	
	User Name	<input type="text"/>	
	Password	<input type="password" value="*****"/>	
Periodic Inform	Enabled	<input type="checkbox"/>	
	Periodic Interval	<input type="text" value="1800"/>	(3~24×3600s)
CPE	URL	<input type="text"/>	
	User Name	<input type="text"/>	
	Password	<input type="password" value="*****"/>	

Parameter Set-up:

- **Enabled:** enable the function if needed.
- **Version:** to select supported TR069 version (version 1.0 or 1.1).
- **ACS/CPE:** ACS is short for auto configuration servers as server-side, and CPE is short for customer-premise equipment as client-side devices.
- **URL:** to configure URL address for ACS or CPE.

- **User Name:** to configure username for ACS or CPE.
- **Password:** to configure the password for ACS or CPE.
- **Periodic Inform:** to enable periodically inform.
- **Periodic Interval:** to configure the interval for periodic inform.

**Note:**

- **TR-069 is a technical specification entitled CPE WAN Management Protocol (CWMP). It defines an application layer protocol for remote management of end-user devices.**

**Note:**

- **Please refers to the link below for more information.**

<https://knowledge.akuvox.com/docs/how-to-setup-tr069?highlight=TR>

21. Device Integration with Third Party Device

21.1. Integration via Wiegand

The door phone Wiegand interface is used to connect the door phone to the third party devices for data transmission via Wiegand protocol. If you want to integrate the R29C door phone with third party devices via Wiegand, you can configure the Wiegand on the web interface. Path: Intercom > Wiegand > Wiegand.

Wiegand	
Wiegand Display Mo...	8HN
Wiegand Card Read...	Wiegand-26
Wiegand Transfer M...	Output
Wiegand Input Data...	Normal
Wiegand Output Dat...	Normal
Wiegand Output CRC	Enabled
RF Card Verification	Enabled

Parameter set-up:

- **Wiegand Display Mode:** select Wiegand Card code format among 8H10D; 6H3D5D; 6H8D; 8HN; 8HR; RAW.
- **Wiegand Card Reader Mode:** set the wiegand data transmission format among three options: "Wiegand 26", "Wiegand 34", "Wiegand 58". The transmission format should be identical between the door phone and the device to be integrated.
- **Wiegand Transfer Mode:** select Input, Output, Convert to Card No. Output Wiegand. if the door phone is used as a receiver, then set it as "Input" for the door phone. Select "Output" if you want Wiegand output to be converted to card number before sending it from the door phone to a receiver. For facial recognition access, the user card number corresponding to the facial recognition access will be sent out in a binary system.

- **Wiegand Input Data Order:** set the Wiegand input data sequence between " Normal" and "Reversed" if you select " Reversed" then the input card number will be reversed and vice versa.
- **Wiegand Output Data Order:** set the Wiegand output data sequence between " Normal" and "Reversed" if you select " Reversed" then the input card number will be reversed and vice versa.
- **Wiegand Output CRC:** tick to enable the parity check function to ensure that signal-based data can be transmitted correctly according to the established data transmission format.

You can configure the Wiegand output mode if needed. The output occurs when you press the PIN code on the device.



Parameter Set-up:

- **PIN:** select "Disabled" if you want to disable the function. Select "4 bits per digit" if you want to output the PIN code by four continuous bits as a set. Select "8 bits per digit" if you want to output the PIN code by eight continuous bits as a set.

21.2. Integration with Milestone

If you want to integrate the door phone with the Milestone VMS system for monitoring purpose. You need to enable the Milestone integration first before you can integrate them. You can navigate to Intercom > ONVIF > Advanced Setting.

Advanced Setting

Milestone Enabled

21.3. Integration via HTTP API

HTTP API is designed to achieve a network-based integration between the third party device with the Akuvox intercom device such R29C door phone. You can configure the HTTP API function on the web Intercom > HTTP API interface for the integration.

HTTP API

Enabled

Authorization Mode

User Name

Password

1st IP

2nd IP

3rd IP

4th IP

5th IP

Parameter set-up:

- **Enabled:** enable or disable the HPTT API function for the third party integration. For example, if the function is disabled any request to initiate the integration will be denied and be returned HTTP 403 forbidden status.

- **Authorization Mode:** select among four options: "None" "WhiteList" "Basic", "Digest" for authorization type, which will be explained in detail in the following chart.
- **User Name:** enter the user name when "Basic" and "Digest" authorization mode is selected. The default user name is "Admin".
- **Password:** enter the password when "Basic" and "Digest" authorization mode is selected. The default user name is "Admin".
- **1st IP-5th IP:** enter the IP address of the third party devices when the "WhiteList" authorization is selected for the integration.

Please refer to the following description for the Authentication mode

NO.	Authorization Mode	Description
1	None	No authentication is required for HTTP API as it is only used for demo testing.
2	Normal	This mode is used by Akuvox developer only
3	WhiteList	If this mode is selected, you are only required to fill in the IP address of the third party device for the authentication. The whitelist is suitable for operation in the LAN
4	Basic	If this mode is selected, you are required to fill in the User name and the password for the authentication. In Authorization field of HTTP request header, use Base64 encode method to encode of username and password.
5	Digest	Password encryption method, only supports MD5. MD5(Message-Digest Algorithm) In Authorization field of Http request header: WWW-Authenticate:Digest realm="HTTPAPI",qop="auth,auth-int",nonce="xx", opaque="xx".
6	Token	This mode is used by Akuvox developer only

21.4. Lift Control Configuration

Integration between R29C door phone and third party devices such as intercom devices for door access and lift control should be configured in the device web-interface before the integration can be made.

Life control should be configured properly on the door phone's web Intercom > Lift Control > Lift Control List interface before you can implement the integration between the door phone and the third party devices.



The screenshot shows a web interface for configuring lift control. At the top, there is a header 'Lift Control List'. Below the header, there is a label 'Lift Control List' followed by a dropdown menu. The dropdown menu currently displays 'None' with a small downward arrow to its right.

Parameter Set-up:

- **Life Control List:** select integration mode among seven Options: None, OSDP, Dahua, Lift control, KEYKINGZKT, Akuvox EC32. The detail for the options will be provided in the following chart.

NO.	Integration Mode	Description
1	None	If you select "None" then the RS485 integration will be disabled.
2	OSDP	If you Select " OSDP" Mode, then the integration communication between the R29C door phone and the third party device is via OSDP protocol. You are required to check for the device integration protocol and make sure if that they use the same integration protocol.
3	Akuvox EC32	Select" Akuvox EC32" if you want to connect the device with Akuvox EC32 lift controller.
4	Dahua	Dahua is originally manufacturer of the Dahua lift controller, which is also seen as an integration mode for the integration with the Dahua lift controller in the OEM project.
5	KEKING	Select "KEYKING" if you want to integrate with KEYKING lift controller.
6	ZKT	Select "ZKT" if you want to integrate with ZKTeco lift controller


Note:

- Please consult with Akuvox technical support if you have any inquiries on the integration mode of any OEM lift controller integration project.

21.5. OSDP Setting

If you choose OSDP integration mode on device web Lift Control > OSDP Advance Setting interface, you can not only check for OSDP status but also obtain the authentication from the third party devices for various applications such as door access ,etc.

Osdp Advance Setting

Connect Status: Disconnected

OSDP Address: 1

Dummy Card Number: 0

Send By: OSDP

Dummy PIN Number:

Send

Parameter Set-up:

- **Connect Status:** indicate OSDP based communication status.
- **OSDP Address:** you can obtain the specific OSDP Address from the solution provider.
- **Dummy Card Number:** enter the card number in order to obtain the authentication by the third party devices such as opening the lift door, closing the door or other forms of door access, etc.
- **Dummy PIN number:** enter the PIN code in order to obtain the authentication from the third party devices such as opening the lift door, closing the door and so on.
- **Send by:** select in what way you want to send out the card number among three options: "OSDP", "Wiegand" and "None". If you select "OSDP" then the card number will be sent out to the third party devices via RS485. If you select " Wiegand" then the card number will be sent out via Wiegand. If you select "None" then the card number will not be sent out but retained in the system.

**Note:**

- Dummy card numbers can not be sent if “OSDP” is not selected in the lift control list field.

21.6. KeyKing Setting

To integrate the KeyKing lift controller, you are required to set up the KeyKing address obtained from your solution provider. You can navigate to Lift Control > KeyKing Advance Setting.

KeyKing Advance Setting

KeyKing Address

Parameter Set-up:

- **KeyKing Address:** select the KeyKing address provided by your solution provider. The address number must be identical to the address number on the lift controller board.

21.7. Akuvox EC32 Lift Controller

You are required to configure Akuvox EC32 before you can connect the door phone to the lift controller. You can navigate to Lift Control > Akuvox EC32 & ZKT Advance Setting.

Akuvox EC32 & ZKT Advance Setting

Server IP

Port (1~65535)

Timeout (1~60s)

Akuvox EC32 Action

User Name

Password

Floor NO. Parameter

URL To Trigger Spec...

URL To Trigger All Fl...

URL To Close All Flo...

Parameter Set-up:

- **Server IP:** enter the IP address of the Akuvox EC32 controller server.
- **Port:** enter the port of Akuvox EC32 controller server.
- **Timeout:** enter the lift controller timeout. For example, if you enter 30 seconds, then you have to press the floor buttons on the lift controller in 30 seconds after you, for example, swipe the card, otherwise, the floor button will become invalid.
- **User Name:** enter the user name of the lift controller for the authentication.
- **Password:** enter the password of the lift controller for the authentication.
- **Floor NO. Parameter:** enter the Floor number parameter provided by Akuvox.
- **URL To Trigger Specific Floor:** enter the URL for triggering a specific floor.
- **URL To Trigger All Floors:** enter the URL for triggering all floors.
- **URL To Close All Floors:** enter the URL used for closing all floors.

21.8. ZKT Lift Controller

You are required to configure the ZKTeco lift controller before you can connect the door phone to the lift controller. You can navigate to Lift Control > Akuvox EC32 & ZKT Advance Setting.

Akuvox EC32 & ZKT Advance Setting

Server IP	<input type="text"/>	
Port	<input type="text"/>	(1~65535)
Timeout	<input type="text" value="60"/>	(1~60s)

Parameter Set-up:

- **Server IP:** enter the IP address of the ZKTeco controller server.
- **Port:** enter the port of ZKTeco controller server.
- **Timeout:** enter the lift controller timeout. For example, if you enter 30 seconds, then you have to press the floor buttons on the lift controller in 30 seconds after you, for example, swipe the card, otherwise, the button will become invalid.

21.9. Mobile Community

You can connect the door phone to the third party QR code server for QR code verification. When you access the door using a QR code, the QR code will be sent to the QR code server for verification before granting you the access permission. This feature is applied to the devices not deployed in the SmartPlus platform for the QR code door access. You can navigate to Intercom > Relay > Mobile Community.

Mobile Community

Enabled

HTTP URL

Device ID

Parameter Set-up:


- **Enabled:** enable the function if needed.
- **HTTP URL:** enter the HTTP command. After scanning the QR code, the HTTP command will carry the dynamic QR code information automatically before its being sent to the QR code server for verification. For example:
<http://wxqapi.kerryprops.com.cn:8090/api/vistor/scan?codeKey={QRCode}&deviceId={DeviceID}>
- **Device ID:** create your device ID, which will be added to the HTTP commands automatically after you scan the QR code.

22. System Reboot&Reset

22.1. Reboot


22.1.1. Reboot on the device

If you want to restart the system setting of the device, you can operate it directly on the device Reboot setting screen or on the device web interface.

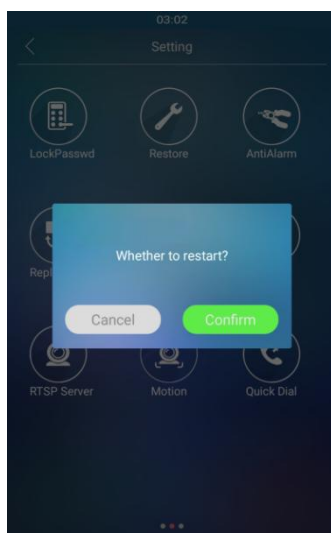


22.1.2. Reboot on the web interface

If you want to restart the device system, you can operate it on the device web Upgrade > Basic interface as well. Moreover, you can set up a schedule for the device to be restarted.

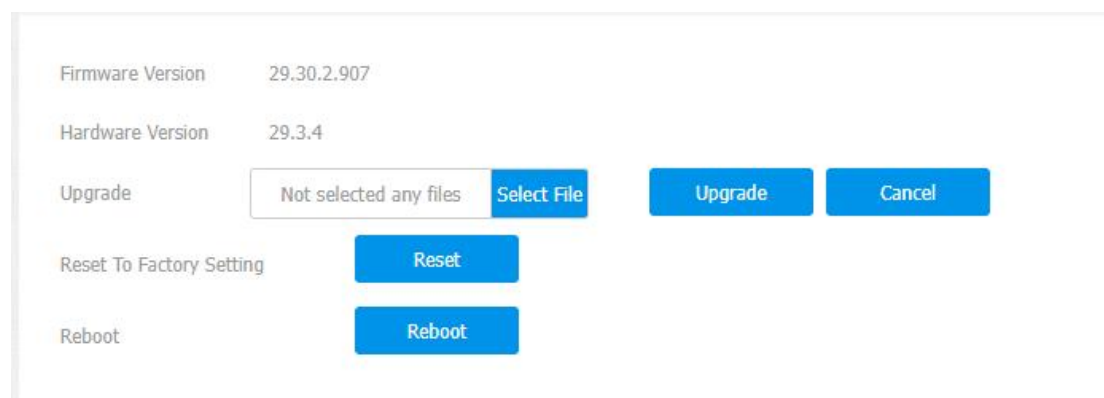

To set up the device restart schedule on the device web Upgrade > Advanced > Reboot Schedule interface.

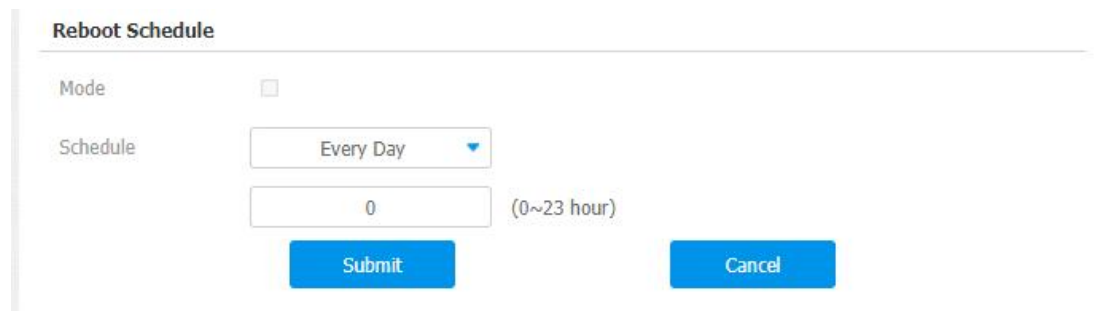


Parameter Set-up:

- **Mode:** Disable or Enable the mode to active or unactive reboot. Or choose Schedule mode for setting the reboot time regularly.
- **Schedule:** if you choose schedule mode, also need to set up the reboot schedule. From Monday to Sunday and 00: 00 to 24: 00.

22.2. Reset

22.2.1. Reset on the Device

If you want to reset the device system to the factory setting, you can operate it directly on the device Restore screen.

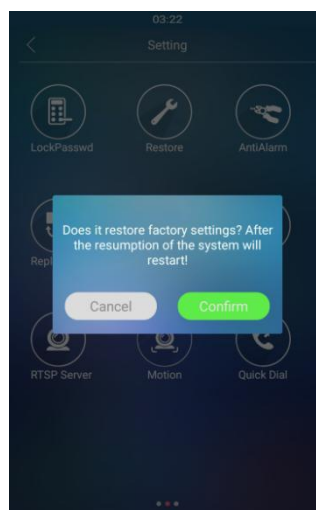

22.2.2. Reset on the Device Web Interface

Device system can also be reset on device web Upgrade > Basic interface without approaching the device.

The screenshot displays the 'Upgrade > Basic' interface of the device web. It shows the following information and controls:

- Firmware Version:** 29.30.2.907
- Hardware Version:** 29.3.4
- Upgrade:** A file selection area showing 'Not selected any files' with a 'Select File' button. To the right are 'Upgrade' and 'Cancel' buttons.
- Reset To Factory Setting:** A 'Reset' button.
- Reboot:** A 'Reboot' button.

23. Abbreviations

ACS: Auto Configuration Server

Auto: Automatically

AEC: Configurable Acoustic and Line Echo Cancelers

ACD: Automatic Call Distribution

Autop: Automatical Provisioning

AES: Advanced Encryption Standard

BLF: Busy Lamp Field

COM: Common

CPE: Customer Premise Equipment

CWMP: CPE WAN Management Protocol

DTMF: Dual Tone Multi-Frequency

DHCP: Dynamic Host Configuration Protocol

DNS: Domain Name System

DND: Do Not Disturb

DNS-SRV: Service record in the Domain Name System

FTP: File Transfer Protocol

GND: Ground

HTTP: Hypertext Transfer Protocol

HTTPS: Hypertext Transfer Protocol Secure Socket Layer

IP: Internet Protocol

ID: Identification

IR: Infrared

LCD: Liquid Crystal Display

LED: Light Emitting Diode

MAX: Maximum

POE: Power Over Ethernet

PCMA: Pulse Code Modulation A-Law

PCMU: Pulse Code Modulation μ -Law

PCAP: Packet Capture

PNP: Plug and Play

RFID: Radio Frequency Identification

RTP: Real-time Transport Protocol

RTSP: Real Time Streaming Protocol

MPEG: Moving Picture Experts Group

MWI: Message Waiting Indicator

NO: Normal Opened

NC: Normal Connected

NTP: Network Time Protocol

NAT: Network Address Translation

NVR: Network Video Recorder

ONVIF: Open Network Video Interface Forum

SIP: Session Initiation Protocol

SNMP: Simple Network Management Protocol

STUN: Session Traversal Utilities for NAT

SMTP: Simple Mail Transfer Protocol

SDMC: SIP Devices Management Center

TR069: Technical Report069

24. FAQ

Q1: How to obtain IP address of R29C

A1:

For devices with touch screen - R29C:

While R29C power up normally, in the dial interface, press "9999", "Dial key", "3888" and "OK" to enter the system setting screen. Go to info screen to check the IP address.

Q2: What is the supported temperature range for R29C?

A2: 68°F to 131°F (-20°C to 55°C)

Q3: Do Akuvox devices support Modbus protocol?

A3: No.

Q4 : Failure in importing the R29C face data to another R29C using the exported face data .

A4: Please confirm the following steps:

The import format is zip;

1. After you export , you need to unzip the .tgz folder , then make the unzipped folder into .zip again.

Q5: Which version of ONVIF does R29C support?

A5: Onvif 18.06 profile S.

Q6: Do R29C support these card types? Prox, Legacy iClass, iClassSE, HID Mifare, HID DESFire, HID SEOS?

A6: Sorry, they are not supported. They need to be implemented via hardware modifications.

25. Contact us

For more information about the product, please visit us at www.akuvox.com or feel free to contact us by

Sales email: sales@akuvox.com

Technical support email: support@akuvox.com

Telephone: +86-592-2133061 ext.7694/8162

We highly appreciate your feedback about our products.





FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co - located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator&you body.