



# Galaxy G2 Measuring System User Manual

Copyright ©SOUTH Surveying & Mapping Instrument  
CO.,LTD.

\*All Rights Reserved

# Contents

|   |        |
|---|--------|
| Contents .....                          | - 2 -  |
| Chapter I Preface.....                  | - 4 -  |
| §1.1 Introduction .....                 | - 4 -  |
| §1.2 Applications .....                 | - 4 -  |
| §1.3 Main Features .....                | - 5 -  |
| Chapter II Hardware Component .....     | - 7 -  |
| §2.1 Front Components .....             | - 8 -  |
| §2.2 Bottom Components .....            | - 9 -  |
| Chapter III Hardware Operation .....    | - 10 - |
| §3.1 Power on/off .....                 | - 10 - |
| §3.2 Check working mode .....           | - 10 - |
| §3.3 Mode selection.....                | - 10 - |
| §3.4 Self-check .....                   | - 12 - |
| §3.5 USB mode setting .....             | - 13 - |
| §3.6 Factory reset.....                 | - 14 - |
| Chapter IV Web UI Management .....      | - 15 - |
| §4.1 Overview .....                     | - 15 - |
| §4.2 Access by WiFi .....               | - 15 - |
| §4.3 Access by USB .....                | - 16 - |
| §4.4 Web UI main interface .....        | - 21 - |
| §4.4.1 Status.....                      | - 22 - |
| §4.4.2 Configuration.....               | - 24 - |
| §4.4.3 Satellite Information .....      | - 33 - |
| §4.4.4 Data Record .....                | - 35 - |
| §4.4.5 Data Transfer .....              | - 36 - |
| §4.4.6 Network Config .....             | - 42 - |
| §4.4.7 Radio Config.....                | - 48 - |
| §4.4.8 Firmware Update .....            | - 49 - |
| §4.4.9 Track Manage .....               | - 51 - |
| §4.4.10 Coordinate System(reserve)..... | - 53 - |
| §4.4.11 Online Service(reserve) .....   | - 54 - |
| §4.4.12 User Management .....           | - 54 - |
| §4.4.13 Help.....                       | - 55 - |
| Chapter V Data Collector -- H5.....     | - 56 - |

|   |        |
|---|--------|
| §5.1 Get to start .....                             | - 57 - |
| §5.2 Accessories of H5 .....                        | - 59 - |
| §5.3 Software installation .....                    | - 60 - |
| §5.4 Bluetooth Connection .....                     | - 62 - |
| Chapter VI External UHF Radio—S1 .....              | - 65 - |
| §6.1 Overview .....                                 | - 65 - |
| §6.2 Hardware component.....                        | - 65 - |
| §6.3 Hardware operation .....                       | - 67 - |
| 6.3.1 Channel (CH).....                             | - 67 - |
| 6.3.2 Frequency .....                               | - 67 - |
| 6.3.3 Power mode (L W).....                         | - 67 - |
| 6.3.4 Air (Air baudrate) .....                      | - 67 - |
| 6.3.5 Protocol.....                                 | - 68 - |
| 6.3.6 Serial port baudrate (Ser:).....              | - 68 - |
| 6.3.7 Power voltage .....                           | - 68 - |
| 6.3.8 Bluetooth.....                                | - 68 - |
| 6.3.9 reset.....                                    | - 68 - |
| §6.4 Accessories .....                              | - 69 - |
| §6.5 Specifications.....                            | - 69 - |
| §6.6 Application Notice .....                       | - 70 - |
| Chapter VII Accessories .....                       | - 71 - |
| §7.1 Instrument Case .....                          | - 71 - |
| §7.2 Charger&Adapter.....                           | - 71 - |
| §7.3 Differential Antennas.....                     | - 72 - |
| §7.4 Cables .....                                   | - 72 - |
| Chapter VIII Hardware Registration.....             | - 73 - |
| Chapter IX Firmware Update.....                     | - 74 - |
| Appendix A Galaxy G2 technical specifications ..... | - 76 - |
| Appendix C Technical Terms.....                     | - 78 - |
| FCC Statement.....                                  | - 80 - |

# Chapter I Preface

*Read this chapter, you will have a brief knowledge of South Company and Galaxy G2 measurement system.*

## §1.1 Introduction

Welcome to South Surveying&Mapping Instruments Co., Ltd, which is China's leading manufacturer of surveying equipment including GNSS receivers and Total Stations. To know more about SOUTH, please visit our official website <http://www.southinstrument.com/>

This manual takes Galaxy G2 measuring system for example, to explain how to install, set up and uses the RTK system as well as the use of the accessories. We recommend that you read these instructions carefully before using the instrument.

## §1.2 Applications

**Control Survey:** dual-band (dual-frequency) system static measurements can accurately complete the high-precision deformation observation, photo-control point measurement.

**Highway Survey:** quickly complete the encryption of the control points, road topographic mapping, cross-section measurement, profile measurement with EGStar.

**CORS Application:** provide more stable and convenient data link for field operations. It is seamlessly compatible with all types of domestic CORS applications.

**Data acquisition measurement:** perfect match South's various measurement software to do quick and easy data acquisition.

**Stakeout shot:** large-scale point, line, plane lofting.

**Electric Power Measurement:** power line measurement orientation, ranging, angle calculation.

**Marine application:** oceanographic research, dredging, piling, inserted row, making the marine operations more convenient and easy.

## §1.3 Main Features

### **Intelligent Platform**

New generation of embedded Linux operating system platform improves RTK performance and work efficiency. Its operating efficiency is higher; a unique core processing mechanism which can respond to more than one command at one time; it starts faster and more responsive in real time. While the stability of system is much higher, it can be adapted to the job of longer uninterrupted power.

### **Internal Web UI management**

Embedded Web UI management platform supports WIFI and USB mode connection. Users can monitor the receiver status and configure it via the internal Web UI management platform.

### **Bluetooth**

Galaxy G2 is equipped with dual-mode Bluetooth v4.0 standard which is able to connect the other smart devices and compatible with Bluetooth v2.1 standard. It not only enlarges the work range but also makes the data communication become more stable.

### **WiFi**

As the new feature and technology adopted on Galaxy G2, it not only can be used as data link to access to internet, but also can be as a hotspot which can be accessed by any other smart devices to configure the receiver.

### **Advanced InBuilt UHF module**

Galaxy G2 adopts new and excellent datalink system, which is compatible with current radio protocols in the market, and realizes the random switching of the radio range 410MHZ-470MHZ and the power level as well. And the new protocol—"Farlink" is able to achieve the working range as 8km.

### **Upgraded network module**

Standard 4G module is integrated which supports TDD-LTE/FDD-LTE 4G network and downward compatible with 3G and 2G network. Also supports all kinds of network types to access CORS seamlessly.

**Speed Dial**

Smart PPP dialing technology can auto dial which makes the Galaxy G2 keeping online continuously during the survey.

**Intelligent Interaction**

Support to access the internal web UI manage page of receiver with WiFi and USB connection, monitor host state real-time, configure receiver freely.

**Full Constellations Tracking**

Equipped with most advanced GNSS boards, Galaxy G2 system can track most signal from all kinds of running satellite constellation, especially support B1, B2 and B3 signal from BeiDou, also get position result with only BeiDou signal.

**Electronic Bubble & Tilt Compensation**

Galaxy G2 is integrated with a new generation IMU module which makes tilt measurement more stable, accurate and fast that without strict leveling the receiver to measure the point at will, it helps surveyors boost productivity by 30 percent.

**Worry-free surveying**

The new generation of SoC platform gives RTK more stable performance and lower power consumption. The built-in 6800mAh high-performance battery can support 15 hours of continuous operation. G2 adopts Type-C charging interface which supports PD rapid charging, the battery can be full charged in 3 hours that lasts full-day work.

**Intelligent Storage**

The raw data including STH, Rinex2.01 and Rinex3.02 not only can be saved in the internal memory (8G SSD), but also can be stored into an external USB device (OTG). The configurable sample frequency is really up to 20Hz.

**Amazing Housing**

With highly integrated and layered design, Galaxy G2 is smaller than typical Galaxy series receivers. And coupled with the magnesium alloy body shell, the weight of G2 is only 850g including internal battery, extremely light and convenient to carry.


**NFC Function**

The internal NFC module can make the complicated Bluetooth communication easier and more simple.


## Chapter II Hardware Component

*Reading this chapter, you can grasp the components, installation and the function of Galaxy G2 measuring system*

The overall appearance of Galaxy G2 is round and flat, with a height of 85mm and a diameter of 130mm. It looks elegant, strong and durable. And it adopts a combination design of voice and buttons, easier to operate. The bottom of the receiver has commonly used interfaces.

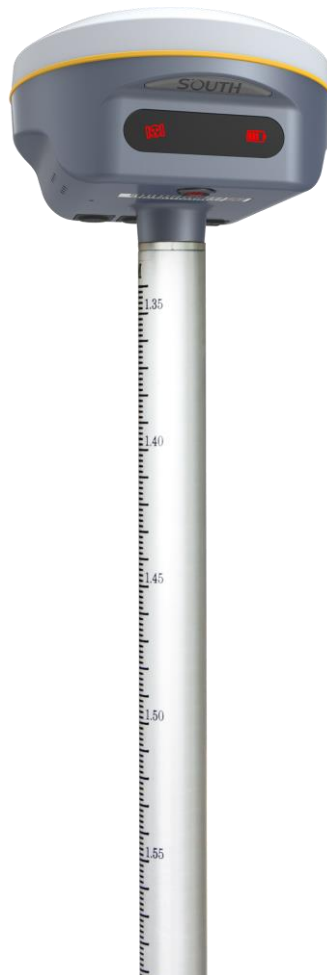


## §2.1 Front Components

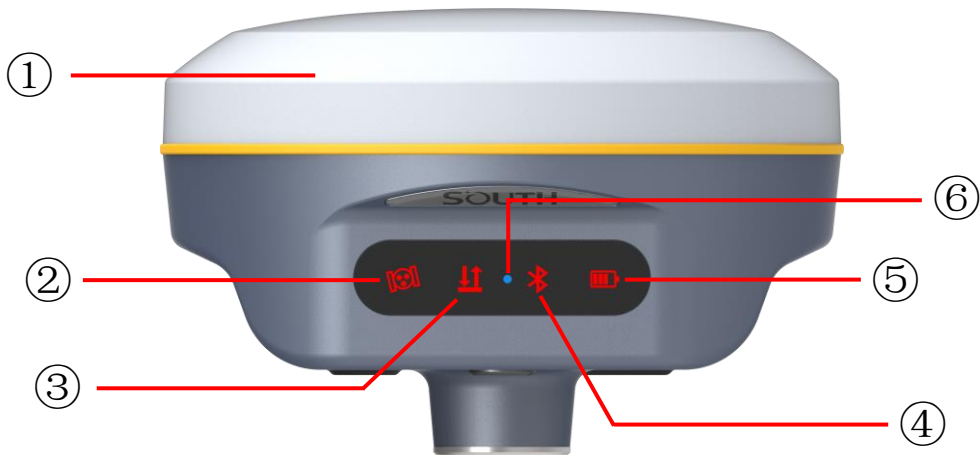

| Ref | Component                   | Description  |
|-----|-----------------------------|--|
| ①   | <b>GNSS Antenna</b>         | Grasps satellites signals  |
| ②   | <b>Satellites Indicator</b> | Flashes in <b>red</b> to indicate that the satellites are tracking by 0.2s interval, repeat in every 10s.  |
| ③   | <b>Data Indicator</b>       | <p><b>UHF mode:</b> Flashes in <b>red</b> to indicate that the signal is receiving/transmitting with the interval.</p> <p><b>GPRS mode:</b> 1) Rapidly flashes in <b>red</b> to indicate that the receiver is dialing; 2) Flashes in <b>red</b> with the signal receiving/transmitting interval when successful dial.</p> <p><b>WiFi mode:</b> 1) Rapidly flashes in <b>red</b> to indicate that the receiver is establishing WiFi connection; 2) Flashes in <b>red</b> with the signal receiving/transmitting interval when successful connection.</p> <p><b>Static mode:</b> Flashes by the data sampling interval to indicate the data file is recording.</p> |
| ④   | <b>Bluetooth Indicator</b>  | Glows in <b>red</b> to indicate that Bluetooth connection has established between controller and receiver  |
| ⑤   | <b>Power Indicator</b>      | Glows in <b>red</b> to indicate that there is enough power for working; Flashing in red means low power.   |
| ⑥   | <b>Charging Indicator</b>   | Glows in <b>blue</b> to indicate that the battery is charging, and turning into <b>green</b> means the battery is full charged.  |



## §2.2 Bottom Components

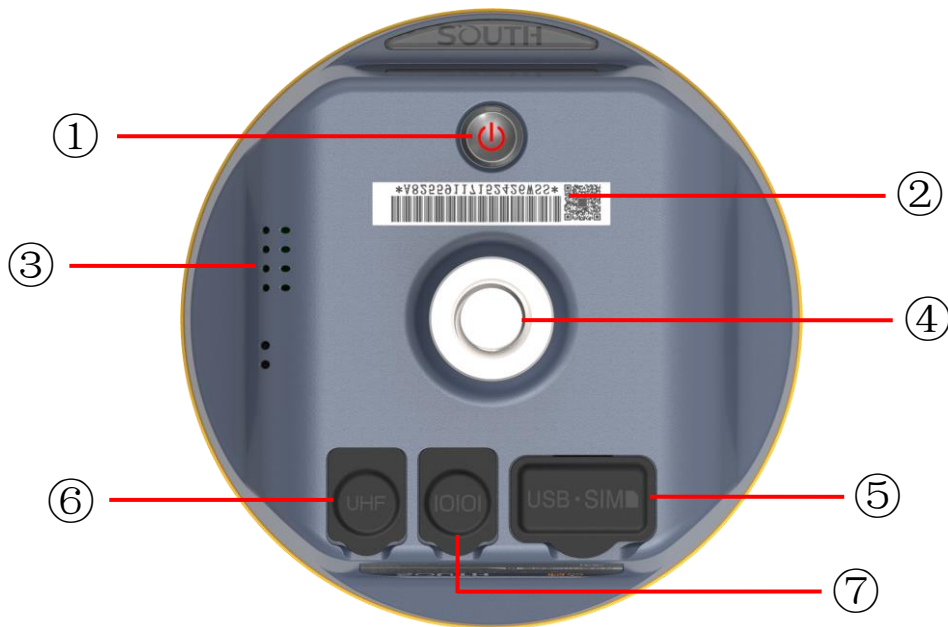

| Ref | Component  | Description  |
|-----|--|--|
| ①   | <b>Power button</b>                                | Power on/off receiver; Switch and confirm working mode; Perform self-check operation.  |
| ②   | <b>SN label</b>                                    | Apply for a registration code, Bluetooth ID  |
| ③   | <b>Speaker</b>                                     | Mode setting and working status prompt   |
| ④   | <b>Screw hole</b>                                  | Fix the mainframe to the tribrach or the pole  |
| ⑤   | <b>Type-C USB port<br/>&amp;<br/>SIM card slot</b> | USB for data transmission, OTG interface and Ethernet port for login web interface, battery charging port.<br>Inserting a <b>Micro SIM</b> card when the receiver is set in GPRS mode          |
| ⑥   | <b>UHF antenna interface</b>                       | Install UHF antenna  |
| ⑦   | <b>5-pin LEMO port</b>                             | 1, As a power port connected with an external power supply device; 2, as a differential transmission port connected with an external radio; 3, as a serial port to check data output and debug |

# Chapter III Hardware Operation

## §3.1 Power on/off

### Power on

Press the power button for once, all the indicators glow in red, after few seconds (around 10 seconds), the instrument completes initializing along with voice prompt about the working mode (for example, “Rover, internal radio mode”). After a while, instrument starts to track satellites.



### Power off

Press the power button and hold for a while, after 3 beeps and the “Power off” voice prompt at the third beeping, release power button, the instrument will switch off.

## §3.2 Check working mode

Press the power button for once in the state of power-on, the instrument will prompt with voice message about current working mode (for example, “Rover, internal radio mode”).

## §3.3 Mode selection

### Rover

Press and hold the power button for about 5 seconds and pass over the state of power off (do not

release the button even the instrument says power off), then Galaxy G2 will say “start to set work mode”, at this moment, release power button, the working mode will be repeated from Rover to Static on control panel. When the Bluetooth indicator glows in red accompany with “Rover” voice message, press the power button to confirm.



## Base

Press and hold the power button for about 5 seconds and pass over the state of power off (do not release the button even the instrument says power off), then Galaxy G2 will say “start to set work mode”, at this moment, release power button, the working mode will be repeated from Rover to Static on control panel. When the Bluetooth indicator glows in red accompany with “Base” voice message, press the power button to confirm.



## Static

Press and hold the power button for about 5 seconds and pass over the state of power off (do not release the button even the instrument says power off), then Galaxy G2 will say “start to set work mode”, at this moment, release power button, the working mode will be repeated from Rover to Static on control panel. When the Bluetooth indicator glows in red accompany with “Static” voice message, press the power button to confirm.



After that, press the power button for once to make sure if the working mode is correctly setup.

*Note: Galaxy G2 only supports the working mode selected by control panel, without datalink configuration.*

### §3.4 Self-check

Self-check is an useful operation to simply check the main hardware components if the instrument is abnormal or not working properly.

Press and hold the power button for about 10 seconds and pass over the state of power off and mode selection (do not release the button even the instrument says power off and start to set work mode), then Galaxy G2 will say “start to self-check”, at this moment, release power button, the instrument will perform self-check automatically for the modules one by one.

The sequence of modules checking is:


- OEM board checking
- Network module checking (GPRS module checking)
- UHF module checking
- Sensors checking
- WiFi module checking
- Bluetooth module checking

If all the modules are normal during self-check, the instrument will get into the state of power-on.



### §3.5 USB mode setting

Press and hold the power button for about 15 seconds and pass over the foregoing states (power off, mode selection, self-check), Galaxy G2 will get into USB mode setting with voice message saying “start to set USB mode”, at this moment, release power button, the instrument repeats “USB disk” and “USB network interface” for optional, choose the proper mode and press power button to confirm.

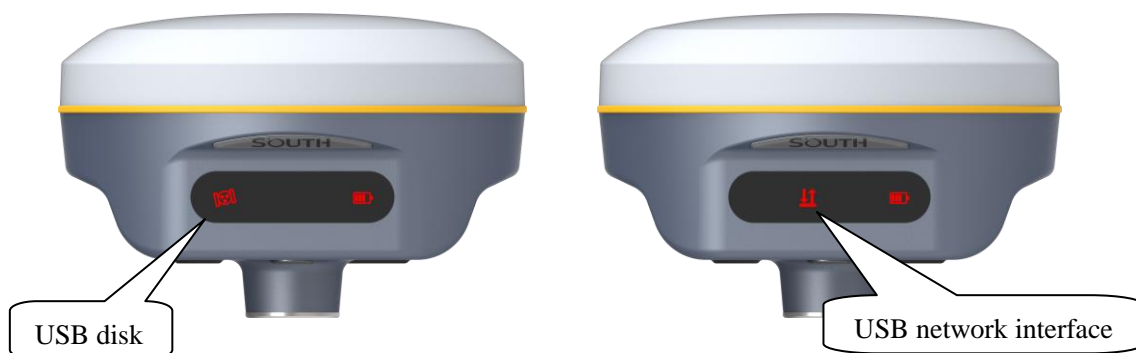

### §3.6 Factory reset

Press and hold the power button for about 20 seconds and pass over the foregoing states (power off, mode selection, self-check, USB mode setting), Galaxy G2 will get into factory reset progress with voice message saying “start to restore factory default”, at this moment, release power button, all the indicators glows and the instrument is performing the factory reset automatically. After this progress complete, the instrument will restart automatically with the factory default settings.



# Chapter IV Web UI Management

## §4.1 Overview

Because of using the smart embedded Linux operating system and SOUTH intelligent cloud technology, the web UI allows users to configure and monitor the status of Galaxy G2 in real-time. The accessing way is not only by WiFi connection, but also can be USB mode.


## §4.2 Access by WiFi

The WIFI hotspot is default broadcasted by Galaxy G2, search the WIFI hotspot which named with SOUTH\_xxxx using smartphone, tablet or laptop, then establish the WIFI connection, input the **default IP (10.1.1.1)** into browser, on the login interface, apply “admin” for the username and password.

For example, search the WIFI hotspot broadcasted by a Galaxy G2 receiver using a laptop PC, choose the WIFI hotspot and click on connect button to establish the connection without password.



Run IE browser on computer and input the default IP (10.1.1.1) into address bar, after a while, the system login interface is refreshed, then apply “admin” for username and password to login.

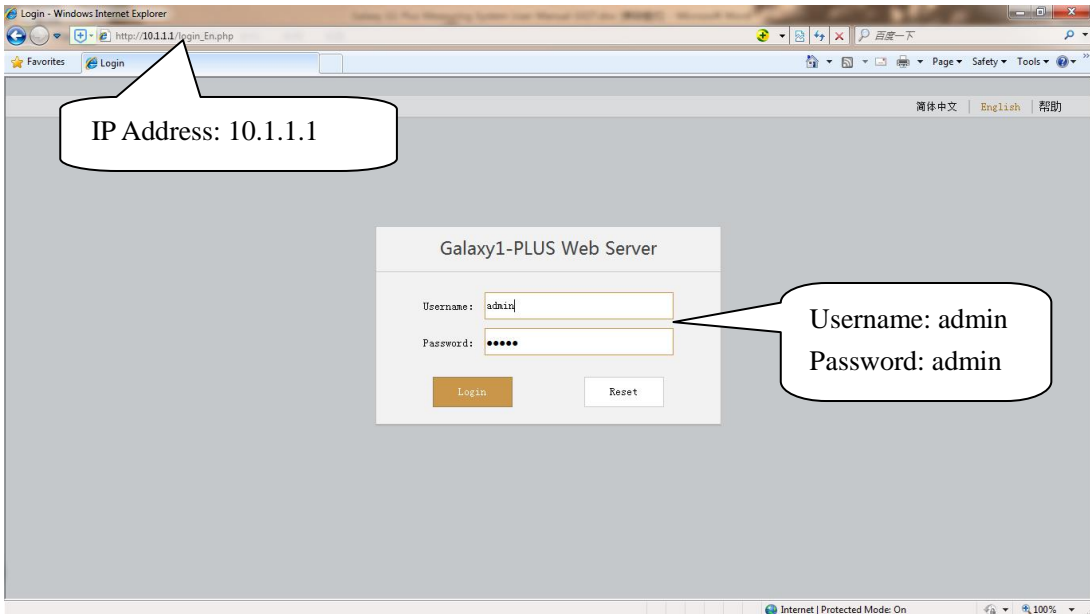

## §4.3 Access by USB


On this mode, the Type-C USB port of Galaxy G2 must work as an Ethernet port, then internal web UI shall be accessed via USB cable connection with computer.

First of all, a corresponding driver is required to install to the computer, then this function could be activated.


Due to different operating system is installed on computer, the drivers should be applied to a suitable one. The file [bugvista64.inf](#) is applied to 64bit operating system, and [linux.inf](#) is for 32bit operating system.


Make sure that the USB port (Type-C) is switched into USB network interface (please refer to section 3.5, USB mode setting).



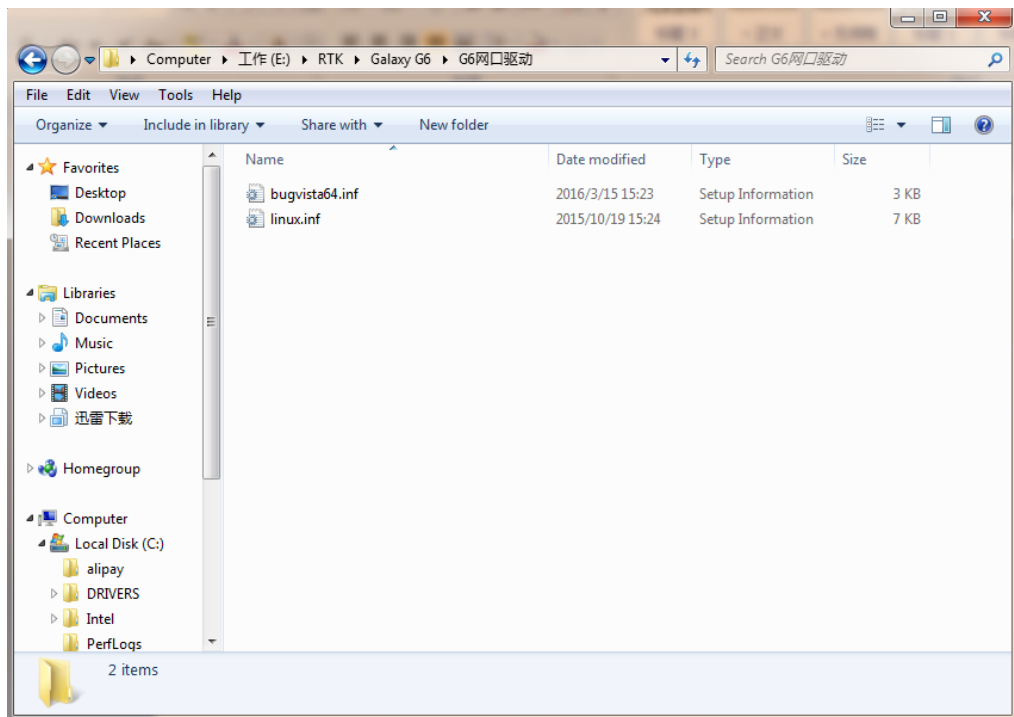


Choose the folder which contains the drivers

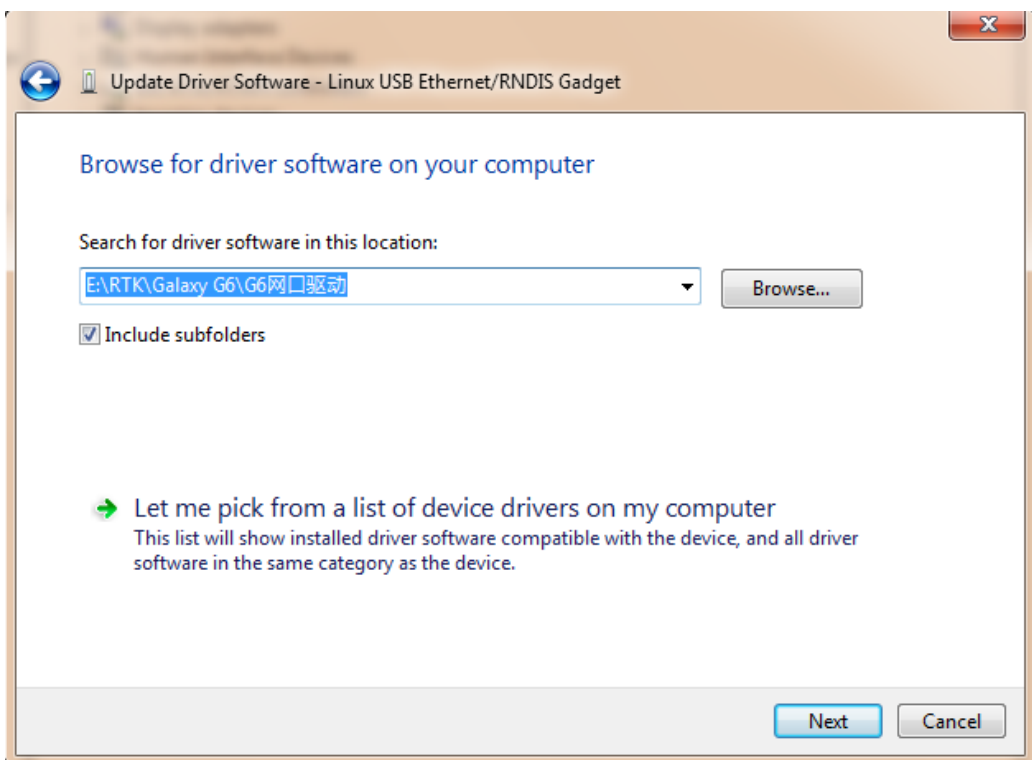

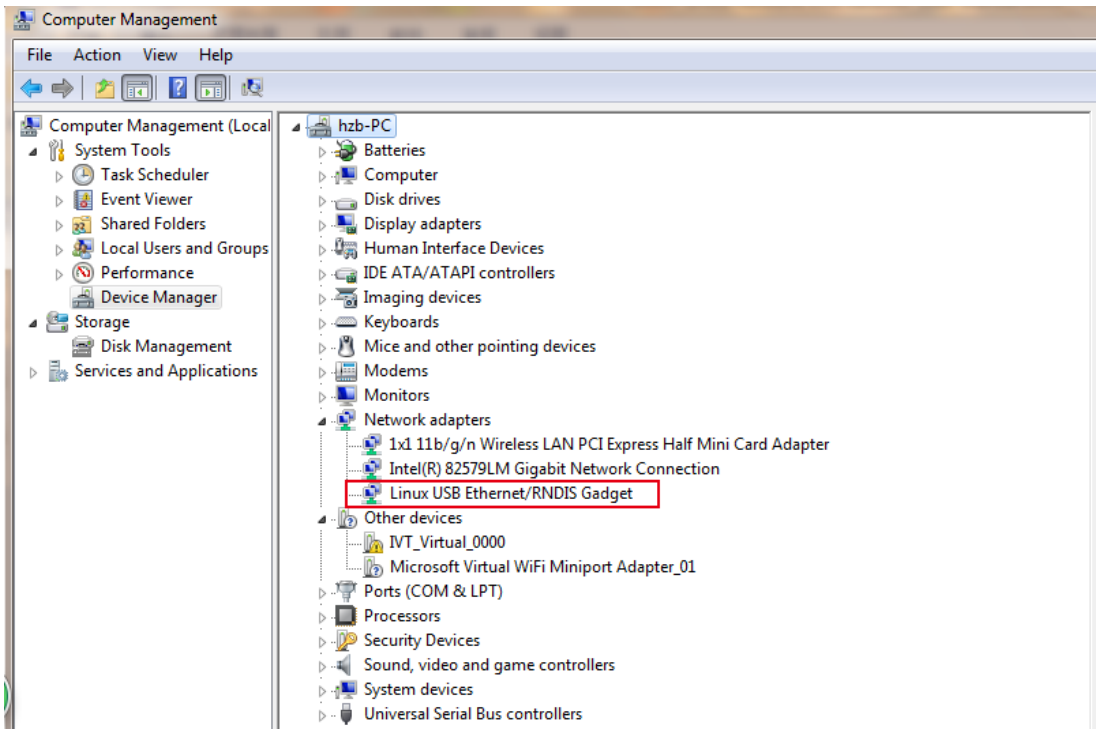


*NOTE: The driver can be downloaded from official website automatically or please contact with us for more supports.*

If the driver has been successfully installed, the USB port of Galaxy G2 will be recognized as **Linux USB Ethernet/RNDIS Gadget**, and a local area connection will generate in **Network Connections** on the computer. For example, Local Area Connection 138 generates after connecting Galaxy G2 receiver to computer via USB network interface.

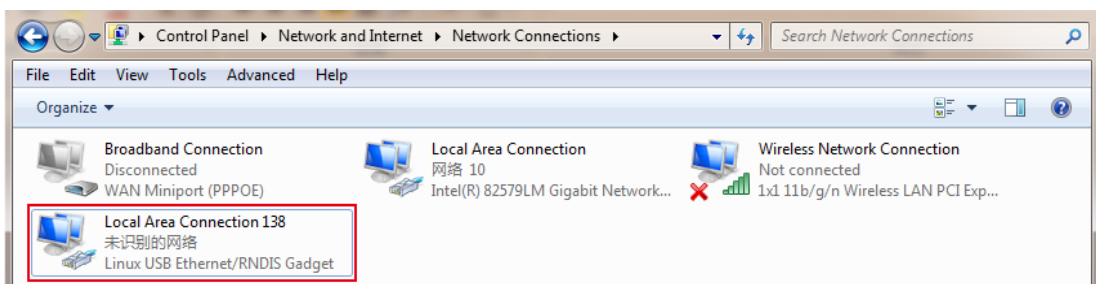


However, sometimes the computer cannot detect the receiver by USB network interface because there is something wrong with acquiring IP automatically, therefore, we need to do something to avoid such problem, that is to set a fixed LAN IP for the connection:


Right click on the local area connection which newly generates, choose properties to call out the local area connection properties window.

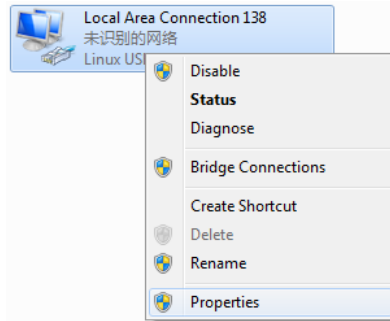

Then double click on Internet Protocol Version 4 (TCP/IPv4) option or click on properties button to call out Internet Protocol Version 4 (TCP/IPv4) properties window, set the fixed LAN IP address as shown in following, then click OK button and confirm the settings, return to the IE browser and use the IP address 192.168.155.155 to access the internal web UI.

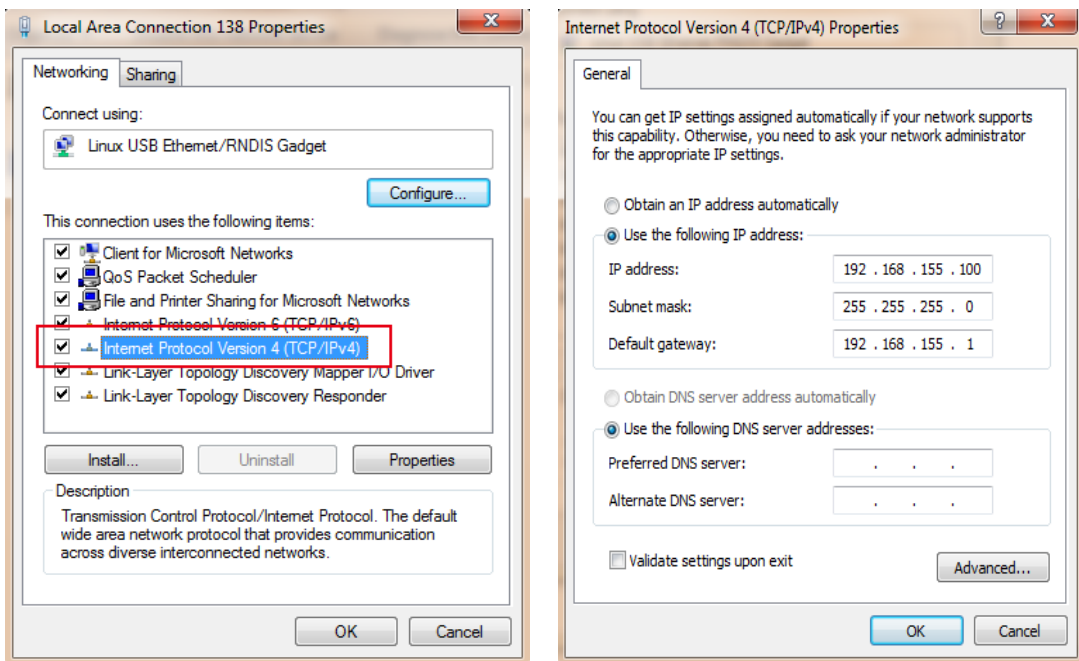

Run IE browser on computer and input the **default IP (192.168.155.155)** into address bar, after a while, the system login interface is refreshed, then apply **“admin”** for username and password to login.

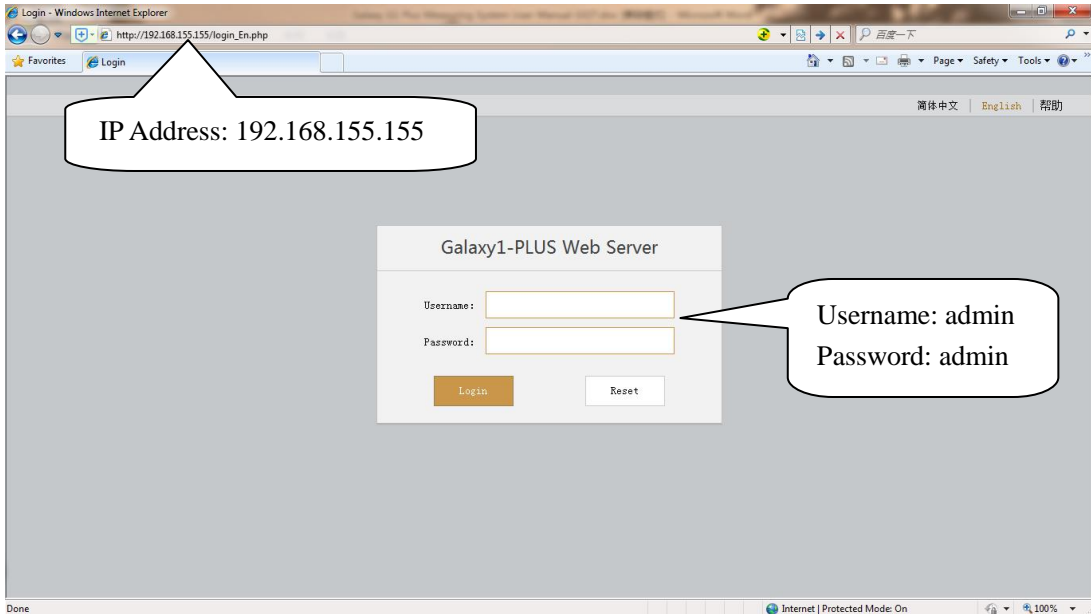

## Remote Login


If users would like to remote login the web UI of Galaxy G2, then Galaxy G2 has to connect to the internet and forward its 80 port to the public network. For example, if the IP address 222.196.35.76 is the public network IP which Galaxy G2 has connected, and the 80 port of Galaxy G2 has been bounded with 8000 in public network, then users can input the public network IP address into IE explorer along with the forwarding port for login. (<http://222.196.35.76:8000>)







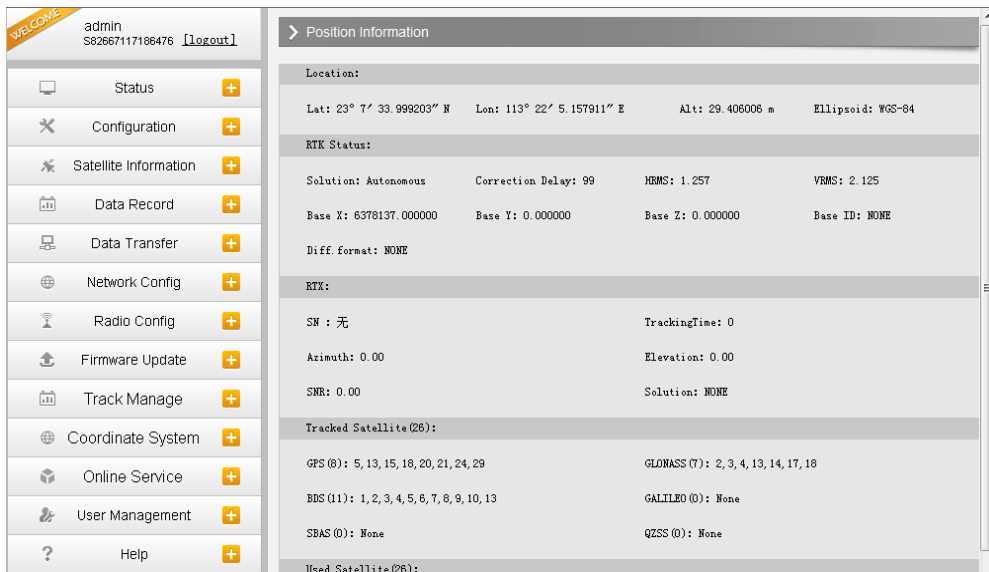

*NOTE: The IE explorer is recommended to use for the Web UI login.*








## §4.4 Web UI main interface

After login the Web UI management of Galaxy G2 by WIFI or USB connection, the main interface appears with displaying configuration items and positioning. As shown at following figures.



In the Web UI home page, the configuration items are listed at left side. And the positioning information including coordinates information and satellites are displayed at right side.

| Ref   | Component                    | Description   |
|---|------------------------------|---|
|  | <b>Status</b>                | Positioning information, satellite tracking and the others will be displayed in this page   |
|  | <b>Configuration</b>         | It contains registration for receiver, base configuration, antenna configuration, satellite configuration, receiver configuration and system configuration. |
|  | <b>Satellite Information</b> | Display and control the satellites are used or not  |
|  | <b>Data Record</b>           | Configure the parameters for static mode and raw data download  |
|  | <b>Data Transfer</b>         | Contains NTRIP configuration, TCP/IP configuration and data transferring with PC  |
|  | <b>Network Config</b>        | Contains network parameters configuration, WIFI configuration and the other functions   |


|   |                          |  |
|---|--------------------------|--|
|  | <b>Radio Config</b>      | Configure the parameters and frequency for radio modem         |
|  | <b>Firmware Update</b>   | It is used to upgrade the firmware for receiver and each modem |
|  | <b>Track Manage</b>      | Record track file while doing measurement                      |
|  | <b>Coordinate System</b> | Setup a local coordinate system for Galaxy G2                  |
|  | <b>Online Service</b>    | Upload data onto a server in real-time                         |
|  | <b>User Management</b>   | Add and manage the Web UI users                                |
|  | <b>Help</b>              | Offers solutions   |

### §4.4.1 Status

System Information, Work Status and Position Information are listed under Status menu.

#### System Information

In this page, all the information of Galaxy G2 is displayed such as serial number, hardware ID, MAC address, firmware version and so on.

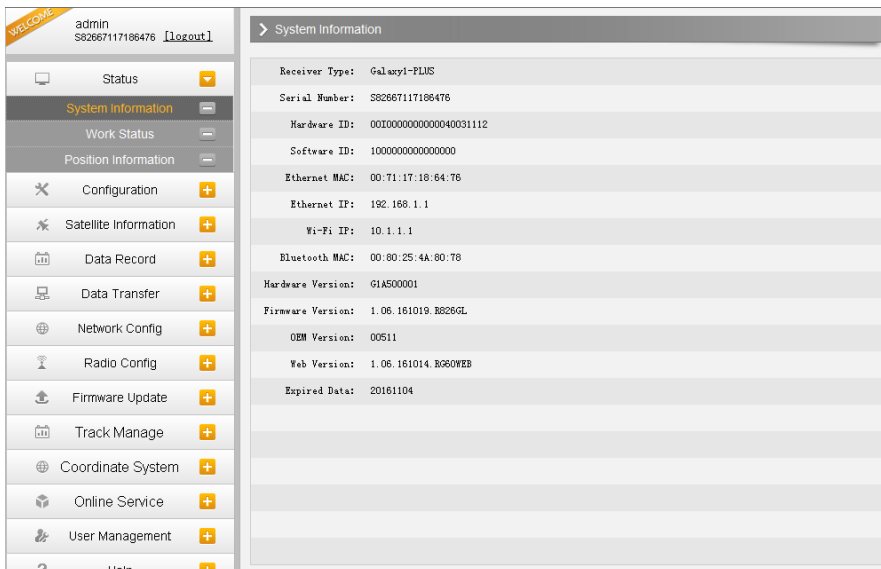

The screenshot shows the 'System Information' page in the Galaxy G2 web interface. The left sidebar menu is visible, and the main content area displays the following system information:

- Receiver Type: Galaxy1-PL1JS
- Serial Number: S82667117186476
- Hardware ID: 001000000000040031112
- Software ID: 1000000000000000
- Ethernet MAC: 00:71:17:18:64:76
- Ethernet IP: 192.168.1.1
- Wi-Fi IP: 10.1.1.1
- Bluetooth MAC: 00:80:25:4A:80:78
- Hardware Version: G1A500001
- Firmware Version: 1.06.161019.B826GL
- OEM Version: 00511
- Web Version: 1.06.161014.BG60WEB
- Expired Data: 20161104

## Work Status

The physical state of Galaxy G2 such as working mode, datalink, host temperature, remaining power and the free memory is obtained from this page

**Work Status**

Work Mode: Hover  
 Datalink: Radio  
 Host Temperature: 39.60 °C  
 OEM Temperature: 45.00 °C  
 Battery Type: Internal Battery  
 Power Voltage: 7.50 V  
 Storage Type: Internal Memory

Power Remaining: Remaining 70% Power

Disk Capacity: 152M Used | 7289.00M Free

## Position Information

In this page, users can be clear at a glance on current position information and satellite information

**Position Information**

Location:  
 Lat: 23° 7' 34.053902" N Lon: 113° 22' 5.203813" E Alt: 33.171875 m Ellipsoid: WGS-84

RTK Status:  
 Solution: Autonomous Correction Delay: 99 HBMS: 0.803 VBMS: 1.274  
 Base X: 6378137.000000 Base Y: 0.000000 Base Z: 0.000000 Base ID: NONE  
 Diff. format: NONE

RTK:  
 SN: 无 TrackingTime: 0  
 Azimuth: 0.00 Elevation: 0.00  
 SNR: 0.00 Solution: NONE

Tracked Satellite (26):  
 GPS (8): 5, 13, 15, 18, 20, 21, 24, 29 GLONASS (7): 3, 4, 13, 14, 17, 18, 19  
 BDS (11): 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 13 GALILEO (0): None  
 SBAS (0): None QZSS (0): None

Used Satellite (26):

## §4.4.2 Configuration

General Config, Base Setup, Antenna Setup, Satellite Tracking, Receiver Operate and Default Language are contained under Configuration menu. Users are able to configure all kinds of parameters for Galaxy G2 under Configuration menu, and all the settings are immediate effect after saving.

### General Config

The registration for receiver working mode setting can be completed in this general configuration page.

The screenshot displays the 'General Configuration' page in a web browser. On the left is a sidebar menu with the following items: Status (+), Configuration (v), General Config (h), Base Setup (-), Antenna Setup (-), Satellite Tracking (-), Receiver Operate (-), System Setup (-), Satellite Information (+), Data Record (+), Data Transfer (+), Network Config (+), Radio Config (+), Firmware Update (+), and Track Manage (+). The main content area is titled 'General Configuration' and is divided into two sections: 'Registration' and 'Mode setting'.

**Registration Section:**

- Serial Number: S82667117186476
- Code: 81BEC3B23329A67BB6500E421BFB8484317 (with a Register button)
- ExpiredDate: 20161104
- OnlineRegistration: OnlineRegi
- OperationTips: Use Online Reig Function, please Make Sure Network is Work Well!

**Mode setting Section:**

- Work Mode: Rover (dropdown)
- Datalink: Radio (dropdown)
- RadioRoute: None (dropdown)
- RadioTransfer:
- RTK Record:
- 1PPS:
- EVENT:
- EVENT Polarity: Negative (dropdown)

If the code of Galaxy G2 has expired or is going to be run out, please provide the serial number of your Galaxy G2 for us to apply for another available code, then input the code into the blank or register the receiver online.



Registration

Serial Number: S82667117186476

Code:

ExpiredDate: 20161104

OnlineRegistration:

OperationTips: Use Online Reig Function, please Make Sure Network is Work Well!

Galaxy G2 allows users to setup the working mode and datalink from this Web UI that only need the mobile phone or tablet PC is able to connect the wifi hotspot of Galaxy G2.

Mode setting

Work Mode:

Datalink:

RadioRoute:

RadioTransfer:

RTK Record:

1PPS:

EVENT:

EVENT Polarity:

**Work Mode:** There are Rover, Base and Static contained in this dropdown list

**Datalink:** Pull down the list, there will be all kinds of options for datalink, such as radio, Network, External, Bluetooth, WIFI and CSD.

Radio

None

Radio

Network

External

Dual

Blue Tooth


WIFI

CSD

**Radio Route:** This feature is used to transfer the correction which from the reference station to the other rover by radio, the rovers will have the same reference coordinates. This is in the case of working in some places where there is poor signals from reference station or there is only a SIM card for a few rovers.

It is able to use internal radio or connect an external radio to transfer the correction.

This feature is only available on Rover mode.

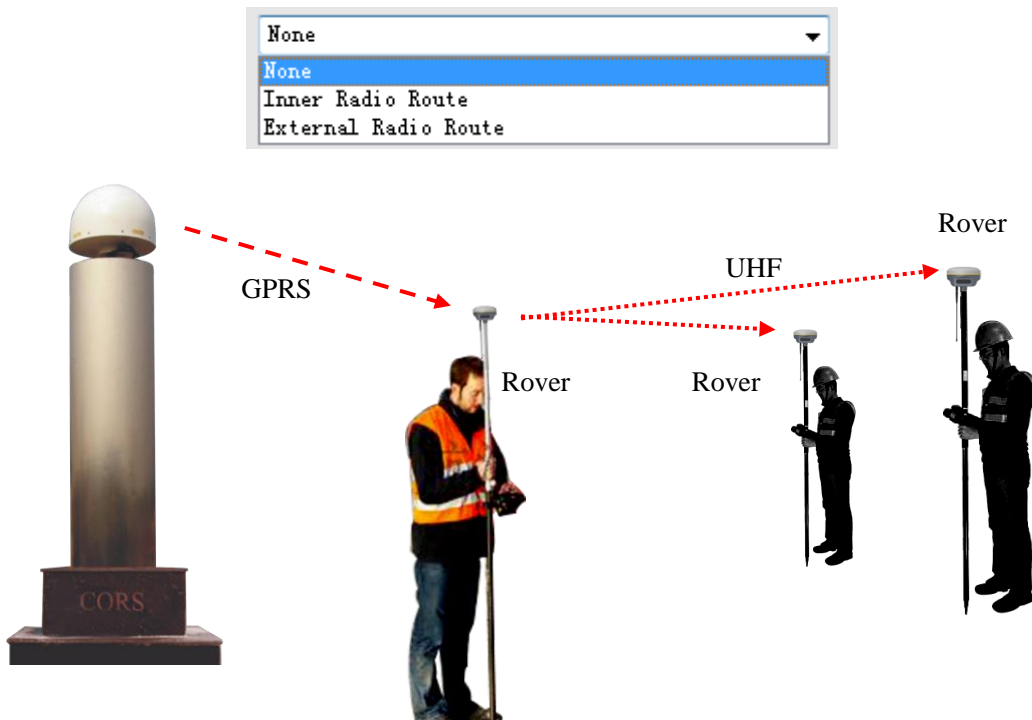

### Operation:

1, choose “Inner Radio Route” and click “Enter” button to confirm the settings.

| Mode setting |                   |
|--------------|-------------------|
| Work Mode:   | Rover             |
| Datalink:    | Network           |
| RadioRoute:  | Inner Radio Route |

2, go to “Radio Config” page, check the channel, communication protocol and the frequency point of each channel.

Active:

Air Baud Rate: 9600

Data Baud Rate: 19200

Channel: 1

Power: LOW

Protocol: SOUTH

3, configure the datalink of the other rovers into internal UHF mode, then make sure the channel, protocol and frequency point are same as “Route” rover.

**RadioTransfer:** This is the function that Galaxy G2 is able to transfer the correction from Base station to the other rovers with the internal UHF, definitely, Galaxy G2 can work as a radio repeater.

Mode setting

Work Mode: Rover

Datalink: Radio

RadioRoute: None

RadioTransfer:


RTK Record:

1PPS:

EVENT:

EVENT Polarity: Negative

Enter Cancel

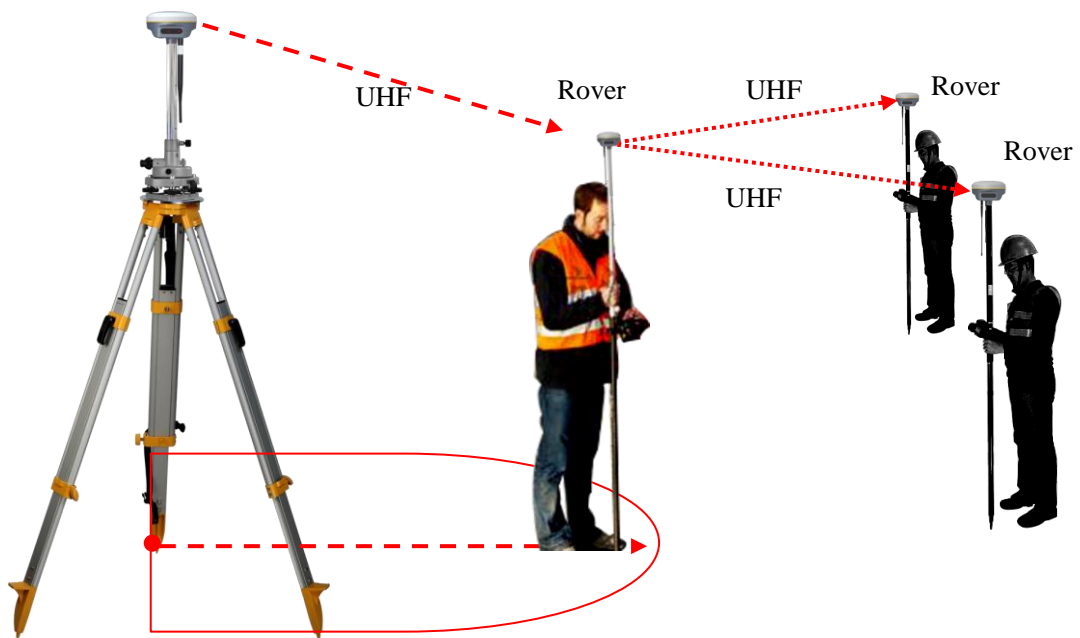

### Operation:

1, check the box of “RadioTransfer” on “General Config” dialog for Base station.

| Mode setting   |                                     |
|----------------|-------------------------------------|
| Work Mode:     | Base                                |
| Datalink:      | Radio                               |
| RadioRoute:    | None                                |
| RadioTransfer: | <input checked="" type="checkbox"/> |

2, open the same function for Rover in critical status (when the Rover is close to working distance of Base internal UHF).

| Mode setting   |                                     |
|----------------|-------------------------------------|
| Work Mode:     | Rover                               |
| Datalink:      | Radio                               |
| RadioRoute:    | None                                |
| RadioTransfer: | <input checked="" type="checkbox"/> |

3, configure the datalink of the other rovers into internal UHF mode, then make sure the channel, protocol and frequency point are same as “Repeater” rover.

*Note: please take in mind that the “Repeater” rover should keep away from Base station to avoid signal interference.*

**RTK Record:** This is used to enable raw data recording in base mode or rover mode for post-processing

**1 PPS:** This option is for the 1 pulse per second output

**EVENT:** This option is for the EVENT marker input

**EVENT Polarity:** EVENT input method.

## Base Setup

When Galaxy G2 works as a base, the basic configuration for base can be setup in this page. Users can input the correct coordinates or capture a current position for the base. Also users can define what kind of correction format is transmitted.

The screenshot displays the 'Base Setup' configuration page in the Galaxy G2 web interface. The interface includes a sidebar menu on the left with various system settings, and a main configuration area on the right. The main area contains the following fields and controls:

- CMR ID:** 28
- RTCM2.x ID:** 476
- RTCM3.x ID:** 476
- Lon:** 113° 22' 5.198639" (with radio buttons for E and W, E is selected)
- Lat:** 23° 7' 34.073373" (with radio buttons for N and S, N is selected)
- Alt:** 33.856201 m
- Position:** Position (selected) / Spare
- Base Start Mode:** Automatically Start Base by Current point (dropdown menu)
- StartBase / StopBase:** Two buttons for manual control.
- Correction:** RTD (dropdown menu)
- POP Value:** 3
- Status:** Start Base Success
- Buttons:** Enter and Cancel

**CMR ID/RTCM2.X ID/RTCM3.X ID:** Users can specify the ID for transmitting correction.

**Position:** Click this button to capture the coordinates for current position

**Spare:** This is used to the repeat station

**Base Start Mode:** Here contains 3 methods to start the Base, manually start base, automatically start base by fixed point, automatically start base by current point.

**Correction:** Here contains the global general used correction formats including RTD,RTCM23, RTCM30, RTCM32, CMR and SCMRx

**POP Value:** This value is setup for the PDOP limitation.

**Status:** Here will display the status for base in real-time.

## Antenna Setup

The antenna parameters are configured in this page including the antenna height, measuring method.

The screenshot shows the 'Antenna Setup' configuration page. On the left is a navigation menu with options: Status, Configuration (selected), General Config, Base Setup, Antenna Setup, Satellite Tracking, Receiver Operation, System Setup, Receiver Security, Satellite, Data Record, and DataTransfer. The main content area displays the following fields:

- Antenna NO#: SG11A6132348104
- RINEX: HX-CSX049A
- Antenna Height: 1.800 m
- MeasuringMethod: Carrier Phase Center

**Antenna Height:** This is the value for height of antenna while surveying.

**Measuring Method:** Here provides several methods for measuring the antenna height such as carrier phase center, slant height, antenna edge, height plate and to the bottom.

A close-up of the 'Measuring Method' dropdown menu. The current selection is 'Carrier phase center'. The dropdown list shows the following options:

- Carrier phase center
- Slant height
- Antenna Edge
- Height tape
- To the bottom

## Satellite Tracking

In this page, users can define the mask angle for satellite tracking, and check on the box of corresponding band from the constellation that to use this band or not

The screenshot shows the 'Satellite Tracking' configuration page. At the top left, there is a 'WELCOME' banner and user information: 'admin', 'S82667117186476', and a '[logout]' link. A navigation menu on the left includes 'Status', 'Configuration', 'General Config', 'Base Setup', 'Antenna Setup', 'Satellite Tracking' (highlighted), 'Receiver Operate', 'System Setup', 'Satellite Information', 'Data Record', 'Data Transfer', 'Network Config', 'Radio Config', 'Firmware Update', and 'Track Manage'. The main content area has a 'Mask Angel' input field with the value '10' and a 'degree' label. Below this is a table of satellite signals:

| Type    | Signal | <input checked="" type="checkbox"/> |
|---------|--------|-------------------------------------|
| GPS     | L1-C/A | <input checked="" type="checkbox"/> |
| GPS     | L1-P   | <input checked="" type="checkbox"/> |
| GPS     | L2-C/A | <input checked="" type="checkbox"/> |
| GPS     | L2-P   | <input checked="" type="checkbox"/> |
| GPS     | L5     | <input checked="" type="checkbox"/> |
| GLONASS | L1-C/A | <input checked="" type="checkbox"/> |
| GLONASS | L1-P   | <input checked="" type="checkbox"/> |
| GLONASS | L2-C/A | <input checked="" type="checkbox"/> |
| GLONASS | L2-P   | <input checked="" type="checkbox"/> |
| GLONASS | L3     | <input checked="" type="checkbox"/> |
| BDS     | B1     | <input checked="" type="checkbox"/> |
| BDS     | B2     | <input checked="" type="checkbox"/> |
| BDS     | B3     | <input checked="" type="checkbox"/> |

## Receiver Operate

The page provides all kinds of operations to control the receiver such as self-check operation, clean epochs, factory reset, reboot and power off.

The screenshot shows the 'Receiver Operate' configuration page. At the top left, there is a 'WELCOME' banner and user information: 'admin', 'S82667117186476', and a '[logout]' link. A navigation menu on the left includes 'Status', 'Configuration', 'General Config', 'Base Setup', 'Antenna Setup', 'Satellite Tracking', 'Receiver Operate' (highlighted), 'System Setup', 'Satellite Information', 'Data Record', 'Data Transfer', 'Network Config', 'Radio Config', 'Firmware Update', and 'Track Manage'. The main content area has a 'Receiver Operate' header. Below it is a 'Module SelfCheck' section with a table:

| Item | Module    | Operation                            | Status    |
|------|-----------|--------------------------------------|-----------|
| 1    | OEM       | <input type="button" value="Check"/> | No Action |
| 2    | Radio     | <input type="button" value="Check"/> | No Action |
| 3    | NetModule | <input type="button" value="Check"/> | No Action |
| 4    | WiFi      | <input type="button" value="Check"/> | No Action |
| 5    | Bluetooth | <input type="button" value="Check"/> | No Action |
| 6    | Sensor    | <input type="button" value="Check"/> | No Action |

Below the table is a 'Check all' button. At the bottom, there is a 'Default Settings' section with a tip: '(Tip: This action will reset all parameters to the factory default setting!)'. Below this are two buttons: 'Clean EPH' and 'Factory Default'.

**Self-check:** Users can also do the self-check from this configuration page, click on the Check all button to check all the modems or click on the check button corresponding to the modem to check one by one.

**Clean EPH:** Click this button to clear the remaining epochs to let receiver track the satellites better.

**Factory Default:** Click this button to bring the receiver back to factory default setting.

**Reboot:** Click this button to restart the receiver.

**Power Off:** Click this button to power off the receiver.

## System Setup

This page is used to control Voice prompt, volume of voice, power saving, USB mode and the default language for receiver.

The screenshot displays the 'SystemSet' configuration page. On the left is a sidebar menu with the following items: Status (+), Configuration (v), General Config (-), Base Setup (-), Antenna Setup (-), Satellite Tracking (-), Receiver Operate (-), System Setup (v), Satellite Information (+), Data Record (+), Data Transfer (+), and Network Config (+). The main area is titled 'SystemSet' and contains the following settings:

- voice prompt :
- voice volume: Medium (dropdown)
- Power: normal mode (dropdown)
- USB: Network Port (dropdown)
- Default Language: English (dropdown)
- TimeZone (h): +8.0 (Beijing, China) (dropdown)

At the bottom of the main area are two buttons: 'Enter' and 'Cancel'.

**Voice Prompt:** Check on this box to turn on the voice guide for Galaxy G2, uncheck it to turn off the voice guide.

**Voice Volume:** Define the voice volume for Galaxy G2's speaker.

**Power:** Configure the receiver to use the power saving mode or not.

**USB:** This is used to configure Galaxy G2 what kind of USB mode output from 7-pin port when connect the receiver with computer via USB cable. USB and network port for optional.

**Default Language:** Configure the default language for Galaxy G2 which associates with voice guid.

*Note: This is not the language setup for web UI, the Web UI only supports Chinese and English.*

**TimeZone(h):** Use this to setup the corresponding time zone for your country or area.



### §4.4.3 Satellite Information

The “Satellite Information” provides all kinds of tables, graph and the skyplot to view the information of tracking satellites. And it is allowed to configure to use which satellite in constellation on/off page by checking on the corresponding box.

#### Tacking Table

Here is the table to list all current used satellites and the other information for these satellites.

| NO. | Type    | Elevation | Azimuth | L1SNR | Code | L2SNR | Code | L5SNR | Code | Status |
|-----|---------|-----------|---------|-------|------|-------|------|-------|------|--------|
| 2   | GPS     | 34.00     | 290.00  | 38.30 | CA   | 0.00  | -    | 0.00  | -    | In use |
| 5   | GPS     | 20.00     | 216.00  | 33.80 | CA   | 32.70 | P    | 0.00  | -    | In use |
| 6   | GPS     | 51.00     | 336.00  | 41.40 | CA   | 38.20 | P    | 27.40 | I    | In use |
| 9   | GPS     | 25.00     | 102.00  | 34.40 | CA   | 33.70 | P    | 0.00  | -    | In use |
| 12  | GPS     | 14.00     | 320.00  | 30.30 | CA   | 30.50 | P    | 0.00  | -    | In use |
| 17  | GPS     | 59.00     | 60.00   | 42.60 | CA   | 36.80 | P    | 0.00  | -    | In use |
| 19  | GPS     | 60.00     | 22.00   | 41.70 | CA   | 23.80 | P    | 0.00  | -    | In use |
| 23  | GPS     | 14.00     | 68.00   | 34.00 | CA   | 0.00  | -    | 0.00  | -    | In use |
| 28  | GPS     | 31.00     | 170.00  | 37.30 | CA   | 0.00  | -    | 0.00  | -    | In use |
| 3   | GLONASS | 62.00     | 78.00   | 41.80 | CA   | 31.80 | P    | 0.00  | -    | In use |
| 4   | GLONASS | 40.00     | 176.00  | 39.90 | CA   | 30.00 | P    | 0.00  | -    | In use |
| 16  | GLONASS | 0.00      | 0.00    | 0.00  | -    | 0.00  | -    | 0.00  | -    | In use |
| 18  | GLONASS | 0.00      | 0.00    | 0.00  | -    | 0.00  | -    | 0.00  | -    | In use |
| 19  | GLONASS | 15.00     | 318.00  | 31.80 | CA   | 22.80 | P    | 0.00  | -    | In use |
| 1   | BDS     | 49.00     | 128.00  | 41.00 | I    | 36.20 | I    | 0.00  | -    | In use |
| 2   | BDS     | 48.00     | 236.00  | 39.00 | I    | 34.70 | I    | 0.00  | -    | In use |
| 3   | BDS     | 63.00     | 188.00  | 42.50 | I    | 34.80 | I    | 0.00  | -    | In use |

#### Tracking Chart


In this page, the histogram will indicate the signals from those used satellites, and allow to check each constellation separately.

Type:  GPS (G)  BDS (S)  GLONASS  GALILEO  SBAS  QZSS

| NO. | L1C/B1/E1 | L2P/B2/E5B/L2X | L5/B3 |
|-----|-----------|----------------|-------|
| 1   | 38        | 35             | 35    |
| 2   | 36        | 34             | 34    |
| 3   | 40        | 35             | 35    |
| 4   | 36        | 31             | 31    |
| 5   | 35        | 28             | 28    |
| 6   | 42        | 34             | 34    |
| 7   | 36        | 31             | 31    |
| 8   | 41        | 35             | 35    |
| 9   | 38        | 32             | 32    |
| 10  | 38        | 31             | 31    |
| 11  | 38        | 33             | 33    |
| 12  | 45        | 39             | 39    |
| 13  | 43        | 34             | 34    |

## Skyplot

In this page, all the tracking satellites are shown on the skyplot, this let users intuitively view and know where the current position of satellite is.

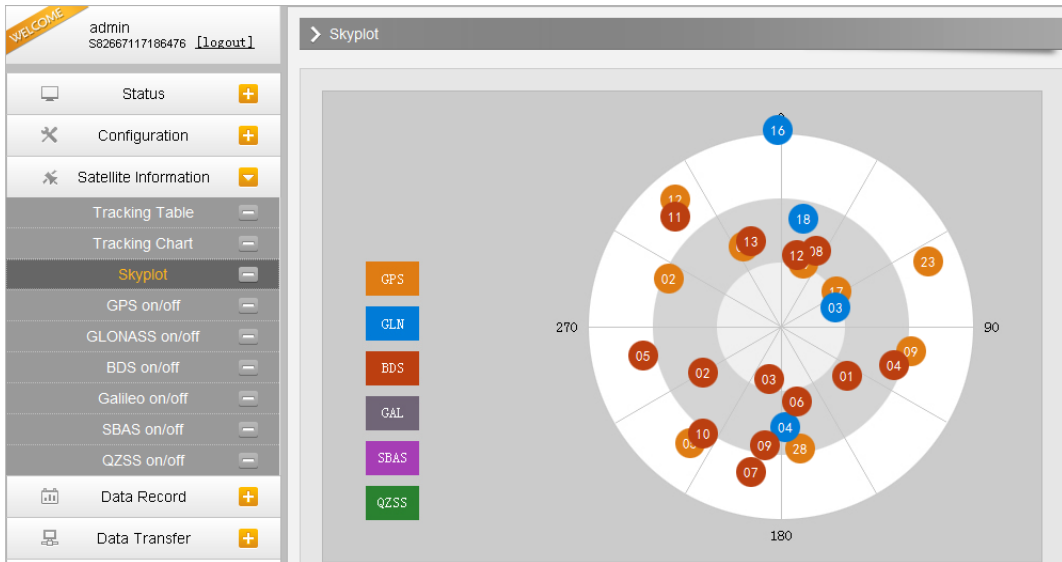

## GPS on/off

For all the running GNSS constellations or the augmentation system, Galaxy G2 allows to configure to use which satellite or not.

In gns on/off page, all the running satellites are listed, and unselect the box corresponding to the satellite to not use it.

| Satellite NO. | <input type="checkbox"/>            |
|---------------|-------------------------------------|
| GPS1          | <input checked="" type="checkbox"/> |
| GPS2          | <input checked="" type="checkbox"/> |
| GPS3          | <input checked="" type="checkbox"/> |
| GPS4          | <input checked="" type="checkbox"/> |
| GPS5          | <input checked="" type="checkbox"/> |
| GPS6          | <input checked="" type="checkbox"/> |
| GPS7          | <input checked="" type="checkbox"/> |
| GPS8          | <input checked="" type="checkbox"/> |
| GPS9          | <input checked="" type="checkbox"/> |
| GPS10         | <input checked="" type="checkbox"/> |
| GPS11         | <input checked="" type="checkbox"/> |
| GPS12         | <input checked="" type="checkbox"/> |
| GPS13         | <input checked="" type="checkbox"/> |
| GPS14         | <input checked="" type="checkbox"/> |
| GPS15         | <input checked="" type="checkbox"/> |
| GPS16         | <input checked="" type="checkbox"/> |

## §4.4.4 Data Record

The “Data Record” performance is mainly used to configure all the parameters for receiver in static mode. Much more operations can be done on Galaxy G2 such as storage path, interval, data format and data files download.

### Recording Config

The page provides more practical operations for raw data storage.

**Storage Option:** Here are the options to be selected for where the raw data will be stored, internal memory or external memory.

**Interval:** This is the sampling interval for data storage, 50Hz(0.02s) sampling interval now is available for Galaxy G2.

**File Interval:** This is used to defined the data storage time for the static file.

**Data Format:** Here are 3 options to selected for Galaxy G2 to store what kind of format data, STH, Rinex2.0 and Rinex3.0.

**Point Name:** A point name is required, the last 4 digits of SN is default setting for the point name.

**Auto Delete:** This is used to configured Galaxy G2 to delete the previous data files automatically if the memory is full.

**Format:** Click this button to format the internal memory for Galaxy G2.

**Recording Mode:** Here are 2 options to configure Galaxy G2 to record raw data automatically or not if it achieves the sampling conditions.

**Start/Stop:** Click these buttons to start recording or stop recording the raw data.

**Recording Status:** Here shows the status of static data storage.

## Data Download

This page provides the data files to download

Choose the storage where the static data recorded, and file type, then click on the blank of “Select Date” to choose what date the data was recorded and click “Get Data” button, all the files recorded in the date you choose will show in the table, tap download button to download the data files.

### §4.4.5 Data Transfer

This performance contains General, Serial Port Config, TCP/IP Config, NTRIP Config and Data Flow Config. The “Data Transfer” allows to configure the output mode for raw observation data and differential data, as well as to the NTRIP performance configuration.

#### General

This page shows the service condition and the output contents of the ports, if the port item display in green, that means the port is being used, and the port is not used while the item display in red.

| Type   | Port               | Input | Output          |
|--------|--------------------|-------|-----------------|
| Serial | LEMO (115200)      | none  | Navigation data |
| Serial | BLUETOOTH (115200) | none  | Navigation data |

## Serial port Config

This page is allowed to configure the baud rate, odd-even check and the data flow for serial port (5-pin port) and Bluetooth.

| Item | Serial Port | Baud Rate | Odd/Even | Data Flow       | Enable                              |
|------|-------------|-----------|----------|-----------------|-------------------------------------|
| 1    | LEMO        | 115200    | None     | Navigation Data | <input checked="" type="checkbox"/> |
| 3    | BLUETOOTH   | 115200    | None     | Navigation Data | <input checked="" type="checkbox"/> |



**CAUTION:** do not change the default value in this page for each item, if you want to change the settings, please contact with SOUTH technician for further support.

In the dropdown list of data flow, there shows 4 items for selection.

**Raw observation data:** This is the raw observation data straight from OEM board.

**Correction Data:** This is the correction data straight from OEM board.

**Navigation Data:** This is the navigation data output from receiver such as NMEA-0183, GSV, AVR, RMC and so on. It is configured in Data Flow Config page.

**SIC Observation Data:** This is the user-defined format observation data from SOUTH.


**OpenSIC Observation Data:** This is the open version of SOUTH user-defined format observation data for secondary development.

## TCP/IP Config

This is used to configure the raw data or navigation data to be uploaded or transferred to a server. And there are Caster and Server working mode for this performance.


**Caster:** If this working mode is selected, GALAXY G2 will be a client to upload the data to a specify server if it connects to the internet by WIFI or GPRS connection with SIM card inserted. Input the specified IP and port for server, and the data format what is uploaded. Then users are able to see the uploaded data on server.

**Server:** Galaxy G2 will upload the data onto internet by the static WIFI if server is selected, then users are able to obtain its dynamic data by accessing to GALAXY G2 through the IP from receiver.

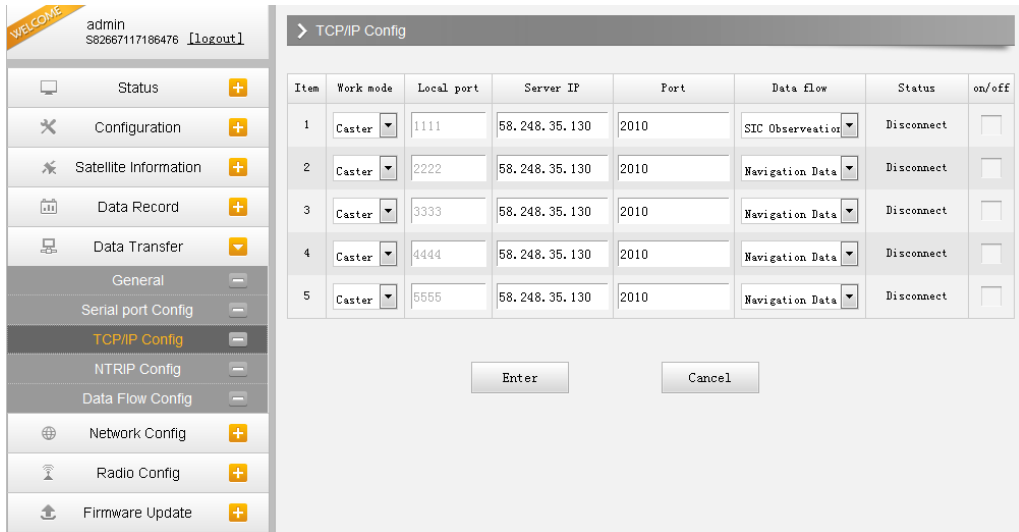

### NTRIP Config

This is used to configure the NTRIP performance while receiver is going to connect to internet. Galaxy G2 supports complete NTRIP performance including NTRIP Client, NTRIP Server and NTRIP Caster.

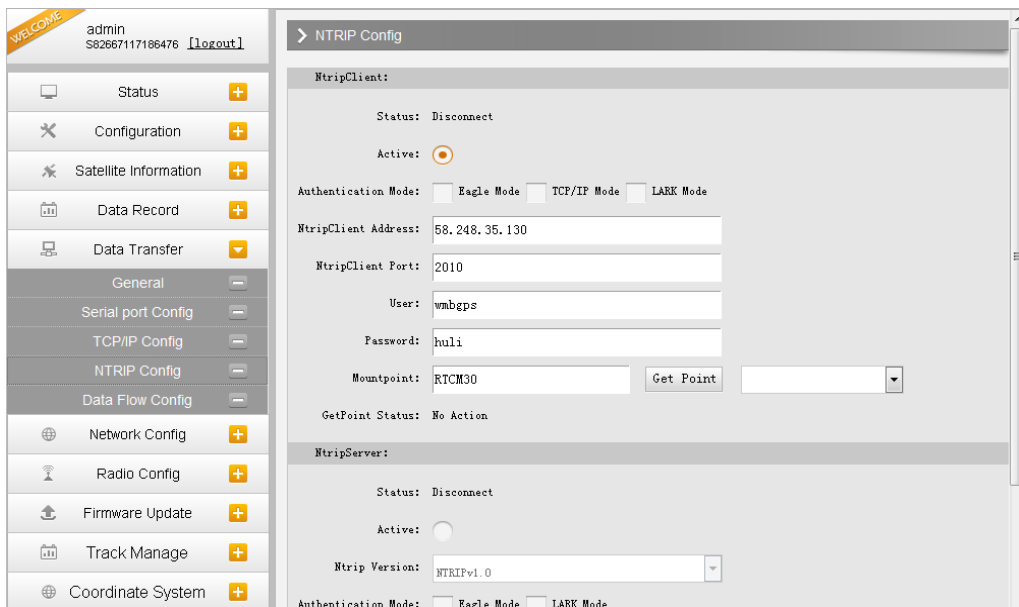

## NtripClient


This is the general used function for rover set in GPRS mode. At the field of NtripClient, the specify IP address, access port of reference station, as well as the assigned username and password shall be input for the NTRIP connection.

**Status:** This field will display the status of NTRIP connection, connect or disconnect.

**Active:** Check on this circle to activate this function.

**Authentication Mode:** This includes Eagle Mode, TCP/IP Mode and LARK Mode.

- ① Eagle Mode is SOUTH standard mode, usually, this mode is used on the case of both Base and Rover are using GPRS mode.
- ② TCP/IP Mode is for private network use.
- ③ LARK Mode, which is a new technology on GPRS use, it is similar to GSM dial. This mode no longer rely on a CORS server that the corrections are transmitted by GPRS network. Besides, it is different from the feature of Caster.

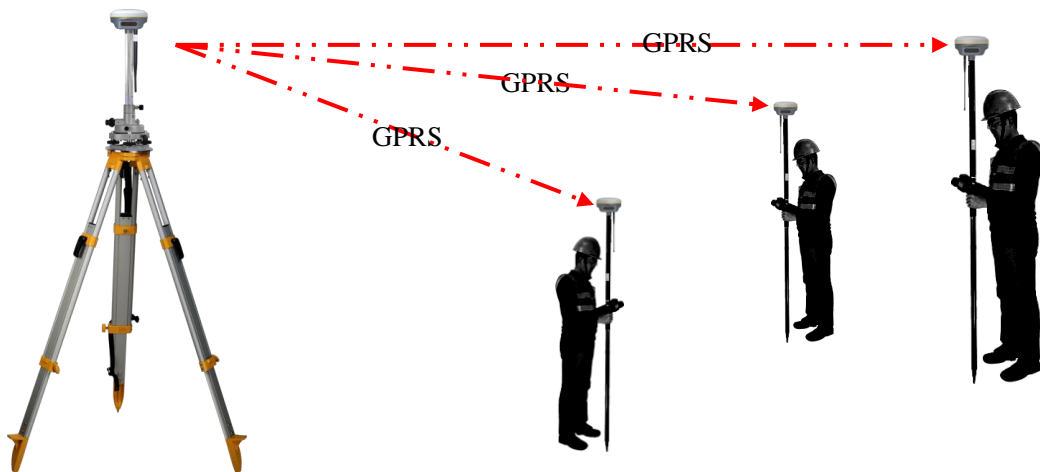

The other fields are the standard configuration for NTRIP connection, IP, port, username and password, after this information is input into the corresponding field, click on Get Point button to download the source table from server, then choose a proper mountpoint to access.

## NtripServer

This configuration is used in Base+GPRS mode that Base station will transfer its correction onto the server as long as it connects to internet, then Rover can download the base's correction from server for use. Or use the LARK mode.

**Ntrip Version:** This field provides NTRIPv1.0 and NTRIPv2.0 for optional.

**Access Point:** This field is allowed to user-defined the correction format which base will transfer to the server, such as HHHH\_RTCM30

NtripServer:

Status: Disconnect

Active:

Ntrip Version: NTRIPv1.0

Eagle Mode:

NtripCaster Address: 58.248.35.130

NtripCaster Port: 2010

User: 0488

Password: 3839

Access Point: HHHH\_RTCM30

## Operation on LARK

- Setup the Base station on a known position or an unknown position.
- Insert SIM cards into both Base and Rover receiver
- Input the correct APN and the assigned username and password on Network Config page, then make sure both of them have connected to internet.

admin  
S82667117186476 [logout]

WELCOME

Configuration

SMS Config

CSD Config

WIFI Config

Blue Tooth Config

Port Forwarding

Router

Network Testing

Radio Config

GSM/GPRS Config

Network Config

Data Transfer

Data Record

Satellite Information

Configuration

Status

GMS/GPRS Config

Status:

Signal:

Module Mode: ME909s-821

IMEI: 067223021570809

SIM Card Status: SIM is Wrong

Registration Status: Searching...

Connection Type: None

PPP Dial Status: Disconnect

IP Address: 0.0.0.0

Parameter Config:

Active:

APN: CMNET

APN User Name:

APN Password:

- Check the box of LARK for both Base and Rover, then we can notice that after checking LARK for Base, all the fields turn into grey and unable to input anything, and there is only Mountpoint field available for Rover.



- e) The key step is that input the **Serial Number** of Base into Mountpoint field, then click “Enter” button to confirm all the settings.

The image shows two screenshots of configuration interfaces. The top screenshot is for the NtripClient, and the bottom is for the NtripServer. Both are currently in a 'Disconnect' state and are 'Active'.

**NtripClient:**

- Status: Disconnect
- Active:
- Authentication Mode:  Eagle Mode  TCP/IP Mode  LARK Mode
- NtripClient Address: 58.248.35.130
- NtripClient Port: 2010
- User: wmbgps
- Password: huli
- Mountpoint: S82667117186476
- GetPoint Status: No Action

**NtripServer:**

- Status: Disconnect
- Active:
- Ntrip Version: NTRIPv1.0
- Authentication Mode:  Eagle Mode  LARK Mode
- NtripCaster Address: 58.248.35.130
- NtripCaster Port: 2010
- User: user
- Password: password
- Access Point: galaxy

### NtripCaster

This feature is finally realized on Galaxy G2, the receiver is equivalent to a CORS system that it generates and broadcasts the user-defined correction for rover if GALAXY G2 connects a static IP address.

**Port:** This is the specify port for the access.

**Access Point:** This is mountpoint which can be user-defined.

**NtripCaster:**

Status: Disconnect

Active:

Port: 6666

Access Point: fdld

Enter Cancel

## Data Flow Config

In this page, users can optionally to configure the content and the update rate of data flow that to output or not to output what kind of data format.

Click on the dropdown list for each data format to define the update rate

**Data Flow Config**

Navigation Data:

GGA: 1 GSA: 1 GSV: 5 GST: 1

ZDA: 1 BPQ: 10 PJK: OFF GLL: OFF

RMC: OFF VTG: OFF

SIC Navigation Data:

PST: 1 GST: 10 EST: 5 TPI: OFF

VCV: OFF STA: OFF DEV: OFF AAT: WhenChanged

REC: OFF DAL: WhenChanged

Raw Observation Data:

Output Interval: 1 s

GFS Ephemeris: WhenChanged

GLOWASS Ephemeris: WhenChanged

BDS Ephemeris: WhenChanged

GALLILEO Ephemeris: WhenChanged

Ionosphere:  Yes  No

## §4.4.6 Network Config

The “Network Config” is able to configure the ways and the contents for internet access of Galaxy G2. GSM/GPRS Config, CSD Config, WIFI Config, Bluetooth Config, Port Forwarding, Router and Network Testing are under the list of Network Config.

### GSM/GPRS Config

In this page, all the information of receiver under GPRS mode will be displayed including the hardware information and dialing status.

**Status:** The dialing status and hardware information are displayed in this field that users can intuitively to view the signal of network, module model and the IMEI number of the module.

**Parameter Config:** The parameters of SIM card are input in this field including APN, assigned username and password, dial mode.

### MSM Config

On this configuration dialog, input a phone number into the blank, Galaxy G2 will send text message onto the phone which number is written.

### CSD Config

CSD is the meaning of direct dial between Base and Rover with SIM card inserted (the CSD function should be activated on local SIM card), this function is mainly used in the area where there is very poor internet signal coverage.

**Status:** This field displays the dialing status when CSD is used on Galaxy G2.

**Parameter Config:** To enable the CSD function with checking the box of Enable option in this field, then input the phone number for Rover and Base in CallNumber and LocalNumber.

*Tips: please choose CSD as datalink for receiver in General Config.*

The screenshot shows the 'CSD Config' web interface. At the top left, there is a user login area with 'admin' and 'S82667117186476 [logout]'. The main content area is divided into two sections: 'Status' and 'Parameter Config'.

**Status:**

- Signal:
- Connection Type: CSD
- IMEI: 0
- SIM Card Status: Checking SIM Card...
- Registration Status: Unregist
- PPP Dial Status: Disconnect

**Parameter Config:**

- Enable:
- CallNumber:
- LocalNumber:

At the bottom, there is a tip: 'Tips: Please enable CSD datalink, before you operate this page!' and two buttons: 'Enter' and 'Cancel'.

## WIFI Config

This is mainly used on the WIFI configuration for Galaxy G2, there are AP mode and Client mode for optional.

### AP:

This is used to enable the WIFI hotspot for Galaxy G2 to broadcast for mobile terminals such as smartphone or tablet to connect and access the Web UI.

Check the box of AP in Work Mode to enable the WIFI hotspot for Galaxy G2, and define the SSID, password, encryption method and broadcasting channel for WIFI connection.

**DHCP IP Range:** This is allowed to user-defined the IP for Web UI login.

The screenshot shows the 'WIFI Config' page in the Galaxy G2 web interface. The user is logged in as 'admin' (S82667117186476). The left sidebar contains navigation options: Status, Configuration, Satellite Information, Data Record, Data Transfer, Network Config (expanded), GSM/GPRS Config, SMS Config, CSD Config, **WIFI Config**, Blue Tooth Config, Port Forwarding, Router, and Network Testing. The main content area is titled 'WIFI Config' and includes the following settings:

- Active:
- Work Mode:  AP  Client
- AP\_SSID: SOUTH\_6476
- AP\_Password: southgnss.com.cn
- AP Encode: Open
- AP Channel: 1
- DHCP IP Range:
  - 192.168. .0/255.255.255.0
  - 172.16. .0/255.255.255.0
  - 10.1.1.0/255.255.255.0

Buttons for 'Enter' and 'Cancel' are located at the bottom of the configuration area.

**Client:**

This option enables Galaxy G2 to search and connect the other WIFI hotspot which connects to the internet, the receiver is able to download and use the mountpoint from reference station.

**Client\_SSID:** This is the WIFI hotspot which Galaxy G2 is going to connect

**Scan:** Click this button to search the surrounding available WIFI hotspot.

**Password:** This is the password which the WIFI hotspot requires.

**IP fields:** If Galaxy G2 successfully connects to the WIFI, there will be an LAN IP address generated by Galaxy G2.

**ClearSSID:** Click this button to clear the SSID list.

The screenshot shows the 'WIFI Config' page in the Galaxy G2 web interface, now configured for Client mode. The user is logged in as 'admin' (S82667117186476). The left sidebar is the same as in the previous screenshot. The main content area is titled 'WIFI Config' and includes the following settings:

- Active:
- Work Mode:  AP  Client
- Client\_SSID: southgnss (with a 'Scan' button and a dropdown menu)
- Password: southgnss.com.cn
- Encryption Type: WPA2
- DHCP:
- IP Address: 0 . 0 . 0 . 0
- Subnet Mask: 255 . 255 . 255 . 0
- Default Gateway: 0 . 0 . 0 . 0
- Status: No Connect
- Signal:
- Clear SSID List: ClearSSID

Operation Tip: When change wifi work mode from AP to Client, please reboot host to take effect

Client function!

## Bluetooth Config

In this page, users can view the information and connection status of Bluetooth, such the MAC of Bluetooth, discoverable or not, the PIN code, and the connection devices in following table.

admin  
S82667117186476 [logout]

Blue tooth config

Active:

Blue Tooth MAC: 00:80:25:4A:80:78

Discoverable:

PIN Code: 0

Connection Device:

| Item | Device Mac | RFCOMM Channel | Device Name | Disconnect Action |
|------|------------|----------------|-------------|-------------------|
| 1    |            |                |             | Disconnect        |
| 2    |            |                |             | Disconnect        |

Enter Cancel

## Port Forwarding

This page is mainly used to view and configure the internet transmission port for Galaxy G2, customize and debug receiver.

admin  
S82667117186476 [logout]

Port Forwarding

HTTP Port: 80

FTP Port: 21

TELNET Port: 23

Enter Cancel



**NOTE:** Usually we will keep the default setting in this page, if you would like to modify it, please contact with SOUTH technician for more supports.

## Router

This is mainly used to view and configure the parameters for router, only under the condition of customize and debug receiver.

The screenshot shows the 'Router' configuration page. On the left is a navigation menu with options like Status, Configuration, Satellite Information, Data Record, Data Transfer, Network Config, GSM/GPRS Config, SMS Config, CSD Config, WIFI Config, Blue Tooth Config, Port Forwarding, Router (highlighted), Network Testing, and Radio Config. The main content area is titled 'Router' and contains a table with the following data:

| Destination   | Gateway | Mask    | Sign | Interface |
|---------------|---------|---------|------|-----------|
| 192.168.155.0 | 0.0.0.0 | 0.0.0.0 | U    | usb0      |

Below the table, there is a 'Change the default route:' section with a dropdown menu set to 'PPPO' and an 'Enter' button. A 'Refresh' button is also present. At the bottom, there is an 'Add Route' section with input fields for Destination, Gateway, Mask, and Interface (set to 'PPPO'), along with an 'Enter' button.



**NOTE:** Usually we will keep the default setting in this page, if you would like to modify it, please contact with SOUTH technician for more supports.

## Network Testing

This function is mainly used to test network status for Galaxy G2 after logging on the internet.

How to do:

Input the IP address which Galaxy G2 already connected, then click PING button, the testing information will be displayed in the following window.


The screenshot shows the 'Network Testing' page. The navigation menu on the left is the same as in the Router page, but 'Network Testing' is highlighted. The main content area is titled 'Network Testing' and contains an 'Input IP:' field with the value '58.248.35.130' and a 'PING' button. Below this, the 'PingStatus:' is 'No Action' and the 'PingResult:' is an empty text area.

## §4.4.7 Radio Config

As the name implies, the parameters of radio can be done in “Radio Config”, it is divided into Radio Parameter and Radio Frequency.

### Radio Parameter

This page is mainly used to configure the parameters for internal radio module of Galaxy G2.

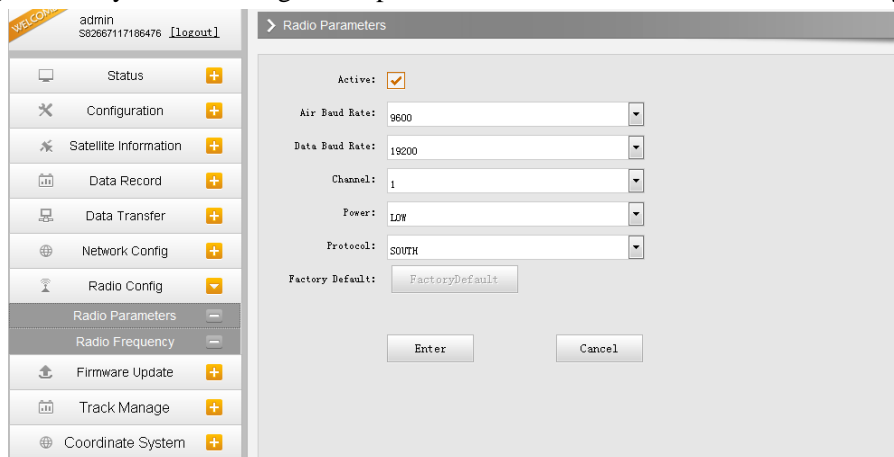

**Air Baud Rate:** This represents the data transmission rate in the air of internal radio, the higher value, the bigger of data size transmitted per second, usually keep the default setting.

**Data Baud Rate:** This represents the rate of data transmission port of internal radio, this rate should be the same in both Base and Rover. In general, the data baud rate of SOUTH radio module has been unified to be 19200, keep it as default.

**Channel:** This is the communication channels for internal UHF, the value of the channel must be the same both in Base and Rover.

**Power:** This appears only in Base mode, the radio transmitting power is allowed to define in High, Middle or Low power.

**Protocol:** This is radio communication protocol for data transmission, SOUTH and TRIMTALK are optional in this page and SOUTH is the default setting, if it is changed, Base and Rover must use the same protocol for communication.

**Factory Default:** Click this button to restore the factory default for internal UHF module.

### Radio Frequency

For Galaxy G2, the powerful internal radio module supports much more radio channels apply to the legal frequency in different countries or areas.

There are 16 radio channels listed in this page after clicking on radio frequency. Users are able to change the frequency freely in the channel spacing, click Restore button to bring the frequency of each channel back to default setting.



| Channel    | Frequency (MHz) |
|------------|-----------------|
| Channel 1  | 463.125         |
| Channel 2  | 464.125         |
| Channel 3  | 465.125         |
| Channel 4  | 466.125         |
| Channel 5  | 463.625         |
| Channel 6  | 464.625         |
| Channel 7  | 465.625         |
| Channel 8  | 466.625         |
| Channel 9  | 463.125         |
| Channel 10 | 464.125         |
| Channel 11 | 465.125         |
| Channel 12 | 466.125         |
| Channel 13 | 463.625         |
| Channel 14 | 464.625         |
| Channel 15 | 465.625         |
| Channel 16 | 466.625         |

## §4.4.8 Firmware Update

Update the latest firmware for receiver or for corresponding modems can be done in “Firmware Update”.

### Firmware Update

This page displays all the information of the firmware which current installed on Galaxy G2, and allows to update the latest version firmware for receiver. To get latest version firmware please contact with SOUTH technician.

**Firmware Information:**

Firmware Version: 1.06.161019.B826GL  
 Core Engine Version: Sirius.1.06  
 Release Date: 20161019  
 Warranty Date: 20150101  
 Firmware Check Sum: 0

**Online Update:**

Latest Version:  
 Update Status:  
 Download Status:  
 Last Update Time: 0

Online Update:

**Local Update:**


Firmware Path:

**Online Update:** Galaxy G2 supports to update the firmware online anytime if there is something update or optimized.


**Local Update:** Update the latest firmware by using a firmware file.

### How to upgrade the firmware with Local Update


- a) Click on “Browse” button to load firmware file (Please take in mind that the firmware is ended with .img as the extension name).

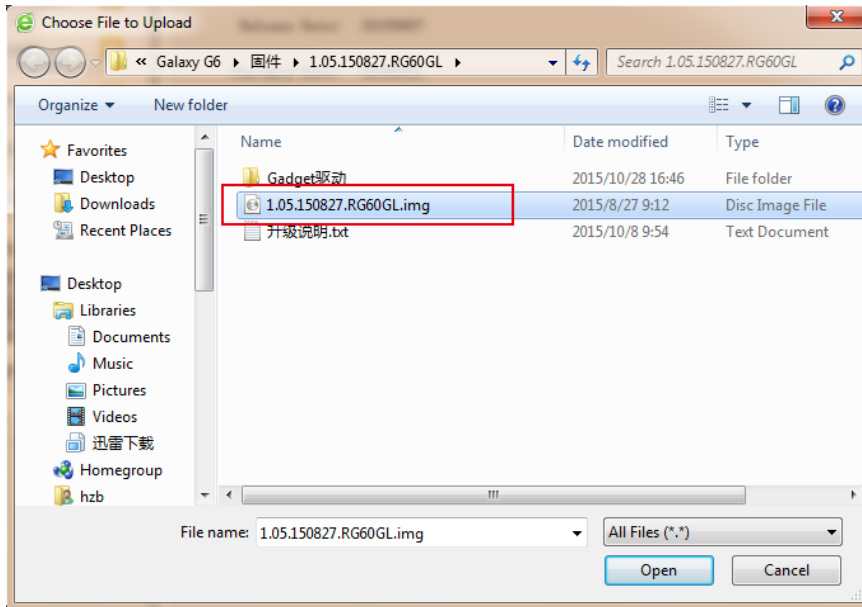

- b) And then click “Installation” button to start upgrading.

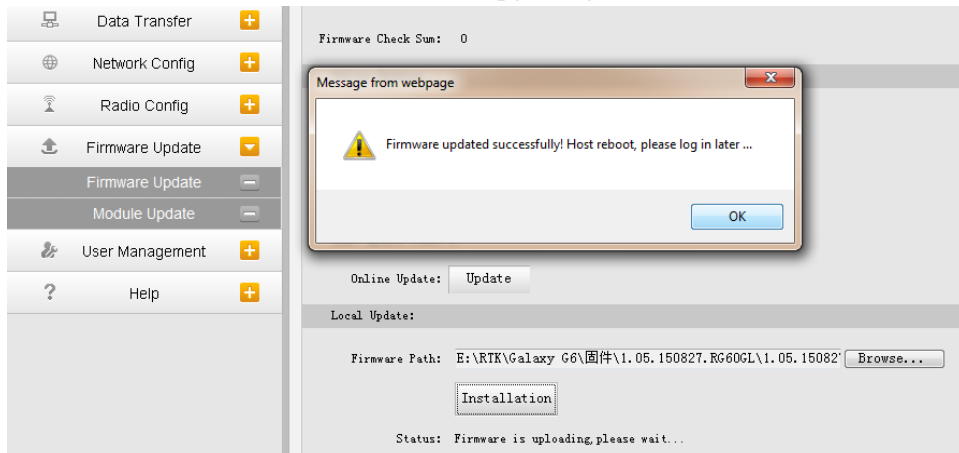


- c) After the firmware is completed upgrading, a dialog will appear saying “Firmware updated successfully! Host reboot, please log in later...”, then the receiver will restart automatically.

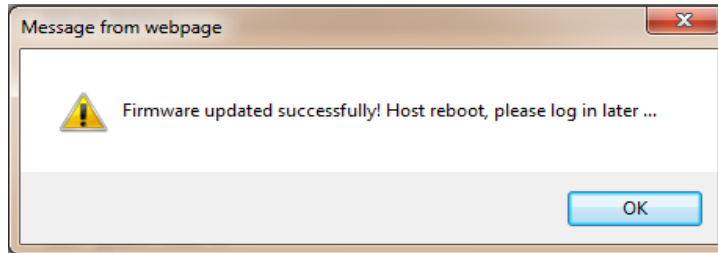

**SPECIAL REMIND:** Galaxy G2 doesn't support to update the firmware with the help of INStar program any more, in the future, update the firmware for Galaxy G2 shall be done through the Web UI.

## Module Update


This page is used to update the firmware for corresponding modem such as OEM board, radio module and sensor.

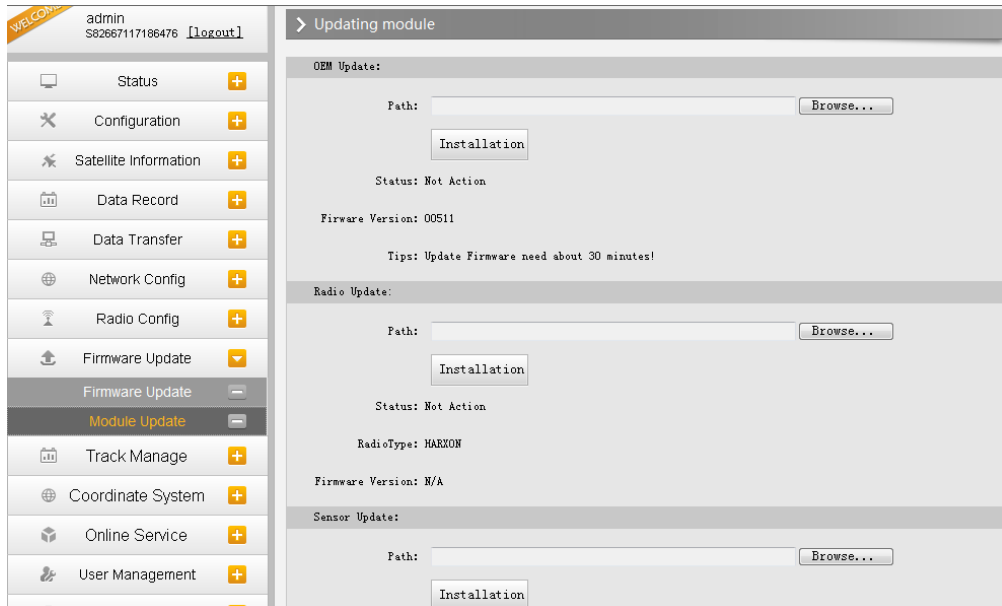

### §4.4.9 Track Manage


Galaxy G2 now supports to record the track while doing measurement, and upload the data onto the server.

### Parameter Setting

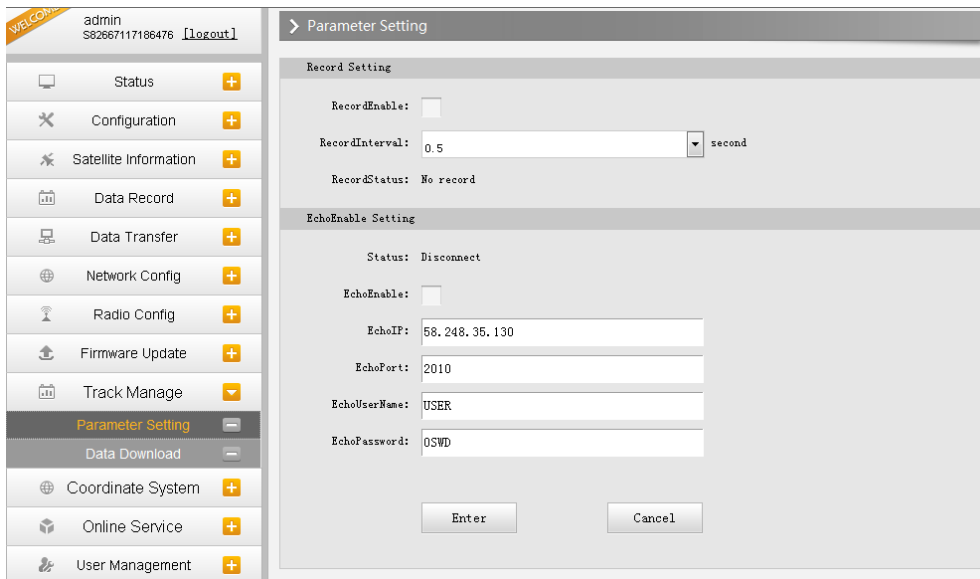


### Record Setting

Check on the box of “RecordEnable” to activate track recording function, and choose a proper recording interval in dropdown list of “RecordInterval”.

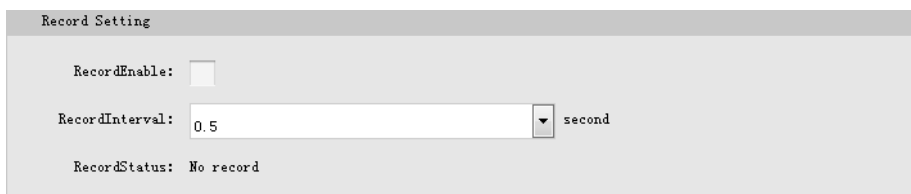

### EchoEnable Setting

This configuration dialog is used to upload the recording data to a server in real-time.

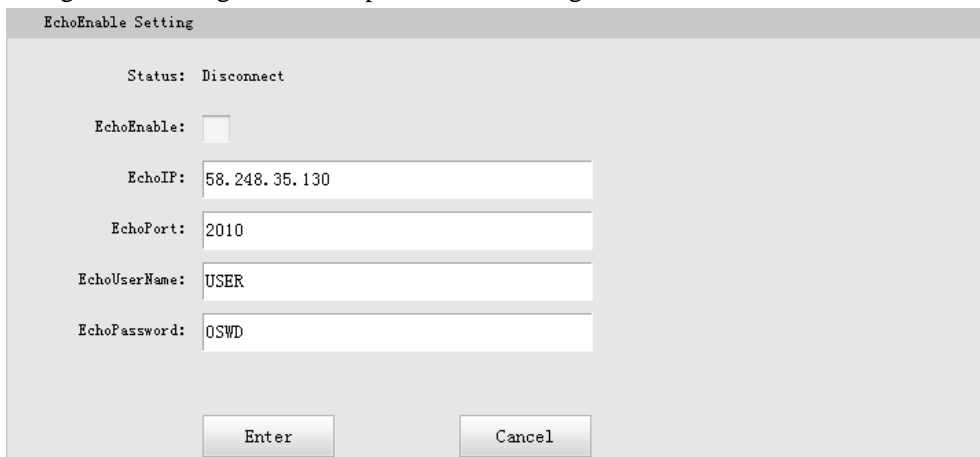

## Data Download

On this page, users can download the track data file from receiver. Choose the recording date and click “Get Data” to load all the data files recorded at that day, then choose the files and click download button.

The screenshot displays the 'Data Download' interface. On the left is a sidebar menu with 'Data Download' highlighted. The main area features a 'Select Date' field with a calendar pop-up for November 2016, where the 4th is selected. A 'Get Data' button is next to it. Below the date selection is a table with 13 rows. Each row has an 'Item' number (1-13) and a '[Download]' button. A 'Download Tips' dialog box is open, showing the selected date and a 'Save as and complete' button.

### §4.4.10 Coordinate System(reserve)

Galaxy G2 allows users to setup the local coordinate system on internal web UI management. The instrument would output the local coordinates according to this coordinate system.

The screenshot shows the 'Coordinate System' configuration page. The sidebar menu has 'Coordinate System' selected. The main area contains a form for setting up the coordinate system. It includes a 'Coordinate projection' section with fields for ProjectionName (WGS84), ProjectionA (6378137.000), ProjectionB (298.257223563), ProjectionC (0.0), ProjectionD (114.0), ProjectionE (500000.0), ProjectionF (0.0), ProjectionG (1.0), and ProjectionH (0.0). Below this is a 'Seven parameter' section with fields for Delta X (meter) (0.0), Delta Y (meter) (0.0), and Delta Z (meter) (0.0).

### §4.4.11 Online Service(reserve)

This function is to upload the data onto a server real-time, including Navigation data, raw observation data, correction data, SIC observation data and open SIC observation data.

The screenshot shows the 'Online Service' configuration page. The sidebar on the left lists various system functions, with 'Online Service' highlighted. The main panel displays the following configuration options:

- Status: Disconnect
- Active:
- Be controlled:
- Anonymous Login:
- Inactive In 2G Mode:
- Data Type: Navigation Data (dropdown menu)
- IP: 192.168.1.1
- Port: 6060
- UserName: UserName
- Password: Password

Buttons for 'Enter' and 'Cancel' are located at the bottom of the configuration area.

### §4.4.12 User Management

This page is used to manage the authority of login Web UI for users, including the username, password and add users.

The screenshot shows the 'User Management' page. The sidebar on the left lists various system functions, with 'User Management' highlighted. The main panel displays the following information:


- An 'Add user' button.
- A table listing the current user:

| Name  | Limits of authority | Status | Operating              | Operating            |
|-------|---------------------|--------|------------------------|----------------------|
| admin | Administrator       | online | <a href="#">delete</a> | <a href="#">edit</a> |

## §4.4.13 Help

In this page, users can get help and check the log book of receiver (the log book can help to backtrack the working status of receiver).

NOTE: Only the administrator can modify any parameters for receiver and manage users, and the ordinary users only have the right to view the relative parameters.

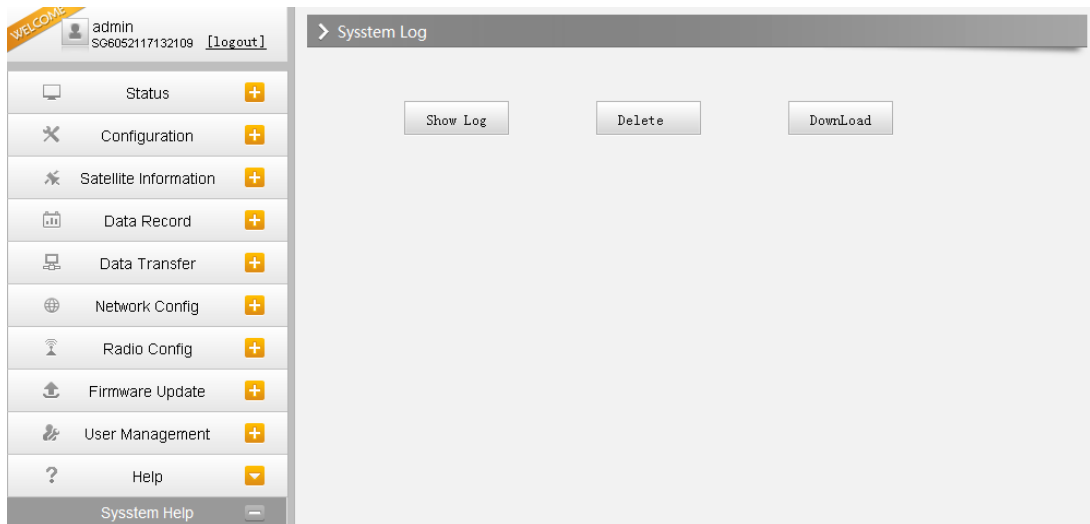

## Chapter V Data Collector -- H5



H5 is a new generation professional controller running on Android which offers state of the art smartphone capabilities combined with rugged professional quality. And the alphanumeric keypad which gives flexibility for surveyors' field work.

It adopts the 3400 mAh Li-ion battery that fulfills the long working time as customers' need. H5 controller is integrated with various sensors, like barometers, NFC, gyroscope, E-compass, G-sensor, etc. The powerful network module can provide multiple options and perfect experience of high-speed net connection. The H5 can be configured with internal Bluetooth, WiFi, Camera, GPS and cellular functionality.
















## §5.1 Get to start


This section will take you to understand well the functions of each hardware component of the H5 controller.



### Keyboard

| Ref   | Component   | Description  |
|---|-------------|--|
|  | Home key    | Return to home screen directly. Long pressing to view recent application |
|  | Menu key    | Pressing it to show the available menu in current screen                 |
|  | Return key  | Return to the previous screen  |
|  | APP key     | Shortcut key of the configured application                               |
|  | Capture key | Pressing it to rapidly collect coordinate                                |
|  | Fn key      | Switch input languages   |

|   |              |  |
|---|--------------|--|
|  | Enter key    | Enter key for operation confirming                   |
|  | Backspace    | Backspace and delete mistyped                        |
|  | Space        | Input the space as requirement                       |
|  | Shift        | Switch the upper and lower case letters              |
|  | Power key    | Power on/off device, turn off and wake up the screen |
|  | Arrow keys   | Move the cursor                                      |
|  | Numeric keys | Input the numbers                                    |

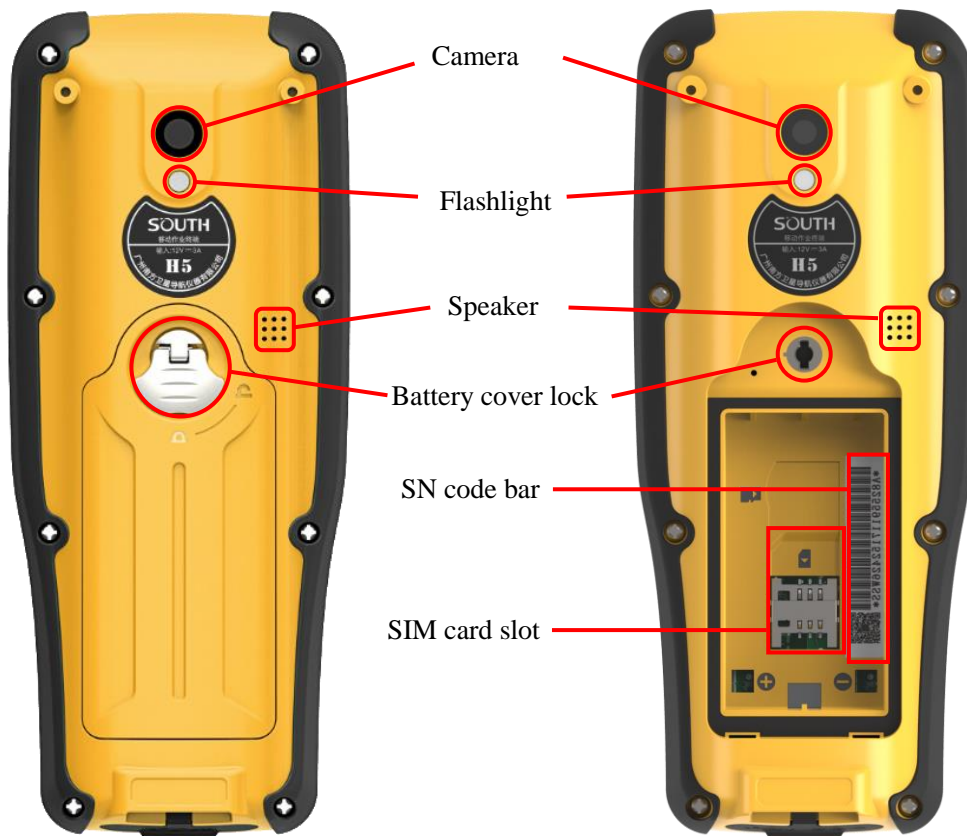



## §5.2 Accessories of H5

### Battery & Charger

The battery of H5 adopts the same type of batteries with RTK receiver, so that it can use the same charger with RTK for controller battery charging, that means we don't need the additional charger for controller batteries.



- ✧ The Li-ion battery must be charged before use and the charging time would take about 4 hours, and the charger has the function of overcharge protection.
- ✧ The battery is charging while the indicator on the charger is red, when the indicator turns into green, it means the battery is full charged.

## USB cable


The USB cable is mainly used for the data transmission between controller and PC.



## Connect to PC


Connect H5 controller with PC by USB cable, and choose the USB connection type on the controller, after that the controller would be recognized as one of the computer devices and come with the name as H5T.

*USB connection requires the USB debugging enable first in Developer options*


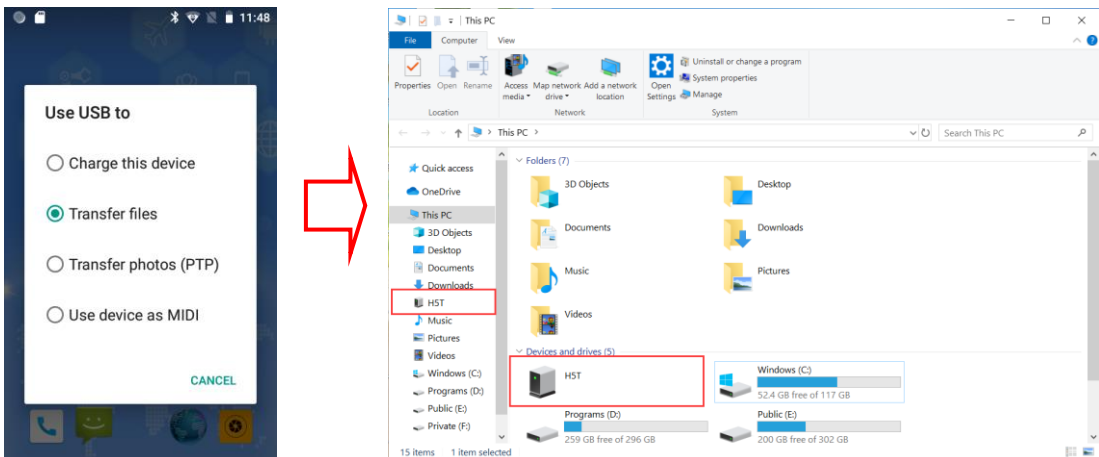


## §5.3 Software installation



Connect H5 controller with PC by USB cable and copy the software installation file (\*.apk) into a folder in the internal storage of controller where you can easy to seek.

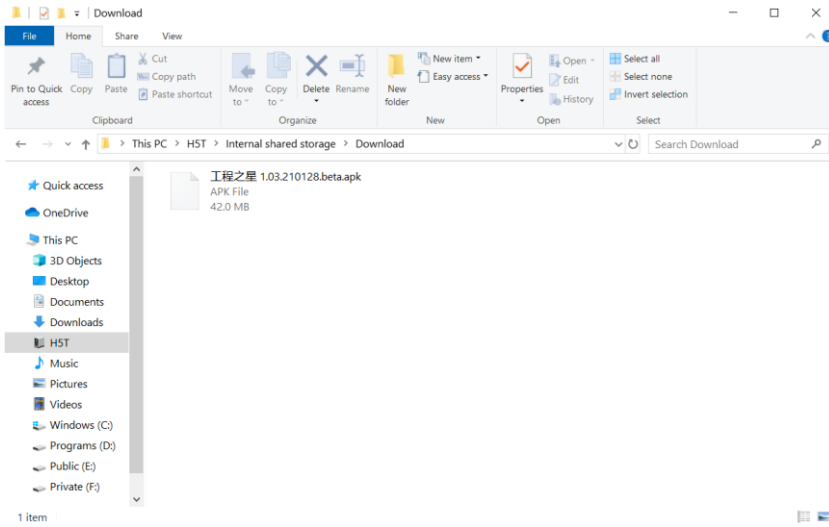

Go to find the “File Manager” on the desk of controller and click it to enter “Internal shared storage” and find the folder where the software installation file you copied to.

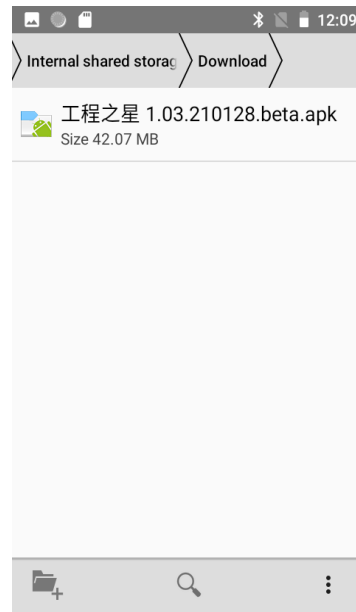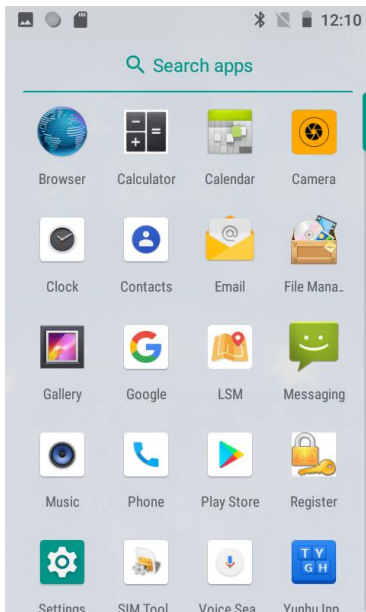



Click on the \*.apk file to start installing the software. On some controllers, the permission to install apps from unknown sources is required, give some permissions and install the app.

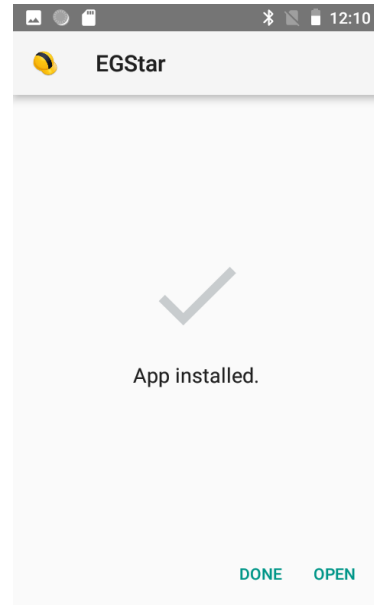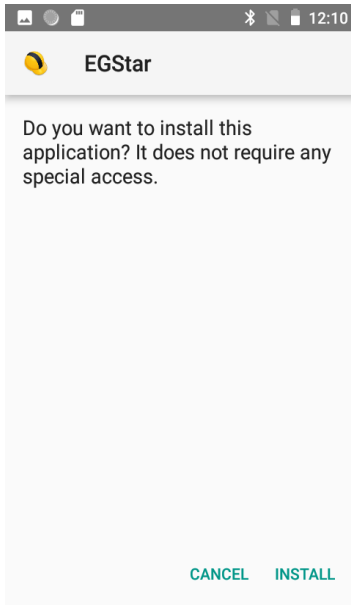


## §5.4 Bluetooth Connection

### Method 1: NFC pairing connection

Both of Galaxy G2 and H5 support NFC that makes the Bluetooth connection more simpler. Run EGStar software on H5 controller and go to “Settings—Device Connect”, place the back of H5 controller (The NFC reading module is on the back of the controller) close to Galaxy G2, then the Bluetooth pairing will be complete automatically.





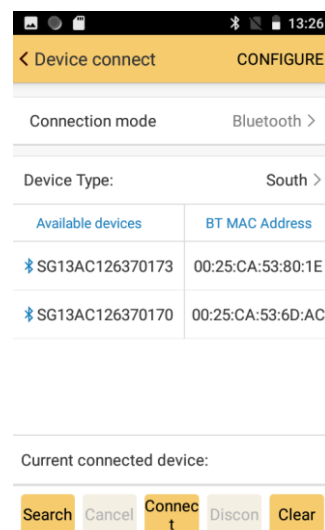
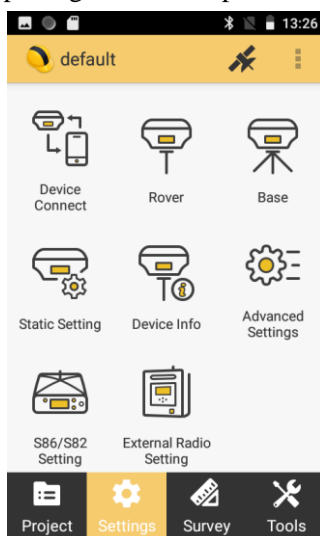


Sometimes, a PIN code would be required for the Bluetooth pairing, usually enter 0000 or 1234 then complete the connection. After that, perform the related operations on EGStar.

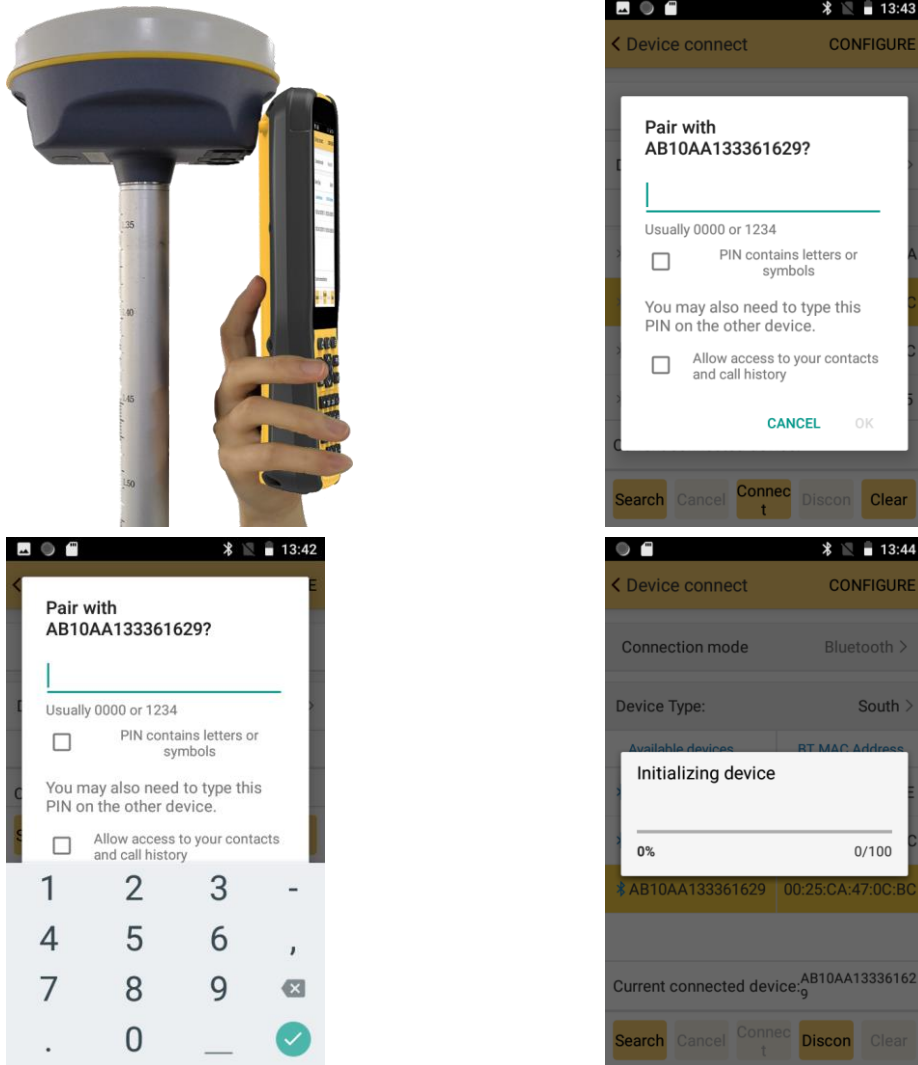

### Method 2: Regular connection

Run EGStar software on H5 controller and go to “Settings—Device Connect”, choose “Bluetooth” for connection type and then click “Search” button to search the surrounding Bluetooth devices (you can cancel searching progress as long as your Bluetooth device appears in the list), choose your Bluetooth device and click “Connect” button to complete the connection.

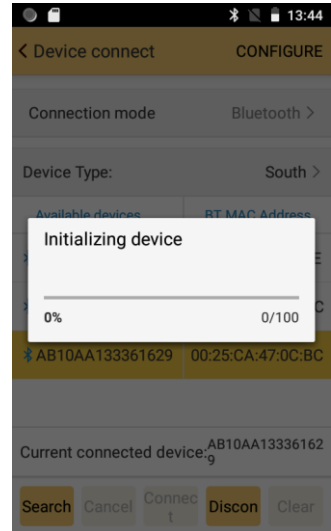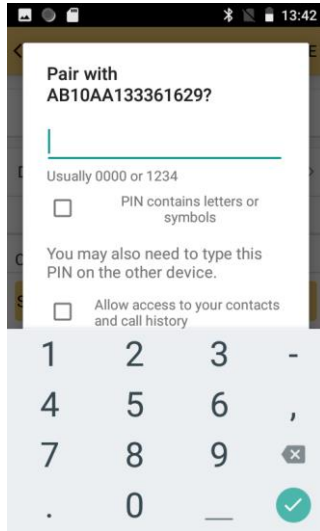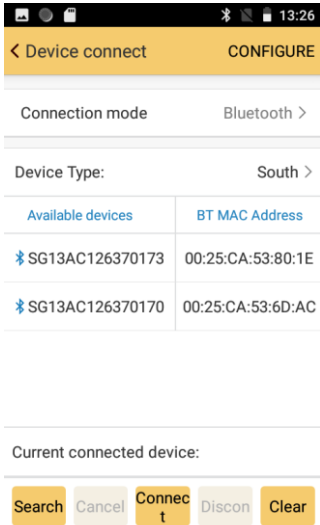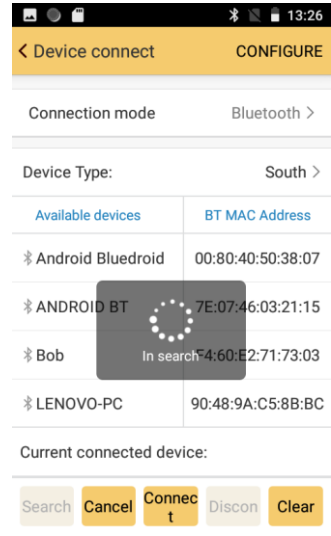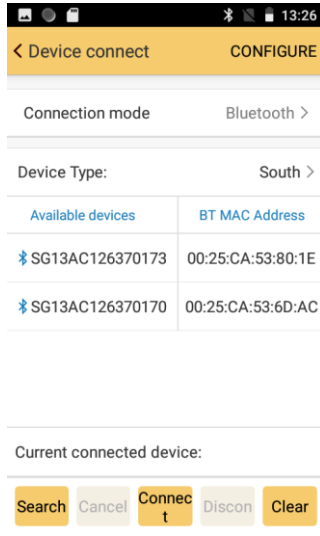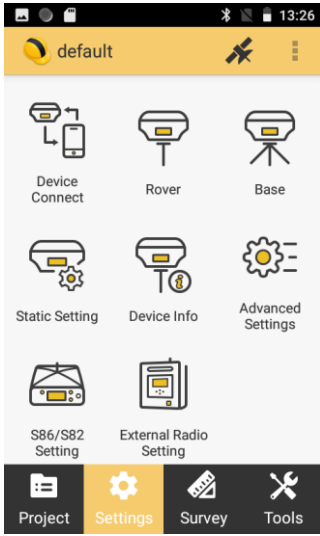




# Chapter VI External UHF Radio—S1

## §6.1 Overview





SOUTH S1 external UHF radio is an all new design of product for the field works. It supports SOUTH / Trimtalk protocols, 410 MHz to 470 MHz. Even in the field without a computer, the 1.54-inch LCD interface makes the configuration and troubleshooting possible and visualized. This radio features with rugged housing, better cooling fins, power control, flexible and convenient settings.

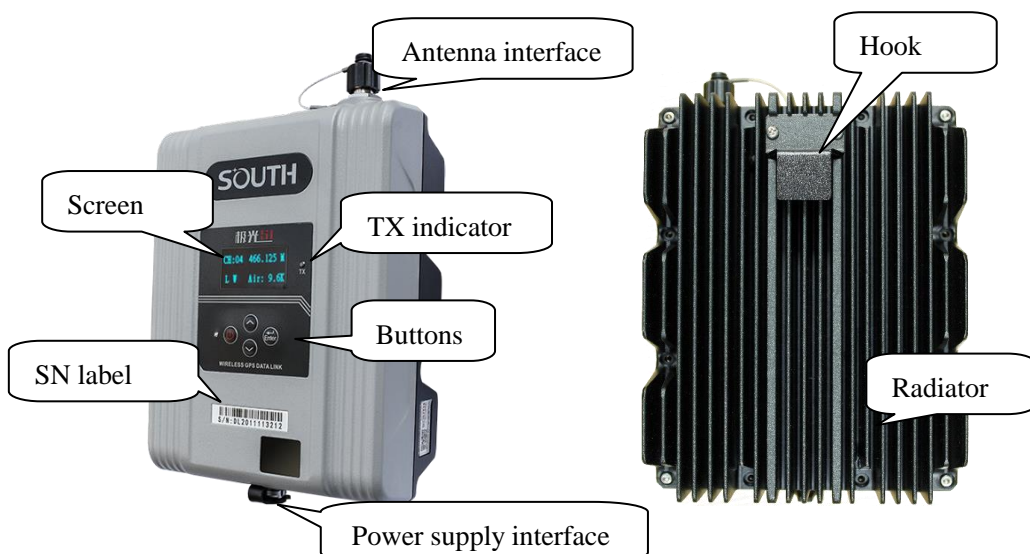

## §6.2 Hardware component





| Ref   | Component    | Description   |
|---|--------------|---|
|  | Power button | Press the Power button for 3 seconds to power on the radio, press the power button for 1 second to turn off the radio |
|  | Up           | Pressing it to move the cursor to left or up  |
|  | Down         | Pressing it to move the cursor to right or down   |
|  | Enter button | Pressing it to start the settings and save the settings   |

Power indicator: The indicator will on after turning on the radio.

TX indicator: The indicator will blink by the transmitting interval.

Low power alert: The screen will show "POWER LOW" if the power voltage is less than 10V.









Sleep mode: If there is no any operation on the radio buttons for 10 minutes, the display will shut down to save power, the power indicator is still on, and TX indicator is still continue blinking.


*Note: If the radio is in the sleep state, it is prohibited to press the power button to view the status of the radio, otherwise it will directly shut down.*

## §6.3 Hardware operation

This section will focus on how to make the configuration on the radio through the buttons on the control panel.







### 6.3.1 Channel (CH)

Press   to move the cursor to CH, then press  to enter this parameter setting mode, press   again to select the channel, and press  to confirm the settings and exit.



CH:04 466.125 M  
L W Air: 9.6K

### 6.3.2 Frequency







Press   to move the cursor to the frequency, then press  to enter this parameter setting mode, press  to move the cursor, and press  to change the frequency, and press  to confirm the settings and exit.



CH:04 466.125 M  
L W Air: 9.6K

*Note: There are 2 frequency ranges of this radio, 410MHz~450MHz and 450MHz~470MHz. And the frequency of each channel should be set in the same frequency range, changing the frequency beyond the range is not allowed. For example, if channel 1 is with the frequency 411.125, and it belongs to the range of 410MHz~450MHz, then the other channels frequency should be in the same range too.*







### 6.3.3 Power mode (L W)

Press   to move the cursor to power setting, then press  to enter this parameter setting mode, press   again to select the power level (L=low, H=high), and press  to confirm the settings and exit.



CH:04 466.125 M  
L W Air: 9.6K







### 6.3.4 Air (Air baudrate)


Press   to move the cursor to air baudrate setting, then press  to enter this parameter setting mode, press   again to select the baudrate(9.6K=9600...), and press  to confirm the settings and exit.









CH:04 466.125 M  
L W Air: 9.6K


### 6.3.5 Protocol

Continue pressing   to move the cursor to protocol setting, then press  to enter this parameter setting mode, press   again to select the protocol (SOUTH/Trimble), and press  to confirm the settings and exit.




### 6.3.6 Serial port baudrate (Ser:)

Press   to move the cursor to serial port baudrate setting, then press  to enter this parameter setting mode, press   again to select the baudrate(9.6K=9600, 19.2K=19200...), and press  to confirm the settings and exit.









### 6.3.7 Power voltage

This part is only to display the current power voltage







### 6.3.8 Bluetooth

Press   to move the cursor to Bluetooth(Blue) setting, then press  to enter this parameter setting mode, press   again to turn on/off the Bluetooth, and press  to confirm the settings and exit




### 6.3.9 reset

Keep pressing   to go to the next configuration page, and there is only reset setting on this page, press  to confirm perform the reset operation.



## §6.4 Accessories

The UHF transmitting antenna is particularly suitable for field use.

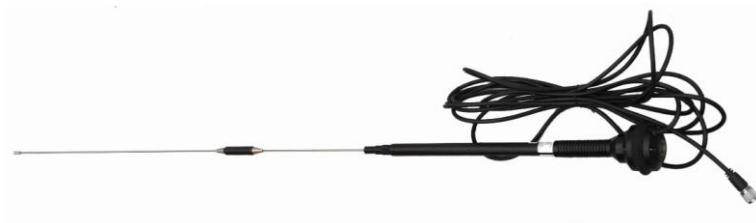

Power supply and data transmitting cable.



## §6.5 Specifications

|               |                                       |                                     |
|---------------|---------------------------------------|-------------------------------------|
| UHF           | protocol                              | SOUTH/TRIMBLE                       |
|               | Power                                 | 10W, 25W                            |
|               | Frequency                             | 410MHz~470MHz                       |
|               | Interval                              | 12.5KHz/25KHz                       |
|               | Rx sensitivity                        | $\leq 0.25\mu\text{V}$ (12dB SINAD) |
|               | Air baud rate                         | 9600/19200/38400                    |
|               | Port baud rate                        | 9600/19200/38400                    |
|               | Channels                              | 16                                  |
| Interface     | Display                               | 1.54 inch LCD                       |
|               | Buttons                               | 4 buttons                           |
|               | Indicator                             | 2 indicator light                   |
| Communication | Bluetooth 4.0                         |                                     |
|               | 5-pin LEMO external power port +RS232 |                                     |
|               | TNC connector                         |                                     |
| Physical      | Operation Temp                        | -40°C~80°C                          |
|               | Storage Temp                          | -40°C~85°C                          |

|  |                      |              |
|--|----------------------|--------------|
|  | Waterproof/Dustproof | IP67         |
|  | Shockproof           | 1m           |
|  | Size                 | 178*135*68mm |
|  | Weight               | 2.3KG        |

## §6.6 Application Notice

The battery power is too low: When “POWER LOW” display on the screen, that means the power voltage is less than 10V, which means the lack of battery power, replace the battery in time, otherwise there would be data link unstable or unable to launch.

Radio transmits power: radio transmits power based on the voltage of the power supply, check the voltage before use.

High and low power use: use low-power transmitter when low power can satisfy the operation as high-power transmitter will exponentially consume battery power, excessive use will reduce battery life. Install the radio station as high as possible.

Power corrugated coefficient: power ripple coefficient must be less than 40mV, the smaller the ripple factor is, the smaller will the beam spectrum be and the higher communication quality will be.

Power Connection: Power of positive and negative connected correctly.

Electromagnetic environment: Before using the radio, it is better to perform electromagnetic environment measurement, to avoid the communications blackout.

Radio match antenna: the basic parameters of the antenna selection are the band width, frequency, gain, directivity, impedance, VSWR and other indexes. Usually the effective bandwidth of the antenna is 3-5MHz, antenna selecting should be based on the frequency bands used by the to be selected channel. For the long-distance transmission, it is better to use a directional antenna and high-gain antenna, and pay attention to the impedance of the antenna and feeder to match with the Radio antenna interface (50 ohms).

### **We recommend:**

Recommend that you use plug-in battery which is more than 12/36Ah, the use of maintain a regulated current of 10A during the operation.

Recommend that you charge it in time, do not overuse the battery, otherwise it will reduce battery life.

Recommend that you replace the batteries after six months to a year, to ensure the radio working distance.

# Chapter VII Accessories

## §7.1 Instrument Case



The instrument case for Galaxy G2 contains two layers of packing: the inner layer is filled with anti-collision foam, the host and other accessories can be dispersed and embedded; the outer layer is a hard instrument case, sealing-strong, wear-resistant anti-wrestling. Compact, durable, can effectively prevent the impact, easy to clean

## §7.2 Charger&Adapter

Galaxy G2 is equipped with a rechargeable internal battery, it uses a type-c cable and a PD adapter for the charging.



## §7.3 Differential Antennas



The differential antennas are as shown above;

The UHF differential antenna is required to install to the interface at the bottom of receiver if Galaxy G2 is set up into internal UHF mode.

## §7.4 Cables

### Type-C cable

This cable is used to connect the receiver with computer for static data transmission, Web UI accessing and firmware update.





# Chapter VIII Hardware Registration

Users can get the point how to register the instrument in this chapter. Registering on Galaxy G2 is easier than operating on G1.

Login the web UI management of Galaxy G2 with WiFi or USB network connection.



Go to “Config—General Config” configuration page, the registration section is located at the top of this interface.

The screenshot shows the web UI management interface for Galaxy G2. The top left corner displays a welcome message and user information: "WELCOME admin S82667117186476 [logout]". The main navigation menu on the left includes: Status, Configuration, General Config (selected), Base Setup, Antenna Setup, Satellite Tracking, Receiver Operate, System Setup, Satellite Information, Data Record, Data Transfer, Network Config, Radio Config, Firmware Update, and Track Manage. The main content area is titled "General Configuration" and contains the "Registration" section. The Registration section displays the following fields and options:

- Serial Number: S82667117186476
- Code: 81BECD3B23329A67BB6500E421BF58484317 (with a "Register" button)
- ExpiredDate: 20161104
- OnlineRegistration: OnlineRegi
- OperationTips: Use Online Reig Function, please Make Sure Network is Work Well!

Below the Registration section is the "Mode setting" section, which includes the following fields and options:

- Work Mode: Rover (dropdown menu)
- Datalink: Radio (dropdown menu)
- RadioRoute: None (dropdown menu)
- RadioTransfer:
- RTK Record:
- 1PPS:
- EVENT:
- EVENT Polarity: Negative (dropdown menu)


Enter the registration code and click on “Register” button, a prompt message will appear. And the ExpiredDate would be changed.

# Chapter IX Firmware Update


This chapter will explain how to update the firmware for Galaxy G2, detail steps are written below.

Login the web UI management of Galaxy G2 with WiFi or USB network connection.


Go to “Firmware Update—Firmware Update” configuration page, all the information of the firmware which current installed on Galaxy G2 would be displayed here.

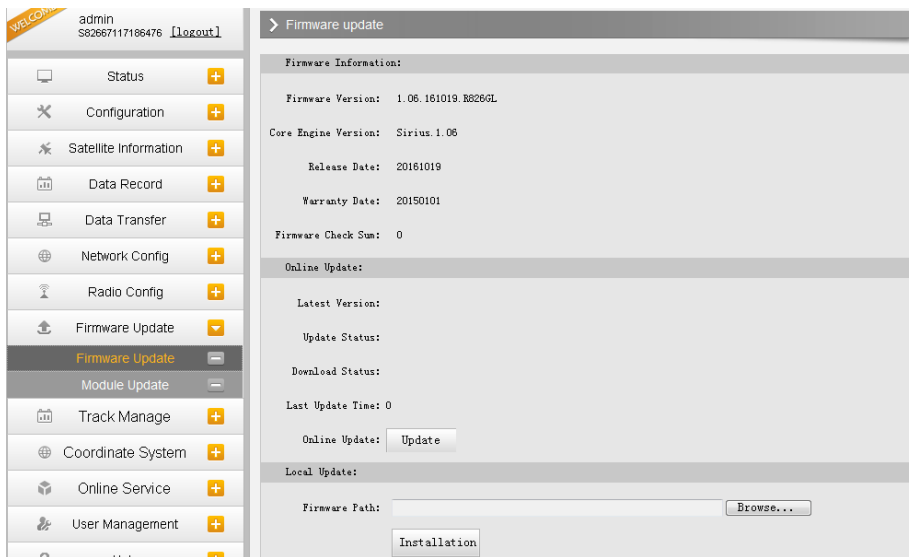


Click on “Browse” button to load firmware file (Please take in mind that the firmware is ended with .img as the extension name).

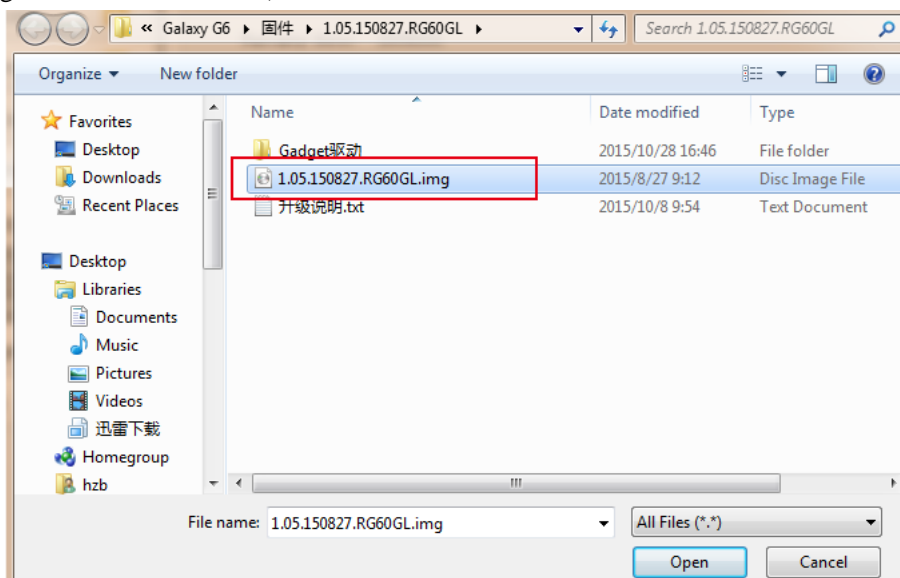

And then click “Installation” button to start upgrading.

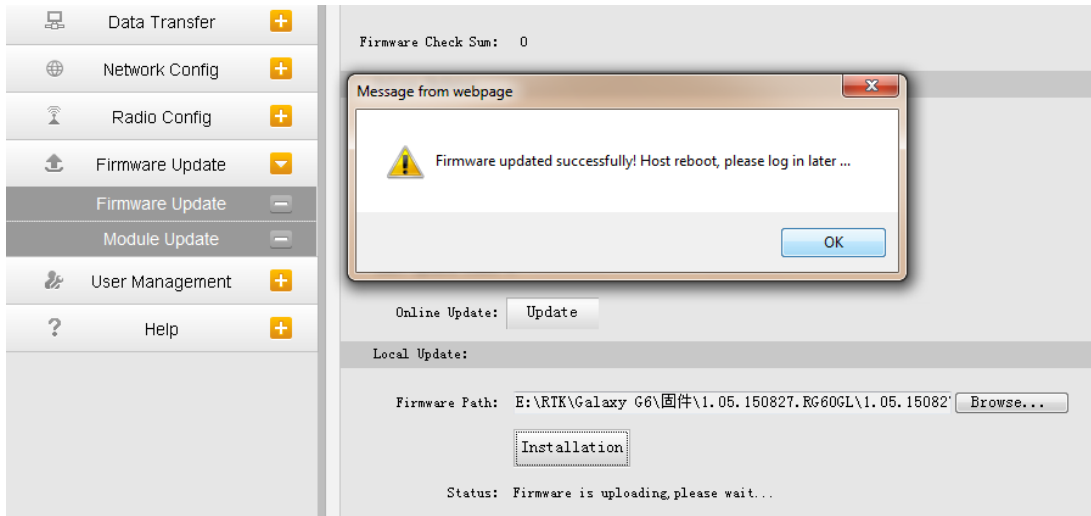

After the firmware is completed upgrading, a dialog will appear saying “Firmware updated successfully! Host reboot, please log in later...”, then the receiver will restart automatically.

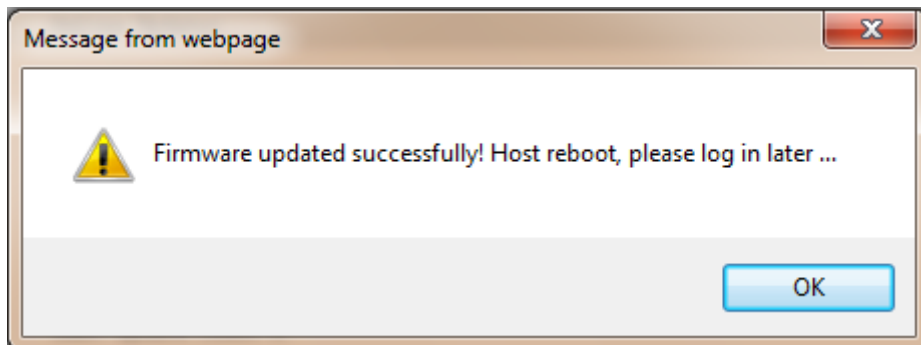

**SPECIAL REMIND:** Galaxy G2 doesn't support to update the firmware with the help of **INstar** program any more, in the future, update the firmware for Galaxy G2 shall be done through the Web UI.

## Appendix A Galaxy G2 technical specifications

| GNSS Features                       |   |
|-------------------------------------|---|
| Channels                            | 965   |
| GPS                                 | L1, L1C, L2C, L2P, L5   |
| GLONASS                             | G1, G2, G3  |
| BDS                                 | BDS-2: B1I, B2I, B3I      BDS-3: B1I, B3I, B1C, B2a, B2b *                                      |
| GALILEO                             | E1, E5A, E5B, E6C, AltBOC*  |
| SBAS                                | L1*   |
| IRNSS                               | L5*   |
| QZSS                                | L1, L2C, L5*  |
| MSS L-Band*                         | Reserve   |
| Positioning output rate             | 1Hz~20Hz  |
| Initialization time                 | < 10s   |
| Initialization reliability          | >99.99%   |
| Positioning Precision               |   |
| Code Differential GNSS Positioning  | Horizontal: 0.25 m + 1 ppm RMS      Vertical: 0.50 m + 1 ppm RMS                                |
| GNSS Static                         | Horizontal: 2.5 mm + 0.5 ppm RMS      Vertical: 5 mm + 0.5 ppm RMS                              |
| Real-Time Kinematic (Baseline<30km) | Horizontal: 8 mm + 1 ppm RMS      Vertical: 15 mm + 1 ppm RMS                                   |
| SBAS positioning                    | Typically<5m 3DRMS  |
| RTK initialization time             | 2~8s  |
| IMU tilt compensation               | Additional horizontal pole tip uncertainty typically less than 10mm + 0.7 mm/° tilt down to 30° |
| IMU tilt angle                      | 0° ~60°   |
| Hardware performance                |   |
| Dimension                           | 130.5mm(φ)×84mm(H)  |
| Weight                              | 850g (battery included)   |
| Material                            | Magnesium aluminum alloy shell  |
| Operating temperature               | -30℃~+50℃   |
| Storage temperature                 | -35℃~+80℃   |
| Humidity                            | 100% Non-condensing   |
| Waterproof/Dustproof                | IP68 standard, protected from long time immersion to depth of 1m                                |
|                                     | IP68 standard, fully protected against blowing dust   |
| Shock/Vibration                     | Withstand 2 meters pole drop onto the cement ground naturally                                   |

|                                  |   |
|----------------------------------|---|
| Power supply                     | 6-28V DC, overvoltage protection  |
| Battery                          | Inbuilt 6800mAh rechargeable Lithium-ion battery  |
| Battery life                     | Single battery: 16h (static mode)   |
|                                  | 10h (internal UHF base mode)  |
|                                  | 12h (rover mode)  |
| <b>Communications</b>            |   |
| I/O Port                         | 5-PIN LEMO interface (external power port + RS232)  |
|                                  | Type-C interface (charge+OTG+Ethernet)  |
|                                  | 1 UHF antenna interface   |
|                                  | SIM card slot (Micro SIM)   |
| Internal UHF                     | Radio receiver and transmitter, 1W/2W/3W switchable   |
| Frequency range                  | 410-470MHz  |
| Communication protocol           | Farlink, Trintalk450s, SOUTH, SOUTH+, SOUTHx, HUACE, Hi-target, Satel   |
| Communication range              | Typically 8km with Farlink protocol   |
| Cellular mobile network          | Advanced 5G network communication module, downward compatible with 4G/3G  |
| Bluetooth                        | Bluetooth 3.0/4.1 standard, Bluetooth 2.1 + EDR   |
| NFC Communication                | Realizing close range (shorter than 10cm) automatic pair between receiver and controller (controller requires NFC wireless communication module else) |
| <b>WIFI</b>                      |   |
| Modem                            | 802.11 b/g/n standard   |
| WIFI hotspot                     | Receiver broadcasts its hotspot form web UI accessing with any mobile terminals   |
| WIFI datalink                    | Receiver can transmit and receive correction data stream via WiFi datalink  |
| <b>Data Storage/Transmission</b> |   |
| Storage                          | 8GB SSD internal storage  |
|                                  | Automatic cycle storage (The earliest data files will be removed automatically while the memory is not enough)  |
|                                  | Support external USB storage  |
|                                  | The customizable sample interval is up to 20Hz  |
| Data Transmission                | Plug and play mode of USB data transmission   |
|                                  | Supports FTP/HTTP data download   |
| Data Format                      | Static data format: STH, Rinex2.01, Rinex3.02 and etc.  |
|                                  | Differential data format: CMR, SCMRx, RTCM 2.1, RTCM 2.3, RTCM 3.0, RTCM 3.1, RTCM 3.2  |
|                                  | GPS output data format: NMEA 0183, PJK plane coordinate, Binary code,   |

|                         |   |
|-------------------------|---|
|                         | Trimble GSOE  |
|                         | Network model support: VRS, FKP, MAC, fully support NTRIP protocol  |
| <b>Sensors</b>          |   |
| Electronic Bubble       | Controller software can display electronic bubble, checking leveling status of the carbon pole in real-time   |
| IMU                     | Built-in IMU module, calibration-free and immune to magnetic interference   |
| Thermometer             | Built-in thermometer sensor, adopting intelligent temperature control technology, monitoring and adjusting the receiver temperature                                     |
| <b>User Interaction</b> |   |
| Operating system        | Linux   |
| Buttons                 | Single button   |
| Indicators              | 5 LED indicators  |
| Web interaction         | With the access of the internal web interface management via WiFi or USB connection, users are able to monitor the receiver status and change the configurations freely |
| Voice guidance          | The intelligent voice technology provides status and operation voice guidance, supports Chinese/English/Korean/Spanish/Portuguese/Russian/Turkish                       |
| Secondary development   | Provides secondary development package, and opens the OpenSIC observation data format and interaction interface definition  |
| Cloud service           | The powerful cloud platform provides online services like remote manage, firmware update, online register and etc.  |

## Appendix C Technical Terms

**Ambiguity:** unknown quantity is the integer number of cycles of the carrier phase measured from the satellite to the receiver.

**Baseline:** The connection line of the two measurement points, on which to receive GPS signals and collect observation data simultaneously.

**Broadcast ephemeris:** message released by the satellite demodulator satellite orbit parameters.

**SNR (Signal-to-noise ratio):** an endpoint signal power to noise power ratio.

**Cycle skipping:** interfere loop skips a few cycles from a balanced point, and stabilize in the new equilibrium point, this make the phase integer number of cycles to generate an error.

**Carrier:** As the carrier, Frequency, amplitude or phase modulation of the modulated wave by a known reference value.

C / A code: GPS coarse / acquisition code, modulate the pseudo-random binary code for the 1023 bit duplex, the bit rate of which is 1.023MHz, and code repetition period of 1ms.

Difference measurement: GPS measurements employ cross-satellite cross-receiver and cross-epoch.

Difference Positioning: the method of determining the relative coordinates between two or more receiver by tracking the same GPS signal.

Geometric dilution of precision: Describe the contribution of satellite geometry errors factor in dynamic positioning

Eccentricity: 
$$e = \sqrt{\frac{a^2 - b^2}{b^2}}$$
 where a, b of the semi-major axis and semi-minor axis.

Ellipsoid: mathematical graphics formed when an ellipse moves around the minor axis of rotation in Geodetic Survey.

Ephemeris: the position of celestial bodies over time parameters.

Flattening: 
$$f = \frac{a - b}{a} = 1 - \sqrt{1 - e^2}$$

a is the semi-major axis, b is the semi-minor axis, e is the eccentricity.

Geoid: similar to the mean sea level and extends to the mainland special planes.

Geoid everywhere perpendicular to the direction of gravity.

Ionosphere delay: delay of radio waves through the ionosphere (non-uniform dispersion medium)

L-band: The radio frequency range of 390-1550MHz.

Multipath error: the positioning error caused by the interference between two or more radio signal propagation path.

Observing session: the use of two or more receivers at the same time to collect GPS data period.

Pseudo Range: GPS receiver in the time required to copy the code aligned with the received GPS code offset and multiplied by the speed of light to calculate the distance. This time offset is the difference between the signal reception time (time series of the receiver) and the signal emission time (satellite time series).

Receiver channel: GPS receiver RF mixer and IF channel, can receive and track satellites two carrier signals.

Satellite configuration: the configuration status of the satellite with respect to a specific user or a group of users within a specific time.

Static position: do not consider the point of measurement of the movement of the receiver.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The antennas used for this transmitter must be installed to provide a separation distance of at least 100cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Installer must ensure that 100cm separation distance will be maintained between the device(excluding its handset) and users.