



Quick Setup Guide

Model: QN-H-245



Copyright Information

Copyright & trademark specifications are subject to change without prior notice. Copyright © 2018 Quantum Networks (SG) Pte. Ltd. All Rights Reserved. Quantum Networks® & the logo are trademarks of Quantum Networks (SG) Pte. Ltd. Other brands or products mentioned may be trademarks or registered trademarks of their respective owners. Mentioned contents of this document can't be used, translated or transmitted in any form or by any means without taking prior written permission from Quantum Networks (SG) Pte. Ltd.



Contents

Glossary.....	4
Icon description.....	4
Before you begin	5
Package contents.....	5
Prerequisites	5
Network requisites.....	5
Connect Access Point	5
Step 1 – Create new account on Quantum RUDDER®.....	6
Step 2 - Basic setup.....	7
Step 3 - Setting up device IP address	8
Step 4 – Set the management mode	8
Step 5 - Access Point quick setup in RUDDER Mode	9
Step 6 - Access Point quick setup in standalone mode	14
Reset Access Point to factory defaults	17
Access Point default login detail	17
FCC statement.....	18
CE Statement.....	19







This Quick Setup Guide provides step-by-step instructions on how to set up Quantum Networks Access Point. After completing the steps described in this Guide, you will be able to install the Access Point (AP) on-site and provide wireless network access to users.

Glossary

Feature	Description
Management Mode	<p>Standalone: In this mode, each device is configured and managed individually. It can be useful in scenarios with few devices or sites with limited Internet access.</p> <p>RUDDER: In this mode, devices are configured and managed from a central controller hosted in the cloud. It offers many more sets of features as compared to the Standalone mode.</p>
Operation Mode	<p>Bridge: In this mode, the device connects to a network over an ethernet cable and extends the coverage over wireless.</p> <p>Router: In this mode, the device connects to Internet Service Provider directly using DHCP / Static IP / PPPoE protocols and shares Internet access over a wired or wireless network to users.</p>
Quantum RUDDER©	<p>Quantum RUDDER© is a cloud-hosted controller which can be used to configure, manage & monitor devices associated with it. It can be accessed from https://rudder.qntmnet.com</p>

Icon description

Icon on GUI	Description
	Click to get the option for the firmware update.
	Click to get back to the home page.
	Click to check the documentation.
	Click to check device information.



Before you begin

Your Quantum Networks' Access Point can work in "Standalone Mode" or can be managed by "RUDDER".

Package contents

Access Point.

Prerequisites

Internet access.

Desktop / Laptop / Handheld device.

802.3af / 802.3at PoE Switch / PoE Injector.

48VDC 2A DC power adapter.

Network requisites

The listed ports must be opened or allowed in the network firewall.

TCP: 80, 443, 2232, 1883.

UDP: 123, 1812, 1813.

Allow rudder.qntmnet.com and reports.qntmnet.com in the destination field.

Connect Access Point

After unpacking Access Point, connect it to an Internet source.

Plug-in Ethernet cable of Access Point.

Power on Access Point by using 802.3af / 802.3at PoE Switch / PoE Injector.


Note: Access Point must have Internet access during initial setup for the first time to activate the device, warranty and support.



Step 1 – Create new account on Quantum RUDDER©

Browse <https://rudder.qntmnet.com>.

Click “Create New Account” to sign up for a new account.

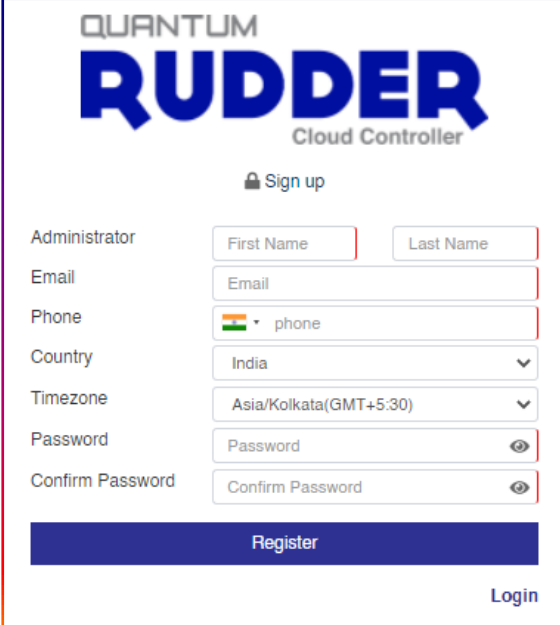

The screenshot shows the registration page for Quantum RUDDER Cloud Controller. At the top, the logo reads "QUANTUM RUDDER Cloud Controller". Below the logo is a "Sign up" button with a lock icon. The form fields are as follows:

Administrator	First Name	Last Name
Email	Email	
Phone	India phone	
Country	India	
Timezone	Asia/Kolkata(GMT+5:30)	
Password	Password	
Confirm Password	Confirm Password	

At the bottom of the form is a large blue "Register" button and a "Login" link.

Figure 1

Follow the steps as guided on the screen for Registration.

Verify Quantum RUDDER© account from registered email id.

Once the account gets validated, it turns the page to “Add License Key” (User will get the license key from respective (Partner / Resource))

Account on Quantum RUDDER© (Quantum Networks’ Cloud Controller) is now ready to use.



Step 2 - Basic setup

Connect the WAN port of the Access Point to the network with Internet access. You should see a new wireless network with SSID QN_XX:XX (where XX:XX are the last four digits of Access Point MAC Address). Connect to QN_XX:XX SSID and browse Access Point's default IP "169.254.1.1".

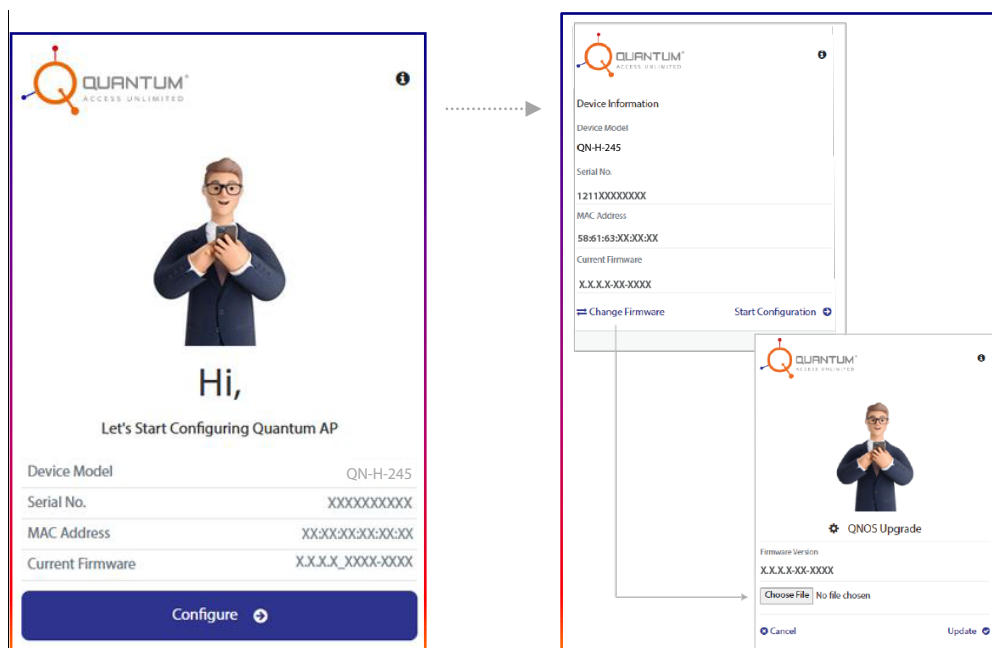


Figure 2

Let's start the configuration.

On the configuration start page, it will display,

- Device model number
- Serial number
- MAC address
- Current firmware

Note:

Click **i** button to get the option to "change the firmware" if required. Click Change Firmware to update firmware if required. Select the firmware file from the respective location and update it.



Step 3 - Setting up device IP address

Click “**Configure**” and set the device IP address by selecting the required options.

Connectivity Mode – Ethernet / USB

Protocol - DHCP, Static or PPPoE

Interface – Select interface

VLAN Assignment- Enable parameter. Enter VLAN ID and click “Fetch IP Address” to get the respective IP in case of VLAN setup is required.

The screenshot displays the 'Device IP Address' configuration interface. It includes the following elements:

- Connectivity Mode:** A dropdown menu with 'Ethernet' selected.
- Protocol:** A dropdown menu with 'DHCP' selected.
- Interface:** A dropdown menu with 'eth0' selected.
- VLAN Assignment:** A checkbox that is unchecked, with a 'Fetch IP Address' button to its right.
- IP Address:** 192.168.7.40
- Subnet:** 255.255.255.0
- Gateway:** 192.168.7.1
- Primary DNS:** 192.168.7.4
- Secondary DNS:** 4.2.2.2
- Navigation:** 'Back' and 'Proceed' buttons at the bottom.
- Dropdowns:** Three open dropdown menus showing the available options for each field.

Figure 3

Click “Proceed” to apply configuration and turn to the next page.

Step 4 – Set the management mode

Management Mode

Quantum Networks' Access Point can be configured in two modes:

RUDDER (on cloud / on-premise)

Centralized management of Access Points using Quantum RUDDER©

Standalone

Independent management of each Access Point




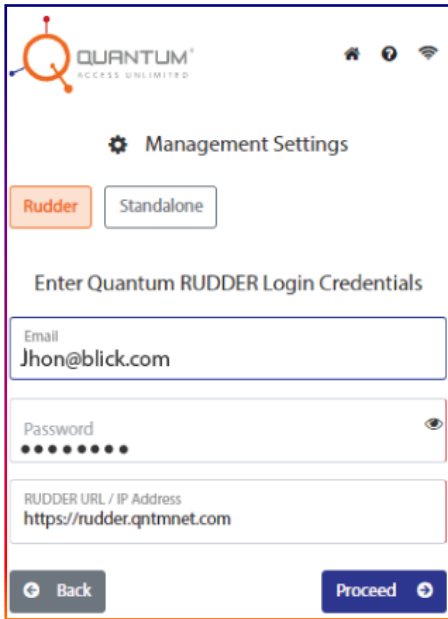


Figure 4

Step 5 - Access Point quick setup in RUDDER Mode

Select “Management Mode” as “RUDDER” , enter Quantum RUDDER© login credentials and click “Proceed” .

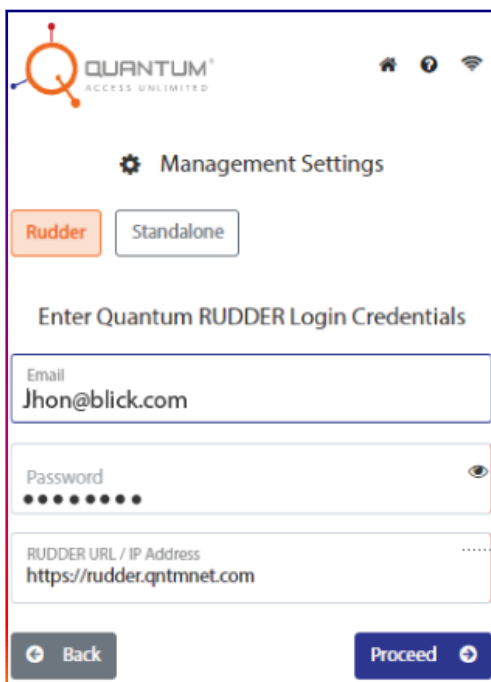

In the case of on-premise RUDDER, mention the local server IP Address/URL assigned to RUDDER, here.

Figure 5

It will verify the credentials, and turn to a next page.



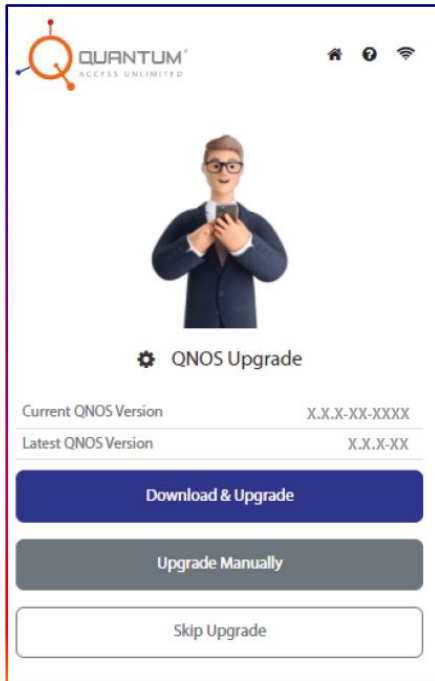


Figure 6

Upgrade QNOS version by either downloading from the cloud or by selecting manually from respective location and upgrade or click **“Skip Upgrade”** to move further.

The user will turn to a page where the user has to select the site and AP group.

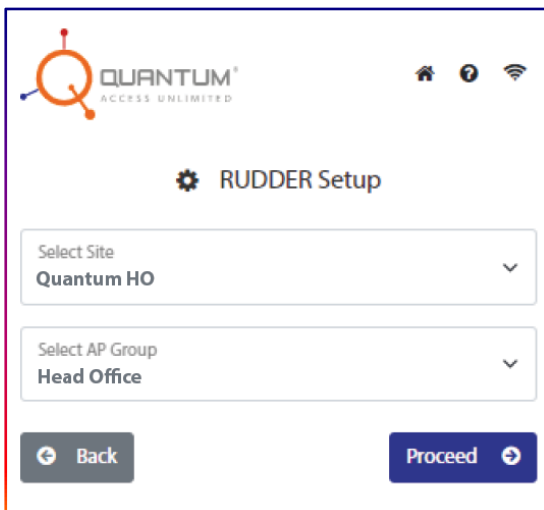


Figure 7

Select RUDDER site and AP Group where Access Point's needs to be added and click **“Proceed”**.



- o If the selected site is already having another Access Point, it will automatically configure AP in a bridge mode and will turn the user on the summary page after clicking “Proceed” . (Figure 8)
- o If this is the first Access Point for the selected site – the user will turn on the page, where the user can select Access Point Operation mode as **Bridge** or **Router**. (Figure 9)

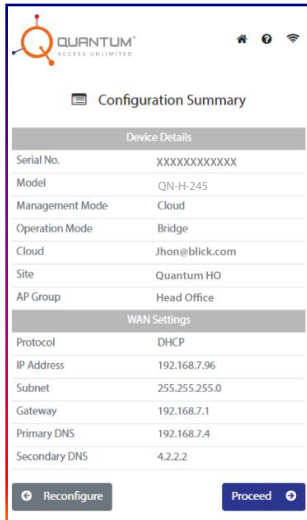


Figure 8

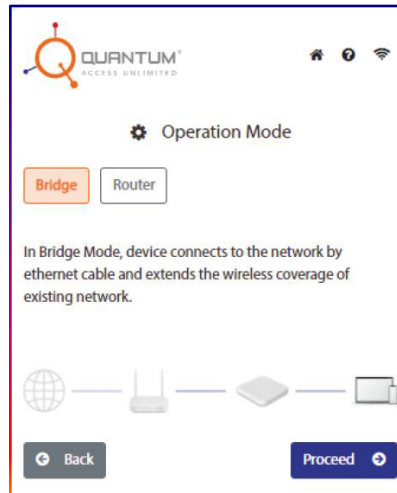


Figure 9

Bridge

Select option **Bridge** and click “**Proceed**”.

Configure **WLAN** (SSID) parameters and click “**Proceed**”.

Parameter	Value
WLAN Name	Define a name for the network
SSID	Define visible wireless network name
Passphrase	Configure a passphrase for SSID



Figure 10

Note: If you do not want to create **WLAN** (SSID)/**LAN** now, click the **Skip** option. It will turn to **Configuration Summary**.



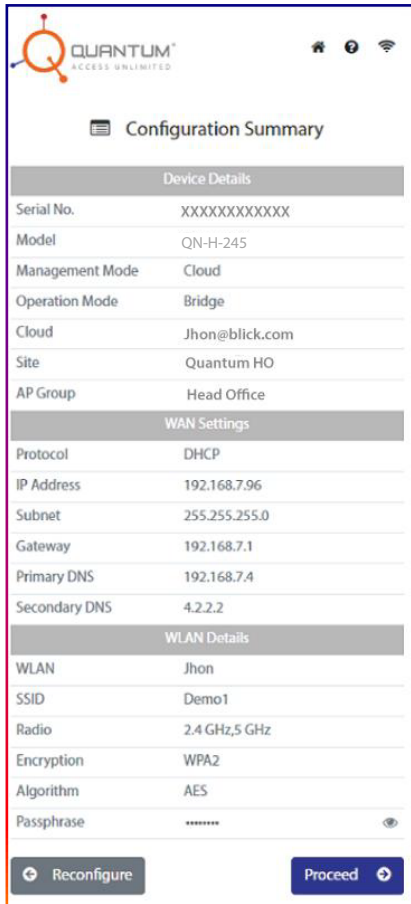


Figure 11

Review the Configuration Summary. Click “**Reconfigure**” if any changes are required or click “**Proceed**” to complete the configuration.

Router

Select option **Router** and click “**Proceed**”.

Configure **WLAN** (SSID) and **Local subnet** parameters and click “**Proceed**”.

Parameter	Value
WLAN	
WLAN Name	Define a name for the network
SSID	Define visible wireless network name
Password	Configure passphrase for SSID
Local Subnet	
IP Address	LAN IP address. This IP address can be used for accessing this Access Point
Subnet Mask	LAN Subnet mask



QUANTUM
ACCESS UNLIMITED

Configuration

WLAN

WLAN Name
Jhon

SSID
Demo1

Passphrase

Local Subnet

IP Address
192.168.7.60

Subnet
255.255.255.0

Back Skip Proceed

Figure 12

QUANTUM
ACCESS UNLIMITED

Configuration Summary

Device Details

Serial No.	XXXXXXXXXXXX
Model	QN-H-245
Management Mode	Cloud
Operation Mode	Router
Cloud	Jhon@blick.com
Site	Quantum HO
AP Group	Head Office

WAN Settings

Protocol	DHCP
IP Address	192.168.7.96
Subnet	255.255.255.0
Gateway	192.168.7.1
Primary DNS	192.168.7.4
Secondary DNS	4.2.2.2

Local Subnet

Name	Default
IP	192.168.7.60
Subnet	255.255.255.0

WLAN Details

WLAN	Jhon
SSID	Demo1
Radio	2.4 GHz, 5 GHz
Encryption	WPA2
Algorithm	AES
Passphrase	*****

Reconfigure Proceed


Figure 13

Note: If you do not want to create **WLAN** (SSID)/**LAN** now, click the **Skip** option. It will turn to **Configuration Summary**.

Review the Configuration Summary. Click “**Reconfigure**” if any changes are required or click “Proceed” to complete the configuration.



Step 6 - Access Point quick setup in standalone mode

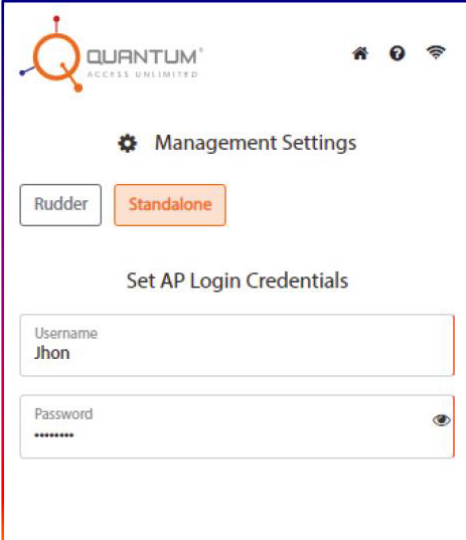

QUANTUM[®]
ACCESS UNLIMITED

Management Settings

Rudder Standalone

Set AP Login Credentials


Username
Jhon

Password

Figure 14

Select “Management Mode” as “Standalone” if each Access Point is to be configured and managed individually. Define username and password for the device and click “**Proceed**”.

User can select Access Point Operation mode as **Bridge** or **Router**.

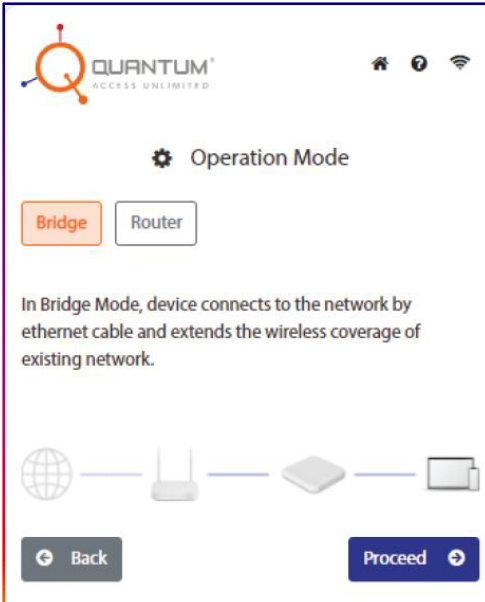

QUANTUM[®]
ACCESS UNLIMITED

Operation Mode

Bridge Router

In Bridge Mode, device connects to the network by ethernet cable and extends the wireless coverage of existing network.

Diagram: Globe -> Router -> Access Point -> Laptop

Back Proceed

Figure 15




Bridge

Select option **Bridge** and click “**Proceed**”.

Configure **WLAN** (SSID) parameters and click “**Proceed**”.

Parameter	Value
Country	Select country for radio management.
Timezone	Select timezone for RUDDER management.
WLAN Name	Define a name for the network.
SSID	Define visible wireless network name.
Passphrase	Configure a passphrase for SSID.

Review the Configuration Summary. Click “**Reconfigure**” if any changes are required or click “**Proceed**” to complete the configuration.

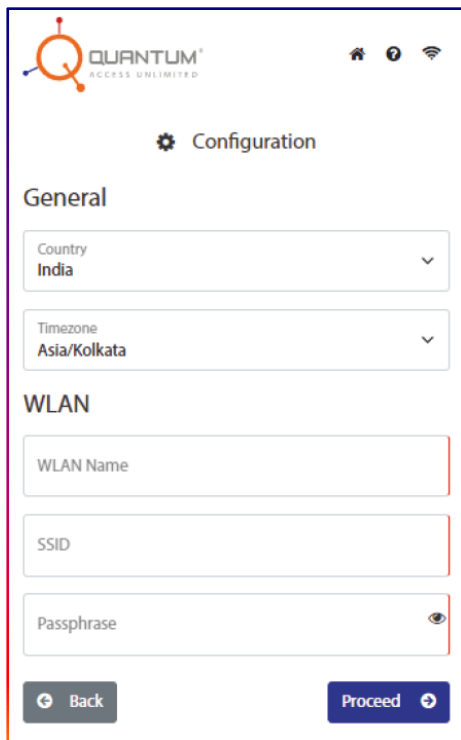

Quantum ACCESS UNLIMITED

Configuration

General

Country
India

Timezone
Asia/Kolkata

WLAN


WLAN Name

SSID

Passphrase

Back Proceed

Figure 16

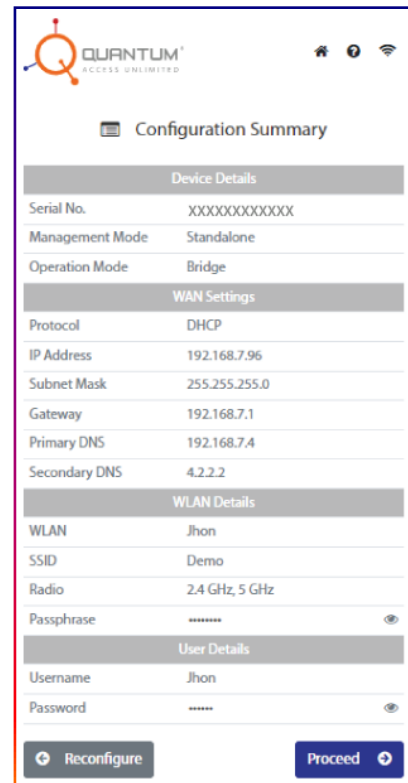

Quantum ACCESS UNLIMITED

Configuration Summary

Device Details

Serial No. XXXXXXXXXXXX

Management Mode Standalone

Operation Mode Bridge

WAN Settings

Protocol DHCP

IP Address 192.168.7.96

Subnet Mask 255.255.255.0

Gateway 192.168.7.1

Primary DNS 192.168.7.4

Secondary DNS 4.2.2.2

WLAN Details

WLAN Jhon

SSID Demo

Radio 2.4 GHz, 5 GHz

Passphrase *****

User Details

Username Jhon

Password *****

Reconfigure Proceed

Figure 17



Router

Select option **Router** and click “**Proceed**” .

Configure **WLAN** (SSID) and **Local subnet** parameters and click “**Proceed**” .

Parameter	Value
WLAN	
Country	Select country for radio management.
Timezone	Select timezone for RUDDER management.
WLAN Name	Define a name for the network.
SSID	Define visible wireless network name.
Password	Configure a passphrase for SSID.
Local Subnet	
IP Address	LAN IP address. This IP address can be used for accessing this Access Point.
Subnet Mask	LAN subnet mask.

Review the Configuration Summary. Click “**Reconfigure**” if any changes are required or click “**Proceed**” to complete the configuration.

The screenshot shows the 'Configuration' page for a Quantum device. It is divided into three main sections: 'General', 'WLAN', and 'Local Subnet'. In the 'General' section, 'Country' is set to 'India' and 'Timezone' is set to 'Asia/Kolkata'. The 'WLAN' section has 'WLAN Name' as 'Jhon', 'SSID' as 'Demo1', and a masked 'Passphrase'. The 'Local Subnet' section has 'IP Address' as '192.168.1.1' and 'Subnet Mask' as '255.255.255.0'. At the bottom, there are 'Back' and 'Proceed' buttons.

Figure 18

The screenshot shows the 'Configuration Summary' page. It lists various settings in a table format. Under 'Device Details', it shows 'Serial No.' as 'XXXXXXXXXXXX', 'Management Mode' as 'Standalone', and 'Operation Mode' as 'Router'. Under 'WAN Settings', it shows 'Protocol' as 'DHCP', 'IP Address' as '192.168.7.96', 'Subnet Mask' as '255.255.255.0', 'Gateway' as '192.168.7.1', 'Primary DNS' as '192.168.7.4', and 'Secondary DNS' as '4.2.2.2'. Under 'Local Subnet', it shows 'Name' as 'LAN', 'IP' as '192.168.1.1', and 'Subnet' as '255.255.255.0'. Under 'WLAN Details', it shows 'WLAN' as 'Jhon', 'SSID' as 'Demo', and 'Radio' as '2.4 GHz, 5 GHz'. Under 'User Details', it shows 'Username' as 'Jhon' and a masked 'Password'. At the bottom, there are 'Reconfigure' and 'Proceed' buttons.

Figure 19



Reset Access Point to factory defaults

- o Power on the Access Point
- o Push the reset button on the back panel and hold it for 10 seconds.
- o Access Point would restart with factory defaults

Access Point default login detail

With standalone mode:

User Name: Created while doing "Quick Setup"

Password: Created while doing "Quick Setup"

With RUDDER mode:

User Name: Auto Generated, administrator can change from site settings.

Password: Auto Generated, administrator can change from site settings.

If you encounter problems while installing or using this product, please browse www.qntmnet.com for:

Direct contact with the support center.

- o Contact: 18001231163
- o Email: support@qntmnet.com

Frequently Asked Questions (FAQ)

Download area for the latest software, user documentation and product updates.



FCC statement

FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible. This device is restricted for indoor use.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Installation location

To meet regulatory RF exposure requirements, this product shall be installed at a location where, during normal operations, the radiating antenna is at least 20 cm away from any nearby persons.

Installation procedure

Please refer to this equipment's user manual for the procedure details.

Warning

The installation position must be carefully selected so that the final output power does not exceed the limit set forth in relevant regulations. Violation of output power regulations could lead to serious federal penalties.



CE Statement

This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

The device is restricted to indoor use only when operating in the 5150 to 5350MHz frequency range.

All operational modes:

2.4GHz: 802.11b, 802.11g, 802.11n(HT20), 802.11n(HT40), 802.11ac(VHT20), 802.11ac(VHT40), 802.11ax(HE20), 802.11ax(HE40)

5 GHz: 802.11a, 802.11n (HT20), 802.11n (HT40), 802.11ac(VHT20), 802.11ac(VHT40), 802.11ac(VHT80), 802.11ax(HE20), 802.11ax(HE40),802.11ax(HE80)

BLE 2.4GHz: 802.15.1

The frequency and maximum transmitted power limit in EU are listed as below:

2412-2472MHz: 20 dBm

5150-5350MHz: 23 dBm

5500-5700MHz: 30 dBm



AT	BE	BG	CH	CY	CZ
DE	DK	EE	EL	ES	FI
FR	HR	HU	IE	IS	IT
LI	LT	LU	LV	MT	NL
NO	PL	PT	RO	SE	SI
SK	TR	UK			

The abbreviations of the countries, as prescribed in above table, where any restrictions on putting into service or any requirements for authorization of use exist.

CE Mark Declaration of Conformance for EMI and Safety (EEC)

This information technology equipment is in compliance with the Directive 2014/53/EU and Directive 2014/35/EU.

The Declaration of Conformity (DoC) can be obtained from www.qntmnet.com> downloads.

