



DIVIGRAPH (PTY) LTD

VP Series 2000 User Guide

EVR-VPXDOC-0036
Version 1.09
06 July 2020

Proprietary & Confidential – Copyright © 2020 Divigraph (Pty) Ltd. All Rights Reserved

Non-disclosure

This document is the property of Divigraph (Pty) Ltd trading as DIVIGRAPH and shall not be copied, shown or communicated to a third party without the consent of the owner.

Copyrights

Under the copyright laws, this document may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of DIVIGRAPH.

Trademarks

Product and company names mentioned herein are trademarks or trade names of their respective companies.



Document Information



Title	VP Series 2000 User Guide		
Pages	Document ID	Version	Status
36	EVR-VPXDOC-0036	1.09	Draft
Date			
06 July 2020			
Comments			



Table of Contents

1	Introduction.....	8
2	References.....	8
3	Terms and Definitions.....	8
3.1	Abbreviations.....	8
3.2	Terminology.....	9
4	Support.....	9
5	Hazardous Location Requirements	10
5.1	Additional Warnings.....	10
5.2	Approved Electrical Cells.....	10
5.3	Ambient Temperature Rating.....	10
5.4	Electrical Rating.....	11
5.5	General Arrangement	11
6	Operating Conditions.....	12
7	General Safety.....	12
7.1	Receiving Inspection.....	12
7.2	Safe Handling	12
7.3	Safety Labels and Markings	12
7.4	Hazardous Materials.....	12
7.5	Installation, Operation and Maintenance	13
7.5.1	Installation	13
7.5.2	Operation.....	13
7.5.3	Maintenance	13
7.6	Disposal.....	13
7.6.1	Product Replacement and Failure Analysis	14
7.6.2	Hazardous Material Disposal.....	14
7.6.3	Recycling Facilities	14
7.7	Certification.....	14
7.8	Cyber Security	14
8	Radio and Electromagnetic Compatibility	15
8.1	Canada and USA.....	15
9	VP Series 2000 Components	16
9.1	Field Device Configurations.....	16
9.1.1	Integrated Vibration and Temperature Monitoring	16
9.1.2	Repeaters	17
9.2	Electrical Cells	18



9.3	Mounting Adaptors.....	19
9.4	Installation Tools.....	20
9.5	Software	21
9.6	Configuration Interface	21
10	ISA100.11a Provisioning	22
10.1	Device Join Behaviour	22
10.2	Direct Connection Provisioning.....	22
10.3	ISA100.11a OTA Provisioning	23
10.4	Unprovisioning.....	23
11	Hardware Installation.....	24
11.1	Mounting Guidelines.....	24
11.2	Hardware Installation Best Practices	25
12	Configuration.....	26
12.1	Capability Files	26
12.2	Data Publishing.....	26
12.2.1	Modbus.....	26
12.2.2	OPC.....	26
13	Operation.....	28
13.1	Measurements	28
13.1.1	Temperature	28
13.1.2	Acceleration.....	28
13.1.3	Velocity	28
13.2	Parameter Publishing	29
14	Maintenance.....	30
14.1	Cleaning	30
14.2	Disassembly	30
14.3	Assembly	31
14.4	Device Inspection	31
14.4.1	O-Ring Inspection	31
14.4.2	E-Module Inspection	32
14.4.3	Cell Inspection	32
14.4.4	Sensor Body Inspection.....	34
14.5	Cell Replacement	34
14.6	Firmware Updates	35
14.7	Device Reset	35
15	Security Hardening Guidelines	36
15.1	System Hardening.....	36
15.2	Recommendations for Improved Availability and Reliability.....	36



15.2.1	Cell Life.....	36
15.2.2	Network Redundancy.....	36



Tables

Table 1 - Abbreviation Definitions 9
Table 2 - Terminology and Definitions..... 9
Table 3: Approved Cells..... 10
Table 4: Ambient Temperature Ranges 11



Figures

Figure 1 VP2000 Components.....	16
Figure 2 - Cell - Xeno XL-205F	18
Figure 3 - Cell - Tadiran TL-5930.....	18
Figure 4 - Mounting Adaptor - M6	19
Figure 5 - Mounting Adaptor - M8	19
Figure 6 - Mounting Adaptor - Mounting Pad.....	19
Figure 7 - Mounting Adaptor - 1/4-28 UNF.....	19
Figure 8 - Mounting Adaptor - 10-32 UNF.....	19
Figure 9 - Mounting Adaptor - 3/8-24 UNF.....	19
Figure 10 - Mounting Adaptor - Tri-Axial Alignment Mount	19
Figure 11 - Installation Tools - Cell Installation Tool	20
Figure 12 - Installation Tools - Straight Hook Spanner	20
Figure 13 - Installation Tools - Tri-Axial Mount Spanner.....	20
Figure 14 - VP Series 2000 - USB Configuration Interface.....	21
Figure 15 - VP Series 2000 - Minimum Installation Clearance.....	24
Figure 16 - VP Series 2000 - Fall Protection Hole	24
Figure 17 - VP Series 2000 - Cemented Pad Mount.....	25
Figure 18 - VP Series 2000 - Tri-Axial Alignment Mount.....	25



1 Introduction

The VP Series 2000 products are wireless industrial condition monitoring sensors that measure vibration and temperature. The product range includes support for various wireless protocols with the models described below.

Model	Description
VP2030	ISA100.11a Tri-axial Accelerometer and Temperature Sensor
VP2010	ISA100.11a Uni-axial Accelerometer and Temperature Sensor
NR1210	ISA100.11a Wireless Repeater
VP2000-02	WirelessHART Tri-axial Accelerometer and Temperature Sensor

The sensor range is intended to optimise the reliability of low- and medium-criticality machines, achieve maintenance cost reductions, shrink the number of unplanned machine failures and increase machinery life. Machinery applications include, but are not limited to:

- Agitators
- Compressors
- Ball mills
- Blowers
- Centrifuges
- Cooling tower fans and pumps
- Motors
- Gearboxes
- Small reciprocating compressors
- Small hydro and steam turbines

This guide describes the essentials of deploying a successful field installation in addition to describing some radio frequency concepts together with some guidelines to aid the understanding of the requirements when planning a wireless sensor network installation for a site.

2 References

Refer to the following documents for additional information:

- DSDVP001 VP Series Warnings, Special Conditions and Additional Information
- VP Series 2000 Product Data Sheet
- VP Series 2000 Software User Guide

3 Terms and Definitions

Terms and Definitions include descriptions of terms used in the document, abbreviation definitions, etc.

3.1 Abbreviations

AP	Access Point
BBR	Back Bone Router
CF	Capabilities File
CS	Control System
DCS	Distributed Control System
DD	Device Descriptor
FD	Field Device
GW	Gateway
ICSS	Integrated Control and Safety System



OPC	OLE for Process Control
OTA	Over the Air
RF	Radio Frequency
TIL	Technical Information Letter
USB	Universal Serial Bus
WCI	Wireless Conformance Institute
WSN	Wireless Sensor Network

Table 1 - Abbreviation Definitions

3.2 Terminology

Access Point	A device that provides a physical interface between a wireless network and gateway.
Field Device	A node that has I/O or routing capabilities or both.
Gateway	A device that provides a link between Ethernet and other types of networks such as ISA100.11a.
Modbus RTU	Serial Communication based Modbus Protocol.
Modbus TCP	TCP based Modbus client/server Protocol.
Node	An element of a wireless network e.g. a FD or AP.
OPC	A generic method of publishing field device data for use by measurement, automation and control systems.
OPC DA	OPC Data Access - a simple, platform dependant OPC protocol.
OPC UA	OPC Unified Architecture - a platform independent OPC protocol.

Table 2 - Terminology and Definitions

4 Support

For additional support, contact:

Divigraph (Pty) Ltd
 2G Matix Build, Bridgeway Road
 Cape Town
 7441
 South Africa
www.divigraph.com



5 Hazardous Location Requirements

The information in Section 5 is identical to document DSDVP001. No changes are allowed in this section without prior approval from the notified body.

5.1 Additional Warnings

The following warnings apply in addition to any marking on the equipment.

WARNING – POTENTIAL ELECTROSTATIC CHARGING HAZARD.

The equipment shall only be cleaned with a damp cloth when deployed in a hazardous area.

WARNING – USE ONLY ONE OF THE FOLLOWING BATTERIES

XenoEnergy XL-205F, Tadiran TL-5930, Tadiran SL-2780 or Tadiran TLH-5930

WARNING – DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE IS PRESENT

5.1 Avertissements supplémentaires

Les avertissements suivantes doivent être appliqués avec les autres instructions marquées sur l'équipement.

AVERTISSEMENT- RISQUE - POSSIBILITE DE CHARGEMENT ELECTROSTATIQUE

L'équipement doit être nettoyé avec une toile humide dans un environnement dangereux.

AVERTISSEMENT- UTILISEZ UN DE CE GENRE DE BATTERIE UNIQUEMENT.

Xeno XL-205F, Tadiran TL-5930, Tadiran SL-2780 ou Tadiran TLH-5930

AVERTISSEMENT- NE PAS OUVRIR QUAND UN ATMOSPHERE EXPLOSIVE EST PRESENT.

5.2 Approved Electrical Cells

Only the cells listed in Table 3 are approved for use with the equipment. The use of any battery or cell other than the type listed will void the safety rating and present a significant safety hazard.

Cell Part Number	Manufacturer
XL-205F	XenoEnergy
TL-5930	Tadiran Batteries
SL-2780	Tadiran Batteries
TLH-5930	Tadiran Batteries

Table 3: Approved Cells

5.3 Ambient Temperature Rating

When operating in a hazardous atmosphere, the ambient temperature rating of the equipment depends on the electrical cell installed. Refer to Table 4 for the applicable ambient temperature ratings.




Installed Cell	Additional Marking for Ambient Temperature Range
Xeno XL-205F or Tadiran TL-5930 or Tadiran SL-2780	-40 °C ≤ Ta ≤ +70 °C
Tadiran TLH-5930	-40 °C ≤ Ta ≤ +80 °C

Table 4: Ambient Temperature Ranges

5.4 Electrical Rating

Input - Internal battery supply voltage 3.6Vdc, 100mA

5.5 General Arrangement

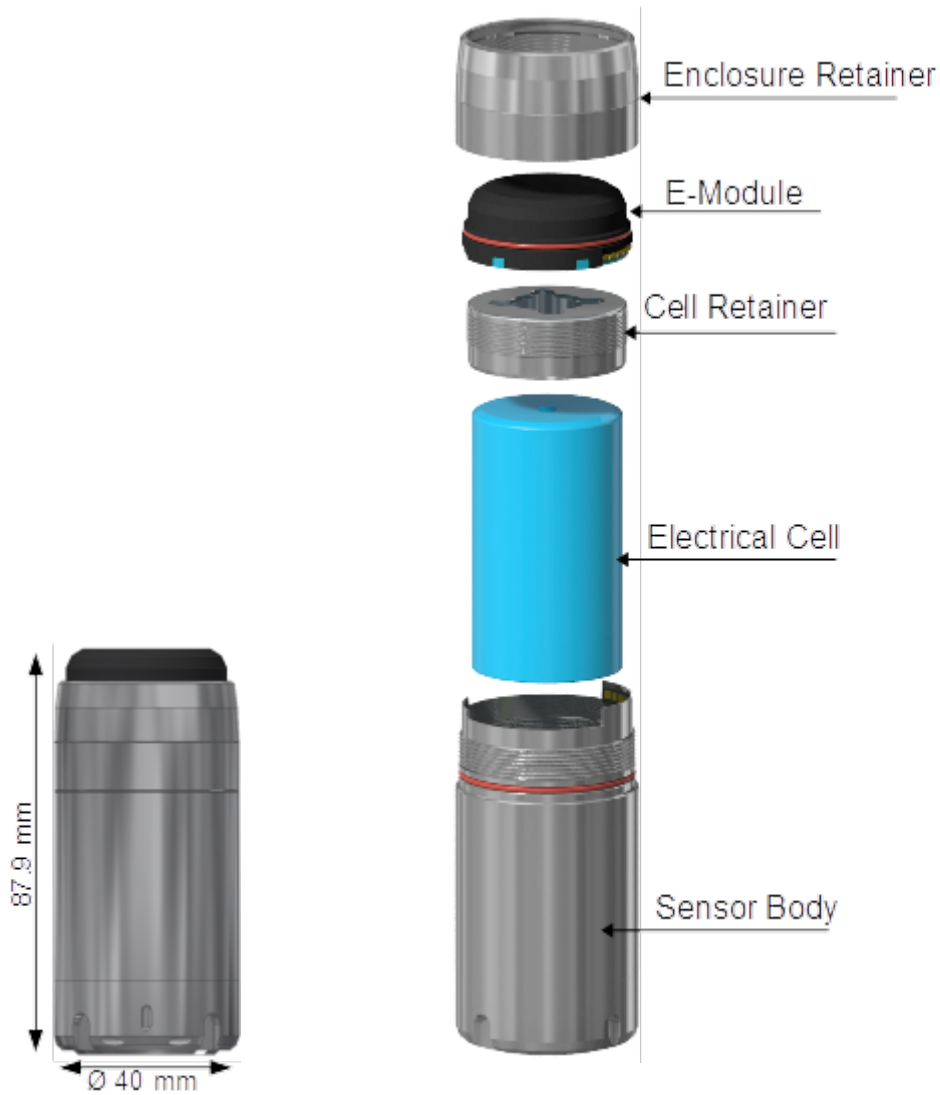



6 Operating Conditions

The following operation conditions should be adhered to prevent damage or negatively affect the life and safety of the sensor.

Operating Temperature	-40 °C to 70 °C or -40 °C to 80 °C depending on the battery model used. Refer to Section 5.3
Altitude	Maximum 3000 m outdoors
Vibration Limit	20 g peak
Shock resistance	0.5 m drop onto concrete

7 General Safety

This section addresses some issues around personal safety in working with the product, product safety to prevent damage and environmental safety for a more global approach.

7.1 Receiving Inspection

The product should be visually inspected for obvious shipping damage. If shipping damage is detected, a claim should be submitted to the applicable carrier and a copy of the claim should be submitted to the applicable product supplier.

Note!

- The product is shipped without a Lithium cell.

7.2 Safe Handling

There are several things that can be done to maximise the value provided by the product. Proper handling of components, best practices for installation and diligent inspection procedures will prolong the service life of the product. Additionally, procedures for dealing with system components replaced by maintenance are detailed to allow compliance with regulations relating to electronic waste.

7.3 Safety Labels and Markings

Labels and markings are provided on the product to guide system integrators in the process of choosing appropriate interface equipment, determining safe use conditions and identifying recommended installation procedures. The formats of these markings are governed by the standards that dictate the safe use and environmental compliance in a variety of regions and regulated settings.

The areas where the product and associated equipment are certified for use are marked on a prominent part of the product. The information includes the name and type of the original manufacturer, serial number of the product, the certificate number and issuing body for hazardous area approvals as well as the Ex marking to indicate the methods of protection employed by the product.

The product will be marked with the CE logo to indicate compliance with electromagnetic compatibility standards and Explosion Atmosphere standards required of industrial instrumentation for use in the European Union.

7.4 Hazardous Materials



The product makes use of a Lithium cell which shall be disposed of by the end user in accordance with applicable statutory and regulatory as well as site specific safety requirements. Do not crush the product as this may cause the Lithium cell to rupture.

7.5 Installation, Operation and Maintenance

Refer and adhere to applicable statutory and regulatory as well as site specific safety requirements when installing, operating or maintaining the product.

Installations and maintenance tasks performed in potentially hazardous areas must be performed only after the area has been verified to be free of hazardous materials, atmospheres and conditions.

7.5.1 Installation

The original supplier takes no responsibility for any loss or damage caused by not adhering to applicable safety requirements, the installation of the product in any manner other than described in this document or due to incorrect or negligent installation as per the methods described in this document and associated documents.

7.5.2 Operation

Routine inspection procedures should be followed to ensure the continued safe operation of the product. If any damage is observed during routine inspections, the product should be removed for maintenance as soon as possible. If the product is used in a hazardous area, it should be removed without delay if damaged.

Warning!

- Do not operate a damaged product in a hazardous area.
- Report any leakage from the product to the appropriate responsible person as soon as possible and follow applicable hazardous material procedures.
- The protection provided by the equipment may be impaired if the equipment is used in a manner not specified by the manufacturer.

7.5.3 Maintenance

The product requires minimal routine operational maintenance other than cleaning the area around the product to ensure safe and reliable operation as well as to prolong the service life of the product. If the Lithium cell in the product requires replacement, follow applicable hazardous material procedures to replace and dispose of it.

7.6 Disposal

Customers or third parties who are not member states of the European Union are solely responsible for diligent product disposal at the end of its useful life. No person, firm, corporation, association or agency shall dispose of the product in such a way that is in violation of any applicable international, federal, state or local regulations. The original supplier is not responsible for product disposal at the end of its useful life.

Warning!

- Ensure that the Lithium cell has been removed from the product prior to disposal.



- Dispose of Lithium cells as required by local and international law.

7.6.1 Product Replacement and Failure Analysis

The web site for the original supplier offers contact information for a variety of tasks. By visiting the website, the process for returning parts under warranty can be initiated and failure analysis can be requested.

7.6.2 Hazardous Material Disposal

Lithium cells shall be disposed of separately as per applicable hazardous material disposal procedures in accordance with applicable international, federal, state or local regulations.

7.6.3 Recycling Facilities

Decommissioning of instrumentation should endeavour to minimise the impact of the waste created by disposal of system material. Refer to local or regional waste removal administration to collect information on proper material collection, re-use and recycling.

7.7 Certification

The VP Series 2000 product range is designed for use in hazardous areas and complies with applicable rules statutory and regulatory requirements. Refer to the product data sheet for a listing of certifications for the VP Series 2000 sensor products.

7.8 Cyber Security

The VP Series 2000 makes use of the VP Series 2000 PC software application along with a USB device docking station for provisioning and firmware update purposes. VP Series 2000 devices contain measures to help reduce cyber security risks, but may not eliminate all risk. As is common practice with all computers, it is strongly recommended to implement additional cyber security protection measures such as user access controls, anti-virus scanning, implementing all updates, encryption and PC management software. These recommended measures are at the end user's discretion, and are their responsibility. Some residual risk may remain.



8 Radio and Electromagnetic Compatibility

8.1 Canada and USA

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

This Class A digital apparatus complies with Canadian ICES-003 and part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning!

- Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



9 VP Series 2000 Components

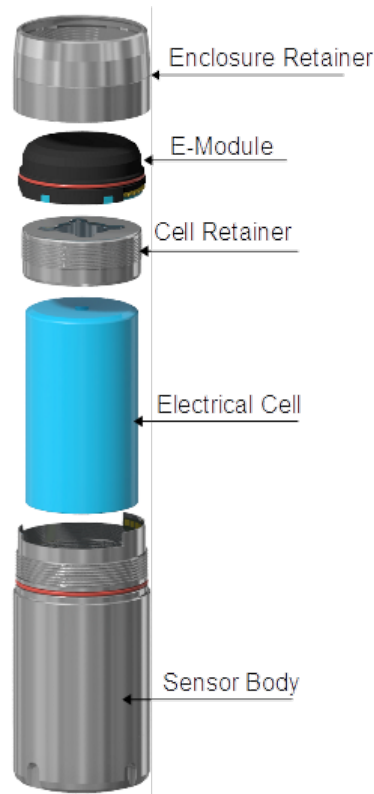


Figure 1 VP2000 Components

The VP Series 2000 range of products consists the components illustrated in Figure 1. The components include the Sensor Body, Cell Retainer, e-module and Enclosure Retainer.

9.1 Field Device Configurations

VP Series 2000 field devices are available in tri-axial or uni-axial vibration monitoring and includes temperature monitoring. A dedicated repeater field device is available in order to extend the wireless network reach. Refer to the product data sheet for sensor ordering information.

9.1.1 Integrated Vibration and Temperature Monitoring

The VP Series 2000 field devices that contain either tri-axial or uni-axial integrated sensors as well as a temperature sensor. They are also capable of operating as wireless routers in networks that support mesh networking. Refer to the applicable wireless network infrastructure vendor documentation for additional information on how to enable or disable the sensor router role and sensor routing options.

Note!

- Enabling the router role of a VP Series 2000 sensor will significantly affect cell life.

Warning!

- VP Series 2000 sensors are intended for monitoring purposes only and should not be used in control or safety systems.



9.1.2 Repeaters

The NR1210 is an ISA 100.11a repeater which enables the expansion of an ISA100.11a wireless network by providing a routing role. As a routing device, a repeater is able to extend the range of an ISA100.11a compliant wireless network, provide routing redundancy or provide a routing option to a sensor that has poor signal strength or quality or combination of both. Consider the use of this cell powered repeater when a line powered IS100.11a access point or repeater is not practical.

Refer to the product data sheet for repeater ordering information.

Note!

- VP Series 2000 repeaters should be used to extend a wireless sensor field or to provide communication paths for devices in areas where the wireless network provides inadequate coverage.
- VP Series 2000 repeaters should not be used to extend the initial reach of a wireless network router or to route a large number of devices through itself.

Warning!

- VP Series 2000 repeaters are intended for monitoring purposes only and should not be used in control or safety systems.



9.2 Electrical Cells

A Lithium primary cell powers the VP Series 2000 sensors and repeaters. As such, applicable precautions should be taken when installing, operating and maintaining these products.

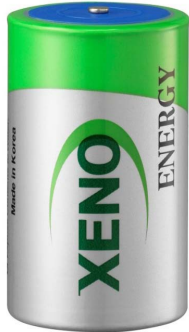


Figure 2 - Cell - Xeno XL-205F



Figure 3 - Cell - Tadiran TL-5930

Lithium cells are not provided with the product and it is the responsibility of the end-user to source and use only approved cells. The only cells approved:

- Tadiran SL-2780
- Tadiran TL-5930
- Tadiran TLH-5930
- Xeno XL205-F

Warning!

- Use of any cell other than the models listed in the product data sheet will void the product hazardous area certification.
- Use of any cell other than the type listed may present a significant safety hazard.

Note!

- Use of any cell other than the type listed in the product data sheet will void the product warrantee.
- Device performance and specifications are only valid if an approved cell is used.
- The original supplier takes no responsibility for any loss or damage resulting from the use of an unapproved electrical cell.



9.3 Mounting Adaptors

Various mounting options can be used when installing VP Series 2000 devices. In some cases mounting adaptors may be required to achieve the most effective mount. Mounting adaptors include:



Figure 4 - Mounting Adaptor - M6



Figure 7 - Mounting Adaptor - 1/4-28 UNF



Figure 5 - Mounting Adaptor - M8



Figure 8 - Mounting Adaptor - 10-32 UNF



Figure 6 - Mounting Adaptor - Mounting Pad



Figure 9 - Mounting Adaptor - 3/8-24 UNF

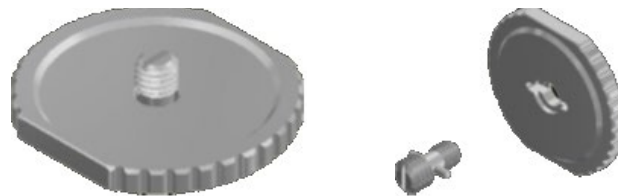


Figure 10 - Mounting Adaptor - Tri-Axial Alignment Mount

Refer to the product data sheet for mounting adaptor ordering information.



9.4 Installation Tools

In order to simplify installation, the VP Series 2000 product range includes specialised installation tools. These are available in a kit consisting of the following items:

- BT-10 Cell installation tool
- MT-20 Straight hook spanner
- MT-30 Tri-axial mount spanner

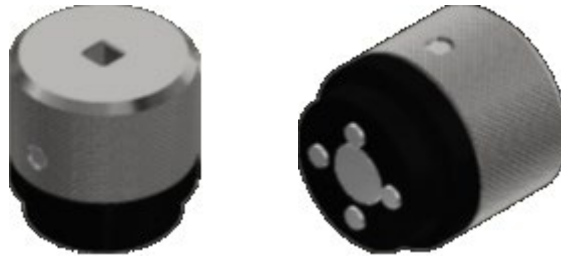


Figure 11 - Installation Tools - Cell Installation Tool



Figure 12 - Installation Tools - Straight Hook Spanner



Figure 13 - Installation Tools - Tri-Axial Mount Spanner

Refer to the product data sheet for installation tool ordering information.



9.5 Software

VP Series 2000 devices can be configured, provisioned and firmware updates can be applied using the VP Series 2000 software.

Refer to the VP Series 2000 Software User Guide for additional information.

9.6 Configuration Interface

An USB configuration interface is used to interface VP Series 2000 devices with the VP Series 2000 software.



Figure 14 - VP Series 2000 - USB Configuration Interface

Note!

- Only use the supplied Identiv CLOUD 3700 F USB interface. Refer to the VP Series 2000 product data sheet for ordering information.

Refer to the product data sheet for USB configuration interface ordering information.



10 ISA100.11a Provisioning

Provisioning is a pre-installation step usually performed indoors in an equipment room or a similar environment. This process requires both the hardware and software components.

Depending on the network infrastructure used, VP Series 2000 devices are either provisioned using a node docking station (direct connection) or by means of “Over-The-Air” (OTA) provisioning. The ISA100.11a network ID, ISA100.11a network security join key and ISA100.11a device tag values are assigned during the provisioning process.

Each network infrastructure vendor has a unique provisioning process. Refer to the network infrastructure vendor documentation for provisioning best practices.

10.1 Device Join Behaviour

VP Series 2000 devices periodically attempt to join an ISA100.11a network after power has been applied. The period between join attempts is determined by a device sleep schedule. The sleep schedule applies to both provisioning and provisioned network join attempts.

The VP will switch its receiver on for 45 seconds at a time to attempt a join. After reset, or after after a full join the device transitions through the following five power states.

- 1) Attempts to join 3 times during the first 5min.
- 2) Attempts to join every 5m45s during 5min to 40min after reset.
- 3) Every 20min during 40min to 3h30min after reset.
- 4) Every 45min during 3h30m to 26h after reset.
- 5) Every 2h after 26h after reset.

10.2 Direct Connection Provisioning

Where OTA provisioning is not available, the VP Series 2000 software can be used to provision devices using a node docking station. In order to provision a device in this way, the following information is required:

- ISA100.11a Network ID
- ISA100.11a Security Join Key
- ISA100.11a Device Tag

Refer to the VP Series 2000 Software User Guide for additional information with regard to provisioning VP Series 2000 devices using the VP Series 2000 software.

Note!

- Not all network infrastructure devices allow for the ISA100.11a Security Join Key to be assigned by the end user in which case the OTA provisioning method must be used.
- An end user assigned ISA100.11a Security Join Key exposes a cyber security risk - manage ISA100.11a Security Join Keys as per applicable cyber security policies.



10.3 ISA100.11a OTA Provisioning

The OTA provisioning process allows for devices to be provisioned directly from the network infrastructure gateway. Refer to the network infrastructure vendor documentation for additional information about how to provision devices using this method. The following steps outline the OTA provisioning process:

- Configure the network infrastructure as per the vendor documentation.
- Power up the VP Series 2000 nodes to be provisioned.
- Enable the network infrastructure provisioning network.
- Provision VP Series 2000 devices using OTA provisioning

Note!

- If OTA provisioning fails, the VP Series 2000 software and node docking station may be required to reset the device to an unprovisioned state.

10.4 Unprovisioning

VP Series 2000 devices can be unprovisioned using the VP Series 2000 Software and Node Docking Station.

Refer to the VP Series 2000 Software User Guide for additional information.

Refer to the relevant network infrastructure documentation for information on how to unprovision devices from the wireless sensor network gateway.



11 Hardware Installation

Select an appropriate mounting position for the VP Series 2000 device leaving enough clearance for both mechanical installation and optimal RF performance. Devices can be mounted by means of a mounting adaptor directly onto a machine or by using a cemented mounting pad.

A clearance of 100mm or more is recommended for optimal RF performance, but is not mandatory.

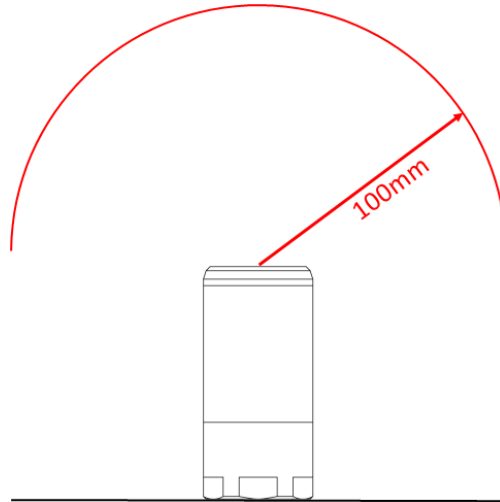


Figure 15 - VP Series 2000 - Minimum Installation Clearance

A 1.25mm diameter fall protection hole in the base provides the ability to secure the device using a stainless steel lanyard to prevent it from falling should the mounting fail.



Figure 16 - VP Series 2000 - Fall Protection Hole

11.1 Mounting Guidelines

To mount the device:

- Prepare a flat, clean surface with a diameter > 40mm on the machine at the mounting point.
 - Drill and tap a suitable hole in the centre of the prepared surface.
- OR**
- Cement the mounting pad onto the prepared surface with a suitable bonding agent.
 - Hand-tighten the device or use a torque wrench to tighten to 2-3 Nm.
 - Optionally attach a lanyard (fixed to a suitable retaining point) through the fall protection hole.



Figure 17 - VP Series 2000 - Cemented Pad Mount



Figure 18 - VP Series 2000 - Tri-Axial Alignment Mount

Markings on the device indicate the alignment of the various axes. Should these markings not be visible, the fall protection hole and a reference notch can be used for alignment purposes.

Note!

- Direct stud mounts are generally the most effective mounting method but may not be possible where machine casings are too thin or may not be allowed due to machine warrantee conditions.
- Cemented pad mounts allow for simpler alignment when mounting tri-axial sensors without the tri-axial mounting accessory.

11.2 Hardware Installation Best Practices

Consider the following when mounting devices:

- Prior to mounting a device at its final location, provision and verify its radio reception and its ability to join a network.
- Mount sensors as close as possible to the machine point to be monitored.
- The vertical (z-axis) of VP Series 2000 sensor nodes are the most sensitive - if signal strength and quality allow for it, mount sensors in the axial or radial direction as applicable.
- Refer to relevant machine documentation to determine whether to use a mounting stud or cemented pad to mount the device.
- Ensure a suitable flat mounting surface on curved or uneven surfaces by using a spot facing tool.
- Use a steel brush to remove all paint from a flat mounting surface.
- Use a suitable thread locker to secure mounting studs to the machine.
- Silicone grease between the device and mounting surface improves coupling of high frequency vibration.
- Use a suitable (preferably low strength) thread locker to secure devices to mounting studs or pads.



12 Configuration

Configuration of VP Series 2000 devices are network infrastructure vendor dependant. VP Series 2000 device data is generally published using either Modbus or OPC. Publication of this data is network infrastructure vendor dependant as well. Capability files are provided to enable configuration of VP Series 2000 devices as well as to enable publication of device data.

Note!

- Refer to the applicable vendor documentation to configure devices and setup data publication.

12.1 Capability Files

Capability files provide an industry standard method of interpretation of device capabilities. The purpose of a capability file (CF) is to provide a human-readable document which contains the information required for the host system to interpret the block instantiation capability of a device, number of possible objects present in a device as well as the default values of the block attributes.

VP Series 2000 device capability files contain information about the capabilities of VP Series 2000 sensors and repeaters.

Note!

- Not all host systems require a CF.
- Refer to the applicable vendor documentation to determine how to utilise VP Series 2000 capability files if required.

12.2 Data Publishing

Data publishing is a function of the network infrastructure. Depending on the network infrastructure vendor, data may be published using Modbus or OPC. Modbus is generally an unlicensed method to publish data while OPC generally requires additional licensing. OPC data mapping and management is generally simpler than that of Modbus.

Note!

- Refer to the applicable vendor documentation to determine whether Modbus or OPC data publication is available.

12.2.1 Modbus

Most network infrastructure vendors make use of Modbus TCP to publish data. Refer to the vendor specific documentation for additional information about which Modbus interfaces are available and how to map VP Series 2000 data to applicable Modbus registers.

12.2.2 OPC

Modbus register data can be published using OPC by means of an OPC server interface on a network infrastructure host system. This may require a 3rd party OPC server interface. Refer to the OPC server interface documentation for additional detail on how to map Modbus registers to the OPC server.



Some network infrastructure vendors may have an OPC server interface available to publish data. Refer to the vendor specific documentation for additional information about which OPC server interfaces are available and how to map VP Series 2000 data to OPC servers.

Note!

- In most cases the OPC server interface requires additional licensing.



13 Operation

During normal operation VP Series 2000 field devices maintain their connection to the wireless network and publish vibration and temperature measurements.

In addition devices monitor their own status, perform measurements and publish parameters as configured.

13.1 Measurements

VP Series 2000 sensors perform various measurements on acquired signals. These include:

- Temperature
 - °C
 - °F
- Vibration
 - g rms
 - g pk
 - m/s² rms
 - m/s² pk
- Velocity
 - mm/s rms
 - mm/s pk
 - in/s rms
 - in/s pk

13.1.1 Temperature

VP Series 2000 sensors measure surface contact temperature by means of a temperature sensor in the sensor base. The temperature can be scaled in degrees Celsius (°C) or degrees Fahrenheit (°F).

Refer to the product data sheet for temperature range and resolution.

13.1.2 Acceleration

VP Series 2000 sensors measure single or tri-axial vibration up to ±20 g (peak) by means of a piezoelectric ceramic sensing element in the sensor base. The measurement accuracy is ±5% and transverse sensitivity is typically 7%. Vibration measurements can be scaled as follows:

- g rms
- g pk
- m/s² rms
- m/s² pk

Refer to the product data sheet for acceleration range.

13.1.3 Velocity

VP Series 2000 sensors measure single or tri-axial velocity derived from the vibration signal. Velocity measurements can be scaled as follows:



- mm/s rms
- mm/s pk
- in/s rms
- in/s pk

Refer to the product data sheet for velocity range.

13.2 Parameter Publishing

Measurements are published as parameters to gateways using the wireless network. Parameters are then published using Modbus or OPC as per the gateway configuration.



14 Maintenance

VP Series 2000 devices have been design to require minimal maintenance. Maintenance tasks include cleaning the sensor for maintenance purposes, periodic inspection of device components such as batteries and o-ring seals, cell replacement as well as firmware updates.

14.1 Cleaning

Use a non-abrasive solvent free method to clean the exterior of a VP Series 2000 device prior to performing any further maintenance to the device. A clean, dry, anti-static cloth should be used to clean interior components of the device. Switch cleaner may be used to remove deposits from sensor body contact pads.

Warning!

- To prevent electrostatic discharge, only a damp cloth may be used to clean the exterior of VP Series 2000 devices in hazardous locations.
- Opening, disassembly and internal cleaning shall never be performed in hazardous locations.

14.2 Disassembly

Disassemble a VP Series 2000 device as follows:

- Remove the enclosure retainer using oscillating turns to prevent damage to the o-rings. Use a single counter-clockwise turn followed by a $\frac{1}{4}$ turn in the opposite direction until the sensor body o-ring is exposed.
- Remove the e-module by using light, upward pressure on the side opposite the contact pins.
- Remove the cell retaining ring using the cell installation tool.
- Remove the cell.

Warning!

- Do not disassemble the device in a hazardous environment.
- If the cell is damaged or shows signs of leakage do not continue with the disassembly process and take appropriate action as per applicable hazardous materials procedures provided in the cell manufacturer's material safety datasheet.
- Do not short-circuit the cell.

Note!

- VP Series 2000 devices should not be disassembled in the field.
- Avoid disassembling the device in humid conditions.



14.3 Assembly

Assemble a VP Series 2000 device as follows:

- Insert the cell.
- Insert the cell retaining ring and hand-tighten it to secure the cell using the VP Series 2000 cell installation tool.
- Insert the e-module by angling and aligning the side with the spring loaded contacts first. Once the spring loaded contacts are aligned, press gently from the opposite end to apply radial force that compresses the contacts and then apply light downward pressure to the opposite end.
- Ensure that the sensor body screw thread is clean.
- Ensure that the o-rings are clean, undamaged and in place.
- Ensure that the enclosure retainer screw thread is clean.
- Place the enclosure retainer over the e-module and fasten it until the sensor body o-ring is covered.
- Use oscillating turns to hand-tighten the retaining ring to prevent damage to the o-rings.

Warning!

- Do not assemble the device in a hazardous environment.
- Do not short-circuit the cell.
- Do not insert a damaged or leaking cell into the device.
- Check the cell polarity when inserting it into the device.
- Reverse polarisation may cause damage to the device.

Note!

- VP Series 2000 devices should not be assembled in the field.
- Ensure that components are clean and dry before assembling the device.
- Avoid assembling the device in humid conditions.

Correct assembly is essential to maintain the IP67 rating of the device.

14.4 Device Inspection

Internal device inspection is typically only performed during cell replacement and there is no routine inspection requirement.

The device needs to be removed from the field and cleaned before disassembled. Once disassembled the components must be inspected for signs of damage before reassembled.

14.4.1 O-Ring Inspection

Two 34x1 o-ring seals are used to prevent dust and moisture penetration into VP Series 2000 devices. Depending on environmental conditions, these seals may have to be replaced periodically but typically only whenever the cell is replaced.

Refer to the product data sheet for o-ring seal ordering information.

**Note!**

- O-rings should be replaced whenever batteries are replaced.
- New o-rings should be coated in silicone grease.
- Ensure that o-rings are free of dirt as particles may compromise the IP67 rating of the device.

Warning!

- Do not use solvents to clean o-rings - use a clean, dry cloth to remove dirt particles if required.
- Do not use devices with o-rings showing signs of damage.
- Using devices with o-rings showing signs of damage may cause further damage or device failure.

14.4.2 E-Module Inspection

E-modules should be inspected for visible damage to the enclosure, cell terminal spring and contact pins.

Check the enclosure for signs of degradation or cracks in the material.

Check the cell terminal spring for signs of chemical corrosion or crystallisation.

Contact pins should not be loose but should move freely when pressed against the sensor body contact pads.

Note!

- The e-module contains no user serviceable parts and together with the rest of the device components, should be returned to the supplier for repair or service if required.

Warning!

- Do not use devices with e-modules showing signs of damage in hazardous locations.
- Using devices with e-modules showing signs of damage may cause further damage or device failure.

14.4.3 Cell Inspection

VP Series 2000 device batteries should be inspected for signs of damage or leakage. These include but are not limited to:

- Deformation of the cell in the form of swelling or elongation.
- Indentations in the cell.
- Lifting of cell terminals.
- Moisture or liquid on the cell.
- Crystallisation or chemical corrosion on the cell terminals.

Warning!

- Immediately discontinue the use of a cell that shows any signs of damage or leakage and refer to relevant hazardous material procedures to dispose of the cell.
- Do not use devices with batteries showing signs of damage in hazardous locations.



- Using devices with batteries showing signs of damage may cause further damage or device failure.



14.4.4 Sensor Body Inspection

Sensor bodies should be inspected for visible damage to the enclosure, cell terminal spring and contact pads.

Check the enclosure for signs of deformation, degradation or cracks in the material.

Check the cell terminal spring for signs of chemical corrosion or crystallisation.

Contact pads should be undamaged and free of any carbon deposits.

Note!

- Other than cleaning of the contact pads, the sensor body contains no user serviceable parts and together with the rest of the device components, should be returned to the supplier for repair or service if required.

Warning!

- Do not use devices with sensor bodies showing signs of damage in hazardous locations.
- Using devices with sensor bodies showing signs of damage may cause further damage or device failure.

14.5 Cell Replacement

Device cells may have to be replaced when they reach a minimum level. Cells are secured inside the device using a retaining screw-cap that can be loosened and tightened using the VP Series 2000 cell installation tool. The following steps describe how to replace the VP Series 2000 cell:

- Disassemble the device.
- Insert a cell as per the approved list.
- Replace o-ring seals.
- Assemble the device.

Warning!

- Do not replace the cell in a hazardous environment.
- Do not short-circuit the cell.
- Do not insert a cell type other than as per the approved list.
- Do not insert a damaged or leaking cell into the device.
- Check the cell polarity when inserting it into the device.
- Reverse polarisation may cause damage to the device.

Note!

- Batteries should not be installed in the field.
- Dispose of expended batteries as per applicable hazardous material disposal procedures.
- Transportation regulations often restrict the shipment of lithium-type batteries that have been fully or partially consumed.
- Consult appropriate regulations prior to disposing batteries or seeking service.



14.6 Firmware Updates

VP Series 2000 device firmware can be updated or reverted using the VP Series 2000 software and Node Docking Station.

Refer to the VP Series 2000 Software User Guide for additional information.

14.7 Device Reset

VP Series 2000 devices can be reset using the VP Series 2000 Software and Node Docking Station. By resetting a VP Series 2000 device after it has been powered for a long period of time without joining a network, the device will exit the extended sleep cycle and attempt to join the wireless network more frequently.

Refer to the VP Series 2000 Software User Guide for additional information.



15 Security Hardening Guidelines

From an electronic security risk assessment perspective the VP Series 2000 sensors and repeaters can be categorised the same as CS/DCS/ICSS. For this reason, due diligence should be performed to ensure all reasonable steps have been taken to properly secure any system using these devices.

Risk Assessment, Network integration and DCS integration are beyond the scope of this document. This section is presented as a guideline, not a step by step procedure. If assistance is needed, please contact the applicable supplier.

15.1 System Hardening

The following checks can be done in order to harden a system utilising VP Series 2000 devices:

- Ensure devices have the latest firmware installed.
- Ensure proper management of device docking stations.
- Follow company or industry best practices for strong passwords for the applicable wireless network infrastructure. Refer to the applicable vendor documentation for wireless network infrastructure password requirements.
- Install VP Series 2000 software on only task specific computers such as a dedicated laptop and maintain proper physical security of these computers.
- Avoid installing VP Series 2000 software on unsecured networked computers or computers that are remotely accessible.
- Patch management is important in maintaining a security posture. Keep firmware and software current to the latest versions.

15.2 Recommendations for Improved Availability and Reliability

Numerous steps may be taken to maximise cell life and minimise communication interruptions for VP Series 2000 devices and in so doing improving device availability and reliability.

15.2.1 Cell Life

Considering the following recommendations may achieve improved availability and reliability by extending cell life:

- Use line powered routing devices.
- Minimise the number of hops between VP Series 2000 devices and line powered routing devices.
- Minimise the number of devices routing through VP Series 2000 repeaters.
- Avoid using VP Series 2000 sensors as routing devices.
- Use the lowest reasonable parameter publishing rate to monitor vibration and temperature.

15.2.2 Network Redundancy

By using redundant network components, VP Series 2000 device communication interruption may be minimised to improve availability and reliability. Consider using line powered ISA 100.11a routing devices to provide primary communication routing and using VP Series 2000 repeaters to provide a secondary communication route.