

A nanoparticle dosimeter for easy workplace exposure monitoring



Partector 2

Aerosol Dosimeter

Operation Manual

English

February 2023



Legal Information

Notice

Naneos particle solutions reserves the right to make modifications on print errors or update specifications in this guide without prior notice. For the latest version visit www.naneos.ch.

Disclaimer

Naneos particle solutions expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software or hardware.

Trademarks

Partector is a trademark of naneos particle solutions.

Document information

© naneos particle solutions gmbh, 2022

Related device versions: v 1.0 **standard pump, silent pump, OEM**

Related firmware versions: ≥ 265

Older firmware may not offer all features described in this manual

Document Date: 2023-03-27

Document Revision: ZA

Abbreviations

DC	Diffusion charging, diffusion charger
HV	High voltage
LED	Light-emitting diode
LDSA	Lung deposited surface area
N	Number concentration
d	Average particle diameter
S	Total surface area
PM0.3	Mass of particles smaller than 0.3 μm
μSD	Micro secure digital memory card

Safety information

General notes and warnings

This operation manual must be read completely before using the Partector 2. Incorrect use or handling and any consequences arising from this may damage the device or endanger personnel.

The manufacturer declines all liability resulting from incorrect use and handling.

Safety notes

Never operate the instrument at condensing conditions.

Clean the inlet from time to time, see chapter maintenance!



Do not blow into the instrument.

Do not open the Partector 2 as you may damage it.

The Partector 2 is a sensitive instrument made for measuring nanoparticles. Sampling too much coarse dust will eventually lead to deteriorating instrument performance. Use a cyclone when measuring in environments where large numbers of microparticles might be present.

Do not operate the Partector 2 in an explosive atmosphere or in the presence of flammable gases or fumes.

Have your instrument recalibrated once a year.

Use only the original USB power supply and USB cable.

Instrument specifications

Device types

Beside the standard version of the Partector 2 that measures LDSA, N, d, S, and PM0.3, there is also a **Partector 2 Light** version that only measures LDSA. The **Partector 2 Pro** furthermore has also the ability to measure an 8-channel size distribution. All three versions can be equipped with a silent pump or are available as OEM.

Versions and order codes:

<i>Product codes:</i>	<i>Version name:</i>
160	Partector 2 Light
161	Partector 2 Light silent
162	Partector 2 Light OEM
150	Partector 2
151	Partector 2 silent
152	Partector 2 OEM
170	Partector 2 Pro
171	Partector 2 Pro silent
172	Partector 2 Pro OEM

Specifications & device types

The measurement uncertainty of the **Partector 2 standard version** is largely determined by the unknown shape of the particle size distribution. It is calibrated for lognormal particle size distributions with a geometric standard deviation of 1.9, which is a reasonable assumption for many environments.

Note: if you measure particles of only a specific diameter (monodisperse particles), the Partector 2 diameter determination will be inaccurate, as will number, surface and mass determination. Contact naneos if you want to use the device for monodisperse particles.

The **partector 2 Pro** applies multiple deposition voltages and can therefore identify and indicate the particle size distribution of an aerosol of interest. The measurement is therefore more accurate for size distributions that do not have the assumed standard deviation of 1.9.

Measurements and accuracy

Device Type	Light Std Pro	
Measured values:	x x x	LDSA Lung deposited surface area x x N Number concentration x x d Average particle diameter x x S Total surface area x x PM0.3 Particle mass (<0.3 μm)
Concentration ranges:	x x x	LDSA 0 - 12'000 $\mu\text{m}^2/\text{cm}^3$ x x N 0 - 10^6 pt/ cm^3 x x S 0 - 50'000 $\mu\text{m}^2/\text{cm}^3$ x x PM0.3 0 - 1'000 $\mu\text{g}/\text{m}^3$
Typical accuracy:	x x x	LDSA $\pm 30\%$ or $\pm 3 \mu\text{m}^2/\text{cm}^3$ x x N $\pm 30\%$ or ± 1000 pt/ cm^3 x x d $\pm 30\%$ or ± 10 nm x x S $\pm 30\%$ or $\pm 15 \mu\text{m}^2/\text{cm}^3$ x x PM0.3 $\pm 50\%$ or $\pm 0.3 \mu\text{g}/\text{m}^3$
Particle size range:	x x x	LDSA 10 nm to 10 μm Displayed LDSA value is only accurate in the size range of 20-400 nm; however, the instrument can be used to measure micron-sized particles too. x x N x x d x x S x x PM0.3 20 – 150 nm (fixed deposition voltage) 10 – 300 nm (adaptive deposition voltage)
Size distribution:	x	8 channels between 10...300 nm
Noise floor:		$\sim 0.5 \mu\text{m}^2/\text{cm}^3$ in particle-free air (LDSA)
Time resolution:		1 s, in Pro version depending on settings
Response time:		2/4/8/16 s, user-adjustable

Time resolution in Pro version:

The scanning through the different particle sizes needs some time based on the response time that is set in the menu. If you select a response time of 2s, you get a measurement point every 4s in the datafile. If you

select 4s as response time you get a datapoint every 6s, if you select 8s you get a datapoint every 10s. etc.

Technical specifications

Inlet flow:	0.5 l/min
Operating Temperature:	0 – 40 °C
Storage Temperature:	-10 – 50 °C
Relative Humidity:	10 % to 90%, non-condensing
Operating height:	0 - 3000m above sea level
Battery:	Rechargeable Li-Ion, 12Wh
Battery lifetime:	~ 24h (with a new battery; aging will occur; low power mode enabled, ~20h with silent pump)
Battery Charging:	via USB, 5V / 1.5A
Data storage:	μSD-card
PC Interface:	USB/serial by virtual COM-Port Serial port adapter for SD card available
BT wireless range:	3 - 30 m, depending on obstacles
BT frequency:	2.404 GHz – 2.480 GHz
BT output power:	0 dBm
Noise:	~ 35dB in 1m distance (standard pump) inaudible (silent pump)
Dimensions:	8.8 x 14.2 x 3.4 cm
Weight:	415 g (400 g with silent pump)
Pollution degree:	2, or with cyclone at inlet 3.

Checking the shipment contents

When unpacking the device, verify that you have received the following items. If any of the components are missing or damaged, contact naneos.

Type	Items
Standard	Partector 2 device
	USB cable, 1.2m
	μSD-card 8 GB
	μSD/SD-card adapter or μSD/USB-adapter
	Carrying sleeve
	USB charger
	12 cm Tygon tubing
	Peli case

Storage and transport

To avoid damage during storage and transport, please use original packaging.

Avoid locations with high/low temperatures and high humid conditions or places that can get wet.

Do not store the device with an empty battery.

Do not store the device in direct sunlight.

For longer storage, mount the inlet protection cap.

Getting started

Instrument description

The Partector 2 is a hand-held, battery powered instrument to measure the lung deposited surface area (LDSA), the number concentration and the average particle diameter of nanoparticles. It displays the measured data on a graphical display and stores it on a μ SD card. A user-defined LDSA alarm level can be set. If the alarm level is exceeded, the instrument's internal buzzer is turned on to produce an audible warning. The device can communicate with Android smartphones or computers that support BT low energy.

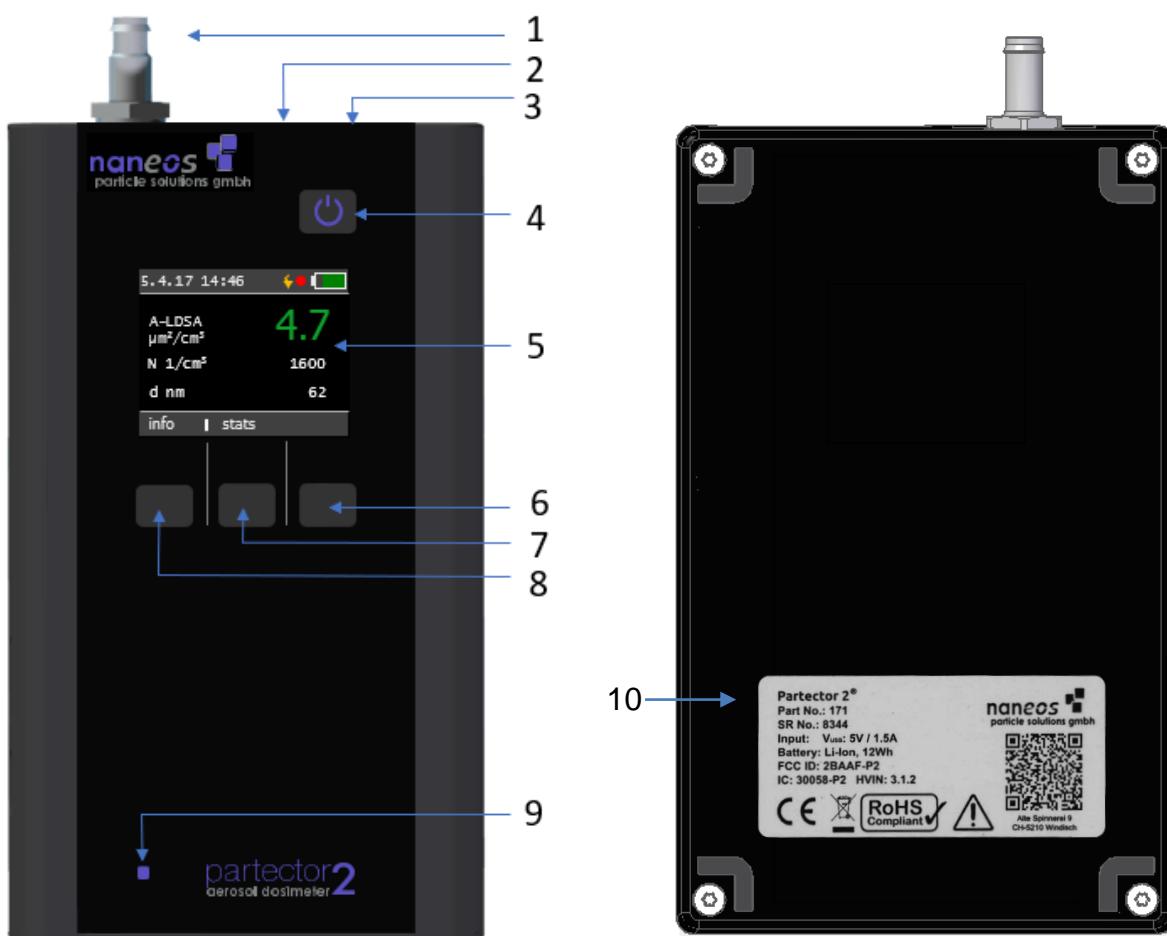


Figure 1: Partector 2 main parts

1	aerosol inlet	5	display	9	charge LED
2	USB Port	6	right soft key	10	serial plate
3	μ SD card slot	7	middle soft key		
4	power button	8	left soft key		

Aerosol inlet and outlet

The aerosol inlet is located at the top of the instrument. The internal pump provides a regulated air flow of about 0.5 l/min. The standard aerosol inlet has a 6-mm barb for tubing connection and contains a coarse wire mesh to keep coarse dirt and small insects out of the instrument.

The air exits the device via the slits in the right-hand side of the housing. Note that the air is not filtered internally, so do not connect the instrument to hazardous nanoparticle sources!

Tubing

When using the Partector 2 with tubing make sure **not to use conductive silicone tubing**. It releases silanes which lead to rapid fouling of the Partector's corona wire. We recommend using PVC tubing instead – a nice flexible version is Tygon S3 E-3603, a sample of which is included in the Partector 2 case. If in doubt about using tubing, please contact us. In any case, tubing should only be as long as necessary to prevent particle losses in the tubing.



Figure 2: different tubing options

Supplying power

To charge the Partector 2 or to operate it for periods longer than the battery lifetime, connect the Partector 2 USB port to a PC, Laptop or to a USB-charger or to a mobile power bank to charge the device.

While charging, the blue charge LED on the front panel lights up. When the Partector 2 is fully charged, the LED turns off.

The Partector 2 supports fast charging (1.5A charging current). For optimum charging, use the original USB power supply and USB cable. Some PC's and USB power supplies only provide 0.5A charging current, which will prolong the charging duration.

Turning the device on and off

To switch on the device, press the power button. To turn it off, press and hold the power button for two seconds and release it when the goodbye message appears.

Insert / remove µSD-card

To store data on the microSD-card, insert it in the Partector 2 as shown in Figure 3 till it snaps in.

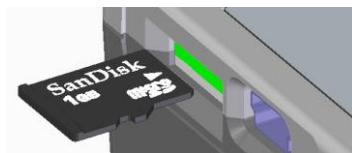


Figure 3: micro-SD card slot

To remove the µSD-card, press on the inserted card which will force the release. To insert the card in your SD-card slot on a PC you need to insert the card first in the µSD/SD-card adapter or µSD/USB adapter provided.

Recording measurements on the µSD-card


If a µSD-card is inserted in the Partector 2 before startup, the device automatically starts recording on the µSD-card when the device is turned on. It automatically generates a filename depending on start date, time and device serial. For more information about this, read the “Partector 2 data file” section.

If you insert the µSD-card while the device is running, the data logging will start automatically. The Partector 2 will complain that the SD card is missing if it is not in the slot at startup. When the Partector 2 is recording data, you can see a blinking red dot in the status bar of the main screen.



Keypad functions & symbols

In the picture below, you can see the Partector 2 display screens:

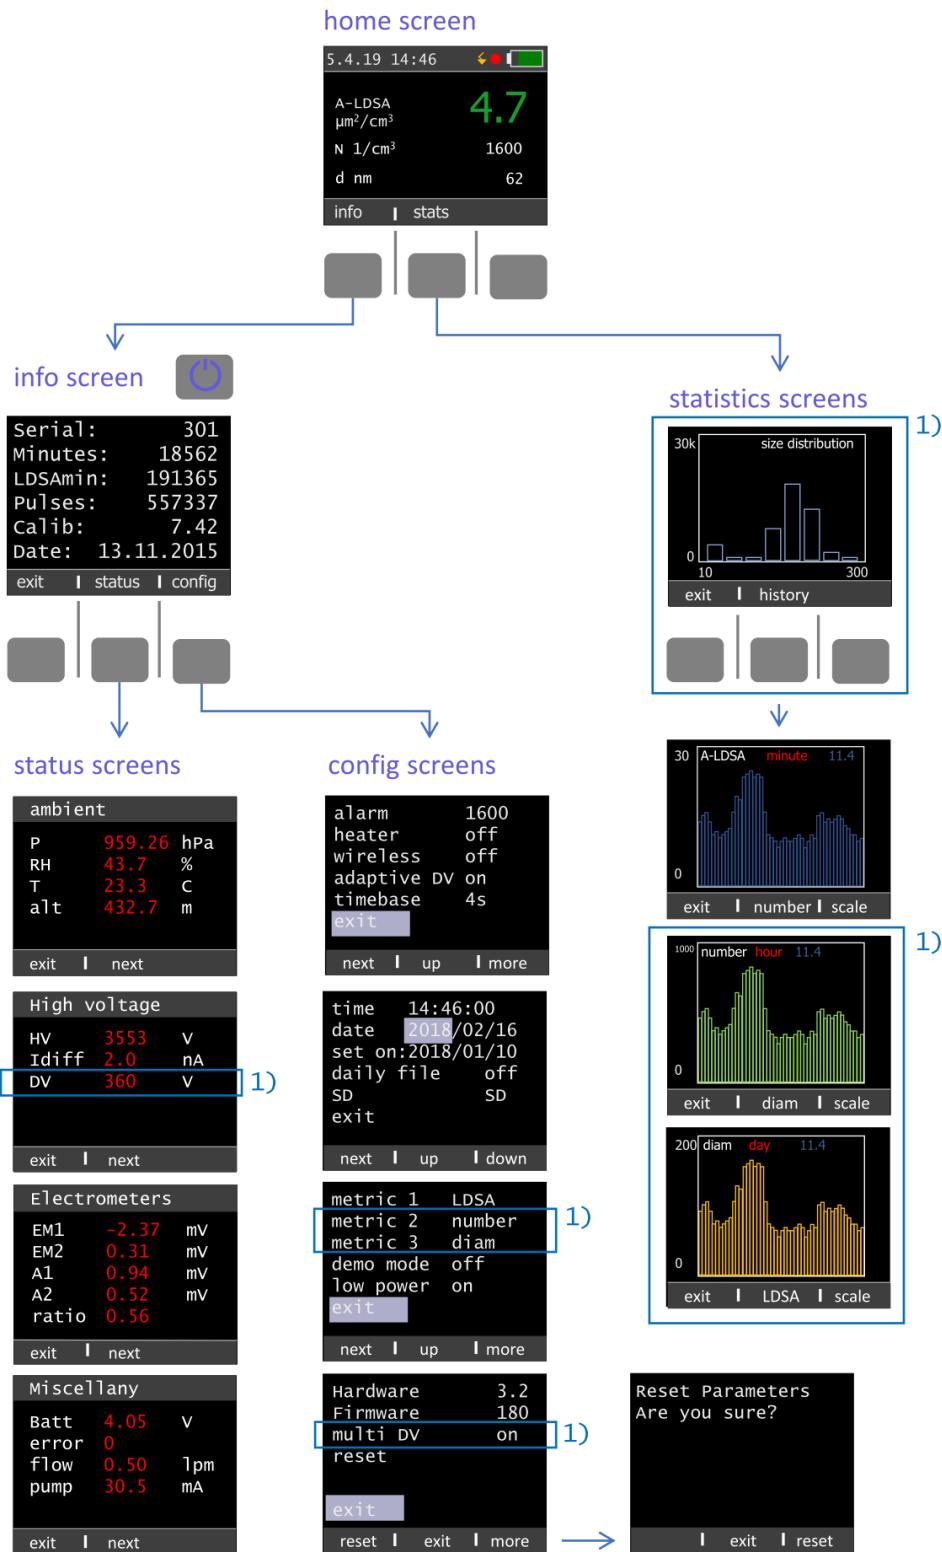

1) Not in all versions, see description

Figure 4: Partector 2 menu screens

Home screen

On the home screen you can see the LDSA, the number concentration, the average particle diameter, date and time and the charge state of the battery. If no key is pressed for more than one minute and the low power option is activated in the configuration, the display goes dark to prolong battery life. By pressing any key, the display turns on again.



The lightning symbol indicates that the high voltage in the charger is on and working properly.



The blinking red dot indicates that data is being written on μ SD-Card.



The exclamation mark indicates that an error occurred at some point during the current measurement.

Color coding of LDSA values

The LDSA display is color-coded to provide a quick assessment of air quality. LDSA values below $50 \mu\text{m}^2/\text{cm}^3$ are displayed in green, values above $250 \mu\text{m}^2/\text{cm}^3$ in red, and values in between in yellow.

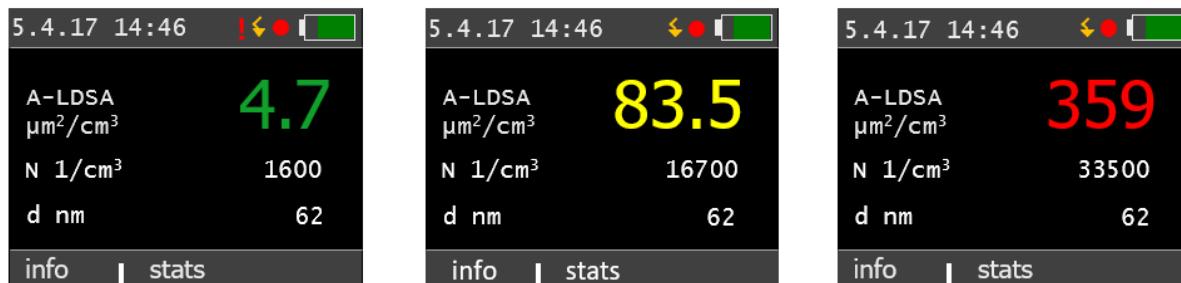


Figure 5: color coding of LDSA values

Info screen

The info screen displays device specific system information:

Serial:	serial number of the device
Minutes:	total operating time in minutes
LDSAmin:	LDSA value integrated over time
Pulses:	number of high voltage charging pulses
Calib:	calibration factor for LDSA
Date:	date of calibration

Pressing the “status” soft button brings you to the status screens. Pressing the “config” soft button brings you to the config screen.

Status screens

The status screens show the most important device data. You can switch between the individual status screens by pressing “next”.

Ambient

p	air pressure [hPa]
RH	internal relative humidity [%]
T	internal temperature [°C]
alt	calculated height above sea level [m]

Note: Altitude is calculated for average pressure. It may be off by several 100 meters if ambient air pressure is very high or low due to a high or low pressure zone passing through.

High voltage

HV	charger corona voltage [V]
Idiff	charger diffusion current [nA]
DV	deposition voltage [V] (not in “Light” version)

Electrometers

EM1	signal of electrometer 1 [mV]	
EM2	signal of electrometer 2 [mV]	(not in “Light” version)
A1	electrometer 1 amplitude [mV]	
A2	electrometer 2 amplitude [mV]	(not in “Light” version)
Ratio	Ratio A2 / A1	(not in “Light” version)

Miscellany

Batt	battery voltage [V]
error	displays the current error status (0 = no error)
flow	approximate flow through device [lpm]
pump	pump current [mA]

Config screens

In the config screens, you can change some settings of the Partector 2.

Alarm: use the “up” and “down” soft key to change the alarm level to the desired value. When the measurement value exceeds the alarm level, the internal buzzer of the Partector 2 will produce an audible warning.

Heater: The Partector 2 can use the built-in buzzer for the alarm to heat the device slightly. This can only increase the temperature of the device by about 2°C compared to not using the heater; but this is sufficient to reduce the internal relative humidity by 5-10% depending on ambient conditions. If you are operating the Partector 2 in a very humid environment (e.g. in the tropics) the heater may help to avoid issues with high humidity. Please note that the heating power is low, so it will take several minutes to make a noticeable difference. Please also note that "wasting" power for heating the device will reduce battery life. For all normal conditions, it is recommended to keep the heater off. The heater will also turn on automatically if a relative humidity > 80% is detected.

Wireless: The Partector 2 has a built-in wireless communication module. This allows other devices, like smartphones with BT low energy support, to receive data from the Partector 2 via wireless communication.

Adaptive DV (*not available in the “Light” version*): The Partector 2 can either operate with a fixed voltage on the internal precipitator, and measure particles in the size range of 20-150nm, or it can switch to lower/higher deposition voltages if the particles are very small or very large – this is called the "adaptive DV" mode. In this mode, the Partector 2 can measure particle diameters from 10 – 300nm. However, there may be small jumps in the measured values at the times when it switches its internal precipitation voltage.

Timebase: Here you can choose over which interval the Partector 2 should integrate its signals to calculate its readings. You can choose between 2, 4, 8 and 16 seconds. Shorter integration times give a faster response at the cost of higher noise levels.

Time and Date: the internal clock of the Partector 2 has an accuracy of about 1s per day. It does not change to daylight saving time and back automatically. Therefore, you may need to set the clock from time to time. Press the “next” soft button until you are on the field you want to modify, then use the “up” and “down” soft buttons to change the field’s value.

Daily file: If this is set to “on”, the partector 2 generates a measurement fil for each day. If it is set to “off”, the data will be stored in one single file till the measurement is finished by pressing the device turn off button.

SD: The SD card of the Partector 2 can be used as a serial port if you need a serial connection to the device. Naneos offers an SD-to-serial adapter piece that you can use for this purpose. To use the SD card as a serial port, change the setting from SD to UART. You need to restart the Partector 2 for the change to become effective. In the UART mode, you can no longer use an SD-card, and the Partector 2 will no longer write data files to SD-cards! If you want to use this feature (e.g. to integrate the Partector 2 in a data acquisition system) please contact naneos for details.



Metrics (metric 1, metric 2, metric 3) (*not available in the “Light” version*): The Partector 2 main screen is configurable – you can choose which metric you would like to have displayed as main information (large, metric 1), and which 2 additional metrics you would like to have displayed additionally (smaller, metrics 2 and 3). By default, metric 1 is LDSA, metric 2 is particle number, and metric 3 is average particle diameter. You can choose to change the order of these, and you can also choose to display calculated total surface area (instead of the lung-deposited fraction of the surface area), or calculated particle mass (PM0.3). Please note that the calculation of particle surface area and in particular of particle mass depend on a number of assumptions (particle density, morphology, shape

of the particle size distribution) and are inherently less accurate than the standard metrics that are shown as default.

Demo mode: In the demo mode, the entire screen of the Partector 2 changes to the color corresponding to the LDSA value, and only the LDSA value is shown in white. This mode can be helpful to demonstrate air quality changes.

Low power mode: you can choose whether the device should operate in low-power mode or not. In low power mode, the display turns darker automatically after a minute of inactivity to increase battery lifetime, and turns off completely after 10 minutes of inactivity. Pressing any button (also the power button) will turn on the display again. The display will also turn on automatically if an error message is displayed.

Hardware: shows hardware version of the device, only for information

Firmware: shows firmware version of the device, only for information

multi DV (*only available in the “Pro” version*): enables the 8-channel size distribution measurement. The “partector 2 Pro” iterates through different deposition voltages and performs a data inversion to measure a size distribution.

Reset: Reset some of the device parameters to factory settings. This should not be used in normal operation.

Statistics screen

The statistics screen allows you to view the time series of the measured data over a recent time interval. Press the central soft button to change the displayed metric (LDSA, number concentration, average particle diameter). Press the “scale” soft button to change the time scale (last minute, last hour, last day).

Please note that in the “Partector 2 Light” version only the LDSA history screen is available, and the size distribution screen is only available in the “Partector 2 Pro” version.

Extended information

Different inlet options

The Partector 2 comes with a standard inlet – a 6mm tube fitting with a steel mesh. You can use either this or you can add a cyclone in front of the tube inlet to remove coarse particles. The internal pump cannot support high pressure drops, so you should not use an impactor.

The Partector 2 is a miniature instrument with extremely sensitive internal electrometers. Fibers or dust particles which are larger than about 1 mm in size can produce short circuits in the instrument. Therefore, the tube inlet has a steel mesh to prevent coarse dust particles or small insects from entering the instrument. If you do not use the inlet, you risk aspirating coarse dust that may result in a deteriorated instrument performance.



We recommend the use of a cyclone if you are measuring in dusty environments where a large number of coarse particles are present. For example, the SKC GS-3 cyclone would be useful for this purpose.
<https://www.skcinc.com/products/gs-3-respirable-dust-cyclone-conductive-25-mm>

A possible assembly of the cyclone is shown in Figure 6.



Figure 6: SKC GS-3 cyclone mounted on a Partector 2

If you are certain that you have no coarse particles in your air (which is normally the case in ambient air), then you can also use the standard tube inlet.

In normal ambient and indoor air measurements, no cyclone is necessary.

The Partector 2 data file

To view the measured and stored Partector 2 data, remove the μ SD and insert it in your PC as described in a previous section. Now you either download the Partector 2 data analysis tool from the naneos website to view the data or you open the data file with your favourite data analysis program (Excel, Origin, Igor etc). The data file is a simple tab-delimited text file. File names encode the recording time and device serial no. For example, if you start recording a file on 2nd August 2017 at 12:35:44 with a device with the serial no. 8019, the file will be stored in the folder 2018_08_02 with the file name 8019_123544.txt.

The Partector data analysis tool allows you to quickly view graphs of all instrument parameters, to average data in different intervals, and to combine measured data with a GPS signal and plot it in Google Earth. Read the separate quick guide on our website for more information.

Wireless communication

The Partector 2 supports wireless communication. It works in the advertising mode, i.e. it continuously sends out small data packets that can be read by nearby BT low energy (BLE) receivers. An Android app and an IoT solution are available. Visit our website for more information.

If you wish to develop your own application to listen for the Partector 2 advertisements, this is fairly easy by scanning for nearby devices, filtering by the name "P2", and reading the advertisement custom data. Contact naneos for details on the data format if you are interested in developing your own application.

Error messages

Error conditions

Whenever an operation parameter of the Partector 2 is outside of its normal range, a warning message appears on the Partector 2 screen. The warning shows up in red on the home screen:

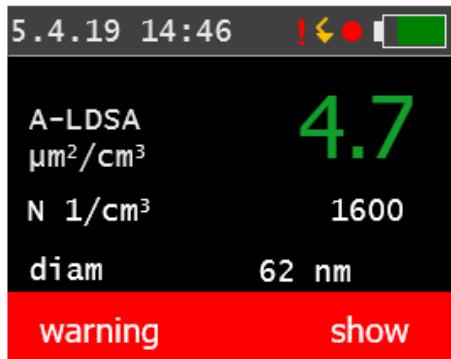


Figure 7: generic warning message on home screen

There are different reasons for warnings to appear, and a click on the “show” soft button will display details on the warning. Some error conditions may disappear again by themselves (particularly such related to high humidity), upon which the warning message will also disappear again. However, it can be important to know that an error occurred, and therefore, a red exclamation mark remains in the title bar as a reminder that an error occurred at some point:

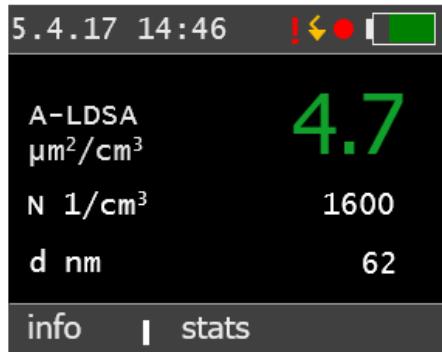


Figure 8: home screen after recovery from an error condition

The following table gives an overview over the possible error conditions and on what to do to remove them.

message	possible cause	what to do
SD card error: "Card missing?" "FS init"	- no SD card inserted - SD card initialisation problem - bad card format	- insert SD card - reboot device - format SD card - try a different SD card
Pulse low error	- too high relative humidity - device contamination	- try measurement with lower humidity - contact naneos
Pulse high error	- diffusion current does not reach setpoint	- contact naneos for customer self-repair
Pulse unstable error		- contact naneos
Ucor low	- high voltage module broken	- contact naneos for customer self-repair
Dep volt. Low	- high voltage module broken	- contact naneos for customer self-repair
Buffer overflow	- software loop time delayed.	- report error to naneos. You can still measure with the device if it only appears infrequently.
RH high	- relative humidity is very high and may affect measurement	- if possible, measure at lower RH (use a dryer at inlet or turn on heater)
EM 0 x.y mV	- high RH - device contamination	- if possible, measure at lower RH (use a dryer at inlet or turn on heater)
EM overflow	- extremely high aerosol concentration	- use a diluter for the measurement as the instrument will age quickly

		and readings will be inaccurate
EM1 gain error EM 2 gain error	- electrometer defective	- contact naneos
Flow error or pump current error	- pump defective - clogged Inlet	- check flow with a flowmeter - clean the inlet - contact naneos
Selftest error		- contact naneos and report error code on display
Calib error		- contact naneos

Some of the error conditions are rather harmless (e.g. high electrometer zero offset, high RH error), whereas others like the pulse errors or broken high voltage modules will interfere with a correct measurement. If you experience frequent errors, please contact us by email, and send us a description of the error message, what you were doing when it occurred, and the data file of that measurement. A data file helps us a lot in diagnosing the problem.

In the datafile, errors are coded bitwise and summed up to a single number. For decoding these numbers see the reference in section “related documents”.

Multi DV errors in “partector 2 Pro”

message	possible cause	what to do
Multi DV fail file missing	- Data inversion file inversion.txt on the uSD-card is missing	- Copy the device specific file inversion.txt onto the uSD-Card that will be used with the device. - If you lost this file, contact naneos.
Multi DV fail file corrupt	- Data inversion file is present on the uSD-Card but is incorrect	- Contact naneos for the correct file

Maintenance

High voltage is present in the device – do not open!
unless you have received other instructions from naneos.



Clean the device


Use a soft, slightly damp cloth to clean the housing surface.

Clean the inlet

The inlet has a small grid to prevent insects and large fibers from entering the device. It is unavoidable that dirt and fibers accumulate there, which will also influence the measurement after a certain time.

This grid must therefore be cleaned from time to time.

From firmware 257 onwards, there is a reminder on the display every 1000h that the inlet should be cleaned.

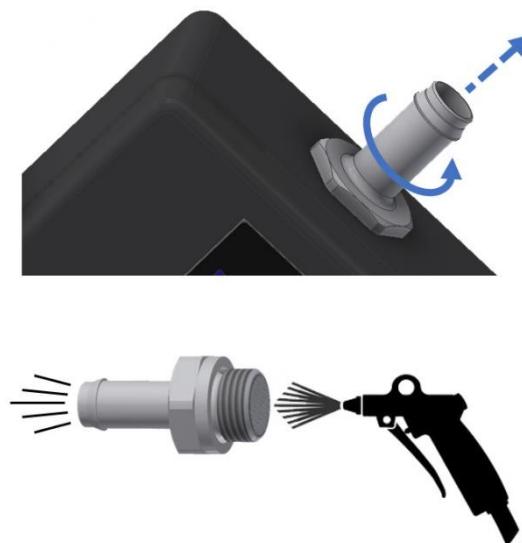

To clean the inlet, remove it by turning it counterclockwise with a 14mm open-end wrench, then blow out the grid from the inside with a compressed air gun. Alternatively clean the inlet with water, in an ultrasonic bath. Dry the inlet thoroughly because the remaining water could damage the device. Make sure the grid is fully cleaned by looking through it. The inlet must then be screwed back on until a noticeable resistance confirms that it is properly seated.

Disposal



The device contains a lithium-ion battery and must be disposed of accordingly. Under no circumstances should it be disposed of with domestic refuse, nor crushed or burnt. Naneos offers to take products back for correct disposal.

Standards and approvals



Hereby, naneos particle solutions GmbH declares that the radio equipment type Partector 2 is in compliance with the directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.naneos.ch/pdf/partector2-DoC.pdf

Statements FCC:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is

no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC interference statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- this device may not cause interference.
- this device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- L'appareil ne doit pas produire de brouillage;
- L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Related documents

Partector 2 quick start guide:

www.naneos.ch/pdf/partector2_quick_guide.pdf

Partector 2 data analysis tool quick start guide:

www.naneos.ch/pdf/javatool_quick_guide.pdf

In-depth explanation of lung-deposited surface area (LDSA)

www.naneos.ch/pdf/LDSA.pdf

Error codes and decoding in the data file

www.naneos.ch/pdf/Partector2_Errors_and_Limits.pdf



Customer service & contact

naneos particle solutions gmbh

Alte Spinnerei 9
5210 Windisch
Switzerland

Mail: info@naneos.ch

Phone: +41 56 560 20 70

www.naneos.ch

Notes