



Internal DVD-ROM Reader

DV-5700

User's Manual

Laser Safety Information


This drive employs a laser. Do not remove the cover or attempt to service this device when connected due to the possibility of eye damage.

CAUTION

Use of control of adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

These labels are located on upper enclosure of this drive.

CLASS 1 LASER PRODUCT
LASER KLASSE 1
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT
クラス1レーザー製品

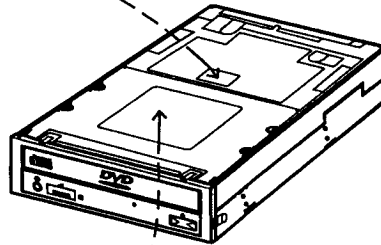

CAUTION - VISIBLE AND INVISIBLE LASER RADIATION
WHEN OPEN. DO NOT STARE INTO BEAM OR
VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

VORSICHT - SICHTBARE UND UNSICHTBARE
LASERSTRAHLUNG, WENN ABDECKUNG
GEÖFFNET. NICHT IN DEN STRAHL BLICKEN
AUCH NICHT MIT OPTISCHEN INSTRUMENTEN.

VARO! - AVATTAESSA JA SUOJALUKITUS OHITETTAESSA
OLET ALTIINA NÄKYVÄÄ JA NÄKYMÄTÖN
LASERSÄTEILYLLE. ÄLÄ TUJOTA SÄTEESEEN
ÄLÄKÄ KATSO SITÄ OPTISEN LAITTEEN LÄPI.

WARNING - SYNLIIG OCH OSYNLIIG LASERSTRÄLNING NÄR
DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR
URKOPPLAD. STIRRA EJ IN I STRÄLEN OCH
BETRAKTA EJ STRÄLEN MED OPTISKA INSTRUMENT.

注意 - ここを開くと可視レーザー光および不可視レーザー光が出ます。
ビームをのぞき込まないこと。光学機器で直接ビームを見
ないこと。

Laser Specification

(for CD)

Type : Semiconductor laser GaAlAs
Wave length : 770 - 810 nm (at 25°C)
Output : 5 mW

(for DVD)

Type : Semiconductor laser InGaAlP
Wave length : 635 - 665 nm (at 25°C)
Output : 5 mW

NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

LE PRÉSENT APPAREIL NUMÉRIQUE N'ÉMET PAS DE BRUITS RADIOÉLECTRIQUES DÉPASSANT LES LIMITES APPLICABLES AUX APPAREILS NUMÉRIQUES DE CLASSE B PRESCRITES DANS LE RÈGLEMENT SUR LE BROUILLAGE RADIOÉLECTRIQUE ÉDICTÉ PAR LE MINISTÈRE DES COMMUNICATIONS DU CANADA.

CAUTION

The user who makes changes or modifications to the unit without the express approval by the manufacturer will void user authority to operate the equipment.

ACHTUNG

Der arbeitsplatzbezogene Geräuschemissionswert dieses Gerätes beträgt $\leq 70\text{dB (A)}$ nach EN 27779/1991.

Notice

Only DVD-ROM discs and CD-ROM discs carrying the label below can be used with this DVD-ROM reader.



HEED THE FOLLOWING

Read the operating instructions carefully before using the unit and be sure to use it properly. After reading the instructions, store them in an easily accessible place so they can be consulted whenever necessary.

WARNING



- Continued use should there be an irregularity (smoke, abnormal smell or sound, etc.) will lead to fires or electric shocks. If there should be an irregularity, immediately turn off the power of the computer on which the unit is installed and request servicing.



- Do not disassemble or modify the unit in any way. Doing so will lead to fires or electric shocks.



- Make sure that no foreign objects get in the unit, as this will lead to fires or electric shocks. If a foreign object should get in the unit, immediately turn off the power of the computer on which the unit is installed and request servicing.



- Do not let fluids get in the unit or let the unit get wet, as this will lead to fires or electric shocks. If fluid should get in the unit, immediately turn off the power of the computer on which the unit is installed and request servicing.

- Do not use with any power voltage other than the indicated voltage. Doing so will lead to fires or electric shocks.

- Do not store or use the unit in places where it may be subject to shocks or strong vibrations. Doing so will lead to fires or electric shocks.

- Do not store or use the unit in places where it may be exposed to chemicals or chemical vapors. Doing so will lead to fires or electric shocks.

CAUTION

- When connecting computer equipment, audio equipment, speakers, etc., be sure to read the respective manuals carefully, turn off the power, and follow the connection instructions. Using cords other than the specified cords or extending cords could generate heat and result in burns, etc.



- Set the volume to the minimum before turning on the power. Sudden bursts of loud sound could result in hearing impairment.

- Do not store or use the unit in extremely hot places or places where the humidity fluctuates greatly. Doing so could lead to fires or electric shocks.

- Do not store or use the unit in places exposed to direct sunlight or near equipment that generates heat. Doing so could lead to fires.

- Do not place the unit on unsteady tables, slanted surfaces or other unstable surfaces. The unit could fall or tip over, resulting in injury.

- Do not store or use the unit in humid or dusty places. Doing so could lead to fires or electric shocks.

- Do not store or use the unit with heavy objects or objects that stick out past the frame on top of it. The object or unit may lose its balance and tip over or fall, resulting in injury.

- Do not let stick your hands into the disc insertion slot, as this could cause injury.

- Do not use cracked or misshapen discs or discs that have been repaired with adhesives, etc. Discs rotate at high speeds inside the unit. If such discs are used, they may break and fly out, resulting in injury.

- Do not look directly at the laser source. Exposing the eyes to the laser beam could result in vision impairment.

- When used near a radio or TV, the unit may generate noise in the radio or TV. Also, if there is equipment generating strong magnetic forces nearby, this may generate noise in the unit.



- Keep the disc tray closed except when inserting or removing discs in order to prevent injury from bumping into the disc tray.


Cautions

Cleaning


To clean the DVD-ROM reader, wipe it with a soft, damp cloth, using mild detergent if necessary. Please avoid using solvents such as benzine or paint thinner. This can cause color changes or deformation of the DVD-ROM reader.

Handling the Disc

- Do not touch the data side of the disc (the side of the disc with no label or printing).

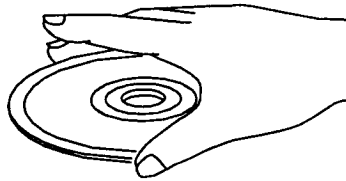

- Do not apply paper labels or write on any part of the disc, data side or label side. Do not use the disc leaved a mark strip paper labels.
- If dust or fingerprints get on the disc, wipe it with a soft cloth from the center to the edge.

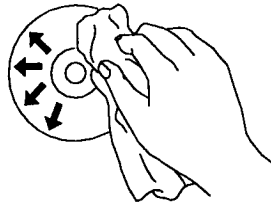

- Do not use benzine, paint thinner, record cleaner, or static repellent. This can damage the disc.
- Do not place the disc in any place where it will be subjected to direct sunlight or high temperatures.

Table of Contents

Heed the following

Warning	3
Caution	4

Cautions

Cleaning	5
Handling the Disc	5

Part Names and Functions

Front View	7
Rear View	8

Preparation

Jumper Setting	9
----------------------	---

Inserting/Removing a Disc


Using the DVD-ROM Drive Installed Vertically	10
Inserting a Disc	11
Removing a Disc	11
Emergency Eject	11

Specifications

DVD-ROM Section	12
CD-ROM Section	12
Audio Section	12
Environment	12
General	12


Part Names and Functions

Front View

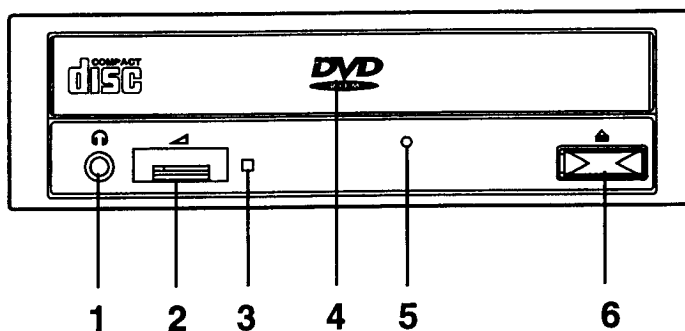

- 1 Phones Jack**
This jack is used to connect a set of headphones. Please use headphones with a stereo mini-jack plug.
- 2 Volume Control**
This control is used to adjust the headphone volume.
NOTE: This control has no effect on the audio output from the LINE OUT connector on the back of the DVD-ROM reader.
- 3 BUSY Indicator**
This indicator lights amber while data is being read.
- 4 Tray Panel**
This panel prevents dust from entering the DVD-ROM reader. The disc tray will be ejected when the Load/Eject button is pushed.
- 5 Emergency Eject Hole**
Use to remove the disc from the DVD-ROM reader if the electrical eject is disabled by software or if power failure occurs. (See page 11 "Emergency Eject" for details.)
- 6 Load/Eject**
This button is pressed to eject or retract the disc tray when the power is on.

Rear View

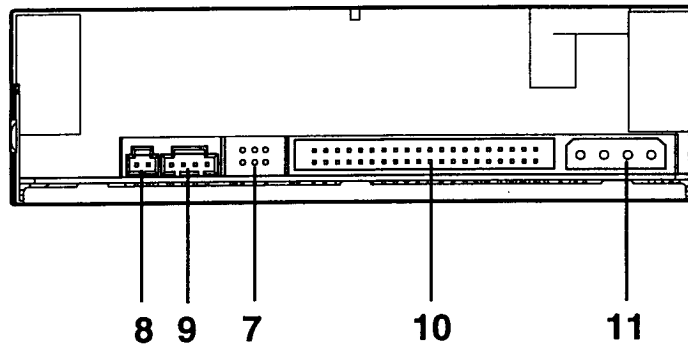

7 Jumper Blocks

These blocks of jumper locations set the configuration for the DVD-ROM reader. (See page 9, "Jumper Setting" for details.)

8 DIGITAL OUT Connector

This connector is used to connect CD Digital Audio to an audio board.


9 Line Out Connector

This connector is used to connect CD-Audio to an audio board.

10 I/O BUS Connector

This BUS connector is used to control the DVD-ROM reader and sent data. Use a flat ribbon cable to connect your computer to the DVD-ROM reader.

Connect the colored side of the ribbon cable to the side marked with the arrow (▽).

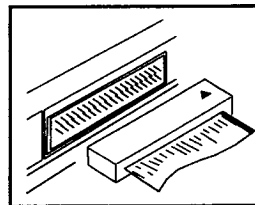


11 Power Connector

Use this to provide operating power from the host computer.

Preparation

Jumper Setting

A jumper consists of a pair of pins and a connector which fits over the pins. When the connector is in place it establishes an electronic link between the pins, which enables the function being controlled by the jumper. If the connector is removed, the electronic link is broken and the function is disabled.

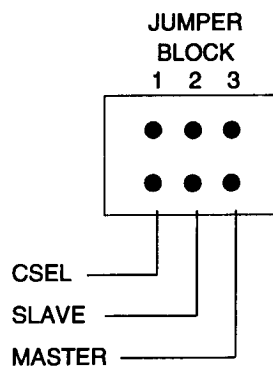


Jumpers are used to set the DVD-ROM reader mode on the IDE interface.

Inserting/Removing a Disc

Using the DVD-ROM Reader Installed Vertically

When using the DVD-ROM reader, in the vertical position, load and unload discs as shown on the diagram below.

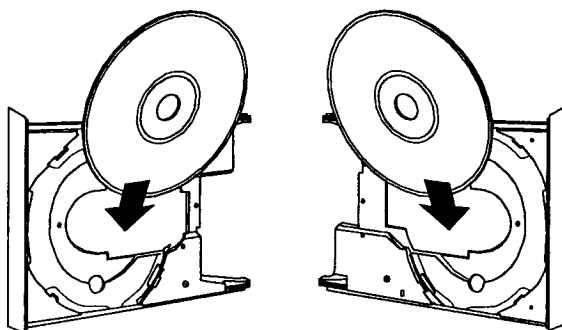

DVD-ROM reader installed vertically
(right side)

DVD-ROM reader installed vertically
(left side)

Caution

Only 12cm discs can be used when the DVD-ROM reader is installed vertically. Do not place 8cm discs in the tray when using the DVD-ROM reader installed in this way.

Inserting a Disc

1. Press the Load/Eject button. The disc tray will be ejected.
2. Place the disc in the center of the tray with the label side facing up.
3. Press the Load/Eject button. The disc tray will be retracted.

Removing a Disc

1. Press the Load/Eject button. The disc tray will be ejected.
2. Remove the disc.
3. Press the Load/Eject button. The disc tray will be retracted.

WARNING:

Do not forcibly push the disc tray in by hand. Doing so may result in damage.


Note:

If an eject prohibit command has been received from the computer, the disc tray will not be ejected even if the Load/Eject button is pressed.

Emergency Eject

The procedure described below can be used to remove a disc from the DVD-ROM reader if the Load/Eject button is disabled by software or a power failure occurs.

1. Turn off the power to the computer installed the DVD-ROM reader.
2. The disc that is inside may still be spinning. Please wait 1 minute until it stops to spin certainly.
3. Insert a steel rod as paper clip and so on that is straightend (about 1.3mm in diameter) into the emergency eject hole and push slowly. The disc tray is ejected by about 1cm. Pull it all the way open by hand.

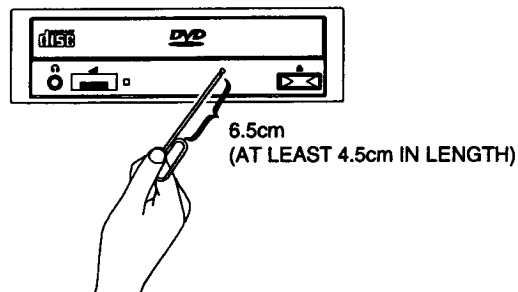

Specifications

DVD-ROM Section

User Data Capacity	4.7G bytes (Single layer,12cm) 8.54G bytes (Dual layer,12cm) 1.46G bytes (Single layer,8cm) 2.66G bytes (Dual layer,8cm)
User Data Blocks	2048 Bytes/block
Data Transfer Rate	16.2M bytes/sec (Maximum)
Burst Transfer Rate	PIO mode 4 DMA Single Word mode 2 DMA Multi Word mode 2 Ultra DMA 33 mode 2
Access Time	120msec (1/3 Stroke read, average)
Hard Error Rate	Below 10 ⁻¹² (After error correction)

CD-ROM Section

User Data Capacity	656M bytes (Mode 1) 748M bytes (Mode 2)
User Data Blocks	2048 Bytes/block (Mode 1 and Mode 2, Form 1) 2336 Bytes/block (Mode 2) 2328 Bytes/block (Mode 2 Form 2)
Data Transfer Rate	6000K bytes/sec (Mode 1 and Mode 2 Form 1,Maximum) 6820K bytes/sec (Mode 2 and Mode 2 Form 2,Maximum)
Burst Transfer Rate	PIO mode 4 DMA Single Word mode 2 DMA Multi Word mode 2 Ultra DMA 33 mode 2
Access Time	100msec (1/3 Stroke read, average)
Hard Error Rate	Below 10 ⁻¹² (After error correction)
Memory Buffer	256K bytes
Photo CD™ Compatibility	Multi session Photo CD™ Single session Photo CD™

CD-Audio Section

Frequency Response	20Hz ~ 20kHz \pm 1dB
S/N Ratio	80dB (1kHz)
Total Harmonic Distortion	0.09% (1kHz)
Wow & Flutter	Below measurable limits
Output	0.75 V

Environment

Ambient conditions for use	
Temperature	5 to 45°C
Humidity	30 to 70% (no condensation)
Ambient conditions for storage	
Temperature	-20 to 60°C
Humidity	30 to 90% (no condensation)

General

Power Supply	5V 1.5A, 12V 1.5A
Dimensions(W x H x D)	14.8 x 4.2 x 20.8cm (5 ¹³ / ₁₆ x 1 ⁵ / ₈ x 8 ¹ / ₄ in.)
Weight	0.91kg (2.01 lbs)

Note: Above specifications are subject to change.

Photo CD is a trademark of Kodak used under license.