

N401i_BT_v1.1_English_master

Software version: ADED0703_E04

Personalization: 04FRADED0701N401i_00.01

Radio Frequency (RF) Signals(900/1800MHz)

THIS NEC PHONE (MODEL N401i) COMPLIES WITH THE EU REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR* limits** for exposure to radio-frequency (RF) energy, which SAR* value, when tested for compliance against the standard was (TBD)W/kg. While there may be differences between the SAR* levels of various phones and at various positions, they all meet*** the EU requirements for RF exposure.

*The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

**The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

*** Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Radio Frequency (RF) Signals(1900MHz)

THIS NEC PHONE (MODEL N401i) COMPLIES WITH THE USA REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone contains a radio transmitter and receiver. Your NEC phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U. S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government- adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is (TBD) W/ kg, and when worn on the body, is (TBD) W/ kg. (Body- worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

* In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/ kg (W/ kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

Body- worn Operation

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at [http:// www. fcc. gov/ oet/ fccid](http://www.fcc.gov/oet/fccid) after search on FCC ID A98 – KMP6J1T1.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with a NEC accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Emergency Services and Safety Precautions

Emergency Services

To make an emergency call in any country

Press 112

Ask the operator for the service which you require: Police, Ambulance, Fire Brigade, Coastguard or Mountain Rescue Services. Give your position and, if possible, remain stationary to maintain phone contact.

The 112 emergency number service is available on every digital network service. The number 999 is an alternative emergency number for the UK only, and can only be used with a valid SIM card.

Due to the nature of the cellular system, the success of emergency calls cannot be guaranteed.

General Care

A cellphone contains delicate electronic circuitry, magnets, and battery systems. You should treat it with care and give particular attention to the following points.

- Do not allow the phone or its accessories to come into contact with liquid or moisture at any time.
- Do not place anything in the folded phone.
- Do not expose your phone to extreme high or low temperatures.
- Do not expose your phone to naked flame, cigars or cigarettes.
- Do not paint your phone.
- Do not drop or subject your phone to rough treatment.
- Do not place the phone alongside computer disks, credit cards, travel cards and other magnetic media. The information contained on disks or cards may be affected by the phone.
- Do not leave the phone or the battery in places where the temperature could exceed 60°C; e.g. on a car dashboard or on a window sill, behind glass in direct sunlight, etc.
- Do not remove the battery while the phone is switched on.
- Take care not to allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.
- Do not dispose of battery packs in a fire. Your phone's Li-ion batteries may be safely disposed of at Li-ion recycling points. For more specific battery and power supply information, see page 3.

- Do not put your phone's battery in your mouth as battery electrolytes may be toxic if swallowed.
- Do not attempt to dismantle the phone or any of its accessories.
- This equipment is fitted with an internal battery that can only be replaced by a qualified service engineer. There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of the used battery in accordance with the manufacturer's instructions.
- Using any battery pack, AC adapter, Vehicle power adapter (option) or Desktop charger (option) not specified by the manufacturer for use with this phone creates a potential safety hazard.
- The earpiece may become warm during normal use and the unit itself may become warm during charging.
- Use a damp or anti-static cloth to clean the phone. Do NOT use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the case.
- Remember to recycle: the cardboard packaging supplied with this phone is ideal for recycling.
- Do not leave the battery pack empty or disconnected for a long time, otherwise some data may be initialized.
- Your phone contains metal which may cause you an itch, a rash or eczema depending on your constitution or physical condition.
- Take care not to put your phone in the back pocket of your trousers or skirt and then sit on it. Also, do not put your phone at the bottom of bag where it may subject to excessive weight or pressure.
- Doing so may damage the LCD and camera lens and cause them malfunction.
- Take care not to hold the Light too close to your or other people's eyes when the Light is lit.
- Do not aim or direct the InfraRed (IR) data port towards your or other people's eyes when using the IR data exchange.
- The foam covers the earpiece of the headset. Do not put any other part of the headset in your ears.

Aircraft Safety

- Switch off your phone and remove its battery when inside or near aircraft. The use of cellphones in aircraft is illegal. It may be dangerous to the operation of the aircraft and it may disrupt the cellular network. Failure to observe this instruction may lead to suspension or denial of cellphone service to the offender, or legal action, or both.
- Do not use your phone on the ground without the permission of the ground crew.

Hospital Safety

- Switch off your phone in areas where the use of cellphones is prohibited. Follow the instructions given by the respective medical facility regarding the use of cellphones on their premises.

General Safety

- Observe 'Turn off 2-way radio' signs, such as those near stores of fuel, chemicals or explosives.
- Do not allow children to play with the phone, charger or batteries.
- Small parts are included in your phone. Keep them out of reach of small children, for whom it could be a choking hazard.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a cellphone is used next to them. Observe any warning signs and manufacturer's recommendations.
- If you have a weak heart, you should take extra precautions when setting functions such as the Vibrator and Ringer volume functions for incoming calls.
- If you set the Vibrator setting to anything other than OFF, be careful that the phone is not near a source of heat (e.g. a heater) and that it does not fall from a desk due to the vibration.

Road Safety

- You MUST exercise proper control of your vehicle at all times. Give full attention to driving.
- Observe all the recommendations contained in your local traffic safety documentation.
- Pull off the road and park before making or answering a call if driving conditions so require.
- You MUST NOT stop on the hard shoulder of a motorway to answer or make a call, except in an emergency.
- Switch off your phone at a refuelling point, such as a petrol station, even if you are not refuelling your own car.
- Do not store or carry flammable or explosive materials in the same compartment where a radio transmitter, such as a cellphone, is placed.
- Electronic vehicle systems, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment can advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by radio transmissions, consult your dealer and do not switch on your phone until it has been checked by qualified approved installers.

Vehicles Equipped with an Air Bag

An air bag inflates with great force. Do not place objects, including either installed or portable

wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Third Party Equipment

The use of third party equipment, cables or accessories, not made or authorized by NEC, may invalidate the warranty of your cellphone and also adversely affect the phone's operation. For example use only the NEC mains cable supplied with the AC charger.

Service

The cellphone, batteries and charger contain no user-serviceable parts. We recommend that your NEC cellphone is serviced or repaired by a NEC authorized service centre. Please contact your Service Provider or NEC for advice.

Non-ionizing Radiations

The radio equipment shall be connected to the antenna via a non-radiating cable (e.g. coax).

The antenna shall be mounted in a position such that no part of the human body will normally rest close to any part of the antenna unless there is an intervening metallic screen, for example, the metallic roof.

Use only an antenna that has been specifically designed for your phone. Use of unauthorized antennas, modifications or attachments could damage your phone and may violate the appropriate regulations, causing loss of performance and radio frequency (RF) energy above the recommended limits.

Efficient Use

For optimum performance with minimum power consumption, note the following:

- Your phone has the internal antenna. Do not cover part of the internal antenna of the phone with your hands. This affects call quality, may cause the phone to operate at a higher power level than needed and may shorten talk and standby times.

Radio Frequency Energy

Your phone is a low-power radio transmitter and receiver. When it is turned on, it intermittently receives and transmits radio frequency (RF) energy (radio waves). The system that handles the call controls the power level at which the phone transmits.

Exposure to Radio Frequency Energy

Your phone is designed not to exceed the limits for exposure to RF energy set by national authorities and international health agencies. * These limits are part of comprehensive guidelines and establish permitted levels of radio wave exposure for the general population. The guidelines were developed by independent scientific

organizations such as ICNIRP (International Commission on Non-Ionizing Radiation Protection) through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

* Examples of radio frequency exposure guidelines and standards that your phone is designed to conform to:

- ICNIRP, "Guidelines for limiting exposure to time-varying electric, magnetic, and electromagnetic fields (up to 300 GHz)-International Commission on Non-Ionizing Radiation Protection (ICNIRP)". Health Physics, vol. 74, pp. 494-522, April 1998.
- 99/519/EC Council Recommendation on the limitation of exposure to the general public to electromagnetic fields 0 Hz-300 GHz, Official Journal of the European Communities, July 12, 1999.
- ANSI/IEEE C95.1-1992. "Safety levels with respect to human exposure to radio frequency electromagnetic fields, 3kHz to 300 GHz". The Institute of Electrical and Electronics Engineers Inc., New York, 1991.
- FCC Report and Order, ET Docket 93-62, FCC 96-326, Federal Communications Commission (FCC), August 1996.
- Radio communications (Electromagnetic Radiation Human Exposure) Standard 1999, Australian Communications Authority (ACA), May 1999.

Declaration of Conformity

- This product complies with the requirements of the R&TTE Directive 1999/5/EC. The 'Declaration of Conformity' leaflet can be found within this box.

License

- T9® Text Input and the T9 logo are registered trademarks of Tegic Communication.

"T9 Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, 6,011,554, and 6,307,548; Australian Pat. No. 727539; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro. Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; Republic of Korea Pat. Nos. KR201211B1 and KR226206B1; and additional patents are pending worldwide"

- USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION ENCODED BY A CONSUMER FOR PERSONAL AND NON-COMMERCIAL USE WITHOUT REMUNERATION; (B)

DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (C) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

- Helvetica is a registered Trademark of Heidelberger Druckmaschinen AG which may be registered in certain jurisdictions.
- ©2002 Music Airport Inc., <http://www.music-airport.com/>
- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.
- This product contains ACCESS CO., LTD's Compact NetFront™ Plus internet browser software. Copyright © 1998-2004 ACCESS CO., LTD.

Compact NetFront Plus

Compact NetFront™ is a registered trademark or trademark of ACCESS CO., LTD in Japan and selected countries worldwide.

- This product contains ACCESS CO., LTD's JV-Lite2™ Java virtual machine software. Copyright © 2000-2004 ACCESS CO., LTD. JV-Lite2™ is a registered trade mark or trademark of ACCESS CO., LTD, in Japan and selected countries world wide.
- This product contains ACCESS CO., LTD's IrFront® Infrared communication software. Copyright © 1996-2004 ACCESS CO., LTD.
- i-mode and i-mode logos are trademarks or registered trademarks of NTT DoCoMo.

For the purpose of improvement, the specifications for this product and its accessories are subject to complete or partial change without prior notice.

Before You Start

User's manual conventions

The instructions in this user's manual make use of the shortcuts selection except special cases.

The following markers are used throughout the user's manual to attract your attention:



This type of paragraph will contain details of where to find information related to the topic in question.



This type of paragraph will contain information worth noting.



This type of paragraph will contain important information.



This type of description will contain procedures to operate your phone.

Menu shortcuts selection

The alternative shortcuts method of selection lets you jump straight to a menu or function without highlighting an icon and scrolling through the intermediate menu options. The selection are made by pressing numbers on the keypad which relate to the displayed menu options.

The instructions in this user's manual make use of the shortcuts selection, except in special cases.

Reading the titles

Some titles in this manual contain information on how to access the functions. In these titles, **M** stands for , the numbers indicate the menu shortcut numbers (see "Overview of menu function" on page ix for details) and ... (three periods) indicate that there are more operations described in the paragraph.

Reading the procedures

"**Highlight**" means to use the four way navigation keys (   ) to move the area emphasized with different colouring.

"**Select**" means to highlight an item and then press .

Procedures are written omitting the verb "press", except in some special cases.

For example,  1 2 means to:

- Start from the standby screen → Press  to display the Main menu screen
- Press 1 to display the Phone screen → Press 2 to display the Phone modes screen

Simple procedures are connected by arrows (→).

Check box/Radio button

A check box enables/disables an option out of a set of options, and multiple check boxes can be selected at the same time. On the other hand, selecting a radio button automatically cancels the previous selection, so only one radio button can be selected at one time.

A check box/radio button option can be selected/cancelled by highlighting it and pressing .

Desktop icon area

This area contains the automatically displayed and the manually created desktop icons. They provide shortcuts to certain items/functions.

Help area

This area contains help information appropriate for the current screen (e.g. key presses remaining when composing a message).

Softkey area

This area contains context sensitive descriptions of the Softkeys' functions appropriate for the current screen.

Status bar area

This area contains icons which indicate the battery strength, new SMS/MMS message(s), signal strength, etc. (see page vii). On screens other than the standby screen, the clock display is placed in this area.

Shortcut number

Press the appropriate number to jump straight to a next menu. The row colour is changed when selected (e.g. to activate/deactivate a facility).

Help icons

Displayed when you can use the key represented by these icons (see page vii).

Menu title

Settings

Shortcut menu number



The current menu number is displayed.

Page scroll bar

Displayed when you can press ▼ to scroll to the next page.


Next menu icon

Displayed when you can press ► or the shortcut number to show the next menu.

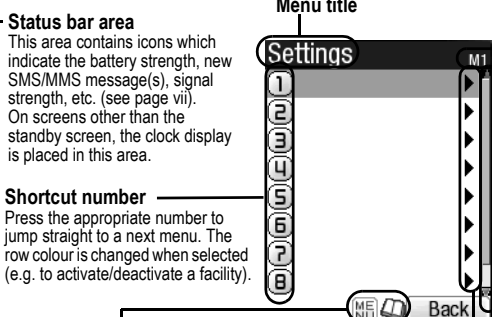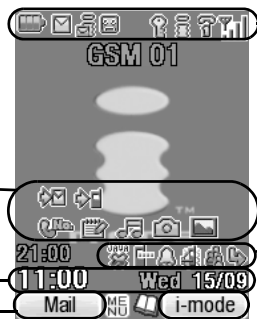

The Liquid Crystal Displays (LCD) on your phone are manufactured using high-precision technology. Even so, the LCD may contain pixels (dots) that fail to light or that remain permanently lit. Note that this is normal and does not indicate a problem with your display.

Parts and functions

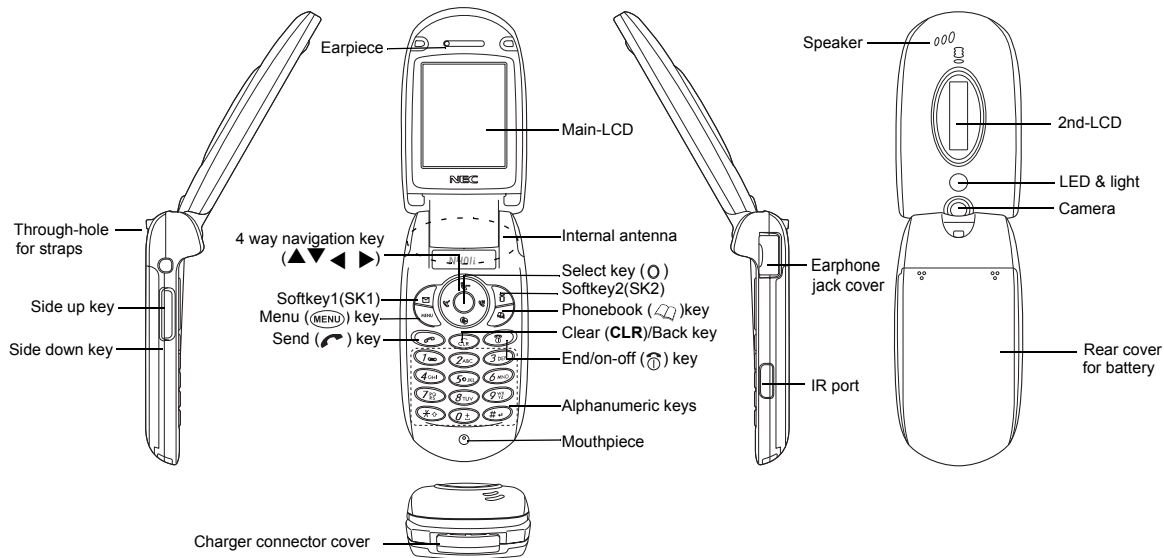

Keypad shortcuts

The following operations are available from the standby screen.

Key	Operation that involves pressing a key	See page	Operation that involves pressing and holding a key	See page
	Accessing the Main menu screen	ix	Setting/Cancelling the Side key lock	20
SK1	Accessing the Mail screen	40	Accessing the Inbox screen	41
SK2	Accessing the i-mode menu screen	37	Accessing the Java™ applications screen	64
	Accessing the Phonebook list screen	46	Accessing the Message screen	27
	Accessing the Phone modes screen	21	Setting the phone to Meeting mode/Returning to the previous mode	21
	Accessing the My data screen	59	Accessing the voice recall	7
	Accessing the received calls list	10	Accessing the received calls list	10
	Accessing the missed calls list	10	Accessing the missed calls list	10
	Accessing the dialled calls list	10	Accessing the dialled calls list	10
	Highlighting a desktop icon	18	Accessing the homepage	39
	Ending a call or returning to the standby screen	–	Powering off	4
CLR	Deleting character or returning to the previous screen	–	Deletes all the automatically displayed desktop icons	18
			Deleting all characters when you enter text	–
1	Entering phone numbers	5	Calling the Voice mail centre	53
2 to 9	Entering phone numbers	5	Going to the corresponding phone number in the phone-book(SIM) (One-touch dial)	6
0	Entering phone numbers	5	Entering + when you make an international call	12
#	Entering #	6	Entering a pause	–
*	Entering *	6	Switching the ALS line 1/2 (if the SIM card supports ALS)	20
Side up	Accessing the volume control screen when your phone is open (Use  , Side keys or 0 to 9 keys to adjust the volume.)	20	Accessing the camera view finder screen	54
	Activating the ring silencer function when you receive a call	20		
Side down	Accessing the volume control screen when your phone is open (Use  , Side keys or 0 to 9 keys to adjust the volume.)	20	Turning on the light (To turn it off, press any key or open/close your phone.)	–
	Activating the ring silencer function when you receive a call	20		

Main-LCD

1 Indicates the battery level.

2 Indicates the battery charging status (fast, slow, pause).

3 Indicates that there is a new message(s) in your phone.

4 Indicates that there is a new message(s) on the network.

5 Indicates that the SIM memory is full.

6 Indicates that the Inbox in your phone is full.

7 Indicates that there is a new mail/MMS in your phone.

8 Indicates that there is a new mail/MMS in your phone.

9 *This orange icon blinks while a mail/MMS is being downloaded*

10 Indicates that the memory for mail/MMS is full.

11 Indicates that new voice mail messages are on the network (No ALS/ALS Line 1/2).

12 Indicates secured communication on SSL.

13 Indicates that GPRS is active for purposes other than i-mode connections.

14 Indicates that the phone is in the GSM (Global System for Mobile communication) network service area and GPRS is active.

15 Indicates that the GPRS is available and i-mode is active.

16 Indicates that the i-mode connection is carried out.

17 Indicates that the i-mode lock is on.

18 *No icon appears when the phone is outside the GSM network service area, or when the phone is in the GSM network service area and GPRS is not attached.*

19 Indicates the line status (ALS line 1/2 no ALS). The icon with displayed in red indicates that the ALS line 1 or 2 is unencrypted/no ALS.

20 Indicates the signal strength level.

21 Appears when you are outside the service area.

22 Network name (This icon appears in orange when using roaming service)

23 Desktop icons

See "Desktop icons" on page 18 for details.

24 Indicates the call diversion is set.

25 Indicates the Meeting mode, Pocket mode, Car mode.

26 *No icon appears for the Normal mode.*

27 Indicates alarm-on, sound-off, vibrator-on, sound-off/vibrator-on.

28 Indicates the IR modem is set to on, the auto start of a Java™ application has failed.

29 Date

30 Day of week

31 Remote time

32 Local time

33 Indicates that you can use the options menu by pressing (MENU)

34 Indicates that you can use the phonebook list by pressing .

35 Indicates the usable keys in black, while a Java™ application is in operation.

36 Indicates that the help display is available when using SIM toolkit

<When the camera/video view finder is in operation>

37 Indicates single/burst mode (camera).



Indicates the video mode is on or the video is recording.



Indicates that the self timer is on.



Indicates the quality of the picture (super fine, fine, normal, economy or super economy).



Indicates the quality of the video.



Indicates the photo/video screen size.



Indicates the shooting environment.



Indicates the brightness setting. The "+2" setting is the brightest.



Indicates the zoom level.

<When the video preview is in operation>



Indicates the video mode is on, the video is playing, on pause, fast forwarding, or rewinding.



Indicates the track information of the video (the video file only, the video and audio file, or the audio file only).




Indicates the video is played in normal/enlarged screen size.




Displays the current volume level. The 0 is mute and 9 is the maximum.

2nd-LCD



Indicates the battery level.



Indicates the battery charging status (fast, slow, pause).



Indicates that there is a new message(s) in your phone.



Indicates that there is a new message(s) on the network.



Indicates that the SIM memory is full.



Indicates that the Inbox in your phone is full.




Indicates that there is (are) a mail/MMS/both mail and MMS on the server.



Indicates that there is a new mail/MMS in your phone.



Indicates that the memory for a mail/MMS is full.



Indicates that a new voice mail message is on the network (No ALS/ALS Line 1/2).



Indicates that the alarm is set.



Indicates that the vibrator is set.



Indicates that the phone is in the Meeting mode.



Indicates that the phone is in the Pocket mode.



Indicates that the phone is in the Car mode.
No icon appears for the Normal mode.




Indicates the signal strength level.



Appears when you are outside the service area.

<When 2nd-LCD is used as the camera view finder screen>

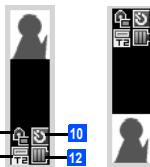

The left image is when the phone is folded, and the right image is when the phone is open.



Indicates single or burst mode of the camera.



Indicates the video mode.



Indicates the video is recording.



Indicates that the self timer is on.



Indicates the photo/video screen size.




Indicates the battery level.

Overview of menu function

Standby screen



Main menu screen



The Main menu has a set of icons for its top levels of options (examples of the top level are shown right) which can be selected either using a combination of the 4-way navigation key (▲▼◀▶) and  (menu selection), or just the keypad (shortcuts selection).

 The title of the selected option will be displayed in the Help area.

 SIM toolkit icon is displayed only when your SIM card supports this function.

 With the Main menu screen displayed, press 0 to display your own number.

Key	Main menu	Second level menu
1	Settings	Phone
		Phone modes
		Main-LCD
		2nd-LCD
		Power saving
		Calls
		Security
		Network
		Reset settings
2	Message	Inbox
		Drafts
		Outbox
		Sent
		Folder1
		Folder2
		CB
Key	Main menu	Second level menu
3	i-mode	i-mode
		Settings
4	Phonebook	Lists
		Information #
		Call options
5	Camera	Camera
		Video recorder
6	My data	Pictures
		Videos
		Music
		Sounds
Key	Main menu	Second level menu
7	Java	Programs
		Prog backlight
8	Accessory	Music player
		Calculator
		Clock alarm
		Scheduler
		ToDo list
		Notepad
		Voice memo
		Currency
9	SIM toolkit	Infrared

<i>Getting Started</i>	<i>1</i>
<i>Basic Calls & Phone Use</i>	<i>5</i>
<i>Text Entry</i>	<i>14</i>
<i>IR Data Exchange</i>	<i>16</i>
<i>Desktop icons</i>	<i>18</i>
<i>Settings (M1)</i>	<i>20</i>
<i>Message (M2)</i>	<i>26</i>
<i>i-mode (M3)</i>	<i>32</i>
<i>Phonebook (M4)</i>	<i>46</i>
<i>Camera (M5)</i>	<i>54</i>
<i>My data (M6)</i>	<i>59</i>
<i>Java™ (M7)</i>	<i>64</i>
<i>Accessory (M8)</i>	<i>66</i>
<i>Index</i>	<i>75</i>

Before You Start	iii	Multi-party calls	8
User's manual conventions	iii	Recording a call	9
Display information	iv	Call options (M43)	9
Parts and functions	v	Call settings (M16)	11
LCD and displayed icons	vii	International dialling codes	12
Overview of menu function	ix	Roaming	13
Getting Started	1	Text Entry	14
Preparing the phone	1	Mode change	14
Standby and talk times	3	T9® English text input	14
Checking the battery	3	Normal text input	15
Low battery alarm	3	Numeric input	15
Other battery alarms	3	Key allocations	15
Attaching and Removing the Emblem	4	IR Data Exchange	16
Start-up	4	Positioning of the phones	16
Basic Calls & Phone Use	5	IR send	16
Making basic calls	5	IR receive (M891)	17
Ending a call	5	IR modem (M892)	17
Receiving an incoming call	5	Desktop icons	18
Unsuccessful calls	6	Settings (M1)	20
Emergency calls	6	Phone (M11)	20
Last number redial	6	Phone modes (M12)	21
One-touch dial	6	Main-LCD (M13)	22
Fast dialling	7	2nd-LCD (M14)	23
Displaying your own phone number (M0/M416)	7	Power saving (M15)	23
Voice recall	7	Calls (M16)	23
Options menu (during a call)	7	Security (M17)	24
Putting a call on hold	8	Network (M18)	25
Mute	8		
Transferring a call	8		

Reset settings (M19).....	25
Message (M2)	26
Message overview	26
Reading a message (M21)	27
Creating a message.....	30
Cell broadcast (M27)	32
i-mode (M3)	32
i-mode operation guide	32
i-mode screen	37
i-mode menu screen	37
iMenu screen	39
Mail screen	40
i-mode glossary	45
Phonebook (M4)	46
Phonebook types	46
Accessing your phonebook (M4)	47
Phonebook list Options menu	48
Personal data Options menu	52
Scratchpad number	53
Voice mail (M417).....	53
Camera (M5)	54
Notes on using the camera	54
Taking a picture (M51).....	55
Recording a video (M52)	57
My data (M6)	59
Pictures (M61)	59

Videos (M62)	60
Music (M63)	61
Sounds (M64)	61
File selector Options menu	62

Java™ (M7) 64

Programs (M71).....	64
Prog backlight (M72).....	65

Accessory (M8) 66

Music player (M81)	66
Calculator (M82)	67
Clock alarm (M83)	67
Scheduler (M84)	68
ToDo list (M85)	70
Notepad (M86).....	71
Voice memo (M87)	72
Currency (M88).....	73
Infrared (M89).....	74

Index 75

Getting Started

Preparing the phone

Before trying to use your phone, make sure that a valid Subscriber Identity Module (SIM) card is inserted and the battery is charged.

SIM card

Before using your phone, you must sign-up with one of the digital network service providers. In addition to your subscription details you will receive a personal SIM (Subscriber Identity Module) card which is inserted into your phone.

If the SIM card is removed, the phone becomes unusable until a valid SIM card is fitted. It is possible to transfer your SIM card to another compatible phone and resume your network subscription. The screen on your phone will display appropriate messages if no SIM card is fitted.



If the phone, or the SIM card, is lost or stolen then you should contact your service provider immediately in order to bar it from use.



The phone supports a number of languages and the keyboard symbols have been chosen for world-wide operation.



The digital technology of your phone helps to ensure that your conversations are kept secure.



The SIM card contains personal data such as your electronic phonebook, messages (see "Message (M2)" on page 26) and also details of the network services you have subscribed to. The phone will not work (except for emergency calls on some networks) unless a valid SIM card is fitted.




Be sure to turn the phone off before inserting and removing a SIM card. Otherwise damage to the SIM card can occur.

Inserting a SIM card



Be sure to turn the phone off before removing the battery pack.

- While pressing down the areas marked with  of the rear cover as indicated by arrows ①, slide the rear cover about 3 mm in the direction of arrows ② with your finger tips. Then, lift the cover up in the direction of arrow ③ to remove it.
- Lift the finger tab of the battery pack up in the direction of arrow ④. Then lift the battery pack out in the direction of arrow ⑤.
- With the metal part facing down, insert the straight end of the SIM card under the holder in the direction of arrow ⑥. Slide the SIM card all the way until it reaches the end.
- Align the $\oplus \ominus$ marks on the battery pack with the $\oplus \ominus$ marks on the phone. Insert it into the cavity in the phone body in the direction of arrow ⑧, making sure that the tabs on the battery pack fit properly into the notches in the phone. Then, press the battery pack down in the direction of arrow ⑨ to clip it into the phone.
- Make sure that the battery pack is securely attached to the phone and align the rear cover with the grooves on the phone so that there is a gap of about 3 mm at the end of the cover. After making sure that there is no gap between the rear cover and the phone body, slide the rear cover in the direction of arrows ⑩ until you hear a click.

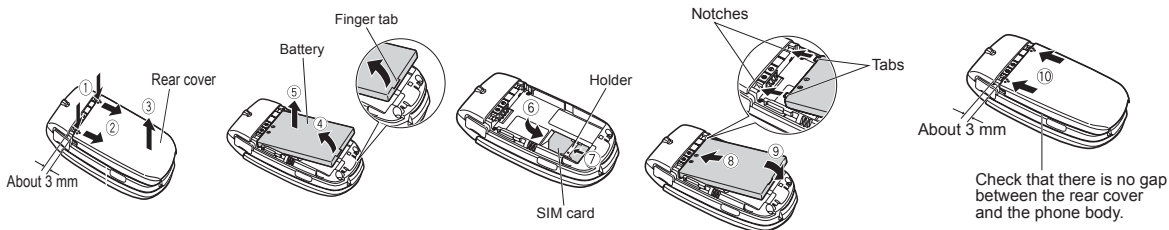

If the SIM card is not fully inserted when the battery is replaced, damage to the SIM card can occur.

If the SIM card is already fitted, see “Start-up” on page 4.

Removing a SIM card

- With the battery removed, push the short and straight end of the SIM card with your thumb to slide it gently in the direction of arrow ⑦ → Lift the SIM card after it is completely removed from the holder.

Charging the battery

Before trying to use your phone, insert the phone's battery, connect the NEC battery charger (AC adapter) supplied with your phone to a suitable mains power socket.

- Pull open the charger connector cover gently.

Be careful when handling the charger connector cover. Do not pull strongly.

- Connect the charger plug (AC adapter) into the charger connector at the bottom of the phone. If your phone is turned on and charging starts, the battery icon will flash. LED will turn on in red while charging. When charging is complete, the LED will turn off.


You are recommended to switch off the phone while charging. If you need to receive calls, your phone can be switched on and left in standby while being charged, although the total time taken to charge is then increased.

The colour on the display shows the charging status of battery.

(red) Fast battery charging (green) Slow battery charging while the phone is in use (blue) Battery charging is stopped due to overheat

Using any battery pack, AC adapter, vehicle power adapter (option) not specified by NEC for use with this phone can be dangerous and may invalidate any warranty and approval given to the cellphone. Do not leave the charger connected to the mains supply when it is not in use.

Do not try to charge the battery if the ambient temperature is below 5°C (41°F) or above 35°C (95°F).

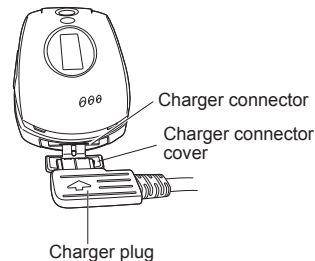



DO NOT connect a charger or any other external DC source until the phone's battery is inserted.

If the phone does not respond, please wait for a few minutes. The charging will then start.

If you use the phone while charging, handle the phone carefully since the cable or adapter is connected.

If you make/receive a call while charging, the charging may temporarily be interrupted.

Charging takes approximately 3 hours with your phone turned off.



IMPORTANT BATTERY CHARGING INFORMATION

Charging a very low battery

The battery's charge continues to drop after the low battery warning is displayed. In extreme cases where the battery is left uncharged for some considerable time after this warning, a trickle charge is used to slowly top-up the battery to the safe level at which the fast charging can begin. The phone can be in trickle charge for a few minutes before the fast charging starts.



DO NOT connect a charger or any other external DC source if the phone's battery is not inserted.

Standby and talk times

Your phone works closely with the network you are using to provide the services you need, and the standby and talk times achieved will depend on how you use the phone and choices made by the network operator.

In particular, factors such as your location within the network, the frequency at which this location is updated, the type of SIM card you have, your reception of area messages or cell broadcast messages and the use of full rate or enhanced full rate speech, will affect both standby and talk times.

Checking the battery

Check icon at the top of the standby screen.

The block on the display shows the charge of your battery pack.

 Full battery power  Partial battery power  Low battery power  Battery empty

Low battery alarm

When the battery voltage falls below the working level, a low battery warning is displayed on the screen accompanied by LED illumination and a short tone along with an empty battery icon. The phone will automatically power down shortly afterwards.


Please charge the battery as much as possible when the battery is very low.

Other battery alarms


Your phone may display warnings when the battery temperature is too high, or the voltage of the battery or the charger is over the appropriate level. Follow the instruction given by these warnings immediately, such as turning off the phone and removing the battery or charger.

Attaching and Removing the Emblem

Attaching the emblem

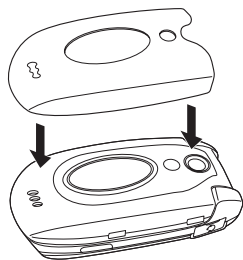


Attach the emblem, aligning the holes to fit the 2nd-LCD, LED and camera.

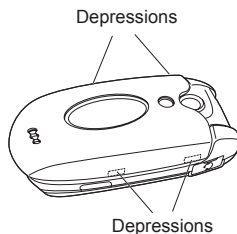

Make sure the emblem is fitted over the square depressions on each side of the phone.

Removing the emblem

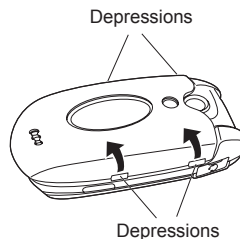

Remove the emblem by hooking your finger tips near the square depressions.

Start-up

Switching the phone on

☛ Hold down  for about a second to switch on. The screen will display the selected greeting (see page 22) and the phone is then in standby.

☛ You may need to charge the battery before using your phone.

☛ When your phone is turned on, the specified ringer may sound.

☛ If your phone is accidentally turned off while downloading or deleting Java™ application, it will take longer than usual to start up the phone the next time you turn on the power.

Switching the phone off

☛ Hold down  until the display shows the switch off message.

PIN code

The SIM card issued by your service provider has a security feature called PIN code protection. The Personal Identification Number (PIN) is a number put on to the card by your service provider, and is 4 to 8 digits long. Some service providers supply SIM cards which will cause your phone to prompt for a PIN code when it is turned on. If this is the case, enter your code with the phone's keypad. If you insert a SIM card other than your own, information such as call logs may be lost.

Basic Calls & Phone Use

Making basic calls

You make a simple call in the same way as you would with a normal phone, except that you need to press  after entering the area Subscriber Trunk Dialling (STD) code and the phone number. To make international calls, you must first enter the international dialling code (see page 12).

-  Use the full STD area code even if you are calling to a person in the same town. If the numbers are too long to be displayed within one line, excess part is deleted and '...' is added at its end.
-  The main-LCD display shows the strength of the radio signal that links your phone to the network. The maximum signal strength is shown by 4 shaded blocks and the minimum signal strength by 1 block.

Starting a call

-  Key in the phone number. Check the number on the display →  to send the input number to start the call
-  Before the other party answers the call, you can end the call by pressing  briefly, pressing **SK2** or folding your phone. When you use the headset, you can also end the call by pressing or holding the button on it.

When the call is sent, the screen displays the number called or the name stored in the phonebook and a connection graphic or a Calling Line Identification (CLI) picture that has been allocated to the number called (see page 45).

Correcting mistakes

Use the  and  to move the cursor and then press **CLR** to clear individual digits, or hold down **CLR** to completely clear a phone number.

Ending a call

-  While talking, press  briefly or close your phone. The phone returns to the standby screen.
-  If  is held down, your phone will turn off.
-  When you use the headset, you can also end a call by pressing or holding the button on it.

Receiving an incoming call

When someone calls your number, the ringer will play (if set - see page 21), the LED glows in the specified colour, and the phone number of the caller may be displayed if the calling line identification facility is available and the caller has activated the feature. If the caller's phone number has been related and stored in your phonebook with a name and a CLI picture (see page 50), that name and picture will be displayed. If the caller has withheld their identity, the screen will give a message that the caller's number is being withheld.

-  You also have options for holding and forwarding calls. These options depend on your network and your subscription arrangements.

Accepting an incoming call

☎ While receiving an incoming call, press .

📞 When you use the headset, you can also accept an incoming call by pressing the button on it.

Rejecting an incoming call

☎ While receiving an incoming call, press  briefly or close your phone.

📞 When you use the headset, you can also reject an incoming call by pressing and holding the button on it.

If your phone receives a call and you do not answer it, the screen will display the phone number (or the name if stored) of the caller (if available). This information is stored in the missed calls list. Up to 10 missed calls are stored in this list.

📞 You can set your phone to answer a call when any key is pressed (see “Any key answer” on page 20).

📞 If you are making a call, the phone gives priority to receiving a call unless you have already pressed .

🔍 See also: “Call diversion (M161)” on page 11 and “Call waiting and holding (M162)” on page 12.

🔍 See also: “Call options (M43)” on page 9.

Unsuccessful calls

If dialled call is not successfully connected, the display will give an appropriate message.

If your phone has the auto redial function activated, the number will be automatically called again after a short delay (see page 12).

Emergency calls

The standard emergency number of 112 can be used.

☎ Key in **112** →  to connect the call to the local emergency services.

📞 On some networks, emergency calls can be made using the 112 number without a SIM card inserted.

Last number redial

You can redial the last number you called:

☎ Ensure that the standby screen is displayed and no phone number is shown →  twice to dial the last number you called.

🔍 See also: “Call options (M43)” on page 9.

One-touch dial

One-touch dial for the phonebook (SIM) is available by pressing and holding the number keys between 2 and 9.

 A number for the One-touch dial corresponds to the location number in the phonebook (SIM).

 One-touch dial is available only for the phone numbers with the location number 2 to 9 stored in the phonebook (SIM).

Fast dialling

Fast dialling is activated in Abbreviated Dialling Numbers (ADN) by entering a number 1 to 255 (depending on the SIM card), # and .

Fast dialling is also activated by entering the location number 1 to 500 of your phonebook (Phone) and then * and .

Displaying your own phone number (M0/M416)

 (MENU) 0 or (MENU) 4 1 6

Voice recall

You can store up to 10 voice recall recordings which can be allocated to a personal data stored in the phonebook (Phone). To store the voice recall sound, see page 50. To use the voice recall function, use the following procedure:

 Press and hold ▼

 When you use the headset, you can also activate the voice recall function by pressing and holding the button on it from the standby screen.

 Within 4 seconds, say the word or words you have recorded to identify the record you wish to recall. If the word or words were recognized, the phonebook contents will be called automatically.

Options menu (during a call)

 During a call, (MENU) to display the options menu

No.	Options menu (during a call)	
1	Main menu	Displays the Main menu screen. See "Overview of menu function" on page ix for details.
2	Hold/Retrieve	Puts the highlighted call on hold or retrieves the call.
3	Mute/Unmute	Mutes or unmutes all active calls.
4	Transfer call	Enables to transfer the call and connect other parties.  After transferring the call, your call will be dropped.
5	Add to conference	Merges calls and makes a multi-party call.
6	Private call	Make a private call to the highlighted party within the multi-party call.
7	Record call	Records the call while talking.

No.	Options menu (during a call) (Continued)	
8	Disconnect party	Disconnects the highlighted party.

 Depending on the conditions, some options may be displayed in gray and not be available.

Putting a call on hold

 To put the received or dialled call on hold, **SK1** or  2. To retrieve the call, **SK1**.

Mute

You can mute the sound from the mouthpiece during a call. When your call is muted, the other party cannot hear any sound from your phone, but you can still hear the sound from the other party.

 To mute the sound during a call, press  3. To retrieve the sound, press  3 again.

 The mute function is automatically released after the call ends.

Transferring a call

When you have an active call and a held call, you can transfer the call and connect the two parties, then you can drop from the line while leaving those two calls active.

 To transfer the call,  4 or 4 

 After dropping from the call with the other two parties, if you have a call waiting, you can proceed the call with it.

Multi-party calls

If your SIM card is multi-party enabled, you can make a conference call to more than one caller. You can even leave the call while the remaining participants carry on with the call.

Receiving the second call

 **SK1** or  to accept the second call → **SK2** or  5 to merge both calls.

 When you accept the second call, the first call will be put on hold.

Making the second call

 **SK1** to put the first call on hold → Key in the phone number → **SK1** or  to make the second call → After the second participant answers, **SK2** or  5 to merge both calls.

Putting the multi-party calls on hold

- ☑ **SK1** or **MENU** 2 to put both the first and second calls on hold → To retrieve the call, press **SK1** or **MENU** 2 again.

Making a private call

While on the multi-party call, you can make a private call to a specific party.

- ☑ Highlight the desired party you want to make a private call to → **MENU** 6 → To end the private call and return to the normal multi-party call, **MENU** 5 or 2.

🗉 While you are on a private call, other parties can continue with their conversation.

Ending the multi-party calls

- ☑ To end all calls, **⏏** or **SK2**. To disconnect a specific party on a multi-party call, highlight the party you wish to disconnect → **MENU** 8
- 👉 **Multi-party call facilities are and network dependent.**

Recording a call

You can record the conversation during the call.

- ☑ During a call, press and hold **▼** or **MENU** 7 to start the recording → To stop and save the recording, **⏏** → To play the recording, see "Recording/playing voice memo or setting speaker" on page 73.

Call options (M43)

From Call options, you can display the list of missed, received and dialled calls, the duration of the last call made and all calls, charge information and the redial blacklist

- ☑ **MENU** 4 3 to display the Call options screen.

No.	Call options	
1	Missed calls	Displays the list of missed calls. ► can also be used.
2	Received calls	Displays the list of received calls. ◀ can also be used.
3	Dialled calls	Displays the list of dialled calls. 📞 can also be used.
4	Last call duration	Displays the duration of the last call made on your phone. ☑ SK1 to reset the display to zero.
5	Total calls duration	Displays the duration of the total calls made on your phone. ☑ SK1 → 1 to reset the duration of the total dialled calls, 2 to reset the duration of the total received calls, or 3 to reset the duration of all calls.

No.	Call options (Continued)		
6	Charge info	Displays the charge information (Advice of Charge - AOC).  The AoC facility is SIM card and network dependent.  To reset the display to zero, set the maximum charges or edit the unit price, you may be prompted to enter the PIN2 code.	
		1	Total charge Displays the total charge.  SK1 to reset the display to zero.
		2	Maximum charge Displays the maximum charge.  Key in the maximum number of units allowed → SK1
		3	Unit price Displays the unit price.  Highlight the whole number (integer), the decimal number or the currency field → Key in the required value for the whole number and decimal number fields. For the currency field, key in the currency type using a maximum of three characters → SK1
7	Redial blacklist	Accesses the numbers in the blacklist.  If dialled call is not successfully connected (e.g. number busy), the auto redial facility will be offered (see page 12). If you have set auto redial and the call still fails, the number called will be added to the blacklist.	

 Depending on the conditions, some options may be displayed in gray and not be available.

Display missed/received/dialled calls Options menu (M431M/M432M/M433M)

-  or  **4 3 1** for missed calls,  or  **4 3 2** for received calls, or  or  **4 3 3** for dialled calls.
-  Highlight a number in the list → 

No.	Missed calls/Received calls/Dialled calls Options menu	
1	Call	Calls the current number.
2	Send	Creates a new SMS or MMS message to the highlighted phone number.
3	Add to phonebook	Adds the current number to the phonebook.  1 to add it as a new personal data, 2 to add it to an existing personal data → Press the appropriate number for the storage destination → Press the appropriate number for the phonebook data field to copy the current number to.
4	Delete one	Deletes the current number.
5	Delete all	Deletes all the numbers in the list.

No.	Missed calls/Received calls/Dialled calls Options menu (Continued)	
6	Info	Displays information on the current number.
7	Add desktop icon	Creates a desktop icon of the selected number.
8	Items/Page	Selects either to display 4 or 8 phone numbers in one screen.

 Depending on the conditions, some options may be displayed in gray and not be available.

Call settings (M16)

From the Calls screen, you can change various call settings: the call diversion, call waiting and holding, auto redial and line identification.

Call diversion (M161)

Setting Call diversion

  **1 6 1** → Highlight the type of call you wish to divert

 There will be a delay while your phone checks its divert status with your network.

 Highlight one of the conditions → When the phone number field of a divert condition is highlighted, either enter the phone number to divert to, or delete any existing phone number.

 If you have made any mistake, highlight the appropriate field → **SK1** to clear any mistakes

 If the settings are correct, 

 There will be a short delay while the network sends the divert status of your phone.

 There may be an additional charge for this service depending on your network.

 There may be unavailable settings depending on your network.

Call diversion edit options menu

 Highlight the required edit field → 

No.	Call diversion edit options menu	
1	Copy	Copies the number in the edit field.
2	Paste	Pastes the previously copied number.
3	Disable all	Disables all fields.
4	Phonebook	Inserts a phone number in the edit field.
5	Add to phonebook	Adds the number to the phonebook as a new personal data or saves the number in an existing personal data.

 Depending on the conditions, some options may be displayed in gray and not be available.

Call waiting and holding (M162)

This facility informs you that another call is being made to your phone while an existing call is in progress.

Setting up call waiting

- ☛  **1 6 2** → **1 1** to activate, or **1 2** to deactivate the call waiting → **2** to check the status of call waiting.

Using call waiting

- ☛ If you are on a call and another comes in, you will be alerted by a beep in the earpiece → **SK1** to put the current call on hold → **SK1** to accept the incoming call
 - ☛ To switch the calls, **SK1**
 - ☛ To merge the calls, **SK2** (see "Multi-party calls" on page 8)
 - ☛ To end the current call, 
 - ☛ To retrieve the held call **SK1**

Auto redial (M163)

With the auto redial facility, your phone will redial a number up to 10 times if the first attempt fails. A tone will be heard at each redial attempt. Your phone cannot connect a call if the other party is busy or if there are network problems. Pressing **SK2** during a redial attempt will abort it.

- ☛  **1 6 3** → **1** to activate or **2** to deactivate the auto redial facility.

Line ID (M164)

 **The line ID (identification) facility is network dependent.**

The line ID facility enables you to choose whether or not to send your own phone number when you make a call and also whether or not to display a caller's phone number when you receive a call.

- ☛  **1 6 4** to display the Line ID screen with a ✓ over an activated line and a ✗ over a deactivated line.
- ☛ To set the status of each line (see the table on the right), highlight a line (the line will flash when selected).
- ☛ **SK1** to set the line identification on or off →  to save the current settings.

Line type	Setting
Outgoing	Send own #
	Show connected #
Incoming	Show Incoming #
	Return own #

International dialling codes

When you make an international call from any country, you must start by dialling a special international access code. Your phone has the facility to prefix a + symbol to the numbers, so that you need not enter the access code for the country that you are calling from.

Entering international dialling codes

- ☛ Hold down **0**. The 0 character displayed will change to a + character → Key in the country code, area code, and phone number that you wish to call.
The UK country code is always 44, no matter what country you are dialling from. For example, a typical UK number of 0131 1234567 is entered as:

International access	country code	area code	phone number
+	44	131	1234567

Roaming



You will be charged for calls forwarded to you while roaming.

The roaming facility enables you to use your phone in many parts of the world and pay all charges through your normal service provider. Your network operator usually has agreements with named networks in other countries so that automatic roaming can take place with these named networks. The phone also allows you to set network preferences of your own.

When dialling, you will need to add the international access codes if required. So, storing all numbers with the codes (such as +44 for UK) is helpful (see page 12).



Before leaving your home country, you should select any preferences such as bar calls or call diversion.

Setting Automatic or Manual network selection (M181)



(MENU) 1 8 1 → 1 to select the automatic mode or **2** to select the manual mode.



Before you manually select a network, ensure it is covered under the agreement you have with your service provider.

New search (M182)



(MENU) 1 8 2 to search the available networks → Highlight the desired network → to connect to it

Viewing/editing network list (M183)



Before editing your network list, please consult with your service provider.



(MENU) 1 8 3 to read the network list in the SIM memory → Highlight the required network → **(MENU)**

No.	SIM list Options menu	
1	Add	Adds a new network to the list.
2	Move	Moves the highlighted network within the list. Use and to move the network → SK1
3	Remove	Deletes the highlighted network.

Selecting the frequency band (M184)

You have to select the frequency band to suit the location.



(MENU) 1 8 4 → Select the required frequency band.



Frequency bands must be adjusted to suit the location when roaming (Europe, US, etc.), for the phone to work properly.

Text Entry

This section describes how you enter text. The same method of text entry can be used in phonebook editing.

Mode change

- With a text entry screen displayed, **SK1** to change the text entry mode: T9® English text, Normal text (ABC), Numeric input

T9® English text input

Your phone incorporates T9® Text Input, enabling fast, easy and intuitive text input. For each letter to be keyed in, you only need to press the alphanumeric key once. The screen will display the word you may require based on the internal English dictionary of your phone.

- With a text entry screen displayed, **SK1** until the entry mode is T9® English input.

i) For example, to enter "Good":

- Press **4 6 6 3**, and then press **0** to confirm the word.

ii) To enter "Peter is good":

- Press ***** to shift to upper case (for one letter). You will see a green arrow in the Help area.
- Press **7 3 8 3 7** to display "Peter", and then press **0** to confirm.
- Press **4 7** to display "is", and then press **0** to confirm.
- Press **4 6 6 3** to display "good", and then press **0** to confirm and the sentence is completed

Key	Function
0	Confirms a word and inserts a space.
SK1(List)	Displays the list of other matching words.
SK1(Spell)	Activates the spell mode which temporarily deactivates T9 for you to spell the word in Normal text input. The spell mode ends when you key in 0 to enter a space.
SK2(Dismiss)	Cancels the T9 matching word list.
SK2(Next) or #	Displays the next candidate.
◀ or ▶	Places the cursor.
CLR	Deletes any character.
*	Toggles between lower case, shift (upper case for one letter) and caps lock (permanent upper case).
#	Activates symbol mode when no word is highlighted.

Normal text input

- With a text entry screen displayed, press **SK1** until the entry mode is Normal text (ABC) input.
- Use alphanumeric keys to enter letters. For example, to enter “e”, press **3** twice; to enter “f”, press **3** three times. For other functions, see the table below.

Key	Function
*	Toggles between lower case, shift (upper case for one letter) and caps lock (permanent upper case).
0	Inserts a space.
CLR	Deletes any character.
◀ or ▶	Places the cursor.
#	Activates symbol mode.

- If you have made a mistake, use ▲ ▼ ◀▶ to place the cursor to the right of the incorrect character and then press **CLR**.
- When entering normal (ABC) text, and the character you require is displayed, use ▶ key to move to the next character position (if you wait for more than 1 second, the cursor will move one character to the right automatically).

Numeric input

- With a text entry screen displayed, press **SK1** until the entry mode is Numeric input.
- Use alphanumeric keys to enter numbers.

Key allocations

Whenever you need to enter text (for short messages, storing names with numbers, etc.), successive presses of an alphanumeric key will display different characters. Pressing * in T9® English text input or Normal text (ABC) input toggles between lower case, shift (upper case for one letter) and caps lock (permanent upper case). Whenever a text entry screen is displayed, pressing **SK1** enables you to select Normal text input (ABC), T9® Text input (T9) or Numeric input (123).

Symbol mode

In the symbol mode, pressing each key will input a symbol according to its position on the Symbols screen. By pressing # in a text entry mode, the Symbol screen will be displayed. Use ▲ and ▼ to select the row, and then press the appropriate number on the column of the required symbol.


IR Data Exchange

Your phone is equipped with an InfraRed (IR) data port which enables you to send and receive phonebook/picture/video/sound excluding MP3/schedule/ToDo list/note data with cellphones or other devices equipped with IR ports.

-  **Do not aim or direct the IR data port towards your or other people's eyes when using IR data exchange.**
-  **Do not aim or direct the IR data port towards another IR device as this may cause the device to malfunction.**
-  Depending on the other party's cellphone or device, the data may not be received correctly.

Positioning of the phones

-  **Open both sending and receiving phones vertically and place them as their IR ports face each other with less than 20cm of interval.**
 -  Do not place anything between IR ports.
 -  The angle made of two IR ports must be within 30°.
 -  Do not move the phones until the data exchange is complete.
 -  The phones may not communicate successfully if they are placed under direct sunlight or fluorescent light, or close to other infrared devices.
 -  While sending or receiving data through IR, your phone is automatically placed out of service, so phone call, message and i-mode access are disabled.

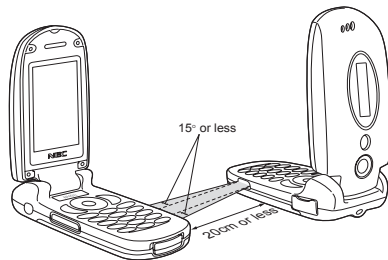

IR send

You can send phonebook/picture/video/sound excluding MP3/schedule/ToDo list/note data as a file through the IR port.

-  Before starting to send data, the other party must be ready to receive data.

Phonebook entry (M413...)

-  You can only send Name, Home, Mobile, Work, Fax, 2 Email addresses and 2 pieces of descriptive information.
-  Your phone sends data according to the vCard 2.1 specification.
 -  To display the phonebook (Phone),  (for required number of times) or **(MENU) 4 1 3** → Highlight a phonebook entry.
 -  **(MENU) 0** or **(MENU) 3** → The phonebook entry will be sent through the IR port.

Picture/video/sound file (M84...)

-  **(MENU) 6** → **1** (Picture), **2** (Videos) or **4** (Sounds) → Highlight a folder →  → Highlight a file →  → **(MENU) 2** → **3** (Picture/Videos) or **4** (Sounds) → The schedule entry will be sent through the IR port.

Schedule entry (M84...)

8 4 → Highlight a date → → Highlight a schedule entry → → and **9** → The schedule entry will be sent through the IR port.

ToDo entry (M85...)

8 5 → Highlight Public, Private or All → → Highlight a ToDo entry → **7** → The ToDo entry will be sent through the IR port.

Note (M862...)

8 6 2 → Highlight a note → **2** → The note entry will be sent through the IR port.

IR receive (M891)

You can standby your phone to receive data (phonebook/picture/video/sound excluding MP3/schedule/ToDo list/note data) from other devices or a phone of the same model.

Receiving data through IR (M891)

8 9 1 → Start sending data from the other end.

Once the transmission completes, your phone automatically judges the type of received data.

If your phone does not have enough space to store the received data, a message will be displayed indicating lack of space. In such a case, delete unnecessary data and try the data exchange again.

Received picture/video/sound files are stored in the Download folder of My data (see "My data (M6)" on page 59).

IR modem (M892)

You can use your phone as a modem for a PC via the IR port to establish a dial-up connection to an Internet service provider.

Activating the IR port for modem use

8 9 2 → The phone will be in standby status for IR transmission from the external device.

If the IR transmission is not established in 30 seconds, the standby status will end.

While on active call or connecting to the external device such as USB, IR modem is not available. Check your service provider to use your phone as a modem to connect to the Internet.

Your phone consumes a lot of battery power when used as a modem. After using your phone as a modem, be sure to deactivate the modem function from your PC or press (for the CSD connection only). When the modem function is deactivated, the idle screen will be displayed without the Infrared icon and GPRS icon.

Check with your service provider to use your phone as a modem to connect to the Internet.

Desktop icons

Desktop icons are shortcuts to functions or items. You can activate a desktop icon on the standby screen (desktop) instead of following the menu and pressing the shortcut numbers.

The desktop icons are displayed in two rows on the standby screen. See “LCD and displayed icons” on page vii for the actual location of the desktop icon area.

There are two types of desktop icons: the automatically displayed and the manually created.

Automatically displayed desktop icons

The following automatically displayed icons are displayed on the upper row of the desktop icon area:

Icon name	Image	Description
Missed call		Displayed when there is a new entry in the Missed calls list.
Missed message		Displayed when there is a new message you have not acknowledged.
Missed Mail		Displayed when there is a new Mail you have not acknowledged.

 You can delete all the automatically displayed icons by pressing and holding **CLR** on the standby screen.

 If you turn the phone off, all the automatically displayed desktop icons are deleted.

Manually created desktop icons

The following manually created icons are displayed on the lower row of the desktop icon area:

Icon name	Image	Description
Phone number		Displays a dialer screen with the registered phone number displayed.
Mail address		Displays the Msg type screen. A new message edit screen is displayed with the registered mail address in the To field.
URL		Activates the browser and accesses the registered URL.
Picture		Displays the image file.
Notepad		Displays the Notepad screen with the note file displayed.
Camera		Displays the camera view finder screen.
Video		Displays the video view finder screen.
Music player		Displays the Music player screen.

Creating a desktop icon manually

- ☛ Activate the required function (camera/video/music player) or display the item (image file/note file/phone number/mail address/URL).
- ☛ (MENU) to display the Options menu and select Add desktop icon (for an image/note file, this menu is under Use item, and for camera/video, under Other settings).
- 📖 You can create up to 10 desktop icons.
- 📖 If you have more than 5 desktop icons, an arrow will be displayed to indicate that you can scroll for more icons.
- 📖 The phone number, mail address or URL desktop icon data will not be updated when the original data is modified. Delete the old desktop icon and create a new one in such a case.
- 📖 When you create a desktop icon of an image file or notepad file, the data will be automatically protected. The default title will be the file name, even if this title is changed the original file name will remain the same.
- 📖 Each manually created desktop icon has a title that you can edit.

Activating a desktop icon

- ☛ ○ → Highlight the required desktop icon → ○
- 📖 If you do not press any key for three minutes after highlighting a desktop icon, the highlight is cancelled and the screen goes back to the normal standby screen.
- 📖 If you activate an automatically displayed desktop icon, it will be deleted automatically.

Desktop icon Options menu

- ☛ Highlight a desktop icon → (MENU)

No.	Desktop icon Options menu	
1	Edit title	Edits the title of the highlighted desktop icon.
2	Delete one	Deletes the highlighted desktop icon.
3	Delete all	Deletes all the manually created desktop icons.

Settings (M1)

Phone (M11)

  11

No.	Phone	
1	Voice volume	Adjusts the sound volume output from the earpiece.  Use ▲ ▼, Side keys or alphanumeric keys (0 to 9) to adjust the volume.  You can also press the Side keys to display the volume control screen and to adjust the volume setting.  During a call, you can press the Side keys to adjust the setting of the volume as required.
2	Answer options	1 Any key answer On: Any key (except , SK2, the Side keys) is valid to answer a call Off: Only  and SK1 are valid to answer a call
		2 Ring silencer On: Pressing one of the Side keys stops the ringer sound and the vibrator while receiving a call.  This function cannot be used if your phone is folded and the Side keys are locked.  See also: "Mute" on page 8.
		3 Fold answer On: You can answer an incoming call by opening your phone.
3	Side key	Disable: Side keys are locked while your phone is folded.  You can also lock/unlock the Side keys by pressing and holding  on the standby screen.
4	ALS setup	 The Alternate Line Service (ALS) facility is SIM card and network dependent. If your SIM card supports ALS, you can setup which line to use for Outgoing call or Voice mail.
5	Clock	1 Show clock Sets to display the local time, both the local and remote times or no time on the main-LCD.
		2 Set time Sets the time for the local or remote time.
		3 Set date Sets the date.
		4 Set date format Selects the date display format.
		5 Set time format Selects the time display format from 12 hour or 24 hour.

No. Phone (Continued)		
5	Clock (Continued)	6 Set timezone Sets the timezone. (A ✓ is placed on the currently selected timezone.) Highlight the required timezone→Press SK1 to save the change. If the highlighted timezone has Daylight Savings, a check box will be displayed at the bottom of the screen. Press O to activate (✓)/deactivate the setting.
6	Language	Selects the language the phone displays. When you have switched the language to be displayed, please wait until the new setting becomes active.
7	LED	Selects the Light Emitting Diode (LED) colour for incoming calls/SMS/Mail or during a call.
8	Earphone type	Selects the earphone type from Stereo or Monaural, depending on your earphones (headset).

Phone modes (M12)

Your phone can be set to one of the following modes: Normal mode, Meeting mode, Pocket mode or Car mode.



Any changes made to the settings while in a particular mode will be stored and used when that mode is selected again.

Selecting your phone mode

▲ or **(MENU)** **12**→ Press the appropriate key for the required mode.

You can also set the Meeting mode or return to the previous mode by pressing and holding **▲** on the standby screen.

Editing the mode settings

▲ or **(MENU)** **12**→ Highlight the required mode → **SK1**→ Press the appropriate number for the required setting in the following table.

For any volume setting, use **▲ ▼**, **Side** keys or alphanumeric keys (**0** to **9**).

No. Phone mode setting		
1	Ringer	Selects the Sound or Video for incoming calls. (See "Sounds (M64)" on page 61 or "Videos (M62)" on page 60 for details.)
2	Ringer volume	Sets the sound volume for incoming calls. While receiving a call with your phone open, the ringer volume can also be adjusted by pressing the Side keys.
3	SMS tone	Selects the ringtone for incoming SMS messages. (See "Sounds (M64)" on page 61 for details.)
4	SMS tone volume	Sets the sound volume for incoming SMS messages.

No.	Phone mode setting (Continued)	
5	Mail tone	Selects the ringtone for incoming Mail or MMS messages. (See "Sounds (M64)" on page 61 for details.)
6	Mail tone volume	Sets the sound volume for incoming Mail or MMS messages.
7	Key tone	Turns on/off the key tone.
8	Service tone	Turns on/off the service tone.
9	Alarm volume	Sets the sound volume for Clock alarm and Schedule alarm.
0	Vibrator	Turns on/off the vibrator function.
*	Earphone setting	Selects the sound output from Speaker and Earphone or Earphone only.
#	Auto answer	Selects whether to answer an incoming call automatically.

 If the selected mode is Car mode, the backlight will always be turned on. This will reduce battery life.

Main-LCD (M13)

 (MENU) 1 3

No.	Main-LCD	
1	Greetings	Selects the greeting which is displayed on the main-LCD during phone start-up from No greeting, Text or Animation.  If you select Text greeting, press SK1 to edit the greeting text. Key in a greeting text and press ○ .
2	Wallpaper	Selects a image/video file to use as the background for the main-LCD.
3	Main menu style	Selects and resets the background and icons for the Main menu screen.
4	Colour style	Selects the phone's colour theme.

2nd-LCD (M14)

 (MENU) 1 4

No.	2nd-LCD	
1	Clock/Event display	Selects which items to display on the 2nd-LCD from Clock&Event, Clock only, Event only or Off.

No.	2nd-LCD (Continued)	
2	Clock orientation	Selects whether to display a horizontal clock or a vertical clock.  When you select to display a vertical clock, it is read from the camera and LED end.  The event displays and incoming call numbers are shown along the long end according to the Display direction.
3	Incoming call No.	Turns on/off the function to display the incoming call number on 2nd-LCD.
4	Display direction	Selects which direction to display the 2nd-LCD.  This setting does not effect the vertical clock.
5	Contrast	Sets the contrast level of the 2nd-LCD.

Power saving (M15)



15

No.	Power saving	
1	Level setting	Selects the power saving level from Level 1 (minimum power save setting), Level 2 (moderate) or Level 3 (maximum).  The main-LCD backlight will turn dim and then turn off after a given amount of time with no operation.  When the phone is folded, Power saving level also applies to the 2nd-LCD.  If the selected mode is Car mode, this function is not available.
2	Function key LED	Selects whether to flash the LED of SK1 and SK2 when the main-LCD and its backlight are turned off.  If the selected mode is Car mode or the camera view finder screen is displayed, the main-LCD backlight will always be on.

Calls (M16)



16

 For settings provided on the Calls screen, see "Call settings (M16)" on page 11.

Security (M17)



17

The security settings will help to protect your phone from improper and unauthorized use. You may be required to enter one of the five codes (shown below). When the phone prompts you for one of these codes, key in the appropriate number.

- PIN code (provided by your network service provider to protect your SIM card if it is stolen)
- PIN2 code (provided by your network service provider for charge information and Fixed dialling services protection)
- PUK code (personal unblocking key in case you forget PIN code)
- PUK2 code (personal unblocking key in case you forget PIN2 code)
- Security code



If you forget any of these codes, ALWAYS contact your service provider as they are the ONLY source for your codes.

PIN code

Your phone can be set up so that your PIN code must be entered at power up before the phone can be used at all. If the PIN code is not entered, not even incoming calls can be answered. Entering your PIN code incorrectly 3 times (not necessarily in the same session) will invalidate the correct PIN code. In such a case you will have to contact your service provider for a PUK code to unblock your SIM card.

 Some SIM cards are set up so that PIN number entry cannot be turned off.

 When SIM PIN lock is enabled, you can change the PIN code.

PIN2 code

Your phone supports advanced feature that may require a PIN2 code to be entered before they can be accessed or modified. Entering your PIN2 code incorrectly 3 times (not necessarily in the same session) will invalidate the correct PIN2 code. In this case you will have to contact your service provider for a PUK2 code.

 **The PIN2 code is SIM card related and may only be available from your service provider.**

No.	Security	
1	Change PINs	Changes the PIN or PIN2 code.
2	PIN activate	Turns on/off the PIN code entry required at starting up the phone-up.
3	Change security code	Change the security code which is used to unlock the Personal Information Manager (PIM) features.  The default setting of the security code is "0000".
4	Phone lock	Turns on/off the Phone lock function which will lock the phone: you can only make emergency calls or enter the security code. After entering the correct security code, you can use the phone normally.  Upon power-up, you are prompted to enter the security code if the Phone lock was active when the phone was powered down.
5	Bar calls	You can bar the following calls made/received on your phone: All outgoing (dialled) calls, international outgoing (dialled) calls except to home, all incoming (received) calls or incoming (received) calls when roaming.

No.	Security (Continued)		
5	Bar calls (Continued)	1	Change settings - Highlight the type of restriction and the call type, and then → to save changes. - Key in your bar calls password to verify user identification to the network → SK1 to confirm and save changes to the network. - The selected settings have red bars over their icons.
		2	Set password Bar calls facilities are network services and may require a password. Changes the bar calls password.
6	Fixed dialling	Turns on/off the fixed dialling which restricts the use of dialled number to only the Fixed Dialling Numbers (FDN). The FDN facility is network dependent. - See also: "Fixed dialling numbers (FDN)" on page 46.	

Network (M18)

(MENU) 18

For settings provided on the Network screen, see "Roaming" on page 13.

Reset settings (M19)

(MENU) 19

This function will reset your phone to its factory settings.

By restoring the factory settings, any changes you have made to your phone except the following will return to the factory settings (the following data/settings will not be reset):

- Settings:** Set time, Set date, Language, Power saving settings for Level 1/2/3, all settings in Calls other than Auto redial, all Security settings, SIM list settings in Network.
- Camera & Video:** The settings for Camera (Shoot environment, Effect, Burst mode, Frame, Self timer, Light, Full screen, Switch finder, Zoom and Brightness). The settings for Video (Shoot environment, Effect, Light, View finder, Brightness, Volume, Full screen and Zoom). The settings for Video preview screen (Full screen and Screen size).
- All call lists and call information**
- Phonebook:** All Phonebook entries. The settings for Groups.
- Accessory:** All Schedule, ToDo, Notepad and Voice memo entries. All the settings other than Clock alarm, Play list for Music player, View events for Scheduler and Sort for ToDo.
- i-mode:** All Bookmarks and Saved pages. All the i-mode related settings.

- **Java:** All the Java™ applications.
- **Message:** All the stored messages. The settings for Msg filter and Msg filter details, SMS centre number, Slide settings, MMS message settings and MMS centre.
- **My data:** All stored files.

Message (M2)

Message overview

Message services

Your phone supports the following messaging services:

- **Short Messaging Service (SMS)** allows you to send short messages (160 half-pitch characters max.) to a phone number. To send an SMS message, the destination phone number must be a mobile phone with an SMS service subscription. SMS service also supports Enhanced Messaging Service (EMS) for which the maximum length of the message you can send depends on the number of linked messages (maximum of 10 linked messages are available).



The Short Messaging Service is network dependent.

- **Mail (i-mode messaging service)** allows you to send a message to not only other cellphones but also to PCs and other devices that uses Email addresses. You can attach files from Pictures, Videos and Sounds folders in My data (see page 59). Mail facility is available from the Mail screen under the i-mode facility. For details on the mail service, see “i-mode (M3)” on page 32.
- **Multimedia Messaging Service (MMS)** is a service that allows you to send messages of a slideshow of text and multimedia files. When you receive an MMS message, you will be notified by a message from the MMS centre. You can either automatically or manually receive the contents of an MMS message. MMS facility is available from the Mail screen under the i-mode facility. For details on the mail service, see “i-mode (M3)” on page 32.

Standard messages

While a message is being sent or received, a name, a number and a CLI picture will be displayed (if a name and CLI picture have been stored with the number in your phonebook). The received messages are stored on the SIM card or in your phone memory. When you receive a message, your phone will ring or beep during a call, and a new message icon will be shown on your phone's display and its LED will glow.

Your phone will automatically send a message to the service centre when your SIM memory for the message is full. The service centre will stop sending your phone any further messages until your phone automatically notifies the centre that there is some free message space.



Please delete the unnecessary messages in the folders from time to time. The phone cannot receive any messages when the Inbox folder is full.

Message screen

- To display the Message screen, **(MENU)** **2** → Press the appropriate key for the required option.

No.	Message screen menu	
1	Inbox	The received messages are stored here.
2	Drafts	The messages currently being edited are stored here.
3	Outbox	The messages that failed to be sent are stored here.
4	Sent	The sent messages are stored here.
5, 6	Folder1/Folder2	The messages moved by Move msg (see "Message list Options menu" on page 28) are stored here.
7	CB	The received broadcast messages are saved. See "Cell broadcast (M27)" on page 32 for details.

- If there is no message in a message list, the list will be displayed in gray and you cannot select it.

Reading a message (M21)

- To display the Message view screen of a new message, **(MENU)** **2 1** → Highlight the new message → **○**
- The new (unread) messages are displayed in bold. If the message cannot be displayed in one page, press **▲** and **▼** keys to scroll through the message.

The following icons will be displayed.

Icons	Descriptions	Icons	Descriptions
Message type icons		Read / Unread status icons	
	SMS message		New / Unread message(s)
	Incomplete SMS message		Read message(s)
Storing location icons		Filtering status icons	
	Highlighted message stored in SIM		SMS messages filtered by status (incomplete)
	Highlighted message stored in the phone memory		SMS messages filtered by location (SIM)
Sorting status icons			SMS messages filtered by location (the phone memory)
	Messages sorted by Date		Filtered SMS messages
	Messages sorted by Name	Sent message status icons	
	Messages sorted by Read/Unread status		Sent but failed message
	Messages sorted by Size		Sent message
	Messages sorted by Ascending order		
	Messages sorted by Descending order		

Message Options menu (M2M)



No.	Message Options menu		
1	SMS settings	1	SMS centre Edits the SMS centre number (this number is saved in the SIM card).
		2	Auto display Turns on/off the automatic display function that displays the received SMS messages automatically.
		3	Receipt request Selects whether to request a receipt of the sent SMS messages.
		4	Max linked msgs Sets the maximum number of linked SMS messages. This function divides an SMS with the message text exceeding the maximum number of characters allowed into multiple messages.
		5	Validity period Selects the period of time an SMS message is stored at the SMS centre, while trying to deliver the message.
2	CB settings	1	Enable 1 to receive none, 2 to receive all, or 3 to specify a list or Cell Broadcast Message Identifier (CBMI) to receive broadcast from.
		2	Languages Selects which language to receive the cell broadcast messages in.
3	View msg status	Displays the number of messages stored in your phone and SIM card, and their total data size.	
4	Rename folder	Renames Folder1 and Folder2 folders.	
5	View all	Displays all the messages in all folders on the same list.	
6	Msg filter	Sets the type(s) of messages to be displayed by selecting the desired filter option.	

 **The receipt request and linking of SMS messages are network dependant.**

 Depending on the selected folder, some options may be displayed in gray and not be available.

Message list Options menu

 Display the message list in the Inbox, Sent, Drafts, Outbox, Folder1 or Folder2 → 

No.	Message list Options menu	
1	Reply	Replies to the sender of the highlighted message.
2	Reply all	Replies to the sender and all other recipients of the highlighted message.
3	Delete	Deletes the highlighted message.
4	Delete all	Deletes all the messages in the current folder.

No.	Message list Options menu (Continued)	
5	Forward	Forwards the message text of the highlighted message.
6	Msgs/page	Selects either to display 3 or 7 messages in one screen.
7	Move msg	Moves the highlighted message to another folder, to the SIM card, or to the phone memory.
8	Sort msg	By: Sorts the messages by date, name, read/unread status or size. Order: Sorts the messages in ascending or descending order.
9	Search	Searches messages by alphabets.
0	View details	Displays detailed information on the highlighted message.
–	Add desktop icon	Creates a desktop icon of the highlighted message.
–	Edit	Edits the highlighted message (Drafts and Outbox only).
–	Resend	Resends the highlighted message in the folder (Outbox only). The entire message or only the packets that failed to reach the recipient(s) can be sent.

 Depending on the selected folder, the menu number and available options may vary.

 Depending on the selected folder, some options may be displayed in gray and not be available.

Message view Options menu

 Display the message list in the Inbox, Sent, Drafts, Outbox, Folder1 or Folder2 → Highlight a message →  

No.	Message view Options menu	
1	Reply	Replies to the sender of the highlighted message.
2	Reply all	Replies to the sender and all other recipients of the highlighted message.
3	Delete	Deletes the highlighted message.
4	View details	Displays detailed information on the highlighted message. The detailed information includes Msg status, From, To, Date, Msg type, Size and Folder.
5	Forward	Forwards the message text of the highlighted message.
6	Save object	Saves the highlighted object to a folder in My data.
7	Move msg	Moves the highlighted message to another folder, to the SIM card, or to the phone memory
8	Highlight mode	Activates the Highlight mode.
9	Add desktop icon	Creates a desktop icon of the highlighted message.

 Depending on the conditions, some options may be displayed in gray and not be available.


- ▶ The reply facility uses the phone number of the person who sent the message.
- ▶ The Save object Options menu will be displayed only if an object is highlighted.

▶ and ◀ to highlight a phone number, Email address or URL in the message → (MENU)

The columns shows the menu numbers for P: Phone number highlighted, E: Email address highlighted and U: URL highlighted.

P	E	U	Message view Options menu	
1	1	–	Add to phonebook	Adds the highlighted phone number or Email address to a phonebook.
2	–	–	Dial phone number	Dials the selected phone number.
–	–	1	Add to bookmark	Adds the highlighted URL to the bookmarks.
–	–	2	Launch browser	Activates the web browser to access the highlighted URL.
3	2	3	Create message	P: Creates a new SMS/Mail/MMS message with the highlighted phone number in the To field. E: Creates a new SMS/Mail/MMS message with the highlighted Email address in the To field. U: Creates a new SMS/Mail message with the highlighted URL in the message text or in the slide text.
4	3	–	Add desktop icon	Creates a desktop icon of the highlighted phone number/Email address/URL.

Creating a message

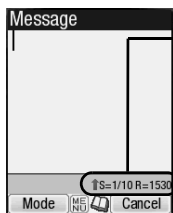

Help area

This area contains the information on the message. **S** indicates the size of the message equivalent to the number of SMS messages, and **R** indicates the remaining number of characters available.

↑ (green)	Indicates that an upper case letter will be input next.
↑ (red)	Indicates the capital lock.
↵ (no arrow)	Indicates that a lower case letter will be input next.

- ▶ To display the Message composer screen, (MENU) 2 and SK1 (→ (MENU) to display the Message composer Options menu)
- ▶ To address the message, highlight the To field → ○ → Input the required phone number → ○
- ▶ To scroll the phone numbers in the To field, ◀ or ▶
- ▶ To key in the message, highlight the Message field → ○ → Key in the message → ○
- ▶ Pressing (MENU) while keying in the To/Message field displays the Message edit Options menu screen.
- ▶ Press SK1 to send the message.
- ▶ When you are in the ABC (normal text) mode, any word entered that is not in the T9 dictionary will be added automatically.
- ▶ When you are keying in your message, press SK1 to change the text entry mode.
- ▶ If you display another screen or receive a call while you are editing a message more than 1 character, the message will be saved automatically in Drafts.

Message composer Options menu

☛ (MENU) 2 SK1 → Highlight To or Message field → (MENU)

No.	Message composer Options menu	
1	Add/Edit	Adds or edits a recipient phone number or a message.
2	Preview msg	Displays a message preview screen.
3	Delete	Deletes the highlighted recipient, message, or object.
4	Delete all	Deletes all the recipients, messages, or objects.
5	Save	Saves the message in Drafts folder.
6	Phonebook	Displays the phonebook list to insert a recipient phone number.
7	Resend list	Inserts a phone number from the redial list.
8	Insert	Inserts a new recipient phone number (To field only).
9	Address list	Displays the recipient of the message (To field only).

☞ Depending on the selected field, some options may be displayed in gray and not be available.

Message edit Options menu

☛ (MENU) 2 SK1 → Highlight To or Message field → ○ → (MENU)

No.	Message edit Options menu	
1	Text colour	Selects the colour of text and background.
2	Text format	Selects the font size (normal, large or small) and font style (bold, italics, underline or strikethrough).
3	Text alignment	Sets the text alignment (left, centred or right).
4	Paste	Pastes the text which has been copied onto the clipboard in the Highlight mode. ☞ This function can be used only when text has been selected in the Highlight mode.
5	Highlight mode	Activates the Highlight mode at the cursor position. ☞ To toggle the highlight mode on/off, SK1 and to go back to the normal mode, CLR ☞ To display the Highlight mode Options menu, (MENU) (see "Highlight mode Options menu" on page 31).
6	Insert object	Inserts Text, Sound, Picture, Animation, Emoticons or Pictograph into the message at the cursor position.
7	T9 Language	Selects the language for T9 text input.
8	Edit settings	Sets the Write mode (Insert or Overwrite) and Clear mode (Backspace or Delete).

☞ Depending on the conditions, some options may be displayed in gray and not be available.

Highlight mode Options menu

☛ (MENU) 2 SK1 → Highlight To or Message field → ○ → (MENU) 5 → (MENU)

☞ The first two options (Text colour, Text format) will operate similar to those in the Message edit Options menu, however, only for the highlighted text.

No.	Highlight mode Options menu	
3	Copy	Copies the highlighted part of text onto the clipboard.
4	Cut	Cuts the highlighted part of text.
5	Delete	Deletes the highlighted part of text.
6	Select word	Selects (highlights) the nearest word to the current cursor position.
7	Select paragraph	Selects (highlights) the nearest paragraph to the current cursor position.
8	Select all	Selects (highlights) the entire text.
9	Save to text file	Saves the highlighted part of text as a text file.

 Depending on the conditions, some options may be displayed in gray and not be available.

Cell broadcast (M27)

Cell Broadcast (CB) messages (e.g. weather reports, news) are sent by the network to all phones in a certain area.

  27

 **Broadcast messages service is network dependent. Please contact your service provider for details.**

i-mode (M3)

Using your phone's browser facility, you can enjoy i-mode services such as browsing information on i-mode sites (programs) and other Internet web pages, and sending/receiving i-mode messages which include the mail and MMS (including SMIL).

 You can download melody files, images, animations, videos and Java™ applications to your phone's memory. Some files with restrictions cannot be saved to your phone's memory, even though they can be downloaded and played or displayed.

 For the definitions of the icons related to i-mode, see "LCD and displayed icons" on page vii.

i-mode operation guide

You can access various i-mode functions by selecting the menus on the main four i-mode related screens such as i-mode screen, i-mode menu screen, iMenu screen and Mail screen. The following table gives an outline of the procedures related to the i-mode services.

Action	Procedure
Browsing the i-mode sites/Internet web pages	
Display the homepage	 Press and hold   You need to set the homepage URL in Home page beforehand (see "Set home page" on page 39).

Action	Procedure
Display a web page	☞ SK2 → 6 → 1 to key in the address, 2 to select an address in the history, or 3 to go to the homepage.
Reload the current page	☞ While browsing a webpage, (MENU) ►► 1
Display the URL of the current page	☞ While browsing a webpage, (MENU) ►► 2
Bookmark a web page	☞ With the web page you want to bookmark displayed, (MENU) 1
Display a bookmarked web page	☞ SK2 → 5 or (MENU) 2 while displaying another page → highlight a bookmark → ○
Save a web page	☞ With the page to save displayed, (MENU) 4
Display a saved page	☞ SK2 → 7 → highlight a saved page → ○
Save an image	☞ With the page including the image to save displayed, (MENU) 3 → ○
Save a phone number	☞ With the highlighted phone number to on the page, (MENU) 5
Display the certificate information of the current page	☞ With a page displayed, (MENU) 6 ☞ You can also refer to a saved page's certificate information by displaying the page and (MENU) 3.
Download a file	☞ Highlight the link to the file to download → ○ → When the download is complete, check that the downloaded file is stored in My data (see page 59) or the Applications screen of Java™ (see page 64).
Returning to the previous screen/ moving forward to the next screen	☞ While connecting to i-mode, ◀ to return to the previous screen (if any), or ▶ to move forward to the next screen (if any).
Mail/MMS	
Create a mail	☞ SK1 → 1 (for details, see "Creating a new mail" on page 33)
Create an MMS	☞ SK1 → 2 (for details, see "Creating a new MMS" on page 34)
Read a mail /MMS	☞ SK1 → 3 → Highlight a message → ○
Check for new mail/MMS	☞ SK1 → 6
Settings for i-mode	
Change the mail settings	☞ SK1 → 7 (for details, see "Mail settings" on page 43)
Change the browser settings	☞ SK2 → 8 (for details, see "Settings" on page 39)
Change the phone settings related to i-mode	☞ (MENU) 3 2 (for details, see page 37)

Mail/MMS operations

Creating a new mail

- ☞ SK1 → 1

- Set the addressee.
 - Highlight the To field →  → key in the destination → 
 - To refer to the phonebook,  → Open phonebook to retrieve the destination
 - To send the mail to more than one addressee,  → Add To/Cc/Bcc
 - To change the To/Cc/Bcc status of an already set addressee, highlight the destination →  → Change to To/Cc/Bcc
 - To delete an already set addressee, highlight the To field →  → Del. address
- Key in the subject.
 - Highlight the Subject field →  → key in the subject → 
- Key in the message.
 - Highlight the Message field →  → key in the message → 
 - To attach a header,  → Attach header
 - To attach a signature,  → Attach sign.
- Attach a file if necessary.
 - Highlight the Attachment field →  → select a file to attach from the My data screen
 - To delete an already attached file, highlight the attachment field →  → Delete attachment
 - To preview the attached file, highlight the attachment field →  → Play/View file
-  You can attach files up to 299 KB in total, or 10 files.
- To send the mail, highlight Send → 
- To save the mail, highlight Save → 
- To delete the currently edited message,  → Del. message

Creating a new MMS

- **SK1** → 2 → The Compose menu screen is displayed
- Using Compose menu options, create an MMS (for details, see the table “Compose menu options” on page 34) → **SK2** → The Compose MMS screen is displayed
- Set the addressee and key in the subject (see “Creating a new mail” on page 33 for details).
- Highlight SMIL →  → The SMIL Compose menu screen is displayed. Use these menus to create slides with combinations of text, image, video and sound..

No.	Compose menu options			
–	Add/Delete media	1	Add/Delete text	Adds new text data or deletes the text data in the text field on the slide.
		2	Add/Delete image	Adds an image file or deletes the image file in the image field on the slide.
		3	Add/Delete audio	Adds a sound file or deletes the sound file in the sound field on the slide.
		4	Add/Delete video	Adds a video file or deletes the video file on the slide.

No.	Compose menu options (Continued)	
–	Exit	Shifts to the Compose MMS screen.
–	Save	Saves the currently created MMS.
–	Play video	Plays the video file on the slide.
–	Preview	Displays the created slides in order from the beginning at the preset playback time for each.
–	Add slide	1 Add slide Adds a new slide after the currently displayed slide.
		2 Insert slide Inserts a new slide just before the currently displayed slide.
–	Delete slide	Deletes the currently displayed slide.
–	Text colour	Selects the Text colour from the 16 different colours.
–	Background colour	Selects the Background colour from the 16 different colours.
–	Set Fit mode	Selects the size in which the image/video is displayed.
		1 Hidden Displays the image/video in the actual size.
		2 Fill Displays the image/video in the reduced size so that the height and width fit into the image/video display area.
		3 Meet Displays the image/video in the reduced size so that the longer side of the height or width fits the corresponding side of the image/video display area.
		4 Slice Displays the image/video in the reduced size so that the shorter side of the height or width fits the corresponding side of the image/video display area.
–	Options	Sets the length of time a slide is displayed, and sets the beginning and end times for text, image or sound within that slide display time.  <i>You cannot set the beginning and end time for video files.</i>
–	Resize region	Changes the region size of the image/video field and the text field, using the ▲ and ▼ keys.
–	Switch positions	Switches positioning of the image/video field and text field on the slide.
–	Previous slide	Displays the previous slide.
–	Next slide	Displays the next slide.

 Depending on the conditions, some options may be displayed in gray and not be available.

 When you finish editing SMIL, **CLR** to return to the Compose MMS screen.

 If necessary, edit the composed MMS using the Edit menu options menu (see “Editing the composed mail/MMS” for details).

Editing the composed mail/MMS

☛ With the Compose mail/MMS screen displayed,  → Edit the mail/MMS using the options menu.

No.	Edit menu options	
–	Send	Sends the mail.
–	Save	Saves the mail being edited to the draft folder.
–	Attach file	Attaches a file to the mail.
–	Delete attachment	Deletes the attached file(s).
–	Play/View file	Plays or displays the attached file.
–	Open phonebk.	Adds the destination directly from the phonebook.
–	Add To/Cc/Bcc	Adds a To/Cc/Bcc field.
–	Change to To/Cc/Bcc	Changes the highlighted Cc/Bcc/To field to a To/Cc/Bcc field.
–	Del. address	Deletes a destination field.
–	Attach header/sign.	Attaches a stored opening sentence at the start or a stored signature at the end of the text.
–	Del. message	Deletes the message of the mail being edited.
–	Del. mail	Deletes the new mail currently edited.

☛ Depending on the conditions, some options may be displayed in gray and not be available.

Reading a received mail/MMS

☛ **SK1** → **3** → The list of mail/MMS in the Inbox folder will be displayed.

☛ Highlight the message to read →  → The message content will be displayed. Scroll the message content.

☛ To view the previous message ◀, to view the next message, ▶

☛ While reading a received mail/MMS in the Inbox folder, you can use various functions. See “Inbox” on page 41.

☛ If Auto play is on (see “Auto play” on page 43), the MMS/SMIL will be automatically played/displayed. If not, press **SK1** to start playing.

☛ You can change the font size by pressing and holding the ◀ and ▶. ▶ enlarges the font size, while ◀ reduces it.

i-mode screen

From the i-mode screen you can change the i-mode related settings of your phone.

☛  **3** → The i-mode screen will be displayed.

No.	i-mode screen menus								
1	i-mode	Displays the i-mode menu screen (For details, see “i-mode menu screen menus” on page 37).							
2	Settings	1	Ringer time	Sets the ringtone duration to 3-10 seconds for incoming mail/MMS.					
		2	Connection No.	Selects the connection number settings to use. The following settings are available:					
				1	Factory setting	Uses the default connection numbers.			
				2/3	User setting 1/2	Uses and changes the following settings.			
						1	Access point		
						2	i-mode server (Gateway address)		
						3	Portal server (i-mode server)		
						4	Mail		
						5	User data	User name	
								Password	
		6	Port No.	HTTP Port No.					
				SSL Port No.					
		3	i-mode lock	Locks the i-mode function, including mail/MMS.					

i-mode menu screen

From the i-mode menu screen you can access to the iMenu/Mail/Message screen, your bookmarks, the entry screen for a URL to be displayed, the access history, the saved pages and the list of Java™ applications.

☛ **SK2** or **MENU** 3 1 to display the i-mode menu screen.

No.	i-mode menu screen menus (Sheet 1 of 3)	
1	iMenu	Accesses the iMenu screen. (See "iMenu screen" on page 39.)
2	Mail	Displays the Mail screen, on which you can display received mail/MMS, saved draft messages and sent messages, and also create new mail/MMS (see "Mail screen" on page 40).
3	Java application	Displays the list of Java™ applications (see "Java™ (M7)" on page 64 for details).
4	SMS	Displays the Message screen, on which you can read received SMS and create new SMS (see "Message (M2)" on page 26).

No. i-mode menu screen menus (Sheet 2 of 3)		
5	Bookmarks	Displays the list of bookmarked web pages.
		Bookmarks Options menu
		1 Open Displays the highlighted bookmark.
		2 Copy address Copies the highlighted bookmark address.
		3 Edit title Edits the title of the highlighted bookmark.
		4 Add desktop icon Creates a desktop icon of the URL of the selected bookmark.
		5 Create message Creates a new message with the highlighted bookmark address in the message text.
		6 Delete one Deletes the highlighted bookmark.
		7 Delete all Deletes all the bookmarks.
6	Go to webpage	Displays the URL you key in, or displays the URL in the address history.
		1 Enter address Prompts you to key in a web page address.
		2 Address history Displays the list of addresses in the access history for you to select from.
		3 Go to home Displays the homepage set in Home page of Settings (See page 39).
		0 Back Returns to the i-mode menu screen.
7	Saved pages	Displays the list of saved pages. Saved pages are stored in your phone memory so you can see them offline.
		Saved pages list Options menu
		1 Open Displays the current saved page.
		2 Edit title Edits the title of the current saved page.
		3 Protect On/Off Protects or unprotects the current page.
		4 Delete one Deletes the current saved page.
		5 Delete all Deletes all the saved pages excluding the protected.
		6 Delete all + Pr. Deletes all the saved pages including the protected.
		Saved pages details Options menu
		1 Save image Saves an image as a file on the current saved page.
		2 Edit title Edits the title of the current saved page.
		3 Certificate info Displays the certificate information on the current saved page.

No.	i-mode menu screen menus (Sheet 3 of 3)		
7	Saved pages (continued)	4	Page info Displays the URL on the current saved page.
		5	Protect On/Off Protects or unprotects the current page.
		6	Delete Deletes the current saved page.
8	Settings	Changes the settings of your browser.	
		1	Set time out Disconnects the connection after the set time. You can set 60 seconds or 90 seconds, or disable this function.
		2	Load images Sets whether to display images contained in web pages.
		3	Wrap text Sets whether to display text as is on web pages and mail/SMIL text, or wrap it to fit your phone's screen.
		4	Certificates Displays the certificate information and validates/invalidates a certificate.
		5	Send terminal info Sets whether to send the terminal information to the Information Providers (IPs).  If you agree to send private information (e.g. production serial No. and SIM No.) to the IPs via the Internet, it may be obtained by others.
		6	Set homepage Validates the homepage and sets the URL.  You can display the homepage by pressing and holding the Side up key from the standby screen.
		7	Video auto play Sets whether to play a video file automatically after the download is completed.
		8	Check settings Displays all the options set for the settings (browser).
		0	Back Returns to the i-mode menu screen (see "i-mode menu screen" on page 37).

 Depending on the conditions, some options may be displayed in gray and not be available.

iMenu screen

From the iMenu screen you can access the various services, and also use the function menus of your browser such as adding a bookmark, saving a web page and creating a message.

 **SK2** or  **3 1** to display the i-mode menu screen → **1** to display the iMenu screen →  to display the browser options menu.

No.	Browser options menu	
—	Add bookmark	Bookmarks the current page.

No.	Browser options menu (Continued)	
–	Bookmarks	Displays the Bookmark list.  <i>This option is displayed only when one or more bookmarks are registered.</i>
–	Save image	Saves an image on the current page.  <i>This option is displayed only when one or more images are displayed on the current screen.</i>
–	Save page	Saves the current page.
–	Add to phonebook	Saves the phone number displayed in the current page in the phonebook.  <i>This option is displayed only when one or more phone numbers are displayed on the current screen.</i>
–	Certificate info	Displays the server certificate of the current page.  <i>This option is displayed only when the current page is a SSL page.</i>
–	Go to webpage	Displays a page by keying in the URL or using the access history (see “Go to webpage” on page 38).
–	Reload	Updates the data on the current page.
–	Page info	Displays the URL of the current page.
–	Add desktop icon	Creates a desktop icon of the URL of the current page.
–	Create message	Displays the Create message screen with the highlighted phone number or Email address in the message text.

 **If you agree to send private information (e.g. production serial No. and SIM No.) to the IPs via the Internet, it may be obtained by others.**

 Pressing CLR or  may not bring back the previous screen. Screen operations depend on the current screen content.

Mail screen

From the Mail screen you can use the i-mode message services.

 **SK1** or  **3 1 2** to display the Mail screen.

 The available options differ depending on the operators.

 If an error occurs while sending mail, it will be saved in the Draft folder as an unsent mail.

 The same mail can be sent to up to five addresses.

 If you save a mail while editing, it will be saved in the Draft folder.

No.	Mail screen menus (Sheet 1 of 5)	
1	Compose mail	Displays the Compose mail screen (see “Creating a new mail” on page 33).
2	Compose MMS	Displays the Compose MMS screen (see “Creating a new MMS” on page 34).

No.	Mail screen menus (Sheet 2 of 5)	
3	Inbox	Displays the list of received mail/MMS.
		Inbox list Options menu
		– Show all Displays all the received mail/MMS.
		– Show unread Displays only the unread mail/MMS.
		– Show read Displays only the read mail/MMS.
		– Show protect. Displays only the protected mails/MMS.
		– Delete one Deletes the currently selected mail/MMS.
		– Delete read mail Deletes all the read mails except protected mails/MMS.
		– Delete all Deletes all the mails/MMS.
		– Title sort Sorts the received mails/MMS by title.
		– Address sort Sorts the received mails/MMS by address.
		– Date sort Sorts the received mails/MMS by date.
		Inbox details Options menu
		– Reply Replies to the received mail/MMS.
		– Reply quoted Replies to the received mail quoted.
		– Reply all Replies to all the received mails/MMS.
		– Reply quoted all Replies to all the received mails quoted.
		– Forward Forwards the received mail/MMS.
		– Delete Deletes the received mail/MMS you are viewing.
		– Save address Saves the address of the sender into the phonebook.
		– Add to phonebook Saves the highlighted phone number into the phonebook.
		– Create message Creates a new mail/MMS with the highlighted Email address or phone number.
		– Save melody Saves the melody attached to the received mail.
		– Save attachment Saves the attached file.
		– Copy message Copies the message text.
		– Copy subject Copies the desired subject text.

No.	Mail screen menus (Sheet 3 of 5)					
3	Inbox (Continued)	–	Copy address		Copies the desired address.	
		–	Play SMIL		Plays the SMIL content based on the content setting.	
			Play SMIL Options menu			
		–	Play SMIL	1	Copy text	Copies the text data on the slide.
				2	Save image	Saves the image file on the slide.
				3	Save audio	Saves the audio file on the slide.
				4	Save video	Saves the video file on the slide.
				5	Play video	Plays the video file on the slide.
		–	Browse SMIL	Plays the SMIL content manually.		
				Browse SMIL Options menu		
				1	Copy text	Copies the text data on the slide.
				2	Save image	Saves the image file on the slide.
				3	Save audio	Saves the audio file on the slide.
				4	Save video	Saves the video file on the slide.
				5	Add to phonebook	Saves the phone number in the slide text.
				6	Create message	Creates a message to the destination in the slide text.
		–	Protect On/Off		Protects or unprotects the received mail/MMS.	
4	Sent mail	Displays the list of sent mail/MMS.				
		Sent mail list Options menu				
		–	Title sort	Sorts the sent mail/MMS by their titles.		
		–	Address sort	Sorts the sent mail/MMS by their first destination addresses.		
		–	Date sort	Sorts the sent mail/MMS by the date they were sent.		
		–	Delete one	Deletes the selected mail/MMS.		
		–	Delete all	Deletes all the sent mail/MMS.		
		Sent mail details Options menu				
		–	Re-edit	Displays the composer to edit the sent mail/MMS again.		
		–	Delete	Deletes the sent mail.		

No. Mail screen menus (Sheet 4 of 5)			
4	Sent mail (Continued)	– Save address	Saves the destination address to the phonebook.
		– Add to phonebook	Saves the phone number and mail address contained in the message part.
		– Create message	Creates a new message to the highlighted Email address or phone number.
		– Copy message	Starts the copy mode in the message part.
		– Copy subject	Starts the copy mode in the subject part.
		– Play SMIL	Plays the SMIL content based on the content setting (see "Play SMIL" on page 42).
		– Browse SMIL	Plays the SMIL content manually (see "Browse SMIL" on page 42).
		– Protect On/Off	Protects or unprotects the received mail/MMS.
5	Draft	Displays the unsent and the saved draft mail/MMS.	
		Draft Options menu	
		1 Delete one	Deletes the selected mail/MMS.
		2 Delete all	Deletes all mail/MMS.
6	Check new mail	Checks if there is any new i-mode messages (mail/MMS) for you stored at the mail server.	
7	Mail settings	Changes the mail settings.	
		1 Edit header	Edits the header to be added at the beginning of a mail, and sets whether to add it automatically. • Highlight the checkbox → ☐ to place a check, to automatically add a header. • Highlight the text box → to edit the header → Edit the text →
		2 Edit signature	Edits the signature to be added at the end of a mail, and sets whether to add it automatically. • Highlight the checkbox → ☐ to place a check, to automatically add the signature. • Highlight the text box → to edit the signature → Edit the text →
		3 Reply marker	Edits the reply markers to be added when replying to a mail with quotations from the original. • Highlight the text box → to edit the reply marker → Edit the text →
		4 Auto play	Sets whether to automatically play or display the sound, image or video file attached, when you open the mail.

No.	Mail screen menus (Sheet 5 of 5)		
7	Mail settings (Continued)	5	Auto reception Sets whether to automatically retrieve a mail after receiving the incoming mail notification.  When this setting is turned on your phone will automatically receive mail. If it is turned off, you will have to manually retrieve from your i-mode service provider using the Check new mail of iMenu screen (see "Check new mail" on page 43).
		6	Receive attachment Sets the attachment file type that can be received.  Highlight the file type →  to place a check.
		7	Attachment data Selects whether to receive Melody For i-mode (MFi) files attached to a mail.
		8	Font size Sets the font size to display the mail/MMS.
		9	Check settings Displays the values set to the above mail settings.
		0	Back Returns to the Mail screen.
0	Back	Returns to the i-mode screen.	

 Depending on the conditions, some options may be displayed in gray and not be available.

i-mode glossary

The following defines the basic terms used in this section.

Term	Definition
Site (program)	An Internet contents page especially designed for i-mode users, which can be accessed from your i-mode top screen of your IP.
Mail	Mail is the messaging service of i-mode. You can not only exchange messages with other cellphones, but also with PCs, PDAs, etc.
MMS	Multimedia Messaging Service lets you send messages with image/video/sound files attached. The MMS type message is also referred to as an MMS.
SMIL	The SMIL lets you combine text, sound, image and video into a slide, to create original slideshows. The message created by SMIL is also referred to as a SMIL. A SMIL message is a kind of MMS message.
Access history	Your phone stores up to 10 URLs you have accessed. You can refer to this list when you want to go to a web page you have accessed recently.
Web page	An Internet contents page compatible to i-mode services, which can be browsed using your phone, including the sites (programs).

Term	Definition
Bookmark	A bookmark contains the URL of a web page. You can save up to 50 bookmarks and use them for easier accesses.
Certificate information	If you are displaying a Secure Sockets Layer (SSL) page designed to enable safe data transmission, you will be able to see its certificate information.
IP	Information Provider. Your IP provides you the i-mode sites (programs).
Home page	A web page that is set in your profile as the page to connect to when you press and hold the Side up key from the standby screen.
Saved pages	You can save up to 20 web pages in your phone memory, for quick off-line access.

Phonebook (M4)

Phonebook types

Your phone can have up to 7 directories stored on your SIM card and in your phone memory:

- Complete (a list of all the numbers stored in the ADN and FDN)
- Personal directories (ADN) in the SIM card
- Personal directories (ADN) in the phone memory
- Service dialling numbers (SDN)
- Fixed dialling numbers (FDN)
- Own number
- Voice mail number

 When viewing any of the directories described, you can switch to the other directories (if your SIM card supports them) by pressing .

 The maximum number of phone numbers that can be stored on a SIM card is the total of the ADN, FDN and SDN directories.

 When you activate the phonebook, the directory which you were referring to the last time will open.

Personal directory (ADN)

These numbers are known as abbreviated dialling numbers (ADN). There are two types of ADN, one is the phonebook stored in the phone memory (the phonebook (Phone)) and the other is the phonebook stored on the SIM card (the phonebook (SIM)).

Phonebook (SIM)

- Up to 255 personal data can be stored in the SIM card.
- Each personal data contains a phone number, a name and a location number.

 The number of phone numbers that can be stored on a SIM card depends on the SIM card capability.

Phonebook (Phone)

Up to 500 personal data can be stored in your phone memory. Each personal data is given a location number (1 to 500), and it can be allocated to a group.

To each personal data, you can set the following:

- 7 phone numbers (Home, Mobile, Work, Data, Fax, Other phone x 2)
- 2 Email addresses
- 2 descriptive information
- LED colour, a CLI picture and a ringer tone

 Up to 10 phone numbers can have a voice recognition recording allocated to them.

Fixed dialling numbers (FDN)

Fixed dialling numbers are a means of limiting which numbers can be called from your phone. With the FDN feature switched on (see page 46), you can call with your phone the numbers you have stored in this phonebook and the emergency number only.


 **Although FDN is supported by your phone, it must be present on your SIM card - check with your service provider.**

Service dialling numbers (SDN)

The numbers stored in the SDN directory are pre-installed by your service provider. They will call numbers and services as agreed with your supplier (e.g. customer enquiries, billing information, sportslines, weatherlines, etc.) and cannot be edited by you.

You will not be able to see the number which will be dialled but only the associated text title.

 **Although SDN is supported by your phone, it must be present on your SIM card - check with your service provider.**

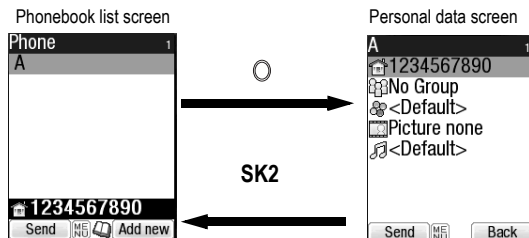

Accessing your phonebook (M4)

You can store personal information in the phonebook of your phone or your SIM card.

Displaying a phonebook directory (M41)

- ☛ (MENU) 4 1 and the appropriate key for the desired directory or  until the required directory is displayed → Highlight the required personal data → 

Displaying information about your phonebook (M42)

- ☛ (MENU) 4 2 to display the information about your phonebook.

Call options (M43)

- ☛ (MENU) 4 3 to display the Call options screen.
- 🔗 For details on the Call options screen, see “Call options (M43)” on page 9.

Phonebook list Options menu

- 🔗 When editing the data in FDN, you will be prompted to enter PIN2 code.
- 🔗 Depending on the condition, some options may be displayed in gray and not be available.

- ☛ (MENU) 4 1 and the appropriate key for the desired directory or  until the required directory is displayed → Highlight the required personal data → (MENU)

No.	Phonebook list Options menu		
1	Add new	Adds a new personal data.	
2	Edit	Displays the data edit screen to edit the currently highlighted personal data.	
3	Copy	Copies the currently highlighted personal data or the whole list to the following:	
		1	Current copy  Press the appropriate key for the desired destination (SIM, Phone, FDN, own number or voice mail number) → Key in the desired location number → 
		2	Package copy  Press the appropriate key for the desired destination (SIM, Phone or FDN) → Key in the desired location number →   If you select the Phone, you have to select whether to just copy the first phone number or copy all the registered numbers.
4	Move	Moves the currently highlighted personal data.  Press the appropriate key for the desired destination (SIM, Phone, FDN, Own number or Voice mail number) → Key in the desired location number → 	

No.	Phonebook list Options menu (Continued)		
5	Delete	Deletes personal data.  This option operates only when the phonebook (Phone) or phonebook (SIM) is displayed before pressing to display the Phonebook list Options menu screen.	
		1 Delete current	Deletes the currently highlighted personal data.  SK1 to complete the operation.
		2 Delete all	Deletes all the data in the list.  SK1 to complete the operation.  Only available for phonebook (Phone)/phonebook (SIM).
6	Groups	Displays the list of groups.  Highlight the group you wish to edit → SK1 and the appropriate number for the required option.  If the personal settings for the LED colour, CLI picture, or the ringer are also set, they have priority over those of the Group settings.	
		Group n field	Renames the selected group name.  Key in the name of the group → 
		Info field	Sets the information on the selected group.
		LED field	Selects the LED colour of the selected group.  1 to change the LED colour → Highlight the desired colour →  → SK1 to set the change
		Picture field	Selects the CLI picture of the selected group.  1 to change the CLI picture → Highlight the desired picture →  → SK1 to set the change
		Sound/Video field	Selects the ringer for the selected group.  1 for selecting the Sound or 2 for the Video → Highlight the desired ringtone or video →  → SK1 to set the change.
7	Sort	Sorts the personal data in the order of alphabets, or location number.  Sorting may take time depending on the number of personal data entries, the number of characters contained in each entry and the type of language.	
		1 Alphabetic	Sorts the personal data alphabetically.  You can jump directly to a name beginning with specific characters by pressing the appropriate key (e.g. press 5 once to jump to names beginning with J, or twice to jump to names beginning with K).

No.	Phonebook list Options menu (Continued)								
7	Sort (Continued)	2	Location Sorts the personal data in memory location number.						
8	Location	Searches for the personal data by the location number. Key in the desired location number → SK1 to display the Phonebook list screen with the selected personal data highlighted. Press to call the phone number displayed in the Help area. <i>When viewing the phonebook (Phone) list screen, use the ◀ and ▶ keys to display the other stored numbers and Email addresses, if any, in the same personal data for the highlighted name. Also, when an Email address is displayed in the Help area, you can press SK1 to create a new MMS or new Mail.</i>							
9	Show	Displays phonebook information. <table><tr><td>1</td><td>Summary</td><td>Displays the summary of phonebook contents.</td></tr><tr><td>2</td><td>Voice tag list</td><td>Displays the telephone numbers with the voice recognition tags recorded.</td></tr></table>		1	Summary	Displays the summary of phonebook contents.	2	Voice tag list	Displays the telephone numbers with the voice recognition tags recorded.
1	Summary	Displays the summary of phonebook contents.							
2	Voice tag list	Displays the telephone numbers with the voice recognition tags recorded.							
0	IR send	Sends the currently highlighted personal data to another device through the IR port. See also: "IR send" on page 16.							
*	Add desktop icon	Creates a desktop icon of the highlighted personal data.							

- When you have chosen the personal data which includes more than one phone number/Email address for a destination that allows only one number to be stored, the Origin number screen will be displayed where you can choose item to be copied.
- When you copy or move a phonebook entry to the phonebook (Phone), the Number type screen will be displayed where you can choose the number type.
- When copying a personal data from the phonebook (Phone) to other directories, only the items which are supported by the destination directory can be copied.
- If you choose to copy all phone numbers and there is any personal data which includes more than one phone number/Email address for a destination that allows only one number stored, a new personal data for each number is created in the destination directory to store the number(s).

Adding a new personal data

- 4 1** and the appropriate key for the directory or → **SK2** → Select the directory to which you wish to store the personal data → Enter the name and other necessary information → **SK1** (see "Editing an existing personal data" below).

- It is best to store numbers using the international number format.

Editing an existing personal data

- 4 1** and the appropriate key for the desired directory or until the required directory is displayed → Highlight the required personal data → **2**

- For the phonebook (SIM) and FDN, only the name, phone number and the location number can be added or edited in the following procedures.
- For the own number and voice mail number settings, only the name and phone number can be added or edited in the following procedures.

Adding/editing phone numbers, mail addresses & personal information

- Highlight the field you wish to edit or add information to → ○
- Add the required number or information or make necessary changes to the selected field → ○
- Highlight another field to make further changes, if required → **SK1** to save the changes.
- You can also edit the Name, Phone number, Email address and Info fields by the above method.

Allocating a group

- Highlight the Group field → ○ → Highlight the group you wish to add the current personal data to → ○ → **SK1** to save the changes.

Voice recall functions

Adding a Voice recall recording

- Highlight the Voice tag field → ○ → 1
- Say the name you wish to record as a voice tag → Say the name again for confirmation according to the displayed message.

Playing a Voice recall recording

- Highlight the Voice tag field → ○ → 2

Deleting a Voice recall recording

- Highlight the Voice tag field → ○ → 3 → **SK1** to save the changes.

Up to 10 voice tags can be stored.

You can check the number of stored voice tag and list of those tags (see "Displaying information about your phonebook (M42)" on page 47).

Allocating a LED colour

- Highlight the LED colour field → ○ → 1 → Highlight the desired colour → ○ → **SK1** to save the changes.

Allocating a CLI picture

- Highlight the Picture field → ○ → 1
- Highlight the desired CLI picture → **SK1** to preview the picture or ○ to select the highlighted picture → **SK1** to save the changes.
- A ✓ is displayed on the icon for which the item is currently selected.
- If both the CLI picture and the Video are set, the Video will be displayed on the screen.
- See also: "Pictures (M61)" on page 59.

Allocating a ringtone or video

- Highlight the Sound/Video field →  1 to display the ringtone list screen or 2 to display the video list screen
 - Highlight the desired ringtone or video → **SK1** to preview → **SK1** again to stop the preview and select, or **SK2** to stop the preview without selecting
 - SK1** to save the changes.
-  A ✓ is displayed on the icon for which the item is currently selected.
-  See also: "Sounds (M64)" on page 61.

Allocating a location number

- Highlight the Location number field →  Key in the desired location number →  **SK1** to save the changes.

Personal data Options menu

-   **4 1** and the appropriate key for the desired directory or  until the required directory is displayed
- Highlight the required data →  Highlight the required field → 

No.	Personal data Options menu	
1	Call	Calls the highlighted phone number.
2	Create message	Creates an SMS/Mail/MMS to the highlighted phone number or Email address.  For details on the procedures to create new messages, see "Creating a message" on page 30, "Creating a new mail" on page 33 and "Creating a new MMS" on page 34.  You cannot send an SMS to the Email address.
3	IR send	Sends the selected personal data to another device through the IR port.
4	Edit	Edits the selected personal data.
5	Copy	Copies the selected phone number(s)/Email address(es).  Press the appropriate key for the desired destination (SIM, Phone, FDN, Own number or Voice mail number) → Key in the desired location number → 
6	Move	Moves the currently highlighted personal data.  Press the appropriate key for the desired destination (SIM, Phone, FDN, Own number or Voice mail number) → Key in the desired location number → 
7	Delete current	Deletes the selected personal data.
8	Add desktop icon	Creates a desktop icon of the selected personal data.

 See also: "Phonebook list Options menu" on page 47 for the operation of 4 (Edit), 5 (Copy), 6 (Move) and 7 (Delete current).

Scratchpad number

Your phone has a scratchpad facility that enables you to take down a phone number during a call and then make a call to it when you have finished. This scratchpad number can be stored in memory for future use.

Noting & calling a scratchpad number

- During a call, key in the number to be placed in the scratchpad. It will be shown on your phone's screen →  when the call is finished. The number will still be displayed. Press  to dial the displayed number.

Voice mail (M417)

Voice mail function enables you to forward received calls to the Voice mail centre, and the caller can leave voice messages in your voice mail mailbox. You may be notified by an icon on the standby screen if the caller leaves a voice message.

 **The voice mail service is network dependent. Contact your service provider for details on your voice mail number.**

Setting the Voice mail number

 This function is available when the Voice mail number has not been set.

-   4 1 7 → Highlight the required line →  twice →  → key in the voice mail number →  → **SK1** to save the change.

Forwarding a call to the Voice mail centre

-  Set the voice mail centre number (see "Setting the Voice mail number" for details) → Set up Call diversion (see "Call diversion (M161)" on page 11 for details). When you receive a call set to be diverted, the call will be diverted to the voice mail centre.

Retrieving a Voice mail

 This function is available when the Voice mail number has been set.

-   4 1 7 → Highlight the required line → 

 You can also retrieve a voice mail by pressing and holding 1 from the standby screen.

 To set up the line to call the voice mail centre, see "ALS setup" on page 20 for details.

Camera (M5)

Camera function enables you to take pictures or record videos and save them as Joint Photographic Expert Group (JPEG) files and 3rd Generation Partnership Project (3GPP) files respectively. You can enjoy the picture and video files in many ways: send them attached to an MMS or Mail, set a picture file as the wallpaper for your phone, etc.

Notes on using the camera

Handling the Camera



Your phone's camera is constructed using extremely high precision technology, but there may be lines or dots on the screen that appear permanently dark or bright. Note also that the amount of noise in the image (white lines etc.) may increase noticeably when you take pictures in dimly-lit places.



Be careful not to apply force to the lens when closing your phone. This could damage the lens.



Fingerprints or grease on the lens can result in focusing problems or dark images. Wipe the lens clean with a soft cloth before use.



The image quality may be degraded after your phone has been left for a long period in a warm place.



Exposing the camera to direct sunlight for a long period could discolour the camera's internal colour filter and cause discoloured images.



Camera mode is automatically cancelled if none of the phone's keys are pressed for 3 minutes or longer.

Precautions when taking pictures/recording videos



You cannot switch the camera's shutter sound off. The shutter makes a clicking sound when you take a picture or start/end a video recording, even when the phone is in Meeting mode.



Avoid camera shake. Moving the phone when you take a picture will result in a blurred image. Hold the camera firmly to keep it still when you take a picture, or use the auto timer to take the shot.



As there is a slight delay from the time you press the shutter (○) until the picture is actually taken, do not move the camera until you hear the shutter sound.



If taking a picture with not enough light, try to hold the phone still as much as possible, and for a longer period of time after the shutter sound: the shutter speed may be slower in a darker environment.



Note that if you attempt to shoot directly into a strong light source, such as the sun, another bright light or the high reflecting target with strong light, the image may contain washed-out white highlights or be disrupted.



While recording, be careful not to cover the mouthpiece of your phone as it is used as the microphone to record sound along with the video.

Copyright information

-  Images and videos shot or recorded on your phone cannot be used in ways that infringe copyright laws without the consent of the copyright holder, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use.
-  Users are also asked to note that the transfer of images protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.
-  **Be considerate of other people's privacy when you take a picture or record a video using the camera of your phone and send it to others.**

Taking a picture (M51)

-  To activate the camera function, press and hold **Side up** or press  **5 1**
-  Look into the camera view finder screen and adjust the camera position to place the target on the screen.
-  You can switch the camera view finder screen between the main-LCD and the 2nd-LCD by pressing *****.
-  You can take a picture while the phone is closed.
-  Hold the phone still → To use the shutter,  or **Side up** → Check the picture → If successfully taken,  → Saved as a JPEG file in the Pictures
-  After taking a picture, pressing **SK1** will display the Compose mail screen, and pressing **SK2** will discard the picture.
-  The default file name for the picture is the date, month, year and sequence number. When you take pictures in burst mode, the saved files will be named by the default file names plus a consecutive two-digit number at the end.
-  If a call comes in while you are checking or saving a photographed image, image storage is cancelled. When this occurs, the next time you select camera function a message appears to say that you have an image that was not stored, allowing you to check and store the image.
-  Before taking a picture, you can switch to the video camera function by pressing **SK2**. This use of **SK2**, however, is invalid if the self-timer function is activated.

Operations when taking a picture

-  To turn the light on or off, **SK1** or **Side down**
-  Take care not to hold the light too close to your or other people's eyes when the light is lit.
-  To zoom in and out,  or 
-  You can also select x1,x2,x3 or x4 magnification from the Zoom setting on the Camera Options menu.
-  To turn on/off the camera view finder on the full screen, press **#**.
-  Depending on the photo size, there may be parts not seen on the full screen view finder display in the saved picture.
-  To control the brightness level of the picture,  or 

Camera Options menu (before taking a picture)

No.	Camera Options menu (before taking a picture)	
1	Single mode/Burst mode	Switches the shooting mode to Single/Burst mode (serial shooting).
2	Shoot environment	Changes the camera settings to suit the environment. Select from Standard, Person, Room or Darkness.
3	Effect	Applies special effect to the picture. Select from Off, Sepia, Monochrome, Negative film, or Posterization.
4	Photo size	Sets the picture size to Sub-QCIF (128x96), QCIF (176x144), Wallpaper (176x220), CIF (352x288), or VGA (640x480).  You cannot use the Zoom function for VGA, and you can select only x1 or x2 magnification for Wallpaper and CIF.  You cannot use the Frame and Burst mode functions for CIF and VGA.  You cannot use the Full screen function for Sub-QCIF and QCIF.  If you select Wallpaper, CIF or VGA, the picture on the camera view finder screen will be displayed as a smaller picture than the actual size. Also on the camera view finder screen, the picture size before shooting differs from the size after shooting.
5	Image quality	Sets the image quality to Super fine, Fine, Normal, Economy or Super economy.
6	Frame	Selects whether to use a frame when taking pictures, and sets the desired frame with which a picture will be taken.
7	Self timer/Self timer cancel	Activates or deactivates the self-timer function.
8	Sound	Selects the shutter sound and self timer sound.
9	Pictures	Displays the Pictures screen.
0	Other settings	Add desktop icon: Creates a desktop icon of the camera function on the standby screen. Automatic save: Selects whether to save taken pictures automatically or not. Light: Turns the light on or off. Brightness: Changes the brightness level of the picture between -2 and +2. Zoom: Changes the zoom magnification from x1, x2, x3 or x4. Thumbnail view: Selects whether to display the pictures taken in the Burst mode as thumbnails or slides. Video: Activates the video function. Flicker control: Selects 50Hz, 60Hz or Auto to prevent flickers when taking a picture under a fluorescent light.
*	Switch finder	Selects whether to display the camera view finder on the main-LCD or the 2nd-LCD.  On the 2nd-LCD view finder, the object appears as a mirrored image.

No.	Camera Options menu (before taking a picture) (Continued)	
#	Full screen	Turns the Full screen on or off.

 Depending on the conditions, some options may be displayed in gray and not be available.

Camera Options menu (after taking a picture)

No.	Camera Options menu (after taking a picture)	
1	Save current	Saves the currently displayed picture.
2	Save all	Saves all pictures taken in Burst mode.
3	Create message	Sends the file attached to a mail (see page 33).
4	Set as wallpaper	Sets the picture as the wallpaper.
5	Display as normal image/ Display as mirror image	Selects whether to display the taken picture as a normal or mirror image on the main-LCD preview screen when you select the 2nd-LCD as a camera view finder.
6	Save as mirror image	Saves the picture as a mirror image when you select the 2nd-LCD as a camera view finder.
7	Thumbnail view	Selects whether to display the pictures taken in the Burst mode as thumbnails or slides.
8	Automatic save	Selects whether to save taken pictures automatically or not.
9	Pictures	Opens the Pictures folder in My data.

 Depending on the conditions, some options may be displayed in gray and not be available.

Recording a video (M52)

Recording a video

 **To record a video, keep your phone open at all time. Unlike taking a picture, you cannot record a video while the phone is closed.**

-  Press and hold **Side up** then **SK2**, or press  **5 2** → Look into the view finder screen and adjust the camera position.
-  You can switch the camera view finder screen between the main-LCD and the 2nd-LCD by pressing *****.
-  To start recording, **○** or **Side up** → The progress bar will show the ratio of how much you have recorded already.
-  While recording, be careful not to cover the mouthpiece of your phone as it is used as the microphone to record sound along with the video.
-  While recording, the key tones are deactivated.
-  Move the camera to capture the scenes you want → To stop recording, **○** or the **Side up**
-  After the set video file size is reached, the recording automatically stops.
-  After recording, pressing **SK1** will replay the recorded video, and pressing **SK2** will display a new MMS editor screen with the video file attached (the video file size must be set to Mail).

-  While replaying, you can fast forward by pressing  or rewind by pressing . Pressing **SK1** or  will stop the fast forwarding/rewinding. Then, pressing **SK1** will restart and continue the replay.
-  You can discard the recorded video by pressing  or **CLR**.
-  To save the recorded video, . The recorded video is saved as a 3GPP file in the Videos - My movie folder in My data (see page 59).
-  Pressing **#** before/while playing a video file will enlarge the replay screen size, and pressing **#** will return the screen size to normal.
-  The video file will be saved as a file named from the date, month, year and sequence number.
-  For the operations while replaying the video, see "Videos (M62)" on page 60.
-  For the operations while recording a video, see "Operations when taking a picture" on page 55.
-  If a call comes in while you are checking or saving a video, video storage is cancelled. If this occurs, the next time you select camera function a message appears to say that you have a video that was not stored, allowing you to check and store the video.
-  Before recording a video, you can switch to the camera function by pressing **SK2**. This use of **SK2**, however, is invalid if the self-timer function is activated.

Operations when recording a video

-  To turn the light on or off, **SK1** or **Side down**
-  Take care not to hold the light too close to your or other people's eyes when the light is lit.
-  To zoom in and out,  or 
-  To control the brightness level of the picture,  or 

Camera Options menu (before recording a video)

No.	Camera Options menu (before recording a video)	
1	Shoot environment	Changes the camera settings to suit the conditions. Select from Standard, Person, Room or Darkness.
2	Effect	Applies special effect to the video. Select from Off, Sepia, Monochrome, Negative film, or Posterization.
3	Screen size	Sets the video screen size to Sub-QCIF (128x96) or QCIF (176x144).
4	Video file size	Sets the video file size to Fast mail or Long mail.
5	Quality	Sets the video quality to High or Standard.
6	Self timer/Self timer cancel	Activates or deactivates the self-timer function.
7	Self timer sound	Selects the self timer sound from Sound1, Sound2 or Sound3.
8	Videos	Opens the Videos folder in My data.
9	Other settings	Creates a desktop icon of the camera function on the standby screen, changes the Light, Brightness and Zoom settings, activates the camera function, and selects the frequency or auto setting of the Flicker control.
0	Switch finder	Selects whether to display the viewfinder on the Main-LCD or the 2nd-LCD.

 Depending on the conditions, some options may be displayed in gray and not be available.

Camera Options menu (after recording a video)

No.	Camera Options menu (after recording a video)	
1	Save	Saves the currently displayed video.
2	Create message	Sends the file attached to a mail message (see page 33 and see page 34).
3	Set as wallpaper	Sets the video as the wallpaper.
4	Full screen	Selects whether to enlarge the replay screen size.  You cannot use the Full screen function for QICF.
5	View detail	Displays detailed information on the selected video.
6	Videos	Opens the Videos folder in My data.

My data (M6)

Using My data, you can playback sound and music (MP3) files, or display pictures and videos downloaded from the Internet or captured with the camera function of your phone.

Pictures (M61)

The Pictures function allows you to display images and animations, which were obtained with the camera function of your phone, received as a file attached to MMS messages, or downloaded from the Internet. The images can also be edited using this function. From the Pictures function you can also attach images and animations to MMS messages you compose. There are five pre-set folders: Photo, Preset, Download, Frame and Stamp.

Displaying the Pictures view screen

-  ▼ 1 or  6 1 → Highlight a folder → ► or ○ → Highlight an image file you wish to display → ○
-  To display the previous/next image file, ▲ or ▼

 When the flat view function is activated, the Pictures folder top screen is not displayed. The list of all the stored image file is displayed.

 If you wish to move to another hierarchy folder while the Thumbnail view is turned off, use ◀ and ▶

Cutting the image

-  Highlight or display the image file you wish to edit →  1 3 → Select the image size → A frame indicating the cut area appears on the preview screen.
-  Move the frame position → ○ → SK1 if the image is favorable

- ☞ When you select Free, a cross indicator appears on the preview screen. Move it to the point to start a frame and ○ to confirm the position. Then, expand the frame into the required size and ○ to confirm.

Reducing the image size

- ☞ Highlight or display the image file you wish to edit → (MENU) 1 4 → Select the image size → **SK1** if the image is favorable

Rotating the image

- ☞ Highlight or display the image file you wish to edit → (MENU) 1 5 → **SK1** to rotate the image 90 degrees clockwise
☞ Keep pressing **SK1** until the image is at the required angle → ○ to confirm

Decorating the image with stamps

- ☞ Highlight or display the image file you wish to edit → (MENU) 1 6
☞ To apply a marker stamp, 1 → Highlight the required stamp → **SK1**
☞ To apply a text stamp, 2 → Key in the text (or insert emoticons: see "Insert object" on page 31 for details) → ○ → The text stamp position is displayed in centre
☞ Move the stamp position → ○ to confirm → The text stamp preview is displayed again. Repeat applying if necessary. → **SK1** when finished applying the text stamp (the text stamp preview will not be applied this time)

Adding a frame to the image

- ☞ Highlight or display the image file you wish to edit → (MENU) 1 7 → Highlight a frame → ○ to preview the resulting image → Scroll through the various frames by ▲ and ▼ → ○ to confirm.

Saving the edited image

- ☞ After any edition, **SK1** or ○ to save the edited image → Select the Save Quality → Edit the name (if required) → ○

Videos (M62)

In the following section, how to playback video files (videos) stored in your phone is described. You can either record videos using your phone, download them from the Internet, receive them attached to MMS messages. There are two pre-set folders: My movie and Download.

Replaying the video files

- ☞ ▼ 2 or (MENU) 6 2 → Highlight a folder → ► or ○ → Highlight a video file you wish to replay → ○ → The video file will be replayed
☞ When the flat view function is activated, the Videos folder top screen is not displayed. The list of all the stored video files is displayed.
☞ If you wish to move to another hierarchy folder, use ◀ and ▶
☞ Pressing # before playing a video file will enlarge the replay screen size, and pressing # again will return the screen size to normal.

 For the definitions of the icons displayed while replaying, see “LCD and displayed icons” on page vii.

Operations while replaying video

-  To stop, **SK2**
-  To pause, **SK1** → While pausing, **SK1** again to restart and continue the replay.
-  To fast forward/rewind, ◀ or ▶ → **SK1** or  will stop the fast forwarding/rewinding.
-  To adjust the volume, **Side** keys.
-  To display the previous/next file, ▲ or ▼

Music (M63)

In the following section, the procedures to display and play your music files from the Music folder are described.

 For details, see “Music player (M81)” on page 66.

Selecting and playing a music file

-  ▼ 3 or  6 3 → Highlight the music file you want to play → 

 When the flat view function is activated, the Music folder top screen is not displayed. The list of all the stored music files is displayed.

Operations while playing a music file

-  To stop, **SK2**
-  To adjust the volume, **Side** keys.
-  To replay the previous/next file, ▲ or ▼

Sounds (M64)

In the following section, procedures to playback and delete desired sound items are described. There are three pre-set folders: Download, Preset and Voice memo.

Selecting and playing sound

-  ▼ 4 or  6 4 → Highlight a folder → ▶ or  → Highlight a sound file you wish to replay → 

 When the flat view function is activated, the Sounds folder top screen is not displayed. The list of all the stored sounds files is displayed.

 If you wish to move to another hierarchy folder, use ◀ and ▶

 When a folder is highlighted, you cannot use **SK1**.

Operations while playing sound

- To stop, **SK2**
- To adjust the volume, **Side** keys.
- To replay the previous/next file, **▲** or **▼**

File selector Options menu

- Display the Pictures/Videos/Sounds list screen → 

No.	File Selector Options menu	
1	Edit item	Rename item: Edits the User title or File name of the selected folder or file. Set protection: Changes the protection settings of the selected folder or file. Cut: Cuts the selected image into Sub-QCIF (128x96), QCIF (176x144), Wallpaper (176x220), or Free. Reduce: Reduces the selected image to fit within Sub-QCIF (128x96), QCIF (176x144), or Wallpaper (176x220) Rotate: Rotates the selected image. Stamp tool: Adds a marker or text stamp on the selected image. Frame: Sets a frame to the selected image.
2	Use item (Pictures)	Uses the selected file by setting as wallpaper or adding to desktop. Set as wallpaper: Sets the selected image to be the main-LCD wallpaper. Add desktop icon: Creates a desktop icon for the selected image on the standby screen. IR send: Sends the selected image through the IR port to other devices or a cellphone.
2	Use item (Videos)	Uses the selected file by setting as ringtone or as wallpaper. Set as ring tone: Sets the selected video to be the ringer tone. Set as wallpaper: Sets the selected video to be the main-LCD wallpaper. IR send: Sends the selected video through the IR port to other devices or a cellphone.
2	Use item (Sounds)	Uses the selected file by setting as SMS or MMS tone. Set as ring tone: Sets the selected sound to be the ring tone. Set as SMS tone: Sets the selected sound to be the SMS tone. Set as Mail tone: Sets the selected sound to be the Mail tone. IR send: Sends the selected sound through the IR port to other devices or a cellphone.
3	Create message	Sends the file attached to a mail.
4	Delete item	Deletes the selected file and folder.
5	Delete all	Deletes all the files in the current folder.

No.	File Selector Options menu (Continued)	
6	Copy item	Copies the selected file to any folder.
7	Move item	Cuts the selected file and pastes it into any folder.
8	Move all	Cuts all the files in the current folder and pastes them into any folder.
9	Create folder	Creates a new folder under the current folder.
0	Storage detail	Displays the current storage information of your phone memory.
*	View detail	Displays the details of the selected folder or file.  You can also display the details on the highlighted folder or file by pressing * without displaying the Options menu.
#	Options	Sorting order: Sorts the files by date or alphabetically. Info column: Sets whether to display the second column on the list screen, and the information to be shown there. None: No second column showing Size: Approximate size of the file Type: File type  You can also change the information on the second column by pressing # without displaying the Options menu. Thumbnail view: Displays the files as thumbnails. Flat view: Displays the list of all the stored image files regardless of the folder hierarchy. Save options: Saves the current option settings. Reset options: Resets the option settings.

 Depending on the conditions, some options may be displayed in gray and not be available.

 Neither protected data, preset data nor data in sub-folders can be deleted or moved.

Java™ (M7)

You can download Java™ applications (games etc.) from i-mode sites and run them on your phone.

Programs (M71)

How to run software

To run a software (Java™ application), perform the following.

- ☛ (MENU) 7 1 or press and hold **Softkey 2** → Highlight an application containing the software you want to run → ► or ○ → The software menu will be displayed.
- 📖 When you display the Java™ applications list screen for the first time after downloading a program(s), it may take a while for your phone to verify the program(s). A message will be displayed during this process, and you may activate the program(s) after it is completed.
- ☛ Highlight the software you want to run → ► or ○ → The software will start.
- ☞ **After downloading the software, always make sure that you check the downloaded program is displayed in the Applications screen.**
- 📖 When you display the Applications screen for the first time after downloading a program(s), it may take a while for your phone to verify the program(s). A message will be displayed during this process, and you may activate the program(s) after it is completed.
- ☞ **Do not remove the battery while the software is running as data to that point may not be saved.**
- 📖 While the software is active, the Java™ operation icon is displayed (see page vii).

Java™ System menu

- ☛ (MENU) 7 1 → Highlight an application → (MENU)

No.	System menu	
1	Description setting	Selects whether to display the information of the selected application.
2	Delete all	Deletes all the applications.
3	Storage status	Displays the status of Java™ applications currently stored in your phone.
4	Trace info.	Displays the trace information.
5	About	Displays the information of the Java™ system.

📖 Depending on the conditions, some options may be displayed in gray and not be available.

Application menu

- ☛ (MENU) 7 1 → Highlight an application you want to run → ► or ○ → **SK 1**

No.	Application menu	
1	Properties	Displays the information of the selected software.

No.	Application menu	
2	Upgrade	Make an enquiry on whether the selected software has an upgrade. If there is, starts downloading the data.
3	Delete	Deletes the selected software.
4	Network connection	Permits/prohibits the Java™ application software to connect to the network.  Press 1 to enable the software to connect to the network.  Press 2 to disable the software to connect to the network.
5	Auto start setting	Enables or disables the automatic start of a complying Java™ application.

 Depending on the conditions, some options may be displayed in gray and not be available.

Prog backlight (M72)

You can set the backlight mode of your phone.

  **7 2** → **1** to set your phone to follow the normal backlight setting, or press **2** to let the backlight be controlled by the Java™ application.

 If you set your phone to follow the normal backlight setting, the current power save settings will be active (see “Power saving (M15)” on page 23).

 When the software is not running, the backlight operation depends on your phone's backlight settings.

Accessory (M8)

Music player (M81)

This feature allows you to play MP3 music files saved in the Playlist. You can add MP3 music files saved in the Music folder of My data to the Playlist (see "My data (M6)" on page 59). You can also create a desktop icon of the Music player function on the standby screen.

  **8 1** → Highlight a music file and **SK1** to play and **SK2** to stop.

 If there are no music files saved in the Playlist, the Playlist screen will be displayed.

Music player Options menu

  **8 1** 

No.	Music player Options menu	
1	Playlist	Displays a list of MP3 music files.   to add, move, delete or display the properties of the selected music file, or SK1 to add an MP3 music file.  You can save up to 30 MP3 music files in the Playlist.
2	Play mode	Normal: Plays all the music files in order from top to bottom of the Playlist once. Repeat all: Plays all the music files in the Playlist repeatedly. Repeat one: Plays the selected music file repeatedly.
3	Equalizer	Selects from Rock , Jazz , Pop and Off to obtain the desired tone.  The selected Equalizer setting applies to all the music files in the Playlist.
4	Add desktop icon	Creates a desktop icon of the Music player function on the standby screen.

 Depending on the conditions, some options may be displayed in gray and not be available.

Playlist Options menu

  **8 1**  **1**

No.	Playlist Options menu	
1	Add item	Adds a music file to the Playlist.
2	Move item	Moves the highlighted music file in the Playlist.
3	Delete item	Deletes the highlighted music file from the Playlist.
4	Delete all	Deletes all the music files from the Playlist.

No.	Playlist Options menu (Continued)	
5	View detail	Displays the properties (file name, title, artist name and recording time) of the highlighted music file.

Calculator (M82)

You can perform addition, subtraction, multiplication and division with the calculator. It also has a memory function.

 (MENU) 8 2

 The calculator can display a result of up to 9 digits. If a calculation results in a number exceeding the maximum, the screen displays error in the calculation field.

Calculator Key Assignment

For calculator function, the keys are assigned different functions. The following shows the key assignment:

Key	Operation	Key	Operation
	Addition (+)		Subtraction (−)
	Multiplication (×)		Division (÷)
	Equals to (=)	SK2	Memory Addition (2 nd)/Memory Store
SK1	Memory Recall (2 nd)/Memory Cancel		Percent (%)
(MENU)	Inversion (±)		Exit calculator
	Decimal Point (.)	CLR	Delete digit (if held, all clear)

Clock alarm (M83)

This feature enables you to switch the clock alarm function on/off and to set the time, repetition and alarm tone.

Turning the alarm on/off

 (MENU) 8 3

Clock alarm setting	
On/Off	Turns on or off the alarm.
Set time	Sets the time (in 24 hour format) at which the alarm will sound.
Set alarm tone	Sets the melody to be played when the alarm occurs (optional). See “Sounds (M64)” on page 61

Clock alarm setting (Continued)	
Alarm repeat	Selects alarm repeat for once, daily or day of the week. You can select more than one day of the week at the same time. You can remove the check by highlighting and pressing again.
Enter alarm text	Sets the message (e.g. Wake up!) which is displayed when the alarm occurs (optional).

When all settings are done, **SK1** to save the setting.

The selected melody will be played when the alarm occurs if the ringer is turned on based on the current phone mode. If vibration is turned on, you will be notified of the alarm by vibration.

The phone follows the volume and vibration settings of the currently selected phone modes.

Even if the phone has been switched off, the phone automatically switches itself on and sounds the alarm or vibrates at the specified time.

You can stop the alarm tone or vibration by pressing any key.

Scheduler (M84)

Scheduler enables you to enter reminders and appointments for particular time and date.

Adding a new event

8 4 → Highlight the day → to display the day's schedule list screen (if any) → **SK1**.

Scheduler setting	
Event date/time	Sets the day, month, year and time (in 24 hour format) of the event.
Description	Sets the event description (optional).
Repeat	Selects repeat for One time only, Daily, Weekly or Monthly.
Reminder	Turns on or off the reminder.
Reminder tone	Associates a reminder tone with an event. You can set the reminder tone only when the Reminder is turned on.
Private	Sets the event as a private event. Place a check to set the event as a private event. To set the event as a public event, do not place a check.

When all settings are done, **SK1** to save the setting.

The selected melody will be played when the scheduled event occurs if the ringer is turned on based on the current phone mode. If vibration is turned on, you will be notified of the event by vibration.

The phone follows the volume and vibration settings of the currently selected phone modes.

-  If the phone has been switched off, the phone does not switch itself on to sound the reminder or vibrate at the specified time.
-  You can stop the reminder tone or vibration by pressing any key.
-  If the event is a private event, the reminder will be sound at the specified time but the entered description will not be displayed on the LCD. You are prompted to enter the security code to view the details of the private event.

Viewing the scheduled events

-   **8 4** → Highlight a day
-   to display the day's schedule list screen (**SK1** to display the previous monthly/weekly view screen or **SK2** to display the next monthly/weekly view screen).
-   to display the detail screen of the highlighted schedule. (To display the previous/next day's schedule list screen, ◀ or ▶)

Scheduler Options menu

-   **8 4** → Highlight the day →  to display the day's schedule list screen (if any) → Highlight the required scheduled event → 

No.	Scheduler Options menu	
1	Add new	Adds a new entry.
2	Edit	Edits the highlighted event.
3	Copy	Copies the highlighted event.
4	Delete	Deletes event(s). Press the appropriate keys for the event category (the currently selected event, all the public/private events on the day, all the past public/private events, all the public/private events or all the events) to delete.
5	Go to date	Displays the selected date.
6	Monthly calendar/ Weekly calendar	Switches the weekly view screen to the monthly view screen, or the monthly view screen to the weekly view screen.
7	View summary	Displays a summary of all the events.
8	View events	Displays the events. Press the appropriate keys for the event category (Public only, Private only or All) to display.  You are required to key in the security code to display the private events or all events.
9	IR send	Sends the selected schedule through the IR port to other devices or a cellphone.  The IR send function is not available during a call.

-  Depending on the conditions, some options may be displayed in gray and not be available.

ToDo list (M85)

This feature allows you to set up to 100 ToDo tasks that should be finished by a certain date. You can choose to display either all ToDo tasks, or those just finished or unfinished. Each task is identified by a description (of up to 256 characters) and its start/due date.

Adding a new ToDo task

☛  **8 5** → Highlight the list →  → **SK1**

ToDo list setting	
Start date	Sets the day, month and year to start the ToDo task.
Due date	Sets the date to end the ToDo task. Key in the date or press the appropriate key for the date.  If you select to key in the date yourself, input the day, month and year of the date to end the Todo task, then SK1 .
Description	Sets the ToDo task description (e.g. Pay the rent).
Category	Sets the category (Business, Personal or Other).
Priority	Sets the priority (Normal, Low or High).
Private	Sets the ToDo task as private.

☛ When all settings are done, **SK1** to save the setting.

When a ToDo task is completed

☛  **8 5** → Highlight the list →  → Highlight the task →  →  **1** and **1**, or **SK2** to save the task as completed.

Viewing ToDo task details

☛  **8 5** → Highlight the list →  → Highlight the required ToDo task →  → To view the details of the previous or next ToDo task in the list,
◀ OR ▶

☛ To edit the currently displayed task, **SK1**.

ToDo Options menu

☛ To display the ToDo Options menu,  **8 5** → Highlight the list →  → Highlight the required ToDo task → 

☛ To display the ToDo detail Options menu,  **8 5** → Highlight the list →  → Highlight the required ToDo task → Highlight a ToDo entry →
 → 

Column L shows the ToDo options menu, and column D shows the ToDo detail Options menu.

L	D	ToDo Options menu	
1	4	Add new	Adds a ToDo task based on the highlighted ToDo task (see “Adding a new ToDo task” on page 70, from the second step).
–	1	Status	Changes the completion status of the highlighted ToDo task.
2	2	Edit	Edits the highlighted ToDo task (see “Adding a new ToDo task” on page 70, from the second step).
3	–	Delete	Deletes ToDo task(s). Press the appropriate keys for the ToDo task category (the currently selected ToDo task, all the public/private ToDo tasks, all the completed public/private ToDo tasks or all the ToDo tasks) to delete.
–	3	Delete current	Deletes the highlighted ToDo task.
4	–	Display filter	Sets the type(s) of ToDo tasks to be displayed by selecting the desired filter option (None, Incomplete or Complete).
5	–	Sort list	Displays a list of ToDo tasks rearranged according to the selected sort key (Due date, Category, Priority, or Status).
6	–	View summary	Displays the number of unfinished and finished tasks and how many more tasks can be created.
7	5	IR send	Sends the selected ToDo task through IR port to other devices or a cellphone.  <i>The IR send function is not available during a call.</i>

 Depending on the conditions, some options may be displayed in gray and not be available.

Notepad (M86)

Notepad function allows you to record and store a note as a text file.

Creating a new memo (M861)

  **8 6 1** → Key in text →  to save the entry as a text file. The first few words are displayed on the text list screen.

Displaying a memo (M862)

  **8 6 2** → Highlight the list →  to preview the memo, or **SK1** to edit the memo

Notepad Options menu

8 6 2 → Highlight the a text (note) →

No.	Notepad Options menu	
1	Edit item	Changes the protection settings of the selected file. Rename item: Edits the User title or File name of the selected file. Set protection: Changes the protection settings of the selected folder or file.
2	Use item	Add desktop icon: Creates a desktop icon of the selected file on the standby screen. IR send: Sends the selected file through IR port to other devices or a cellphone. <i>The IR send function is not available during a call.</i>
3	Create message	Creates a new SMS/Mail with the highlighted text (note) in the Message field.
4	Delete item	Deletes the selected file or folder if it is unprotected.
5	Delete all	Deletes all the notes unprotected from the list.
6	Copy item	Copies the selected note.
7	Move item	Cuts and pastes the selected note.
8	Move all	Cuts and pastes all the notes in the current folder.
9	Create folder	Creates a new folder under the current folder.
0	Storage detail	Displays the current storage information of your phone memory.
*	View detail	Displays the detail of the selected file.
#	Options	Sorting order: Sorts the files by date or alphabetically. Info column: Sets whether to display the second column on the list screen, and the information to be shown there. None: No second column showing Size: Approximate size of the file Type: File type Flat view: Displays the list of all the stored files regardless of the folder hierarchy. Save options: Saves the current option settings. Reset options: Resets the option settings.

Depending on the conditions, some options may be displayed in gray and not be available.

Voice memo (M87)

Voice memo function allows you to record up to 60 seconds of sound/voice, using your phone's microphone.

Recording/playing voice memo or setting speaker

 (MENU) 8 7

Voice memo setting		
1	Record	Records a voice memo.  SK1 to start recording.  You can finish recording and save the data as a file by pressing SK2 even before the recording is completed.
2	Play	Plays a voice memo or recorded call.  Highlight a voice memo → SK1 to start playing and SK2 to stop playing.  See "Recording a call" on page 9 for how to record a call.
3	Speaker setting	Selects between speaker and earpiece to play the voice memo.  1 for the Speaker, or 2 for the Earpiece.

 See also: "Sounds (M64)" on page 61.

Currency (M88)

Currency function allows you to convert an amount of money in one currency to another.

Converting currency

 (MENU) 8 8

Currency setting	
From	Sets the source currency code.
To	Sets the destination currency code.
Exchange rate	Sets the exchange rate.  If you wish to change the exchange rate, CLR to delete the displayed exchange rate and key in the required number (for decimal point, SK1).  To clear the rate in order to re-enter it completely, SK2 .
Amount	Sets the amount of money you wish to convert (for decimal point, SK1).

 If you have made a mistake in entering the amount, **CLR** to delete individual number or **SK2** to clear the entire screen, and then start again.

Resetting the currencies

  **8 8 SK2**

Infrared (M89)

Infrared function enables you to receive data (phonebook/picture/video/sound excluding MP3/schedule/ToDo list/note data) from other devices, or a cellphone of the same model via the infrared port. This function also enables you to use your phone as a modem for your PC via the infrared port to establish a dial-up connection to an Internet service provider

 This function is not available during a call.

 For details, see "IR Data Exchange" on page 16.

  **8 9**

No.	Infrared setting	
1	IR receive	Receives data via infrared.  After the data has been received, SK1 to save the received data.
2	IR modem	Uses your phone as a modem for your PC via infrared.  After the IR connection is established, the idle screen with an Infrared icon and a General Packet Radio Service (GPRS) icon will be displayed for GPRS connection, and the Circuit Switched Data (CSD) connection screen will be displayed for CSD connection.

 Your phone consumes a lot of battery power when used as a modem. After using your phone as a modem, be sure to deactivate the modem function from your PC or press  (for the CSD connection only). When the modem function is deactivated, the idle screen will be displayed without the Infrared icon and GPRS icon.

Index

Numerics

2nd-LCD
3GPP
4 way navigation key

A

AC adapter
Accepting an incoming call
Access history
Accessory
ADN
Alarm volume
ALS setup
Animation
Any key answer
AOC
Auto answer
Auto redial

B

Band
Bar calls
Basic calls & phone use
Battery charging
Battery level icons
Battery pack
Bookmark
Broadcast messages

C

Calculator
Call diversion
Call lists

Call waiting and holding
Camera
Recording a video
Taking a picture
Car mode
CB
Certificate information
CLI
Clock
Clock alarm
Clock orientation
Clock/Event display
Colour style
Contrast
Correcting mistakes
CSD
Currency

D

Date
Date format
Desktop icons
Dialled calls list
Direction
Download

E

Earphone
Earphone type
Emblem
Emergency calls
Ending a call

Fast dialling
FDN
Flicker control
Fold answer
Frame
Function key LED

G

General care
GPRS
Greetings
Groups
GSM

H

Headset
Holding a call
Homepage

I

icons
i-mode
Certificate information
i-mode menu screen
i-mode operations
i-mode screen
IP
Mail
MMS
Site (program)
Web page
i-mode menu screen

i-mode operations
i-mode screen
Inbox
Incoming call No.
International calls
International dialling codes
IP
IR
IR modem
IR receive

J

Java™
JPEG

K

Key allocations
Key tone
Keypad shortcuts

L

Language
Last call duration
Last number redial
LCD
LED
Low battery alarm

M

Mail
Mail screen
Mail tone
Mail tone volume
Main menu

32
37
27
23
12
12
45
16
74
74
64
54
15
22
vi
21
9
6
iv
21
3
45
40
22
22
ix

Main menu style	22	PIN activate	24	SIM card removal	2	Voice volume	20
Main-LCD	vii	PIN code	4, 24	Site (program)	45	W	
Making basic calls	5	PIN2 code	24	SMIL	45	Wallpaper	22
Meeting mode	21	Pocket mode	21	SMS messages	26	Web page	45
Menu functions	ix	Power saving	23	SMS tone	22	Z	
Menu shortcuts selection	iii	Power saving level	23	SMS tone volume	22	Zoom	56
Message	26	Preparing the phone	1	Sounds	61		
MF	45	PUK	24	Stamp	60		
Missed calls list	10	R		Standby screen	ix		
MMS	45	Reading a message	27	Standby talk times	3		
MMS messages	26	Received calls list	10	Starting a call	5		
Multi-party calls	8	Recording a call	9	Start-up	4		
Music	61	Redial blacklist	10	STD	5		
Music player	66	Redial the last number	6	Switching the phone off	4		
Mute	8	Rejecting an incoming call	6	Switching the phone on	4		
My data	59	Reset settings	25	T			
N		Ring silencer	20	T9 English text input	14		
Network selection	13	Ringer	22	Talk time	3		
Normal mode	21	Ringer volume	22	Text entry	14		
Normal text (ABC) input	15	Roaming	13	Time	21		
Notepad	71	S		Time format	21		
Numeric input	15	Safety precautions	i	Timezone	21		
O		Saved pages	46	ToDo list	70		
One-touch dial	6	Scheduler	68	Transferring a call	8		
Options menu (during a call)	7	Scratchpad number	53	U			
Own phone number display	7	SDN	47	Unsuccessful calls	6		
P		Service tone	22	User's manual conventions	iii		
Parts and functions	v	Settings	20	V			
Phone lock	24	Shortcuts selection	ix	Vibrator	22		
Phone modes	21	Side key lock	20	Videos	60		
Phonebook	46	SIM	1	Voice mail	53		
Pictures	59	SIM card	1	Voice memo	72		
PIM	24	SIM card insertion	1	Voice recall	7		