

## FW-MM Wireless Monitor Module

### SPECIFICATIONS

Maximum Operating Voltage:	3.3 VDC
Maximum Current Draw:	5.0 mA (LED on)
Average Operating Current:	210 $\mu$ A, 3.9k EOL
EOL Resistance:	3.9K Ohms
Maximum IDC Wiring Resistance:	10 Ohms
Maximum IDC Voltage:	3.2 Volts
Maximum Average IDC Current:	5.5 $\mu$ A
Maximum Transmit RF Power:	17 dBm
Radio Frequency Range:	902-928 MHz
Temperature Range:	32°F to 120°F (0°C to 49°C)
Humidity:	10% to 93% Non-condensing
Battery Type:	4 Panasonic CR123A or 4 Duracell DL123A
Battery Life:	2 year minimum
Battery Replacement:	Upon TROUBLE BATTERY LOW display and/or during annual maintenance
Dimensions:	4¼ in. H x 4¼ in. W x 1½ in. D
Accessories:	SMB500 Electrical Box (preferred mounting option)

### BEFORE INSTALLING


This information is included as a quick reference installation guide. Refer to the control panel installation manual and the SLC Wireless Gateway Manual for detailed system information. If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Disconnect power to the control panel before installing the modules.

NOTICE: This manual should be left with the owner/user of this equipment.

### GENERAL DESCRIPTION

The FW-MM Monitor Module is intended for use with a wireless gateway or wireless fire alarm control panel (FACP) to interface with a device having contacts used to signal status conditions. The input to the monitor module is non-latching and does not require a reset. The device communicates through a robust, bi-directional mesh network to the gateway and/or FACP. Rotary decade switches are provided for setting the module's address. The module has a panel controlled LED indicator. (Figure 1)


**FIGURE 1. CONTROLS AND INDICATORS:**

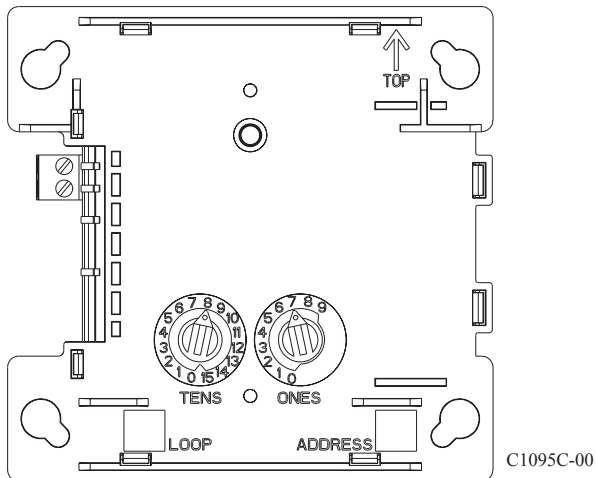

### FACEPLATE

The faceplate includes a magnet for activation and tamper resistance (Figure 2). The faceplate magnet activates communication to the panel, therefore, the faceplate must be installed for the module to work properly. The magnet also activates a supervisory tamper fault at the panel if the nameplate is removed. Do NOT remove this magnet. The faceplate for a wireless module CANNOT be replaced with the faceplate of a standard wired module.

**FIGURE 2. FACEPLATE INTERIOR:**

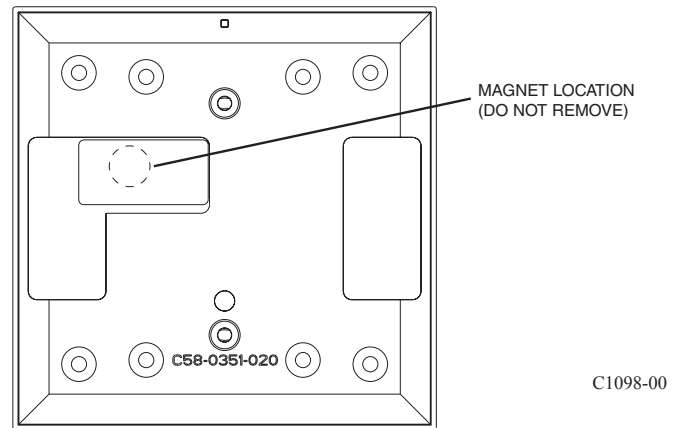

### BATTERY REPLACEMENT

Low battery levels on the wireless devices are displayed as a trouble in the FACP. Therefore when the message "TROUBLE BATTERY LOW" is displayed, replace the battery in the device. This message is an indication that approximately one week of battery life remains.


### COMPATIBILITY REQUIREMENTS

To ensure proper operation, this module shall be connected to a compatible Notifier system control panel (list available from Notifier).

To replace the batteries in a wireless device use the following steps:

1. Have 4 CR123A (or DL123A) batteries available
2. Remove the faceplate from the module.
3. Open the battery compartment refer to Figure 3.
4. Remove the used batteries and replace with new batteries. The battery compartment is designed such that the batteries can only align in the appropriate direction. Do not force the batteries into the openings.
5. Replace the battery compartment cover.
6. Replace the faceplate.

**FIGURE 3. BATTERY COMPARTMENT:**

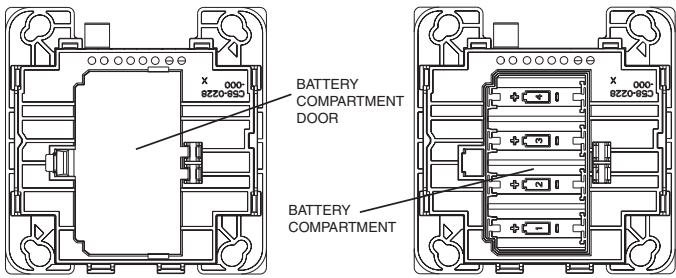

C2002-00

**MOUNTING**

The FW-MM mounts directly to an SMB500 electrical box (see Figure 4). To avoid interference with the wireless network metal electrical boxes are NOT recommended. Non-metal surface mounted electrical boxes (SMB500) are available from Notifier. If not using an SMB500, the minimum mounting opening dimensions for the FW-MM are 4 in. X 3¼ in. x 1½ in. deep.


NOTE: Do not attach the module to temporary structures such that the placement could be altered.

**WIRING**

NOTE: All wiring must conform to applicable local codes, ordinances, and regulations. This module is intended for power limited wiring only. FW-MM must be within 3 feet of monitored device when using field wiring or 20 feet in non-metallic conduit.

1. Install module wiring in accordance with the job drawings and appropriate wiring diagrams.
2. Set the address on the module per job drawings.
3. Secure module to electrical box (supplied by installer), as shown in Figure 3.


**FIGURE 4. MODULE MOUNTING:**

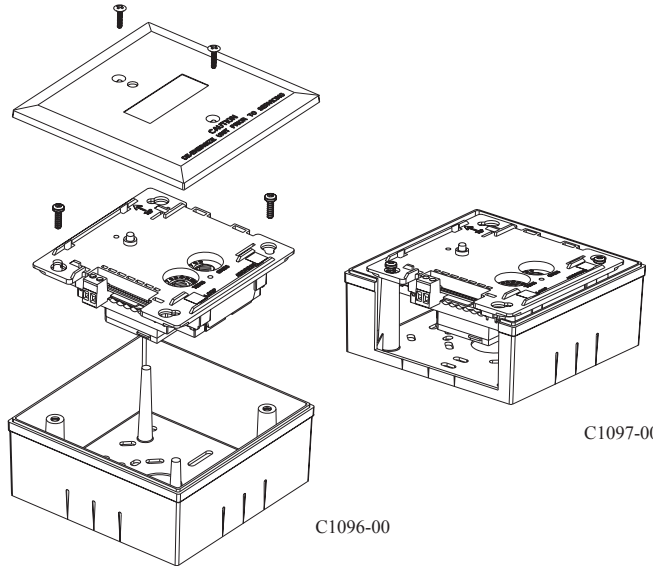

C1097-00

C1096-00

**FIGURE 5. TYPICAL MONITORING CONFIGURATION:**

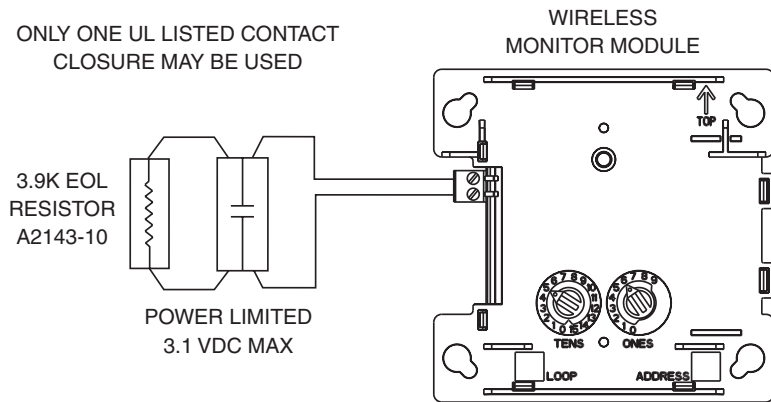

INSTALL CONTACT CLOSURE DEVICES PER MANUFACTURER'S INSTALLATION INSTRUCTIONS. WF-MM MUST BE WITHIN 3 FEET OF MONITORED DEVICE WHEN USING FIELD WIRING OR 20 FEET IN NON-METALLIC CONDUIT.

C1099B-00

**LICENSING STATEMENT**

Use of these products in combination with non-Honeywell products in a wireless mesh network, or to access, monitor or control devices in a wireless mesh network via the internet or another external wide area network, may require a separate license from Sipco, LLC. For more information, contact

Sipco, LLC or Ipco, LLC at 8215 Roswell Rd., Building 900, Suite 950, Atlanta, GA 303350, or at [www.sipcollc.com](http://www.sipcollc.com) or [www.intusiq.com](http://www.intusiq.com).

**FCC STATEMENT**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Do not make changes to the equipment. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**IC STATEMENT**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**RAPPORT D'IC**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

**INSTITUTO FEDERAL DE TELECOMUNICACIONES**

This device utilizes the Honeywell915 rev A radio module and complies with IFETEL standard(s). IFT: RCPHOSW14-1983