Honeywell Home


PROSIXSMOKEV

Wireless Smoke/Heat Detector

Installation Instructions

This is a multi-criteria wireless smoke detector which employs advanced levels of detection and discrimination to reduce common cooking nuisance alarms and faster to different types of fire conditions. It is intended for use with Controls that support PROSiX™ series devices.

To remove the mounting bracket, turn the top of the detector 15 degrees counterclockwise and separate the mounting bracket and top cover.

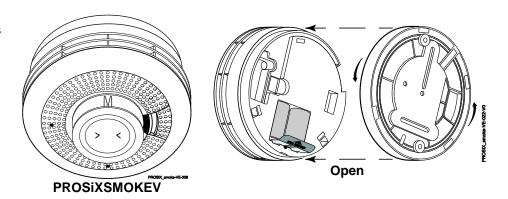


Enrollment

Enroll the device using AlarmNet 360. When prompted, activate the device by pulling the battery tab or, if already powered, press the Test button to enroll. It will enroll into 2 zones: smoke detection into one zone and heat detection into a second zone.

If the detector is not successfully enrolled during the enrollment period, the LED turns off and the device powers down. Activate the tamper or press the Test Button to restart the enrollment process.

NOTES: Enrollment time varies depending on the signal strength between the device and the Control. Once enrolled in a system, the detector cannot be used with another Control until it is removed from the current Control. See the Control's instructions for details.

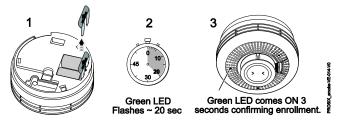

Enroll

Program


Consult the Control's instructions to program the device in the system. This detector reports the following signals to the Control:

- Smoke and Heat detection
 - Smoke Alarm when smoke is detected
 - Heat Alarm when temperature of 135° F (57° C) or greater
 - Rate-of-Rise Alarm when temperature is >104° F (40° C) @ 15° F/minute (8.33° C/minute).
- Maintenance: Contaminated chamber that requires cleaning.
- End-of-Life
- Base Tamper: It will send a tamper signal to the control when the smoke head is removed from its base.
- Supervision: 200 second check-in compatible.
- Signal and battery Strength: Signal and battery strength information are sent with every communication to the panel.

NOTE: If programmed in the Control to operate in One-Go-All-Go mode, all smoke detectors programmed as One-Go-All-Go in the system will sound on alarm.

Tamper

When the detector is removed from its base, it will send a tamper signal to the Control. OPTIONAL: The detector can be made tamper-proof to prevent unauthorized removal from its base. Break off the small pillar on the base as shown. This will cause the detector to latch to the base. From this point on, to remove the detector from its base, you must use a small screwdriver to release the catch (push the catch towards the base) and twist the detector counter-clockwise. A screw can be added to prevent removal from the base.

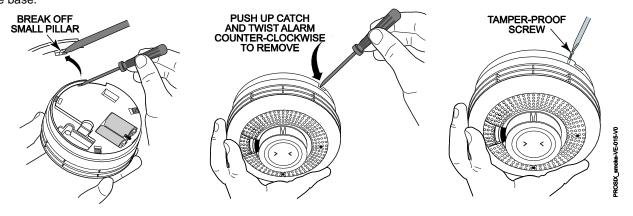


Mount

Refer to the Smoke Detector System Application Guide (P/N SPAG9101) and the Limitations of Fire Alarm Systems (P/N 800-15144) for detailed information on detector spacing, placement zoning and special applications. Copies of this document are available on https://mywebtech.honeywellhome.com/.

NOTE: Before mounting the detector permanently, conduct a Walk test (see control's instructions) to verify adequate signal strength and adjust the device location and orientation as necessary.

The detector can be mounted on the ceiling or on the wall (if local ordinances permit). Select a location and mount using the included mounting hardware.

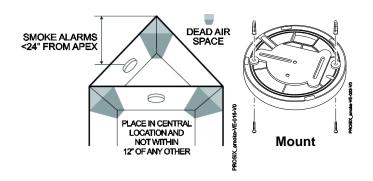

Testing

The detector should be tested immediately after installation and at least once a year.


Recommended: Notify the Central Station that the smoke detector is undergoing tests, so they do not dispatch authorities.

Tests and testing methods:

There is no specific Test Mode that needs to be entered to test smoke, heat, or Rate-of-Rise. These can be applied to the detector at any time as a test.


- Test Button When the Test button is held down, the unit initiates a test on the smoke sensor, chamber, heat sensor, End-of-Life, and battery. If all tests pass, it sounds a normal alarm and sends alarm signal to the Control. However, if one of these tests fails, it will send a trouble signal to the Control and provide fail status on the yellow led and sounder. The Test Button is also used to silence or hush the sounder. To silence the detector, press the large test button or disarm the system at the Control. The detector sounds again after 10 minutes if the alarm condition still physically exists (smoke in the
 - system at the Control. The detector sounds again after 10 minutes if the alarm condition still physically exists (smoke in the chamber). When programmed for One-Go-All-Go mode, the detector can only be silenced from the Control. See the LED and Sounder Indication Chart on the next page for details.
- Smoke Entry Test (canned smoke*) Can be done at any time. Once the Chamber is clear, the sounder will stop, and it will send a restore signal to the Control.
- Direct Heat Test (hair dryer 12" or further from the detector)
 - 135° F fixed Heat Detection
 - Rate-of-Rise >104° F (40° C) @ 15° F/minute (8.33° C/minute).

CAUTION: The detector will alarm when 135° F is exceeded and restore when it falls below 135° F. However, the thermistor will be damaged at 195° F and the integrity of the detector itself will be compromised and will need to be replaced.

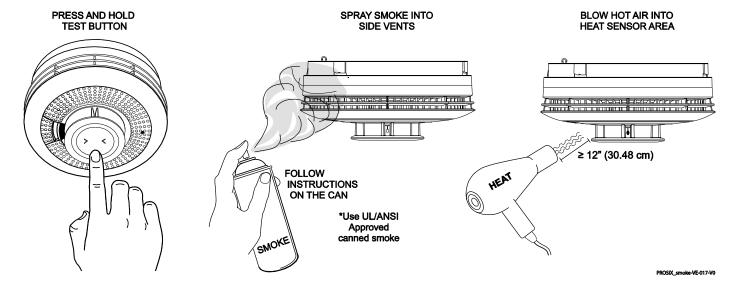

LEDs and Sounder

The PROSIXSMOKEV has one green LED and a separate bi-color (red and yellow) LED with an 85dB sounder. Refer to the following table below for operation of these features.

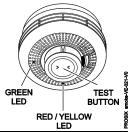

LED and Sounder Indication Chart


						LED &
Normal Operation	Action	Green LED	Red LED	Yellow LED	Sounder	Reaction
Power Up	Pull Battery Tab	Rapid flashing up to 20 seconds	1 Flash	1 Flash	Off	
Enrollment	Program into Control	On for 3 seconds	Off	Off	Off	
Processing Control Queries		Slow flashing	Off	Off	Off	
Tamper	Remove from base	Slow flash for 10 minutes	Off	Off	Off	
Standby - Normal		1 flash every 60 seconds	Off	Off	Off	
Sensing Smoke / Heat	Smoke / Fire Condition	Off	Rapid flashing	Off	Temporal 3	Evacuate Premises
Alarm Hush	Action	Green LED	Red LED	Yellow LED	Sounder	Reaction
Silence Sounding Alarm	Press & Release Button	Off	1 flash every 8 seconds	Off	Off for 10 mins	
Silence Low Battery	Press & Release Button	Off	Off	Off for 12 hours	Off for 12 hours	Replace both batteries
Silence Faulty Sensor (only possible once)	Press & Release Button	Off	Off	2 flashes every 48 seconds	Off for 12 hours	Replace unit
Silence End of Life (up to 30 days)	Press & Release Button	Off	Off	Off for 72 hours	Off for 72 hours	Replace unit
Self-Diagnostics	Action	Green LED	Red LED	Yellow LED	Sounder	Reaction
Low Battery ~ 5 Years	Automatic every 16 minutes	Off	Off	1 flash every 48 seconds	1 beep with 1 flash	Replace both batteries
Faulty Smoke Sensor	Automatic every 16 seconds	Off	Off	2 flashes every 48 seconds	2 beeps with 2 flashes	Replace unit
Faulty Heat Sensor	Automatic every second	Off	Off	2 flashes every 48 seconds	2 beeps with 2 flashes	Replace unit
End of Life ~ 10 Years	Automatic every 4 hours	Off	Off	3 flashes every 48 seconds	3 beeps with 3 flashes	Replace unit
Maintenance	Automatic every 16 seconds	Off	Off	4 flashes every 48 seconds	Off	Clean unit; see Cleaning section
Test Button	Action	Green LED	Red LED	Yellow LED	Sounder	Reaction
Detector Status Good – Normal Alarm	Press & Hold Button	Off	Rapid flashing	Off	Temporal 3	Release button
Low Battery ~ 5 Years	Press & Hold Button	Off	Off	1 flash then rapid flashing	1 beep then Temporal 3	Replace both batteries
Fault Sensor	Press & Hold Button	Off	Off	2 flashes then rapid flashing	2 beeps only	Replace unit
End of Life ~ 10 Years	Press & Hold Button	Off	Off	3 flashes then rapid flashing	3 beeps then Temporal 3	Replace unit
Maintenance	Press & Hold Button	Off	Off	4 flashes then rapid flashing	4 beeps then Temporal 3	Clean unit; see Cleaning section
Alarm Memory	Action	Green LED	Red LED	Yellow LED	Sounder	Reaction
24 Hour Memory	After Alarm	Off	2 flashes every 48 seconds for 24 hours	Off	Off after condition is physically clear	Press & Hold Button for Long Term Memory
Long Term Memory	Press & Hold Button	Off	Rapid flashing	Off	Rapid chirping	Memory is reset after releasing the test button

Cleaning

Recommended: To prevent unwanted alarms, notify the Central Station that the smoke detector system is undergoing maintenance before cleaning the detector.

To clean the detector, carefully vacuum the side vents all the way around, then, wipe them with a clean damp cloth and dry thoroughly.

Do NOT attempt to take the detector apart. This could result in damaging the unit.

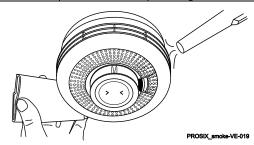


Cleaning


Battery Replacement

- Twist the front cover counterclockwise
 15 degrees and separate it from the mounting bracket.
- Remove both batteries and wait 10 seconds, then insert two new recommended batteries:
 - Panasonic CR123A

NOTE: Do not mix old and new batteries, battery types or manufacturers.

• Reattach to the detector to the mounting plate.

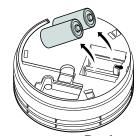

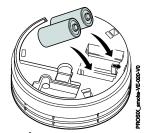

Replace Batteries

BATTERY CAUTION: Risk of fire, explosion and burns. Do not recharge, disassemble, heat above 212° F (100° C) or incinerate. Dispose of used batteries properly. Keep away from children.

PROSiX/SiXTM Series transmitters draw quick bursts of current during transmission, then sit idle with very nominal current draw. Most batteries are not designed for this type of use, therefore, only batteries listed as compatible should be used if the expected battery life is to be attained. Each transmitter's Installation Instructions has listed compatible battery manufacturers and their part numbers. When other non-approved batteries are used, the quick bursts of current draw kill the battery cells prematurely causing them to go low in a matter of months and can also cause unpredictable results. Other low-quality batteries have not been UL tested and pose a safety hazard if used.

Specifications:

Smoke Detection:	Photoelectric
Heat Detection:	135° F (57° C) or greater +/- 5°F
Rate of Rise:	>104° F (40° C) @ 15° F/minute (8.33° C/minute).
dB Rating:	>85dBA (Minimum) at 9ft
Batteries:	Two 3V Lithium; Panasonic CR123A
RF Frequency:	2.4GHz
Tamper:	Base Tamper
Operating Temperature:	40° to 100° F / 4.4° to 37.7° C
Relative Humidity:	15% to 95% max, non-condensing
Maximum Spacing:	50ft x 50ft (refer to National Fire Alarm Code Standard NFPA 72 for application requirements)
Dimensions:	4.5 in. Diameter x 1.7 in. Thick / 11.9 cm Diameter x 4.5 cm Thick

Approval Listings:

FCC / IC

ETL Listed – Conforms to UL 268 7th Edition

cETL Listed - Certified to UL268 & CAN/ULC S529

Other Standards: State of California requirement - free of substances that may cause cancer. Prop 65 US.

NFPA 72

NOTE: Smoke detectors are not to be used with detector guards unless the combination is evaluated and found suitable for that purpose.

FEDERAL COMMUNICATIONS COMMISSION (FCC) & INDUSTRY CANADA (IC) STATEMENTS

The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User's Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment.

CLASS B DIGITAL DEVICE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, as defined by FCC Rules Part 15.105. The Class B Digital Device statement can be viewed at:

https://customer.resideo.com/en-US/support/residential/codes-and-standards/FCC15105/Pages/default.aspx

FCC / IC STATEMENT

This device complies with Part 15 of the FCC Rules, and Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Cet appareil est conforme à la partie 15 des règles de la FCC et exempt de licence RSS d'Industrie Canada. Son fonctionnement est soumis aux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles. (2) Cet appareil doit accepter toute interférence reçue y compris les interférences causant une réception indésirable.

RF EXPOSURE WARNING – The antenna(s) used for this device must be installed to provide a separation distance of at least 7.8 inches (20 cm) from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.

Mise en Garde Exposition aux Frequences Radio: L'antenne (s) utilisée pour cet émetteur doit être installée à une distance de séparation d'au moins 7,8 pouces (20 cm) de toutes les personnes.

Responsible Party / Issuer of Supplier's Declaration of Conformity: Ademco Inc., a subsidiary of Resideo Technologies, Inc., 2 Corporate Center Drive., Melville, NY 11747, Ph: 516-577-2000

REFER TO THE INSTALLATION INSTRUCTIONS FOR THE CONTROL WITH WHICH THIS DEVICE IS USED, FOR DETAILS REGARDING LIMITATIONS OF THE ENTIRE ALARM SYSTEM.

The Honeywell Home Trademark is used under license from Honeywell International Inc. All other trademarks are the properties of their respective owners. All rights reserved. This product is manufactured by Resideo and its affiliates.

For the latest documentation and online support information, please go to: https://mywebtech.honeywell.com/

For the latest warranty information, please go to:

https://www.security.honeywellhome.com/hsc/resources/wa/index.html For patent information, see https://www.resideo.com/patent







MyWebTech

Warranty

Patents







