





## Default Settings

Handset Name	Handset #
Language	English
Menu Color	Blue
Background Picture	Picture 4
Contrast	
Auto Talk	Off
Area Codes	- - -
Earpiece Volume	6 Bars
Internal Ringtone	Melody 2
External Rington	Melody 3
Ringer Volume	6 Bars
Key Beep	On
Dial Mode	Tone
Time Format	12 Hour
Alarm Tone	Off




## Default Settings

From the Base Settings menu;

1. Use  or  to scroll to **Default Settings**.
2. Press  to enter the menu.
3. Press  to confirm.



## Base IP Address

From the Base Settings menu;

1. Use  or  to scroll to **Base IP Address**.
2. Press  to enter the menu.
3. Your IP address is displayed.





## Time Settings

### To Access Time Settings via the Menu

1. Make sure your phone is **OFF** (not in talk mode).
2. Press , navigate to the **Time Settings** menu, press  to enter.




## Set Date & Time




From the Time Settings menu;

1. Use  or  to scroll to **Set Date & Time**.
2. Press  to enter the menu.
3. Enter date in mm/dd format.
4. Press number keys to enter time in hh:mm format; press # for AM or PM.
5. Press  to save your selection. **Time and Date Saved** is displayed.

## Time Format












From the Time Settings menu;

1. Use  or  to scroll to **Time Format**.
2. Press  to enter the menu.

3. Use  or  to switch between **12 Hour** or **24 Hour**. The default is **12 Hour**.
4. Press  to save your selection. **Time Format Saved** is displayed.

## Alarm

From the Time Settings menu;



1. Use  or  to scroll to **Alarm**.
2. Press  to enter the menu.
3. Press  to activate alarm.  
**On Once** - Set preferred time for single alarm.  
**On Daily** - Set preferred time for daily alarm.  
**Off** - Turn the alarm off.
4. Press  to save your selection. **Done** is displayed.
5. Use  or  to scroll to **Set Alarm Tone**:
6. Press  to hear a sample played. Scroll  or  to make another selection. The default is **OFF**,
7. Press  to save your selection. **Alarm Tone Saved** is displayed.

When the alarm is activated, an icon is displayed on the main screen.

When the alarm sounds, press any button on the handset(s) to turn off the alarm.




## RSS Settings

### To Access RSS Settings via the Menu

1. Make sure your phone is **OFF** (not in talk mode).
2. Press , navigate to the **RSS** menu, press  to enter.

## View Channels









From the RSS menu;

1. Use  or  to scroll to **View channels**.
2. Press  to enter.
3. The preferred RSS Channels are displayed.

## Channel Set Up

Select your preferred channels.








From the RSS menu;

1. Use  or  to scroll to **Channel set up**.
2. Press  to enter the menu.
3. Use  or  to select a channel. (Identified by ) Press  to enter Channel Set Up.
4. Need more info.
5. Press  to save your selection.

## Help





Assistance with your RSS function.

From the RSS menu;

1. Use  or  to scroll to **Help**.
2. Press  to enter the menu.
3. Use  or  to select **Feed set up** or **Button navigation**, press  to enter
4. Press  to return to previous screen.

## Default Channels



From the RSS menu;

1. Use  or  to scroll to **Default Channels**.
2. Press  to enter the menu.
3. Press  to confirm.















## Call Lists

Review your Call Lists to manage telephone numbers; you may select a caller from one of the lists to; call back, delete the number, or add to your phone book. You may also select an entire call list to delete.








### To Access Call Lists via the Menu

1. Make sure your phone is **OFF** (not in talk mode).
2. Press , the **Call Lists** menu is displayed, press  to enter.

### Received Calls List or Dialed Calls List

1. Press  or  to scroll to **Received Calls** or **Dialed Calls** call list. Press  to enter.
2. Use  or  to scroll to desired number.
3. Press  to select.
4. Use  or  to scroll to the desired category:
  - Call** - Press  to call selected number
  - Delete** - Press  to delete selected number. Press  to confirm.
  - Save Number** - Press  to store in phonebook  
Enter name using number pad, press .  
Confirm (or edit) number and press .

### Delete Calls List

1. Use  or  to scroll to **Delete Calls List**. Press  to enter.
2. Use  or  to scroll to desired listing.
3. Press  to select.
4. Press  to confirm selection.


## Call Timer

The display shows the duration of the current call. After you hang up, the total duration displays briefly.

### Received Calls

Shows details for calls which were answered or missed. A missed call is identified with an asterisk on the right side of each entry.

### Missed Calls

If you have missed calls, the main display will notify you of the presence and count of the missed calls. Press  to see the missed call.

### Dialed Calls



List shows details of the last 20 outgoing calls made from that handset.


*A combined total of 50 calls can be stored in the **Received** and **Missed calls** lists per handset.*

You can display, scroll through, and dial numbers in the Calls Lists and copy them into the phonebook.


If a call is received when the Calls List is full, the oldest entry will be replaced with details of the new call.

### Adjusting Handset / Speakerphone Volume:

During a call, Use  to increase or  to decrease the volume level. The display will show the current level : 2 bars are the minimum and 12 bars are the maximum.

**NOTE:** If you make a mistake, while entering the number, press  to delete the last digit entered or multiple times to clear all digits.

## To switch to speakerphone

At any time during a call, just press .

When in speakerphone, to switch back to handset mode, press .

While in speakerphone mode, the display will show a speakerphone icon.

## Making a Call

1. Press , then dial the number you want.









- OR -

Dial the number first, then press .

- OR -


Press  to enter your phonebook, scroll to desired name, then press .

- OR -

Press  access main menu, press  to enter **Calls Lists**, use  or  to scroll to **Dialed Calls**, press , use  or  to scroll to desired number, then press .


## Answering Calls

If Auto-Talk is set to **On** and the Handset is in the charge cradle, simply pick up the handset (when ringing) and the phone will answer the call automatically.

If the handset is in the charge cradle or Auto-talk is turned **Off**, press  to answer the call.

Providing you have subscribed to your network's Caller-ID service, the caller's number and name is displayed after the first ring.






## End Call

Press  or simply place the handset back on the charge cradle.

## Speakerphone




Speakerphone lets you talk to your caller without holding the handset to your ear. It also enables other people in the room to listen to both sides of your conversation.

### Making a Call with the Speakerphone

1. Press  for dial tone, then press  again for speakerphone mode. Dial the number. Your call will be on the handset's loudspeaker.
2. To switch back to the handset at any time, press  again, (i.e.,  toggles between the handset and the speakerphone mode).
3. Press  to end the call.



### Answering a Call with the Speakerphone

When the phone rings:

1. Press  to answer the call, then press  again for speakerphone mode. Your call will be on the handset's loudspeaker.
3. Press  to end the call.

## Mute

To have a private, off-line conversation with someone nearby, use the MUTE feature. The party on the telephone line cannot hear you, but you can hear them.


1. During the call, press  (Mute). The display shows **Mute On**. When Mute On is active, your caller cannot hear you.
2. Press  (Off) to return to your caller.

Calls paged from the base cannot be answered by a handset

**NOTE:** You cannot make any calls, including 911 emergency calls, while the keypad is locked.

Answer incoming calls by pressing as normal.

The icon is displayed while the keypad is locked.

If you receive a telephone call during an intercom call, the intercom call is immediately terminated and both handsets ring. Either handset user may press  to answer the call.




## Paging

You can use the button on the base to page all registered handsets to locate a missing handset.

1. Press the PAGE button on the base. All registered handset(s) will ring. The display shows **Paging**.
2. Press PAGE again, or press any button on a handset, to cancel the page.

## Keypad Lock



You can lock the keypad to prevent accidental dialling while carrying the handset around.

1. Press and hold  until the screen shows **Keypad Locked** and the padlock symbol appears.
2. Press  to unlock then  again to confirm.

## Intercom Operation

**If you have two or more handsets registered to your base**, the intercom feature allows you to have a conversation with another registered handset without tying up the telephone line, allowing you to still receive incoming calls.

### Making an Intercom Call

1. Press  then the handset number you want (1-5).
2. Press  to end the intercom call.

### Receiving an Intercom Call




When you receive an intercom call, your handset will ring (using selected Internal Ringtone). To answer the call press .

## Advanced Intercom Features





### Using Intercom with External Phone Calls

During a telephone call, you may use the intercom function to: place the call on hold and page another handset to have an off line private (two-way) intercom conversation, have a three-way conversation between the external caller and the handsets, or transfer the external telephone call to another handset.

### Two-Way Calling


1. During a regular telephone call, press  and your call is put on hold. Enter the handset number you want (1-5).
2. When the receiving handset answers, both intercom users may speak privately. The external caller will not hear the intercom conversation.
3. When finished, press  to end the intercom call and resume the call.
4. Press  to end the call.

### Three-Way Calling

1. During a regular telephone call, press  and your call is put on hold. Enter the handset number you want to join on the call (1-5).
2. When the receiving handset answers, press  for at least 2 seconds to start the 3-Way (conference) call. If the other handset does not answer, press  again to resume the call.
3. Press  to end the call.

### Transferring a Call

You can transfer a call to another handset.

1. During a regular telephone call, press  and your call is put on hold. Enter the handset number you want to join on the call (1-5).

**NOTE:** Before you intercom another handset, you must decide whether you want to create a two-way or a three-way conversation.



**IMPORTANT:** In order to use this phone's Caller ID features, you must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service. To know who is calling while you are on the phone, you must subscribe to Call Waiting Caller ID Service.

## Caller Information Display

When using the Call Waiting the display will show you the caller information of the caller you are connected to when you toggle between the first and seconds caller.




## If a Caller Hangs Up

If you have an original call and a 2nd call from Call Waiting active and one of these callers hangs up, you may hear a dialtone when you reconnect to that caller. Press the FLASH button again to be connected to the remaining caller.

If one of the callers hangs up, the phone may not recognize this and may display the incorrect caller information on the display.

## If You Forget a Waiting Call

It is possible you may have a call on hold and finish your conversation with another caller and hang up. In this case, the phone should ring again with the call from the waiting caller.

2. When the other handset answers inform them they have a call, then press . The call is then transferred. If the other handset does not answer or you decide not to transfer the call, press  to cancel and resume the call.
3. Press  to end the call.

## Caller ID (CID)

This unit receives and displays information transmitted by your local phone company. This information can include the phone number, date, and time; or the name, phone number, date, and time.

When you receive a call, the Caller ID information is transmitted between the first and second ring. The Caller ID information appears on the display while the phone rings, giving you a chance to monitor the information and decide whether or not to answer the call.

## Call Waiting CID

Provided you subscribe to Call Waiting CID service from your phone company; if you receive an incoming call and you are using a GE multi handset system, a beep indicates the presence of a Call Waiting call on the line. The Call Waiting Caller ID information will be displayed and stored in the history of all handsets in the system.

## Receiving Call Waiting Calls

If you receive a second incoming call while on an active call you will hear a beep in the earpiece. The screen will identify caller and display **Answer Call?** with **Call waiting** in the top banner.

1. Press the FLASH button to answer. The original call will be put on hold and you will be connected to the new call.
2. Press the FLASH button to go back to the original caller and put the second call on hold.
3. Press the FLASH button to toggle between callers.



## Handset Management

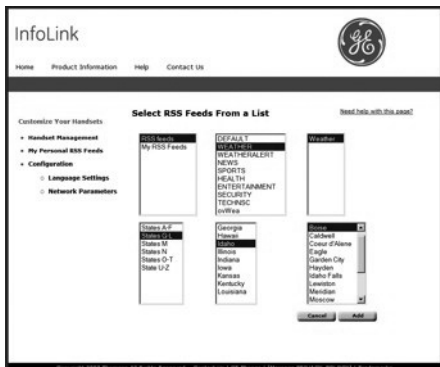
1. This screen provides you the option to configure each individual handset with six feeds.
2. You can view one handset at a time or multiple handsets (show All Handsets).
3. Channels available to view are made active by clicking On. Clicking Off will deactivate channel in handset.
4. Each handset's content feed can be configured differently or copied to another handset.
5. Clicking edit opens the Edit RSS Feed list. Each channel can be configured from a large list of feeds.
6. When finished configuring handset, click Refresh to activate changes.



## Edit RSS Feed

1. Click edit to open - Select RSS Feeds From a List.
2. Step through each of the drop downs as it is displayed to configure your personal feeds.
3. Once you have made all of your changes, simply click on the submit button at the bottom of the page to update your preferences.

- The phone will automatically acknowledge any changes made to the configuration file within few minutes by showing **Synchro RSS** message.
- You can repeat this process for each of the available six channels.



## Personalizing your Content Information Service

The InfoLink GE web page enables you to personalize your RSS Feed InfoLink Services. We've already pre-configured some popular channels to help get you started.

To personalize your handset simply:

- Click - My Personal RSS Feeds. The following screen will be displayed.
- Enter your RSS feed in the Feed Address and press OK



3. Your personal RSS feed will be added to My Personal RSS Feeds.



4. Return to Handset Management, to edit your feeds for each to handset.

## Information Channels

Information Channels available include:

- Government Weather
- Government Weather Alerts
- Government Security
- MSNBC.com News
- MSNBC.com Entertainment
- MSNBC.com Health
- MSNBC.com Sports
- MSNBC.com Tech & Science

## Auto-Registration

Handsets packed with Base unit are pre-registered ready to use right out-of-the-box.

## Accessory Handset (Purchased Separately)

For accessory handsets (without Base unit), an auto-registration mechanism is available so the unregistered accessory handset can be automatically registered without the need of entering a PIN code.

### On the base:

1. Put the base into subscription mode, by pressing and holding PAGE\_KEY (for at least 8 seconds).
2. The Blue DECT Activity LED flashes. It is now ready to be associated with a new handset. This registration mode lasts 90 seconds after pressing the button. Once the subscription is done, the base LED flashing is switched off.

### On the handset:

From idle mode:

1. Press KEY\_SOFT\_1 labeled "Menu"
2. Navigate through the menu until "Registration" is highlighted.
3. Press KEY\_SOFT\_1 labeled "OK", "Register Handset" is displayed.
4. Press KEY\_SOFT\_1 labeled "OK" (or press RIGHT\_arrow),
5. Confirmation message is displayed explaining that the previous registration of this HS will be deleted
6. Press KEY\_SOFT\_1 labeled "OK" to validate and start the handset registration. "Base search 1" is displayed. If the handset has located the base, it may display (depending on EEPROM settings), the base identification number (RFPI).

**NOTE:** When a handset is associated with a base, a number is given to the handset by the base. This number is displayed on the handset after the name and must be used for internal calls.

**NOTE:** A handset can be registered to only one base.

7. Validate the base association by pressing KEY\_SOFT\_1. "Handset Registered" is displayed and the handset goes back to idle.
8. The DECT LED of the Base stops to flash when a HS has successfully been registered of after the time out (~90s)

If the handset does not locate the base, it goes back to idle mode. Try again and make sure there is no environmental interferences.

If the handset emits a double beep, it means that the base has the maximum of 5 subscribed handsets.

You can erase the previous subscription by asking a new registration from the same handset.

## Changing the Battery

**CAUTION: To reduce the risk of fire or personal injury, use only the Thomson Inc. approved model GP 75AAHC 1.2V 750mAh, rechargeable Nickel-metal Hydride AAA batteries, which are compatible with this unit.**

1. Make sure handset is **OFF** (not in TALK mode) before you replace battery.
2. Remove the battery compartment door.
3. Remove the batteries from the handset.
4. Insert the new batteries.
5. Put the battery compartment door back on.
6. Place handset in the base or handset charge cradle to charge. **Allow the handset battery to properly charge (for 16 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised.**

NOTE: The RBRC seal on the battery used in your Thomson Inc. product indicates that we are participating in a program to collect and recycle the rechargeable battery (or batteries).

For more information go to the RBRC web site at [www.rbrc.org](http://www.rbrc.org) or call 1-800-8-BATTERY or contact a local recycling center.

## Battery Safety Precautions

---

- Do not burn, disassemble, mutilate, or puncture. Batteries of this type could release toxic materials which can cause injury.
- To reduce the risk of fire or personal injury, use only the **Nickel-metal Hydride** battery listed in the User's Guide.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.

## Troubleshooting Guide

---

### Telephone Solutions

No dial tone

- Check and repeat installation steps:
    - Ensure the base power cord is connected to a working electrical outlet .
    - Ensure the telephone line cord is connected to the base and the wall jack.
  - Connect another phone to the same jack; if there is still no dial tone, the problem might be your wiring or local service.
  - The handset may be out of range of the base. Move closer to the base.
  - Ensure the batteries are installed correctly.
- 

Cannot dial

- **Keypad may be locked. If the Padlock icon is on, press unlock in order to deactivate and enable the keypad.**
- 

No signal icon

- The handset may be out of range of the base. Move closer to the base.
  - Register handset.
- 

Handset does not ring

- Make sure the handset ringer switch is turned ON, this can be done through the handset setup menu - Ringer Volume.
  - The handset may be out of range. Move closer to the base.
  - You may have too many extension phones on your line. Try unplugging some phones.
  - Check for dial tone.
-



No sound from handset

- Adjust handset volume.
- Check and adjust sound settings in Skype, under "Sound Devices".

---

You experience static, noise, or fading in and out

- The handset may be out of range of the base. Move closer to the base.
- Make sure base is not plugged into an outlet with another household appliance. If necessary, relocate the base.

---

Unit beeps

- Clean charging contacts on cordless handset.
- See solutions for "No dial tone".
- Replace the battery.

---

Memory Dialing doesn't work

- Did you program the memory location keys correctly?
- Did you follow proper dialing sequence?

---

Handset displays "SEARCHING" or "NOT REGISTERED" and cannot link up with the base when the TALK/CALL BACK button is pressed.

- Handset may be out of range of the base. Move closer to the base.
- Make sure the power adaptor is properly installed.
- Disconnect the handset battery and plug it in again. Place the handset on the cradle for at least 2 to 3 minutes.
- Disconnect the power adaptor and plug it in again. Then place the handset on the cradle for at least 2 to 3 minutes.

---

Handset displays "HANDSET NEEDS REGISTRATION"

- Follow the programming in the telephone procedures to re-register the handset to the base.
- Press the SELECT button to begin handset registration. Follow instructions on Handset screen.

---

Registration did not work

- Charge the batteries for 16 hours.
  - Unplug and then plug in the power adaptor.
-

### Caller ID Solutions

#### No Display

- Charge or replace the batteries.
- Make sure that the unit is connected to a non-switched electrical outlet. Disconnect the AC power adaptor from the base and reconnect it.

---

#### Caller ID Error Message

- The unit displays this message if it detects anything other than valid Caller ID information during the silent period after the first ring.

---

#### No Caller ID

- In order to receive Caller ID information, you must subscribe to the standard name/number Caller ID service from your local telephone company.

---

### Battery Solutions

If you experience any of the following problems, even after fully recharging the battery, you may need to replace the battery pack:

- Short talk time
- Poor sound quality
- CHARGE/IN USE indicator on the base fails to illuminate.
- Limited range

---

### General Product Care

To keep your unit working and looking good, follow these guidelines:

- Avoid dropping the handset, as well as other rough treatment to the phone.
- Wipe the base station with a damp cloth or an antistatic wipe. Never use a dry cloth as this can cause static discharge.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and remote charger with a clean pencil eraser.

## Causes of Poor Reception

---

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction that can shield radio signals.
- You're too close to appliances such as microwaves, stoves, televisions, entertainment centers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into AC outlet with other electronic devices.
- Handset battery is low.

## Service

---

If trouble is experienced with this equipment, for repair or warranty information, please contact customer service at **1-800-448-0329**. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

This product may be serviced only by the manufacturer or its authorized service agents. Changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this guide or call customer service at **1-800-448-0329**.

Or refer inquiries to:

**Thomson Inc.**

**Manager, Consumer Relations**

**PO Box 1976**

**Indianapolis, IN 46206-1976**

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date \_\_\_\_\_

Name of store \_\_\_\_\_

**What your warranty covers:**

- Defects in materials or workmanship.

**For how long after your purchase:**

- One year, from date of purchase.

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

**What we will do:**

- Provide you with a new or, at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

**How you get service:**

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- "Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period, must be presented to obtain warranty service." For rental firms, proof of first rental is also required. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

**Thomson Inc.**

**11721 B Alameda Ave.**

**Socorro, Texas 79927**

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment for loss or damage. Thomson Inc. accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you freight prepaid.

**What your warranty does not cover:**

- Customer instruction. (Your User's Guide provides information regarding operating instructions and user controls. Any additional information, should be obtained from your dealer.)
- Installation and setup service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

**Product Registration:**

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

**Limitation of Warranty:**

- The warranty stated above is the only warranty applicable to this product. All other warranties, express or implied (including all implied warranties of merchantability or fitness for a particular purpose) are hereby disclaimed. No verbal or written information given by Thomson Inc., its agents, or employees shall create a warranty or in any way increase the scope of this warranty.
- Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. Thomson Inc. shall not be liable for incidental or consequential damages resulting from the use of this product or arising out of any breach of any express or implied warranty on this product. This disclaimer of warranties and limited warranty are governed by the laws of the state of Indiana. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above.

**How state law relates to this warranty:**

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

**If you purchased your product outside the USA:**

- This warranty does not apply. Contact your dealer for warranty information.

**A**

Accessory Information 24





Model 28320  
00017344 (Rev. 0 Dom E/S)  
07-25  
Printed in China

**Thomson Inc.**  
101 West 103rd Street  
Indianapolis, IN 46290-1024  
© 2007 Thomson Inc.  
Trademark(s) ® Registered  
Marca(s) Registrada(s)