

Preliminary Draft 3

7545 Hand-Held Computer User Manual

>Ubi Ufm% , 20%\$

P/N 8000190.A

*ISO 9001 Certified
Quality Management System*



Preliminary Draft 3

© Copyright 20%\$ by Psion Teklogix Inc.

2100 Meadowvale Boulevard, Mississauga, Ontario, Canada L5N 7J9

<http://www.pSIONteklogix.com>

This document and the information it contains is the property of Psion Teklogix Inc., is issued in strict confidence, and is not to be reproduced or copied, in whole or in part, except for the sole purpose of promoting the sale of Psion Teklogix manufactured goods and services. Furthermore, this document is not to be used as a basis for design, manufacture, or sub-contract, or in any manner detrimental to the interests of Psion Teklogix Inc.

Disclaimer

Every effort has been made to make this material complete, accurate, and up-to-date. In addition, changes are periodically added to the information herein; these changes will be incorporated into new editions of the publication.

Psion Teklogix Inc. reserves the right to make improvements and/or changes in the product(s) and/or the program(s) described in this document without notice, and shall not be responsible for any damages, including but not limited to consequential damages, caused by reliance on the material presented, including but not limited to typographical errors.

Windows[®] and the Windows Logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.



*The **Bluetooth** word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Psion Teklogix Inc. is under license.*

All trademarks and trade names are the property of their respective holders.

Preliminary Draft 3

Return-To-Factory Warranty

Psion Teklogix Inc. provides a return to factory warranty on this product for a period of twelve (12) months in accordance with the Statement of Limited Warranty and Limitation of Liability provided at:

www.pSIONteklogix.com/warranty

The warranty on Psion Teklogix manufactured equipment does not extend to any product that has been tampered with, altered, or repaired by any person other than an employee of an authorized Psion Teklogix service organization. See Psion Teklogix terms and conditions of sale for full details.



Important: Psion Teklogix warranties take effect on the date of shipment.

Service And Information

Psion Teklogix provides a complete range of product support services and information to its customers worldwide. Services include technical support and product repairs. To locate your local support services, please go to www.pSIONteklogix.com/service-and-support.htm

To access further information on current and discontinued products, please go to <https://teknet.pSIONteklogix.com> and log in or tap on “Not Registered?”, depending on whether you have previously registered for Teknet. A section of archived product information is available online.



Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC

This Product, and its accessories, comply with the requirements of the Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC. If your end-of-life Psion Teklogix product or accessory carries a label as shown here, please contact your local country representative for details on how to arrange recycling.

For a list of international subsidiaries, please go to:

www.pSIONteklogix.com/EnvironmentalCompliance

Preliminary Draft 3

Restriction On Hazardous Substances (RoHS) Directive 2002/95/EC

What is RoHS?

The European Union has mandated that high environmental standards be met in the design and manufacture of electronic and electrical products sold in Europe, to reduce hazardous substances from entering the environment. The “Restriction on Hazardous Substances Directive (RoHS)” prescribes the maximum trace levels of lead, cadmium, mercury, hexavalent chromium, and flame retardants PBB and PBDE that may be contained in a product. Only products meeting these high environmental standards may be “placed on the market” in EU member states after July 1, 2006.



RoHS Logo

Although there is no legal requirement to mark RoHS-compliant products, Psion Teklogix Inc. indicates its compliance with the directive as follows:

The RoHS logo located either on the back of the product or underneath the battery in the battery compartment (or on a related accessory such as the charger or docking station) signifies that the product is RoHS-compliant as per the EU directive. Other than as noted below, a Psion Teklogix product that does not have an accompanying RoHS logo signifies that it was placed on the EU market prior to July 1, 2006, and is thereby exempt from the directive.



Note: Not all accessories or peripherals will have a RoHS logo due to physical space limitations or as a result of their exempt status.

TABLE OF CONTENTS

Chapter 1: Introduction

1.1	About This Manual	3
1.2	Text Conventions	4
1.3	7545 Features	4
1.4	About The 7545 Hand-Held Computer	7
1.4.1	The 7545 Hand-Held Computer	8
1.4.2	Regulatory Labels	10

Chapter 2: Basic Checkout

2.1	Preparing The 7545 For Operation	14
2.1.1	Equipment You Need To Get Started	14
2.2	Powering Up The 7545	14
2.2.1	Charging The Battery	14
2.2.2	Installing The Battery And Switching The Computer On	15
2.3	Attaching Carrying Accessories	16
2.3.1	Attaching The Hand Strap	16
2.3.2	Attaching The Pistol Grip	18
2.4	Calibrating The Touchscreen	19
2.5	Configuring Your Radio	19
2.6	Configuring An IEEE 802.11 Radio In The Unit	19
2.6.1	Assigning An IP Address	25
2.6.2	Name Servers Tab	26
2.6.3	Advanced Features	27
2.6.3.1	Rearranging Preferred Networks	27
2.6.3.2	Deleting A Preferred Network	27
2.6.3.3	Changing Network Properties	28
2.7	Summit Client Utility (SCU) For 802.11b/g Radio	28
2.7.1	Assigning The IP Address	28
2.7.2	Name Servers Tab	30
2.7.3	Using The SCU To Connect To The WLAN	31
2.7.3.1	SSID	32
2.7.3.2	EAP Type	32
2.7.3.3	Encryption	32

Preliminary Draft 3

Contents

2.8	Checking The Scanner	33
2.9	Data Transfer Between The 7545 And A PC	34
2.9.1	Using Microsoft ActiveSync	34
2.9.2	Using Windows Vista	34
2.10	Resetting The 7545	35

Chapter 3: Getting To Know Your 7545

3.0.1	Battery Safety	39
3.0.2	Removing And Installing The Battery Pack	39
3.0.3	Battery Chargers	40
3.0.4	Monitoring The Battery And Maximizing Run Time	41
3.0.4.1	Storing Batteries	42
3.1	Switching The Hand-Held On And Off	43
3.2	The Keyboard	43
3.2.1	Modifier Keys	44
3.2.1.1	Activating Modifier Keys	44
3.2.1.2	Locking Modifier Keys	45
3.2.2	The Keys	45
3.2.3	Function Keys, Softkeys And Macro Keys	46
3.2.3.1	Function Keys	46
3.2.3.2	Macro Keys	47
3.2.4	Alphanumeric Keyboard: 58-Key	47
3.2.6	The Keypad Backlight	50
3.3	The Display	50
3.3.1	Adjusting The Display Backlight	50
3.3.2	Adjusting The Contrast	51
3.3.3	Calibrating The Touchscreen	51
3.4	7545 Indicators	52
3.4.1	LEDs	52
3.4.1.1	Charge LED	53
3.4.1.2	Radio Traffic LED	53
3.4.1.3	Scan LED	54
3.4.1.4	User Application LED	54
3.4.2	Onscreen Indicators	54
3.4.3	Audio Indicators	57
3.4.3.1	Adjusting The Beeper Volume	57
3.5	Internal Scanners	58
3.5.1	Scanning Techniques	59

3.5.2	Scan LED Indicators	59
3.5.3	Troubleshooting	60
3.5.4	Operating One Dimensional (1D) Internal Laser Scanners	60
3.5.5	Operating Internal PDF Laser Scanners	60
3.5.6	Operating Internal Two Dimensional (2D) Imager Scanners	61
3.5.7	Operating RFID/Scanner Modules	62
3.6	Connecting And Disconnecting Tethered Peripherals	62
3.7	Monitoring The Network Connection	63
3.8	Uploading Data In A Docking Station	64
3.9	General Maintenance	64
3.9.1	Caring For The Touchscreen	64
3.9.2	Cleaning The 7545	64

Chapter 4: Windows Embedded CE 5.0

4.1	Navigating In Windows CE And Applications	69
4.1.1	Navigating Using A Touchscreen And Stylus	69
4.1.2	Navigating Using The Keyboard	69
4.2	Working With Files, Folders And Programs	71
4.3	The Startup Desktop	71
4.3.1	The Desktop Icons	72
4.3.2	The Taskbar	73
4.3.2.1	Using The Taskbar	74
4.3.2.2	Customizing The Taskbar	74
4.4	The Start Menu	75
4.4.1	The Desktop	76
4.4.2	Security Settings	76
4.4.3	Programs	78
4.4.4	Shortcuts	79
4.4.5	Settings	81
4.4.6	Run	82
4.4.7	Shutdown	82
4.5	Using A Dialog Box	83

Chapter 5: Configuration

5.1	Remote Connect	89
5.2	The TekTerm Application	89
5.3	Pocket PC Compatibility	89
5.4	The Control Panel	89

Preliminary Draft 3

Contents

5.5	Control Panel Icons	90
5.6	Control Panel Applications: Basic Setup	94
5.6.1	App Launch Keys	94
5.6.2	Certificates	96
5.6.3	Display Properties	97
5.6.3.1	Background	98
5.6.3.2	Appearance	98
5.6.3.3	Backlight	99
5.6.3.4	Contrast	100
5.6.4	Input Panel	101
5.6.5	Keyboard Properties	102
5.6.5.1	Key Repeat	103
5.6.5.2	Keyboard Backlight	104
5.6.5.3	Keyboard One Shot Modes	105
5.6.5.4	Keyboard Macro Keys	106
5.6.5.5	Unicode Mapping	108
5.6.5.6	Scancode Remapping	109
5.6.5.7	Lock Sequence	112
5.6.6	Manage Triggers	113
5.6.6.1	Trigger Mappings	114
5.6.6.2	Add And Edit Trigger Mapping	115
5.6.7	Power Management Properties	117
5.6.7.1	Battery Capacity	117
5.6.7.2	Power Saving Suspend	118
5.6.7.3	Suspend Threshold And Estimated Battery Backup	119
5.6.7.4	Calibrate	120
5.6.7.5	Advanced	121
5.6.7.6	Devices	122
5.6.7.7	Built In Devices	122
5.6.8	Stylus Properties	122
5.6.8.1	Double-Tap	123
5.6.8.2	Calibration	123
5.6.8.3	Touch	124
5.6.9	Volume And Sounds Properties	124
5.6.9.1	Volume Adjustments	124
5.6.9.2	Sound Adjustments	124
5.7	Bluetooth Setup	124
5.7.1	Devices	125
5.7.2	Headset	129
5.7.3	Servers	130

5.7.4	Outgoing	131
5.7.5	Active Conn.	132
5.7.6	Properties	133
5.7.7	Search For	134
5.8	Error Reporting	134
5.9	IPv6 Support	134
5.10	Scanner Settings	135
5.10.1	Bar Codes	136
5.10.1.1	Scanner	136
5.10.1.2	Restoring Default Settings	137
5.10.2	Options	138
5.10.2.1	Double Click Parameters	138
5.10.2.2	Display Parameters	139
5.10.3	Translations	140
5.10.3.1	Case Rules	142
5.10.4	Ports	143
5.10.4.1	Console Port	144
5.11	SNMP (Simple Network Management Protocol) Setup	148
5.11.1	Contact	148
5.11.2	Communities	149
5.11.2.1	Adding A Community	150
5.11.2.2	Modifying A Community Setting	150
5.11.2.3	Removing An Existing Community	150
5.11.3	Trap Destination	151
5.11.3.1	Enabling Authentication TRAPS	151
5.11.3.2	Adding A Destination	151
5.11.3.3	Changing A Destination	152
5.11.3.4	Removing A Trap Destination	152
5.11.4	Permitted Hosts	153
5.11.4.1	Adding A Host	153
5.11.4.2	Changing A Host	153
5.12	The Storage Manager	154
5.12.1	Formatting A Memory Card	154
5.12.2	Creating Partitions	155
5.12.3	Partition Management	156
5.13	Teklogix Error Handling Service	158
5.13.1	ErrorLogInfo	158

Preliminary Draft 3

Contents

5.13.2	NetLog	159
5.14	Teklogix Imagers	160
5.15	Total Recall	161
5.15.1	Creating A Backup Profile	161
5.15.2	Restoring A Profile	165
5.16	TweakIT Settings	166
5.16.1	Advanced	166
5.16.1.1	Advanced Interface And Network	166
5.16.1.2	Advanced Services Settings	167
5.16.1.3	Advanced Intermediate Driver	168
5.16.1.4	Radio Features	169
5.16.2	User	170
5.16.2.1	Internet Explorer Settings	170
5.16.2.2	User Display Settings	170
5.16.2.3	User System Settings	171
5.16.3	Registry Editor	172

Chapter 6: Peripheral Devices & Accessories

6.1	External Bar Code Readers	175
6.1.1	PowerScan [®] Standard, LR and XLR Bar Code Scanners	175
6.1.2	Entering Data With The Bar Code Reader	175
6.3	Batteries	176
6.4	Battery Charging	176
6.4.1	Battery Gas Gauge Calibration	176
6.5	Gang Charger	177
6.5.1	Installation	177
6.5.2	Operator Controls	178
6.5.3	Charge Indicators	178
6.5.4	Charging Batteries	179
6.5.5	Troubleshooting	179
6.5.5.1	Excessive Charge Duration	179
6.5.5.2	Improper Battery Storage	179
6.5.5.3	Indicator Flashing Red	180
6.5.5.4	Power LED Does Not Light Up	180
6.5.5.5	Indicator Does Not Light When Battery Installed	180
6.6	Combo Charger	180
6.6.1	Installation	180
6.6.2	Operator Controls	181

6.6.3	Using the Combo Charger With The 7545	181
6.6.4	Charging The Spare Battery	181
6.6.5	Charge Indicators.....	182
6.6.6	Troubleshooting	182
6.7	Combo Dock	182
6.7.1	Installation	182
6.7.2	Using The Combo Dock.....	182
6.7.3	Network Access	183
6.7.4	Troubleshooting	183
6.8	Quad Dock	183
6.8.1	Installation	183
6.8.2	Indicators And Controls	184
6.8.3	Using The Quad Dock.....	184
6.8.4	Network Access	184
6.8.4.1	Network Addressing	185
6.8.5	Battery Charging	185
6.8.6	Troubleshooting	185
6.8.6.1	Network Link Unsuccessful	185
6.8.6.2	7545 LED Does Not Light When Docked	185
6.9	Portable Docking Module (PDM).....	186
6.10	Bluetooth Peripherals	188
6.11	The 7545 Picker Cradle	189
6.11.1	Picker Cradle Mounting Recommendations.....	189
6.11.1.1	Mounting Template	190
6.11.2	Wiring Guidelines.....	190
6.11.3	Using The Picker Cradle	190
6.11.4	Maintaining The Picker Cradle	190
6.11.5	Powered Cradle Installation In High Voltage Vehicles.....	191
6.11.5.1	Extreme Wet Environments	191
6.11.6	Powered Cradle Installation	192
6.11.7	Wiring Vehicle Power To The Cradle	193
6.11.8	The Port Replicator	193
6.12	Tether Adaptor Cables	194

Chapter 7: Specifications

7.1	7545 Hand-Held Computer Specifications	197
7.1.1	Hardware.....	197
7.1.2	Software	199
7.1.3	Approvals	200

Preliminary Draft 3

Contents

7.2	Murata Radio Specifications	200
7.3	Internal Scanner Port	201
7.6	Internal Scanners	202
7.6.1	SE1224 HP - High Performance	202
7.6.1.1	SE1224HP Decode Zones	203
7.7	HU3000 - 1900 mAh Lithium-ion Battery Pack	204

Appendix A: Port Pinouts

A.1	Docking Station Connector	A-1
A.2	Battery Contacts	A-2

Appendix B: SCU For 802.11b/g Radio

B.1	SCU Tabs	B-3
B.1.1	Main	B-3
B.1.2	Profile	B-4
B.1.3	Status	B-9

B.1.4	Diags	B-9
B.1.5	Global	B-10

Appendix C: Bar Code Settings

C.1	Bar Code Settings.....	C-5
C.1.1	Scanner Options.....	C-5
C.1.2	Restoring Default Settings.....	C-6
C.2	Decoded (Internal) Scanners	C-7
C.2.1	Options.....	C-7
C.2.2	Decoded (Internal) Advanced Options	C-8
C.2.3	Decoded (Internal) 2D Scanning Options	C-10
C.2.4	Decoded (Internal) Data Options	C-11
C.2.5	Code 39	C-12
C.2.6	Code 128.....	C-15
C.2.7	EAN 13	C-16
C.2.8	EAN 8	C-16
C.2.9	UPC A	C-16
C.2.10	UPC E	C-17
C.2.11	UPC/EAN Shared Settings	C-18
C.2.12	Code 93	C-19
C.2.13	Codabar	C-19
C.2.14	MSI Plessey.....	C-20
C.2.15	Interleaved 2 of 5.....	C-21
C.2.16	Discrete 2 of 5.....	C-22
C.2.17	RSS Code (Reduced Space Symbology).....	C-22
C.2.18	Composite	C-23
C.2.19	PDF-417	C-24
C.2.20	Micro PDF-417	C-24
C.3	Decoded (Intermec ISCP).....	C-25
C.3.1	Decoded (ISCP) Options	C-25
C.3.2	Decoded (ISCP) Advanced Options	C-25
C.3.3	Code 39	C-26
C.3.4	Code 128.....	C-28
C.3.5	EAN 13	C-29
C.3.6	EAN 8	C-30
C.3.7	UPC A	C-30
C.3.8	UPC E Settings.....	C-31
C.3.9	UPC/EAN Shared Settings	C-31
C.3.10	Code 93	C-32

Preliminary Draft 3

Contents

C.3.11	Codabar	C-33
C.3.12	MSI Plessey	C-34
C.3.13	Code 11	C-35
C.3.14	Interleaved 2 of 5	C-35
C.3.15	Matrix 2 of 5	C-36
C.3.16	Discrete 2 of 5	C-37
C.3.17	Telepen	C-37
C.3.18	RSS Code (Reduced Space Symbology)	C-38
C.3.19	Composite	C-39
C.3.20	TLC-39	C-39
C.3.21	PDF-417	C-40
C.3.22	Micro PDF-417	C-40
C.3.23	Codablock	C-41
C.4	Imager	C-41
C.4.1	Imager Options	C-41
C.4.2	Imager Advanced Options	C-43
C.4.3	Code 39	C-45
C.4.4	Code 128	C-46
C.4.5	EAN 13	C-46
C.4.6	EAN 8	C-47
C.4.7	UPC A	C-47
C.4.8	UPC E	C-47
C.4.9	Code 93	C-48
C.4.10	Codabar	C-48
C.4.11	Interleaved 2 of 5	C-48
C.4.12	RSS Code (Reduced Space Symbology)	C-49
C.4.13	Composite	C-49
C.4.14	PDF-417	C-49
C.4.15	Micro PDF-417	C-50
C.4.16	2D Data Matrix	C-50
C.4.17	2D QR Code	C-50
C.4.18	2D Maxicode	C-51
C.4.19	2D Aztec	C-51
C.4.20	Postal: PlaNET	C-51
C.4.21	Postal: PostNET	C-52
C.4.22	Postal: Australian	C-52
C.4.23	Postal: Japanese	C-52
C.4.24	Postal: Korean	C-53
C.4.25	Postal: Royal	C-53

C.4.26	Postal: Kix	C-53
C.4.27	Postal: Canadian	C-53
C.5	Non-Decoded Scanners	C-54
C.5.1	Options	C-55
C.5.2	Code 39	C-55
C.5.3	Code 128	C-57
C.5.4	EAN 13	C-58
C.5.5	EAN 8	C-59
C.5.6	UPC A	C-59
C.5.7	UPC E	C-60
C.5.8	Codabar	C-61
C.5.9	Code 93	C-61
C.5.10	Code 11	C-62
C.5.11	Interleaved 2 of 5	C-63
C.5.12	MSI Plessey	C-63
C.5.13	Discrete 2 of 5	C-64
C.5.14	IATA 2 of 5	C-65

Appendix D: Teklogix Imagers Applet

D.1	Required Applets	D-3
D.2	Presets	D-3
D.2.1	Predefined Presets	D-4
D.2.2	Bar Code Predefined Presets	D-4
D.2.3	Bar Code Decoding Camera Predefined Presets	D-5
D.2.4	Image Capture Predefined Presets	D-5
D.3	Using The Teklogix Imagers Applet	D-6
D.3.1	Configuring The Image Capture Presets	D-6
D.3.2	Selecting A Camera	D-7
D.3.3	Setting The Active Preset	D-7
D.3.4	Viewing A Preset	D-7
D.3.5	Creating A Custom Preset	D-7
D.3.6	Modifying A Custom Preset	D-8
D.3.7	Removing A Custom Preset	D-9
D.4	Configuring The Bar Code Decoding Camera Presets	D-9
D.4.1	Selecting A Camera	D-10
D.4.2	Setting The Active Preset	D-11
D.4.3	Viewing A Preset	D-11
D.4.4	Creating A Custom Preset	D-11
D.4.5	Modifying A Custom Preset	D-12

Preliminary Draft 3

D.4.6	Removing A Custom Preset	D-13
D.4.7	Configuring The Bar Code Decoding Symbologies	D-13
D.4.8	Setting The Active Preset.....	D-14
D.4.9	Viewing A Preset.....	D-14
D.4.10	Creating A Custom Preset	D-15
D.4.11	Modifying A Custom Preset	D-16
D.4.12	Removing A Custom Preset	D-17
D.4.13	Configuring Symbologies in the Teklogix Imagers Applet	D-17
D.4.14	Filter Tab – Manipulating Bar Code Data.....	D-17
D.4.15	Translation Tab – Configuring Rules	D-19
D.4.16	Advanced Tab.....	D-20
D.5	Teklogix Scanners Applet.....	D-21
Index	1

INTRODUCTION

1

1.1 About This Manual	3
1.2 Text Conventions	4
1.3 7545 Features	4
1.4 About The 7545 Hand-Held Computer	7
1.4.1 The 7545 Hand-Held Computer	8
1.4.2 Regulatory Labels	10

Preliminary Draft 3

1.1 About This Manual

This manual describes how to configure, operate, and maintain the Psion Teklogix 7545 Hand-held Computer.

Chapter 1: Introduction

provides a basic overview of the 7545 computer.

Chapter 2: Basic Checkout

describes preparing the 7545 ready for operation, including setting up your radio.

Chapter 3: Getting To Know Your 7545

describes the 7545 features, outlines how to charge and maintain the battery, describes the keyboard, display, using the internal scanner, etc.

Chapter 4: Windows Embedded CE 5.0

describes the Microsoft® Windows® Embedded CE 5.0 desktop and how to use it, outlines the basics of moving around a Microsoft Windows Embedded CE 5.0 window, selecting and opening icons and files, and working with a dialog box.

Chapter 5: Configuration

describes the Microsoft Windows Embedded CE 5.0 Control Panel and how to use it to configure the 7545, along with attached scanners, and so on.

Chapter 6: Peripheral Devices & Accessories

describes the peripherals and accessories available for your 7545 computer.

Chapter 7: Specifications

lists the specifications for your 7545 computer, radio, scanner, and battery.

Appendix A: Port Pinouts

describes the 7545 pinouts.

Appendix B: SCU For 802.11b/g Radio

provides details on the Summit Client Utility (SCU), which is used to configure the 802.11b/g Compact Flash radio module.

Appendix C: Bar Code Settings

details your bar code options.

Appendix D: Teklogix Imagers Applet

describes in detail your imager's settings.

1.2 Text Conventions



Note: Notes highlight additional helpful information.



Important: *These statements provide particularly important instructions or additional information that is critical to the operation of the equipment.*



Warning: *These statements provide critical information that may prevent physical injury, equipment damage or data loss.*

1.3 7545 Features

Rugged design:

- Fully-sealed enclosure (rated to IP65). Totally protected against dust ingress. Protected from low pressure water jets from all directions.
- Multiple 1.8m (6 ft.) drops or 26 drops from 1.5m (5 ft.) to concrete while powered on and configured with accessories such as WiFi radio, scanner/imager, and pistol grip.

Processor and memory:

- XScale PXA270 @ 520 MHz
- 32 KB instruction and 32 KB data cache
- On-board RAM: 128 MB SDRAM
- On-board ROM: 64 MB FLASH

Operating system:

- Windows CE 5.0

Programming environment:

- HTML, XML
- Psion Teklogix Mobile devices SDK for CE
- Java™, Embedded Visual C++, Microsoft Visual Studio® 2005
- Standard CE APIs - MFC, ATL

Wireless communications:

- IEEE 802.11 b/g Compact Flash Radio, operating in 2.4 GHz band (CCX Certified v.4)

- IEEE 802.11a/b/g Compact Flash Radio with integrated antenna, operating in 2.4 GHz and 5 GHz bands
- *Bluetooth*[®] radio 2.4 GHz (10 m range)

Application software:

- Internet Explorer for Windows CE
- Optimized for use with Open TekTerm (for details, see the *TekTerm Software User Manual*, P/N 8000073)
- Wordpad
- ActiveSync

Display:

- 320 x 240 (1/4 VGA) graphic colour TFT
- 8.9 cm (3.5 in.) diagonal portrait mode
- 64K displayable colours
- Contrast control and automatic backlight
- Sunlight readable (for outdoor use)
- Optional monochrome screen
- Optional non-touchscreen

Touchscreen:

- Passive stylus or finger operation
- Signature capture
- Integral stylus holder
- 4-wire or high durability 5-wire technology options

Keyboards:

- Automatic bright EL backlight
- Ergonomically designed for left- or right-hand use
- Dedicated function keys
- 58-key alpha with a total of 30 function keys (6 direct-access)

Indicators and controls:

- Beeper with volume control
- LEDs for radio transmit and receive, scanning, battery status, and user applications

Bar code applications:

- Internal 1D & 2D scan engines: standard, long range, advanced long range, enhanced standard range
- Fuzzy logic internal scan engine
- Internal 1.3 megapixel CMOS image capture scan engine
- Supports decoded and undecoded tethered scanners

Internal expansion slots:

- One SDIO/MMC slot 1G Industrial Card
- One Type II Compact Flash slot

External ports:

Tether Port with:

Docking station port with:

- Power in/out

Power management:

- Typical 8-hour usage lithium-ion standard battery
- Quick swap packs
- Advanced smart battery with gas gauge
- Runs with battery, wall adaptor or cigarette lighter
- Built-in fast charger (2 hours)

- System backup during battery swap (up to 20 minutes)
- One week real-time clock backup

Network Management:

- SNMP MIB 2 support
- Remote software download
- Remote WLAN management
- Enhanced security for 802.11

1.4 About The 7545 Hand-Held Computer

The 7545 is a ruggedized hand-held personal computer, running the Microsoft Windows CE 5.0 operating system. It is intended for use in commercial and light industrial applications with a focus on real time wireless data transactions. All possible bar code input methodologies are supported by one of a variety of scanners available. Optimization for specific operational environments is supported with a wide range of peripheral options and carrying accessories.

Note: 7545 is a body worn device and to maintain compliance with the FCC RF exposure guidelines, use the Psion Teklogix approved carrying case. Use of non-approved accessories may violate FCC RF exposure guidelines.

1.4.2 Regulatory Labels

Figure 1.5 Laser Warning Label



This label is affixed below the scanner window.



Warning: *Using controls or adjustments or performing procedures other than those specified herein may result in hazardous radiation exposure.*

Figure 1.6 LED Radiation Notice Label



BASIC CHECKOUT

2

2.1 Features Of The 7545.	13
2.2 Preparing The 7545 For Operation.	14
2.2.1 Equipment You Need To Get Started.	14
2.3 Powering Up The 7545.	14
2.3.1 Charging The Battery.	14
2.3.2 Installing The Battery And Switching The Computer On	15
2.4 Attaching Carrying Accessories	16
2.4.1 Attaching The Hand Strap	16
2.4.2 Attaching The Pistol Grip	18
2.5 Calibrating The Touchscreen	19
2.6 Configuring Your Radio	19
2.7 Configuring An IEEE 802.11 Radio In The Unit	19
2.7.1 Assigning An IP Address.	25
2.7.2 Name Servers Tab	26
2.7.3 Advanced Features	27
2.7.3.1 Rearranging Preferred Networks	27
2.7.3.2 Deleting A Preferred Network	27
2.7.3.3 Changing Network Properties.	28
2.8 Summit Client Utility (SCU) For 802.11b/g Radio	28
2.8.1 Assigning The IP Address	28
2.8.2 Name Servers Tab	30
2.8.3 Using The SCU To Connect To The WLAN.	31
2.8.3.1 SSID.	32
2.8.3.2 EAP Type	32
2.8.3.3 Encryption.	32
2.9 Checking The Scanner	33
2.10 Data Transfer Between The 7545 And A PC	34
2.10.1 Using Microsoft ActiveSync	34
2.10.2 Using Windows Vista	34

Preliminary Draft 3

2.11 Resetting The 7545. 35

2.2 Preparing The 7545 For Operation

Typically, 7545 Hand-Held Computers are configured at the factory and arrive ready for use. Although these computers are equipped with an internal Compact Flash and SD I/O slot, these slots are not intended for user modification. If a device needs to be changed or added in these slots, contact qualified Psion Teklogix personnel.

2.2.1 Equipment You Need To Get Started

You'll need:

- A compatible battery charger, docking station or portable docking module (PDM) with power supply.
- An operating wireless network (if you are not operating the equipment in batch mode).
- A medium (#2) Phillips head screwdriver (if you need to attach a carrying strap or pistol grip handle).

2.3 Powering Up The 7545



Note: Psion Teklogix offers a Portable Docking Module (PDM) along with its power supply to help speed the checkout and confirmation process for your 7545. The PDM can power your computer with or without a battery installed in the unit. Refer to Chapter 6: "Peripheral Devices & Accessories" for more information about this accessory.

2.3.1 Charging The Battery



Important: The 7545 uses a high capacity lithium-ion battery. Before charging the battery, it is critical that you review the battery safety guidelines in the 7545 Hand-Held Computer Regulatory & Warranty Guide (PN 8000191).

Batteries shipped from the factory are not charged. They must be fully charged prior to use. Full capacity may not be reached until at least 5 full charge/discharge cycles have been performed. Batteries can be charged using a gang charger or the unit's internal charger. When using the internal charger, a suitable power source is required. All chargers and docking stations are described in Chapter 6: "Peripheral Devices & Accessories".

2.5 Calibrating The Touchscreen



Note: Keep in mind that 7545 Hand-Held Computers can be ordered with or without touchscreens, and that the touchscreen function can be turned off (see “Touch” on page 124).

If you have the 7545 touchscreen feature, it is factory-calibrated and ready-to-go; however, over time the touchscreen's operating parameters may change, and it may need to be recalibrated for correct operation. Refer to “Calibrating The Touchscreen” on page 51 for details.

2.6 Configuring Your Radio

Psion Teklogix provides two types of 802.11 Compact Flash (CF) wireless LAN radio cards for the 7545: the Motorola RA2043a/b/g radio and the Summit RA2041b/g radio. Both models are Direct Sequence Spread Spectrum radios.

If your 7545 is equipped with an RA2041 CF radio, follow the steps under “Summit Client Utility (SCU) For 802.11b/g Radio” on page 28 to set up this type of radio for communication with a wireless LAN.

If your computer is equipped with an RA2043 CF radio, follow the steps outlined under the heading “Configuring An IEEE 802.11 Radio In The Unit”, below.

2.7 Configuring An IEEE 802.11 Radio In The Unit

The most common 802.11 settings are configured as defaults. However, there are some fields that must be completed, including the SSID of your access point and the security methods implemented in the network (including access keys).



Note: In most situations the configuration of your 802.11 radio will require parameters, settings, and access keys from a network administrator.

Network administrators should review the detailed security information in this section in order to effectively configure the 802.11 wireless network.



Important: *If the 7545 is equipped with a radio that has never been configured, the radio settings dialog box opens automatically when the unit is powered on. In this case, skip to Step 4 on page 21.*


To configure the 802.11 radio:

1. Tap on **Start>Settings>Network and Dial-up Connections**. (If the Start Menu isn't displayed in the taskbar, press [BLUE] [0] to display it.)

Preliminary Draft 3


If you're using the keyboard, press [BLUE] [0] to display the *Start Menu*. Use the [DOWN] arrow key to highlight *Settings*. Press the [RIGHT] arrow key to display the sub-menu. Highlight *Network*, and press [ENTER].

Figure 2.7 Network And Dial-Up Connections

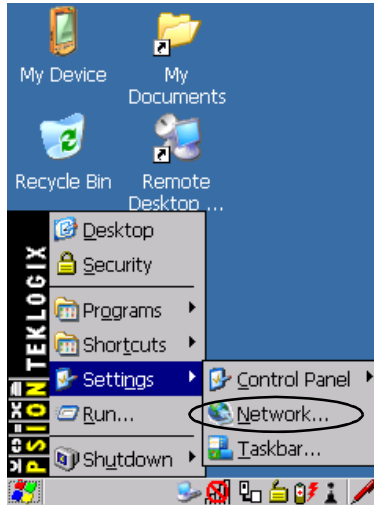


2. Choose the radio icon to open the *802.11 Wireless LAN Settings* window. In the sample screen, this icon is labelled **PTXCF8385P N1**.

Figure 2.8 802.11 Wireless LAN Icon

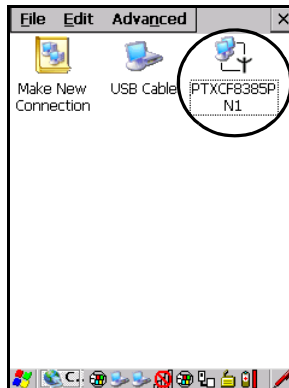

3. Wireless Statistics Tab

When you choose the **Wireless LAN** icon, an *802.11 Wireless LAN Settings* window (*PTXCF8385P N1* in the sample below) is displayed.

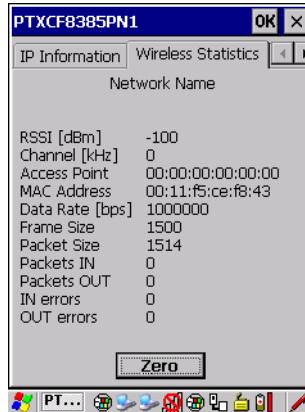

This tab lists your radio statistics. Choosing the **Zero** button resets the statistics of the last four items: Packets IN, Packets OUT, IN errors and OUT errors.

- Display the next tab in this window, *Wireless Information*.

4. Wireless Information Tab

The options under this tab display existing networks to which you can connect, and it allows you to add a new network or modify the settings for an existing network.


Configure button

- To change the settings in an existing network, highlight the network you want to modify, and choose the **Configure** button to display the *Wireless Properties* dialog box.

Connect button

- To force connection to a specific, existing network, highlight the network to which you want your 7545 to connect, and choose the **Connect** button.


Preliminary Draft 3

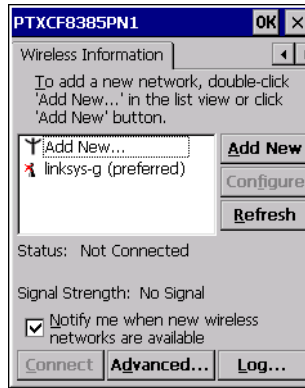

This tab lists available networks—any access points that are broadcasting an SSID, and it lists preferred networks—networks that you have configured. Since access points are generally secure, they will most likely not be listed here. By default, 7545 attempts to connect to preferred networks. This behaviour can be changed by enabling *Automatically connect to non-preferred networks* in the *Advanced Wireless Settings* dialog box (page 27).

- To add a new configuration, tap on the **Add New** button. A blank *Wireless Properties* dialog box is displayed.

5. Wireless Properties

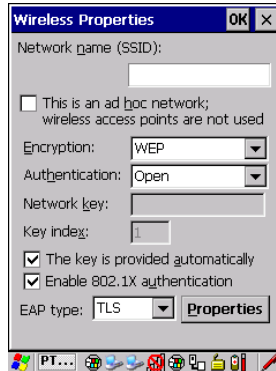

Network name (SSID)

- Type the appropriate SSID (Service Set Identifier) in the *Network name (SSID)* text box at the top of this dialog box.

The *Network name* field can contain a maximum of 32 characters. The name assigned here is listed as a preferred network.



Important: *Keep in mind that the 7545 will only communicate with access points that are configured with the same SSID.*

Ad Hoc And Infrastructure

If you are using an *Infrastructure* network—one in which 7545s must pass data through an access point—leave the checkbox next to *This is an ad hoc network* blank.

If you are using an *Ad Hoc* network—a network in which 7545s pass data directly to other 7545s without an access point—highlight *This is an ad hoc network*, and add a checkmark in the checkbox to enable *Ad Hoc*.

Encryption

WEP (Wired-Equivalent Privacy) encryption prevents others from accidentally accessing your network. If you are not using encryption, you can choose *Disabled* from the drop-down encryption menu. Otherwise, leave this field as is.



Note: WEP cannot be disabled if you are using WPA or WPA-PSK authentication.

TKIP (Temporal Key Integrity Protocol) is an encryption protocol included as part of the IEEE 802.11 standard for wireless LANs. Designed to enhance *WEP*, *TKIP* uses the original *WEP* encryption but ‘wraps’ additional code at the beginning and end to encapsulate and modify it, encrypting each data packet with a unique encryption key.

Authentication

802.11 supports four subtypes of network authentication services: *Open*, *Shared*, *WPA*, and *WPA-PSK*. Under *Open* authentication, any wireless station can request authentication. The station that needs to authenticate with another wireless station sends an authentication management frame that contains the identity of the sending station. The receiving station then sends back a frame that indicates whether it recognizes the identity of the sending station.

Under *Shared* authentication, each wireless station is assumed to have received a secret shared key over a secure channel that is independent from the 802.11 wireless network communications channel.


Under *WPA* and *WPA-PSK* authentication, the use of 802.1x authentication is required. For wireless networks without a Remote Authentication Dial-In User Service (*RADIUS*) infrastructure, *WPA* supports the use of a preshared key. For wireless networks with a *RADIUS* infrastructure, Extensible Authentication Protocol (*EAP*) and *RADIUS* is supported.

Network Key

This text box is used to specify a 5 or 13 ASCII character sequence or an equivalent 10 or 26 Hexadecimal digit sequence that matches the active WEP key on the access point.

- To assign a Network key, highlight **The key is provided automatically**, and uncheck the checkbox to disable this option.

Figure 2.9 Accessing Network Key And Key Index

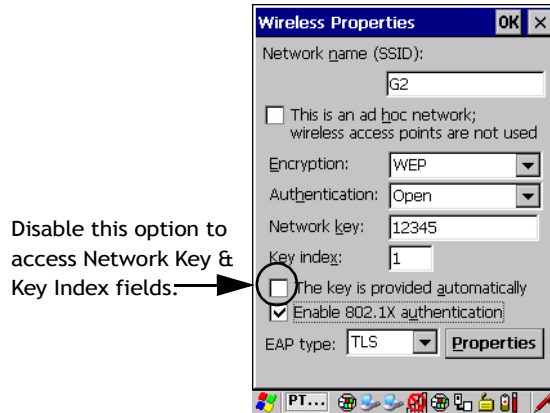

Key Index

This field is used to identify the WEP key.

- Enter a value from 1 to 4.

Enable 802.1x Authentication

802.1X is the IEEE standard that offers additional security for local area networks. It provides authentication for user devices attached to an Ethernet network, whether wired or wireless. A security protocol packet such as TLS or MD5 encapsulated in an *EAP* is used in conjunction with the 802.1X standard to authenticate users at the MAC layer. Available EAPs are listed in the drop-down menu next to the *EAP* option.

- To activate *802.1X*, highlight **802.1x authentication**, and check the checkbox.

EAP Type (Extensible Authentication Protocol)

This drop-down menu lists the EAP types available on your system. The items in this -down menu will vary depending on your network setup. Keep in mind also that some authentication protocols require that you select a *Certificate*. By selecting the *Properties* button, you will be able to select a Certificate. “Certificates” on page 96 outlines how to create certificates for your network.


Saving and exiting the radio setup. **Once you have completed the configuration, press [ENTER] or tap on OK.**

The connection you created will be listed in the *Wireless Information* tab as a preferred network. The radio will search for the SSID and will compare the WEP and authentication information you specified. If there is a match between your computer settings and the access point settings, the computer will communicate on the network through the access point.

2.7.1 Assigning An IP Address

If your network is not using a DHCP server, you will need to assign an IP address.

- In the *PTXCF8385P N1 Settings* window, tap on the **IP Information** tab.

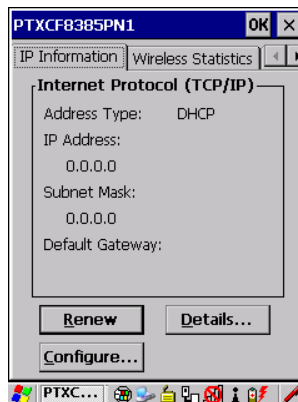


Note: Choosing the Renew button forces the 7545 to renew or find a new IP address. This is useful if, for example, you are out of communication range for a longer period of time and your 7545 is dropped from the network.

To define a static IP address:

- Tap on the **Configure** button.

Figure 2.10 Defining An IP Address

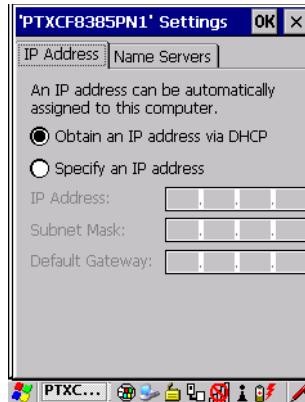


- Tap the stylus on the radio button next to **Specify an IP address** to select it.
- Type an *IP*, *Subnet Mask* and *Default Gateway* address in the appropriate fields. Press [ENTER] to save your information.

2.7.2 Name Servers Tab



Note: If DHCP is enabled, name server addresses are assigned automatically.

- In the *PTXCF8385PN1 Settings* window, display the **IP Information** tab.
- In the *IP Information* tab, tap on the **Configure** button.
- Display the **Name Servers** tab.

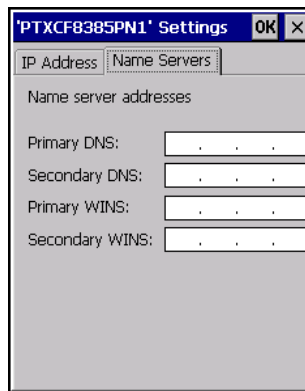


The DNS and WINS fields in the Name Servers tab allow you to specify additional WINS and DNS resolvers. The format for these fields is ###.#.#.#.#.#.#.#.#.#.

2.7.3 Advanced Features

To display the *Advanced Wireless Settings* dialog box:

- Tap the **Advanced** button in the *Wireless Information* tab.

This window lists the available preferred networks.

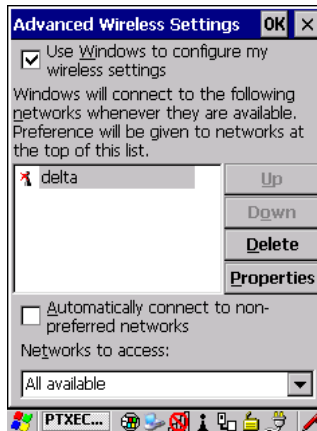

2.7.3.1 Rearranging Preferred Networks

The 7545 attempts to connect with the networks listed in this dialog box in sequence, beginning at the top of the list. If you need to rearrange this list of networks, move networks up and down in the list:

- Move the cursor into the *networks list*, and highlight the **network** that you want to move up or down in the list.
 - To move the highlighted item in the list upward or downward, tap on the **Up** or **Down** button.

2.7.3.2 Deleting A Preferred Network

To delete a network from this list:

- In the *networks list*, highlight the **network** that you want to remove.
- Tap on the **Delete** button.

2.7.3.3 Changing Network Properties

To change the properties of an existing preferred network:

- Highlight the **network** that you want to modify.
- Tap on the **Properties** button.
- Make any necessary changes in the *Wireless Properties* dialog box, and press [ENTER] to save the changes.

2.8 Summit Client Utility (SCU) For 802.11b/g Radio

This section describes the Summit Client Utility (SCU). The SCU provides the utilities you will need to configure the 802.11b/g Compact Flash radio module so that it can communicate through a wireless LAN effectively and securely.

2.8.1 Assigning The IP Address


Before launching the SCU, you need to configure how the IP address will be obtained. If your network is not using a DHCP server, you will need to assign an IP address.

1. Tap on **Start>Settings>Network and Dial-up Connections**. (If the Start Menu isn't displayed in the taskbar, press [BLUE] [0] to display it.)

If you're using the keyboard, press [BLUE] [0] to display the Start Menu. Use the [DOWN] arrow key to highlight Settings. Press the [RIGHT] arrow key to display the sub-menu. Highlight Network, and press [ENTER].


2. Choose the **Summit WLAN Adapter** icon to open the 802.11 Wireless LAN Settings window. In Figure 2.11, this icon is labelled **SDCCF10G1**.

Figure 2.11 Summit WLAN Adapter Icon

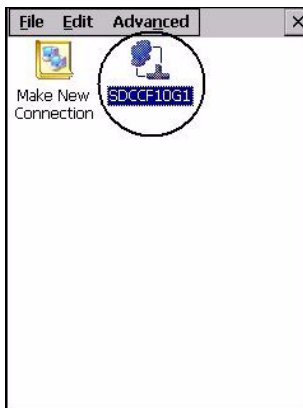


The Summit WLAN Adapter Settings menu is displayed (In this screen shown as the SDCCF10G1 menu).

3. Tap on the **IP Information** tab.

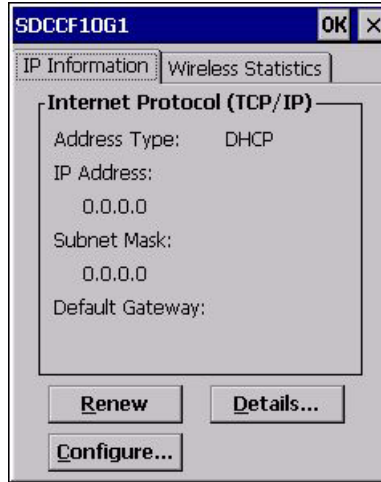

*Note: Choosing the **Renew** button forces the 7545 to renew or find a new IP address. This is useful if, for example, you are out of communication range for a longer period of time and your 7545 is dropped from the network.*

4. To define a static IP address, tap on the **Configure** button. The Summit WLAN Adapter Settings menu provides two options:
 - Tap on **Obtain an IP address via DHCP** to have an address assigned automatically, or
 - If you want to use a particular IP address, tap on **Specify an IP address**, and type the preferred address as well as the *IP*, *Subnet Mask* and *Default Gateway* addresses in the appropriate fields. Tap **OK** to save your information.

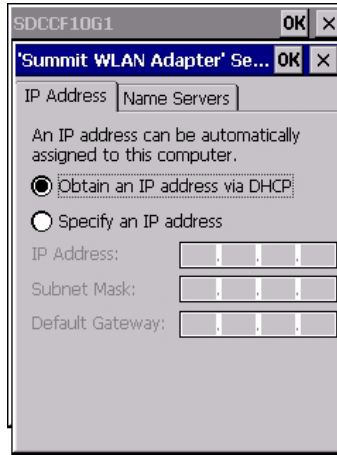


2.8.2 Name Servers Tab



Note: If DHCP is enabled, name server addresses are assigned automatically.

- In the *SDCCF10G1* window, display the **IP Information** tab.
- In the *Summit WLAN Adapter Settings*>*IP Information* tab, tap on the **Configure** button.
- Display the **Name Servers** tab.

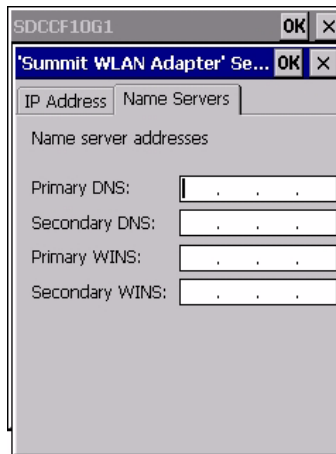

The DNS and WINS fields in the Name Servers tab allow you to specify additional WINS and DNS resolvers. The format for these fields is ###.#.#.#.#.#.

2.8.3 Using The SCU To Connect To The WLAN




This section provides a quick set of steps to create a profile. Detailed information about each of the SCU tabs—*Main*, *Profile*, *Status*, *Diags* and *Global*—is provided in Appendix B: “SCU For 802.11b/g Radio”. To launch the SCU so that your 7545 can connect to a wireless LAN:

To launch the SCU so that your 7545 can connect to a wireless LAN:

1. Tap on **Start>Programs**, and then tap on the **SCU** icon.

Figure 2.12 SCU Main Tab

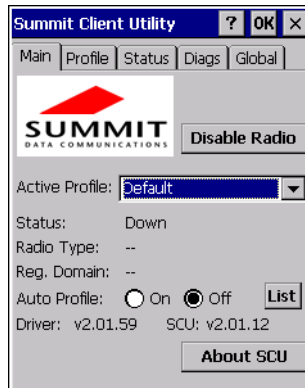

2. Tap on the **Profile** tab.



- Tap on the **New** button to define a new profile.

Preliminary Draft 3

- Type a name using any alpha-numeric combination to uniquely identify this profile.
- Tap on **OK** to return to the *Profile* tab.
- Tap on **Commit** to save the profile name.
- When a pop-up message indicates that your configuration will be saved, tap on **OK**.

2.8.3.1 SSID

To configure the SSID for the network to which you want to associate:

- Type an **SSID** in the text box to the right of *SSID*. This field is limited to 32 characters.
- Tap on **Commit** and then, in the pop-up message, tap on **OK** to save your SSID setting.



Important: *To learn more about the other options available in the radio attributes list, refer to “Profile” on page B-4.*

2.8.3.2 EAP Type

- Tap on the **EAP type** drop-down menu, and choose the appropriate type of authentication—*LEAP*, *EAP-FAST*, *PEAP-MSCHAP*, and *PEAP-GTC*.
- Next, tap on the **Credentials** button, and type credentials for IEEE 802.1X EAP types.



Important: *Refer to “SCU Security Capabilities” on page B-6 for details about security settings. Additional EAP details are described in “EAP Credentials” on page B-7.*

2.8.3.3 Encryption

- Tap on the **Encryption** drop-down menu, and choose the appropriate type of encryption—*Manual WEP*, *Auto WEP*, *WPA PSK*, *WPA TKIP*, *WAP2 PSK*, *WAP2 AES*, *CCKM TKIP*, *CKIP Manual*, or *CKIP Auto*.

If you choose *Manual WEP*, *WPA PSK* or *WPA PSK*:

- Tap on the **WEP/PSK Keys** button. For *Manual WEP*, choose up to four static WEP keys. For *PSK*, type an ASCII passphrase or hex PSK.
- Configure any other settings that are supplied by the network administrator for the *SSID* to which you will associate.
- Make certain that you tap on **Commit** *following each change*.

Once you've completed the configuration:

- Tap the **Main** tab. Tap on the **Active Profile** button – your new profile will be listed in the drop-down menu.

When you tap on the profile you created, the 802.11a/b/g radio module attempts to connect to the network using the following steps:

- Associate to the SSID.
- Authenticate to the network.
- If EAP authentication is being used, derive dynamic encryption keys.
- If DHCP is being used by the network, obtain an IP address.

If the radio is not connecting properly:

- Tap on the **Status** tab.

The *Status* dialog box lists the IP and MAC addresses, and indicates the current state of the radio, the signal strength, channel and so on.

You can go to the *Diags* tab for DHCP renewal, ICMP Echo Requests (Pings), and diagnostics.



Important: *For details about the Status dialog box, refer to page B-9 of Appendix B: SCU For 802.11b/g Radio.*

2.9 Checking The Scanner



Note: Details about operating and troubleshooting scanners and RFID readers are provided under the heading “Internal Scanners” on page 58.

If your 7545 is equipped with an internal scanner, you can test it to ensure that it is operating properly. Point the scanner window at a bar code that your scanner was designed to decode—for example, a 1D UPC bar code or 2D bar code. Press the SCAN button or pistol trigger, and check for a valid decode on the computer's screen.

Performance is improved if you disable all unneeded bar codes in the *Bar Codes* screen. Review Appendix C: “Bar Code Settings” for details about bar codes.

Preliminary Draft 3

2.10 Data Transfer Between The 7545 And A PC

Data transfer options vary slightly depending on the type of operating system installed in your PC.

For Windows XP SP2 operating systems or earlier, Microsoft® ActiveSync® is PC connectivity software that can be used to connect your 7545 to PCs running this software.

If the Windows Vista® operating system is installed in your PC, ActiveSync is not required to transfer data between your 7545 and your PC.

By connecting the 7545 to a PC with a cable you can:

- View 7545 files from Windows Explorer.
- Drag and drop files between the 7545 and the PC in the same way that you would between PC drives.
- Back up 7545 files to the PC, then restore them from the PC to the hand-held again, if needed, and so on.

2.10.1 Using Microsoft ActiveSync

To install ActiveSync, follow the step-by-step instructions provided with the program's setup wizard. Refer to the following website for details:

<http://www.microsoft.com/windowsmobile/activesync/activesync45.mspx>



Note: When you use an RS-232 serial port to connect devices like the 7545 to your desktop computer, the connection may not succeed because ActiveSync has trouble connecting at non-default baud rates.

To workaroud this problem, set the ActiveSync baud rate on the desktop to use the same baud rate as the device. You can set the baud rate by editing the registry on the desktop host computer, as detailed in the steps outlined at the following website:

<http://support.microsoft.com/kb/324466>


2.10.2 Using Windows Vista

If you have Windows Vista, your 7545 data transfers do not require ActiveSync. To transfer data between your PC and your 7545:

- Tap on **Start>Computer** to display the drives. Your 7545 will be visible here.
- Open drives, files and folders as you would on your PC.

2.11 Resetting The 7545

To perform a Warm or Cold reset, you can access the menu by going to *Start>Shutdown*. Alternatively you can use the keyboard shortcuts described below.

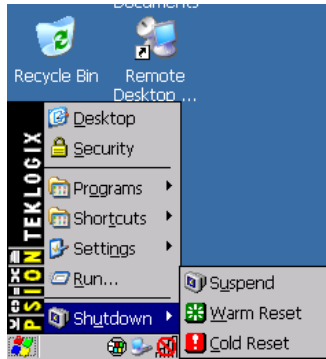

Warm Reset

To execute a warm reset:

- Press and hold down the [BLUE] key and the [ENTER/ON] key simultaneously for a minimum of six seconds.

A warm reset closes open applications; any unsaved data are lost. Installed programs and saved data are preserved.



Note: You do not need to reset your 7545 after configuring the radio.

Cold Reset



Important: *A cold reset returns the 7545 to factory settings.*

To execute a cold reset and access the BooSt menu:

- Press and hold down the [BLUE] key, the [ENTER] key, and the [SCAN] key, simultaneously for a minimum of six seconds.

After a cold reset, the BooSt menu appears.

- Type **1** to “Run Main OS” (continue loading the Windows CE operating system).
- If you want a clean start, type **!** (that is, the [SHIFT] key and **1**). All data and settings are lost. Files and data stored in flash are preserved.

Preliminary Draft 3

GETTING TO KNOW YOUR 7545

3

3.1 The Battery	39
3.1.1 Battery Safety	39
3.1.2 Removing And Installing The Battery Pack	39
3.1.3 Battery Chargers	40
3.1.4 Monitoring The Battery And Maximizing Run Time	41
3.1.4.1 Storing Batteries.	42
3.2 Switching The Hand-Held On And Off	43
3.3 The Keyboard.	43
3.3.1 Modifier Keys	44
3.3.1.1 Activating Modifier Keys	44
3.3.1.2 Locking Modifier Keys	45
3.3.2 The Keys	45
3.3.3 Function Keys, Softkeys And Macro Keys	46
3.3.4 Alphanumeric Keyboard: 58-Key	48
3. 5 The Keypad Backlight	50
3.4 The Display.	50
3.4.1 Adjusting The Display Backlight	50
3.4.2 Adjusting The Contrast.	51
3.4.3 Calibrating The Touchscreen.	51
3.5 7545 Indicators	52
3.5.1 LEDs	52
3.5.1.1 Charge LED	53
3.5.1.2 Radio Traffic LED	53
3.5.1.3 Scan LED	54
3.5.1.4 User Application LED	54
3.5.2 Onscreen Indicators	54
3.5.3 Audio Indicators	57
3.5.3.1 Adjusting The Beeper Volume	57
3.6 Internal Scanners	58
3.6.1 Scanning Techniques	59

Preliminary Draft 3

3.6.2 Scan LED Indicators	59
3.6.3 Troubleshooting	60
3.6.4 Operating One Dimensional (1D) Internal Laser Scanners.	60
3.6.5 Operating Internal PDF Laser Scanners.	60
3.6.6 Operating Internal Two Dimensional (2D) Imager Scanners	61
3.6.7 Operating RFID/Scanner Modules	62
3.7 Connecting And Disconnecting Tethered Peripherals	62
3.8 Monitoring The Network Connection.	63
3.9 Uploading Data In A Docking Station	64
3.10 General Maintenance.	64
3.10.1 Caring For The Touchscreen.	64
3.10.2 Cleaning The 7545.	64

3.1 The Battery

The hand-held operates with a lithium-ion battery pack. Preparing the unit for operation requires that a battery pack be charged and installed in the 7545.

3.1.1 Battery Safety



Important: Before attempting to install, use or charge the battery pack, it is critical that you review and follow the important safety guidelines in the 7545 Hand-Held Computer Regulatory & Warranty Guide (PN 8000191).

3.1.2 Removing And Installing The Battery Pack



Important: Always switch the unit off before changing the battery. If you do not turn the hand-held off before removing the battery, it may be necessary to reboot the unit. Any active sessions may be lost. While the battery is being replaced, the 7545 will save its current data for up to 20 minutes.

Removing The Battery Pack

- If your unit is equipped with a hand strap, unhook it from the base of the battery.
- Press down the release tab at the top of the battery, and slide the battery out.



Note: If your hand-held is equipped with a battery contact protective gasket (P/N 1020250), to remove the battery, you will need to hold the 7545 face down with both hands, making certain that your fingers are not touching the keypad. Press down firmly on the battery release with both thumbs and slide the battery out.

Installing The Battery Pack

To install the battery pack:

- Slide the battery pack with the contoured plastic facing you into the 7545. Click the battery into place.

- Quad Docking Station (Model #HU4004): can charge the battery of up to four hand-helds inserted in the docking station while transferring data through an Ethernet connection.
- Powered Cradle (Model # HU1010): can charge the hand-held with the battery installed in the hand-held.

It can take from 1.5 to 4 hours to charge a battery. The unit's intelligent charging system protects the battery from over-charging by terminating the charge process when the battery is at maximum capacity.



Note: Refer to “Monitoring The Battery And Maximizing Run Time” on page 41 for additional information about the battery.



Important: To avoid damaging the battery, chargers will not begin the charge process until the battery temperature is between 0° C (32° F) and 39° C (102° F). If the battery is too hot or cold, the battery status LED flashes yellow and the charge is suspended. Refer to Table 3.1: “Charge LEDs” on page 53 for details.

3.1.4 Monitoring The Battery And Maximizing Run Time

Under normal operating conditions, fully charged batteries last for 8 hours. As lithium-ion batteries age, their capacity decreases gradually, and they are generally considered depleted after approximately 2 years of use (less than 60% of original capacity remaining). Keep in mind however that heavy usage or operating the 7545 at temperature extremes will shorten the battery life.

Lithium-ion batteries do not require conditioning cycles and the 7545 battery system (including chargers) requires no user interaction to maintain peak performance.

To maximize the run time of your batteries, consider the following:

- The display backlight is the largest drain on the battery. Try to keep its brightness as low as possible. Adjusting the keyboard backlight also helps.
- The hand-held is ‘event’ driven. That is, when the unit is not in use, it reverts to sleep mode (even when it appears to be running), saving battery power. Events include a key press, touchscreen taps and scan triggers. Power consumption is reduced if you avoid unnecessary events, and allow the unit to sleep as much as possible.

Preliminary Draft 3

- The hand-held battery is a ‘smart battery’ with built-in intelligence. The taskbar battery icon is a linear gauge used to estimate the remaining run time of the battery. It is important to note that the battery capacity icon displays quarter percentages of nominal capacity (the capacity of a new battery). An aged battery, even when fully charged, shows somewhat less capacity than nominal.

Double-tapping on the battery icon displays a dialog box that provides detailed information about the battery status and performance. If the remaining capacity indication seems inaccurate, the battery may need recalibration. Recalibration requires that the battery be fully charged, discharged and then charged again before use. If the battery is fully discharged and charged on a regular basis, recalibration should not be necessary.

- When the hand-held is switched off, it goes into a low-power, suspend state but continues to draw a small amount of power from the battery. This should not be an issue unless the unit is left in suspend state for more than a week—in this case, the battery should be removed.
- Batteries left unused for durations of more than one or two months should be fully charged, operated in the hand-held until the battery is empty (i.e. the low battery warning appears), and then charged again before use. This recalibrates the gas gauge and allows the internal electronics to determine the actual capacity of the battery. See “Battery Gas Gauge Calibration” on page 176 for a detailed discussion of battery calibration.

3.1.4.1 Storing Batteries

Long term battery storage is not recommended. If storage is necessary:

- Always try to use a ‘first-in first-out’ approach to minimize storage time.
- Lithium-ion batteries age much faster at elevated temperatures. Store batteries at temperatures between 0° C and 20°C.
- Always charge batteries to 40 to 60% before storing them. Batteries can be damaged by an over-discharge phenomenon that occurs when an empty battery is stored for a long period of time such that the cell voltage drops below a lower limit.
- To minimize storage degradation, recharge stored batteries to 40 to 60% every 4 or 6 months to prevent over-discharge damage.
- A ‘never used’ Li-Ion battery that has been stored for 3 years may have limited or no useful life remaining once put into service. Think of batteries as perishable goods.

3.2 Switching The Hand-Held On And Off

Switching On The Unit

- Press and hold down the [ENTER/ON] key for at least one second.
- When all four LEDs flash yellow, release the [ENTER/ON] button.



Note: If the 7545 is in suspend state, pressing [ENTER/ON] key ‘wakes’ the unit from this state. The screen in which you were working before the computer entered suspend state is displayed.

Switching Off The Unit



Important: *Keep in mind that turning off the 7545 does not result in a complete reboot; rather, the unit enters a power-saving, “suspend” state. When the 7545 is turned on from suspend state, operation resumes within a few seconds.*

To switch off the 7545:

- Press the [BLUE] key, and then press the [ENTER/ON] key.



Important: *If the word ‘BLUE’ is displayed in uppercase in the taskbar area at the bottom of the screen, this key is locked “on” and the 7545 will not switch off. Press the [BLUE] key twice followed by [ENTER/ON] to switch the 7545 off.*

If, however, you’ve disabled the “Blue Key” in the ‘One Shot’ dialog box (see “Keyboard One Shot Modes” on page 105), the 7545 can be turned off even when the [BLUE] key is locked ‘on’.

3.3 The Keyboard

The 7545 offers two types of keyboard layouts: a 58-key keyboard and a 36-key, large button keyboard. Most of the keys on these keyboards operate much like a desktop computer. Where a key or key function is not consistent with the PC keyboard, the differences are noted.

3.3.1.2 Locking Modifier Keys

When a modifier key is pressed twice, it is ‘locked’ on. A ‘locked’ modifier key is displayed in uppercase letters in the taskbar. For example, pressing the [BLUE] key twice locks it on—it is displayed as BLUE KEY in the taskbar at the bottom of the computer screen.

The locked modifier key will remain active until it is pressed a third time to unlock or turn it off. Once a modifier key is unlocked, the uppercase representation at the bottom of the screen is no longer displayed.



Note: The locking function of the [ORANGE] and [BLUE] keys can be disabled so that pressing either of these keys once will lock the keys ‘on’.

If you disable the ‘One Shot’ function of either of these keys, pressing the [BLUE] and/or [ORANGE] key once will lock the key ‘on’. Pressing the same key a second time will unlock or turn it ‘off’. Refer to “Keyboard One Shot Modes” on page 105 for details.

3.3.2 The Keys

The [SHIFT] Key

The [SHIFT] key is used to display uppercase alpha characters and provide access to the symbols above the numeric keys.

The Arrow Keys

The Arrow keys move the cursor around the screen in the direction of the arrow: up, down, left and right. The cursor is the flashing box or underline character that indicates where the next character you type will appear.

The [BKSP/DEL] Key

The [BKSP] key (sometimes referred to as destructive backspace) moves the cursor one character to the left, erasing the incorrectly entered key stroke.

The [DEL] key ([BLUE] [BKSP]) erases the character at the cursor position.

The [CTRL] And [ALT] Key

The [CTRL] and [ALT] keys modify the function of the next key pressed and are application dependent.

The [TAB] Key

Typically, the [TAB] key moves the cursor to the next field to the right or downward.

The [ESC] Key

Generally, this key is used as a keyboard shortcut to close the current menu, dialog box or activity and return to the previous one.

The [SPACE] Key

Pressing this key inserts a blank space between characters. In a Windows dialog box, pressing the [SPACE] key enables or disables a checkbox.

The [SCAN] Key

Pressing the [SCAN] key—the yellow key with the star-burst scan symbol on it—activates the scanner beam while pressed. For units that do not have internal scanners, this key can be re-mapped to another function.

3.3.3 Function Keys, Softkeys And Macro Keys

In addition to the standard keyboard functions (see “The Keyboard” on page 43), The 7545 supports function keys, softkeys and macro keys.

3.3.3.1 Function Keys

58-Key Keyboard Function Keys

The 7545 58-key keyboard is equipped with thirty function keys. Function keys [F1] to [F6] are located across the top of the keyboard and are directly accessible, a key combination is not required. Function keys [F7] to [F30] are colour coded in blue print above the alpha keys and are accessed using a key combination, [BLUE] followed by the appropriate alpha key.

To access function keys [F7] to [F30]:

- Press the [BLUE] key followed by the alpha key to which the function key you want to use is mapped. For example:
 - To access function key [F7], press [BLUE] [C].
 - To access function key [F8], press [BLUE] [D], and so on.

Additional function keys, [F11] to [F20], are colour coded in orange print above function keys [F1] to [F10].

To access function keys [F11] to [F20]:

- Press the [ORANGE] key followed by the appropriate function key. For example:
 - To access function key [F11], press the [ORANGE] key followed by [F1].
 - To access function key [F12], press [ORANGE] followed by [F2], and so on.

To access function keys [F21] to [F30], you'll need to press [SHIFT] [F1] to [F10]:

- Press the [SHIFT] key followed by the appropriate function key. For example:
 - To access function key [F21], press the [SHIFT] key followed by [F1].
 - To access function key [F22], press [SHIFT] followed by [F2], and so on.

3.3.3.2 Macro Keys



Important: Refer to “Keyboard Macro Keys” on page 106 for details about creating macros.

7545 hand-helds are equipped with a series of macro keys that can be programmed to replace frequently used keystrokes, along with the function of executable keys like the [ENTER] key, the [BKSP] key, any function key and arrow key, and so on.

Alphanumeric Keyboard Macro Keys

Alphanumeric (58-keys) keyboards have twelve macro keys: [M1] to [M12]. These keys are colour coded in orange print above alpha keys [O] to [Z].

To access a macro key:

- Press the [ORANGE] key followed by the appropriate alpha key from O to Z. For example:
 - To access macro key [M1], press [ORANGE] [O].
 - To access macro key [M2], press [ORANGE] [P], and so on.

Numeric Keyboard Macro Keys

Numeric keyboards (36-keys) are equipped with six macro keys: [M1] to [M6]. Macro keys [M1] to [M2] are directly accessible in the bottom row of the keyboard—a key combination is not required.

Macro keys [M3] and [M4] are colour coded in orange print above macro keys [M1] and [M2].

- To access [M3], press the [ORANGE] key followed by [M1].

Preliminary Draft 3

- To access [M4], press [ORANGE] [M2].

Macro keys [M5] to [M6] are colour coded in blue print above macro keys [M1] and [M2].

- To access [M5], press the [BLUE] key followed by [M1].
- To access [M6], press [BLUE] [M2].

3.3.4 Alphanumeric Keyboard: 58-Key

In addition to alphanumeric keys that are directly accessible on the keyboard (no key combination is required) and the keys described in this chapter, the 58-key keyboard also provides function keys and macro keys.

Function keys [F1] through [F24] can be used with the CE operating system or another application. The additional function keys, [F25] through [F30] along with the macros, are not used as part of the Windows CE operating system.

All function keys and macro keys can be custom defined for each application. The TekTerm application utilizes these keys (for detailed information, see the *TekTerm Software User Manual*, P/N 8000073). Refer to “Function Keys, Softkeys And Macro Keys” on page 46 for details about accessing function keys [F25] to [F30].

Note: The following examples assume that the [ORANGE] key is enabled as ‘Lock’ mode in the ‘One Shot’ screen (accessible through the Control Panel Keyboard icon). In ‘Lock’ mode, pressing the [ORANGE] key once locks it ‘on’. Refer to “Keyboard One Shot Modes” on page 105 for details.

The examples below illustrate how to access A, B and C, all of which are printed in orange characters above the numeric key, [2].

To choose the letter ‘a’:



- Press the [ORANGE] key, and press the numeric key [2].
- Press the [ORANGE] key again to unlock or turn it off.

To choose the letter ‘b’:

- Press the [ORANGE] key, and press [2] twice.
- Press the [ORANGE] key again to unlock or turn it off.

To choose the letter ‘c’:

- Press the [ORANGE] key, and press [2] three times.
- Press the [ORANGE] key again to unlock or turn it off.

Creating Uppercase Letters

To display a capital letter:

- Press the [ORANGE] key and then the [SHIFT] key before typing the alpha character.



Note: If you want to use uppercase characters at all times, press [BLUE] [SHIFT]. An icon of an uppercase ‘A’ is displayed in the taskbar indicating that all letters will be displayed as uppercase characters.

Choosing Multiple Characters From The Same Key

If you need to choose more than one alpha character from a single key, you’ll need to press the Accept key between alpha selections. The Accept key is presented as an arrow **P** symbol above the 0 (zero) key.

For example, suppose you want to type the letters ‘a’, ‘b’ and ‘c’. These letters are all accessible from the numeric key, [2].

To type the letter ‘a’:

- Press the [ORANGE] key, and then press the numeric key, [2].
- Press the Accept key [**P**] (zero key) to indicate that the letter ‘a’ should be accepted and that another letter from the same key will be chosen.

To type the letter ‘b’:

- Press the [2] key twice, and press [**P**] to accept the letter ‘b’.

To type the letter ‘c’:

- Press the [2] key three times.

When you have completed your alpha selections from this key, you can do one of the following:

- If you want to choose additional alpha characters from another key(s), leave the [ORANGE] key ‘on’, and press the numeric key with the alpha character you require, or

Preliminary Draft 3

- If you do not want to choose any additional alpha characters, press [ORANGE] again to unlock or turn ‘off’ the key and end alpha selection.

Choosing Multiple Characters From A Range Of Keys

If you plan on choosing alpha characters from a number of different keys, you are not required to press the Accept [P] key after each alpha selection. The [P] key is only required when you are choosing more than one alpha character from the same key, e.g. ‘a’, ‘b’ and ‘c’ from the [2] key.

Suppose you want to type the letters ‘a’, ‘d’ and ‘g’. These alpha characters are accessed from the numeric keys [2], [3] and [4].

- With the [ORANGE] key locked ‘on’, press [2] to type the letter ‘a’.
- Press [3] to type ‘d’, and press [4] to type the letter ‘g’.
- To end alpha selection, press the [ORANGE] key again to unlock it.

3.3.6 The Keypad Backlight

The intensity of the keypad backlight and the conditions under which this backlight is activated can be configured using the Keyboard icon in the Windows CE *Control Panel*. The behaviour of the keypad backlight is tailored in the Keyboard Properties dialog box. Refer to “Keyboard Backlight” on page 104 for details about this option.



Note: Keep in mind that this option may be restricted to supervisory use only.

3.4 The Display

7545s are equipped with display backlighting to improve character visibility in low light conditions. The backlight switches on when a key is pressed and the ambient light is below the set threshold. A light sensor on the front of the hand-held determines the ambient light level. On some displays, the contrast can also be adjusted to further improve character visibility.

3.4.1 Adjusting The Display Backlight

The behaviour of the display backlight (the ambient light threshold below which the backlight will become active) and the intensity of the backlight can be specified in the *Display Properties* dialog box in the *Control Panel*.





Note: Refer to “Backlight” on page 99 for details about the Display Properties dialog box.



3.4.2 Adjusting The Contrast



Note: In addition to the manual adjustments described in this section, the display contrast can also be adjusted using the Windows CE Control Panel. Refer to “Backlight” on page 99 for details about this dialog box.

The display contrast can be adjusted from the unit keyboard using the [BLUE] key and function keys [F1] and [F2]. Pressing [F1]  darkens the display, and pressing [F2]  lightens the display. Keep in mind that adjusting the contrast on a colour display is much less pronounced than on a monochrome display.

To adjust the display contrast:

- Press the [BLUE] key twice to lock it on, and then press [F1]  to darken the display or [F2]  to lighten the display.
- Once you’ve successfully adjusted the display contrast, remember to press the [BLUE] key again to turn it ‘off’.



Note: Contrast settings are optimized for the maximum readability. However, if the display jitters or flickers, consider adjusting the contrast at power up.

3.4.3 Calibrating The Touchscreen

If your 7545 touchscreen has never been calibrated, or if you find that the stylus pointer is not accurate when you tap on an item, use the *Stylus Properties* dialog box in the *Control Panel* to recalibrate the screen.

- In the *Control Panel*, choose the **Stylus** icon to display the *Stylus Properties* window.



Preliminary Draft 3

- Select the **Calibration** tab, and then choose the **Recalibrate** button.



- Follow the directions on the calibration screen to calibrate the screen.

3.5 7545 Indicators

7545s use LEDs (Light Emitting Diodes), onscreen messages and audio tones as indicators.

3.5.1 LEDs

Hand-helds are equipped with four tri-coloured LEDs. This section outlines what these LEDs indicate.



Important: *If an LED is illuminated in red, the operator should be cautious as this generally indicates an abnormal operating condition or active laser emission.*

Preliminary Draft 3



Note: Keep in mind that while the standard 802.11g radio supports the transmit/receive LED, not all radios support this function.

Table 3.2 Transmit And Receive LEDs

Function	Radio Traffic LED Behaviour
Radio Transmit	LED flashes yellow.
Radio Receive	LED flashes green.

3.5.1.3 Scan LED

Successful scans are indicated in two ways: with a scan LED and with an audio tone.

Table 3.3 Scan LED

Function	Scan LED Behaviour
Scan in progress	LED displays solid red during scan.
Successful scan	LED displays solid green after decode. Off when scan ended.
Unsuccessful scan	LED flashes red.


3.5.1.4 User Application LED

This indicator is available for user-loaded custom Windows CE applications. Refer to the *7545 SDK Manual* for details about this LED. Neither Windows CE nor TekTerm use this LED.

3.5.2 Onscreen Indicators

The taskbar at the bottom of the screen displays a variety of system status indicators.

Figure 3.3 Taskbar

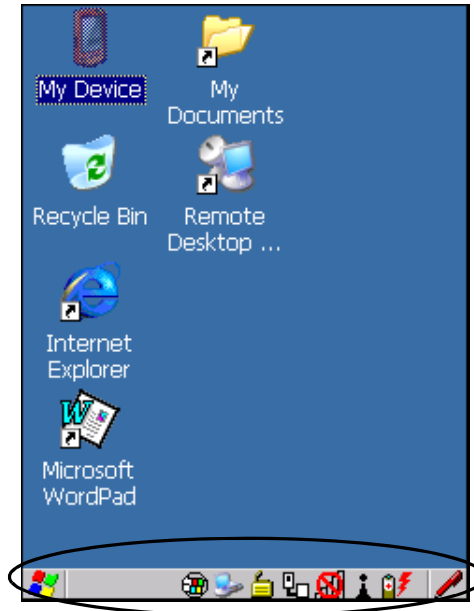

The taskbar changes dynamically, and only those icons that are applicable are displayed. For example, if a radio is not installed in your 7545, the radio signal icon is not displayed in the taskbar.



Windows® Start Button

If you are using the touchscreen, you can either tap the Windows icon at the bottom left of the screen, or press [BLUE] [0] to display the Start Menu, and then tap on the desired application.

blue BLUE
key KEY

Modifier Key Indicators

[SHIFT], [CTRL], [ALT], [BLUE] and [ORANGE] are modifier keys that have onscreen indicators to show when a key is active or locked. If a modifier key is pressed once to activate it, the key is displayed in the taskbar in lowercase characters, for example, pressing the [BLUE] key once displays 'blue key' in the taskbar. If a modifier key is pressed twice, it is 'locked on' and the onscreen indicator is displayed in uppercase letters in the taskbar, for example, pressing [BLUE] twice displays 'BLUE KEY' in the taskbar.

Preliminary Draft 3



Battery Gauge

The battery shaped icon displayed in the taskbar provides a visual indication of the remaining battery power. The icon acts as a meter that is either full, at three-quarter level, half, quarter level or empty.

When the battery level is low—approximately 15 minutes from empty—a warning window pops up. When the battery power is completely depleted, a final warning window indicates that the 7545 will be powered down.

If the 7545 is using external AC power, an AC icon is displayed in the taskbar.



Full



75%



50%



25%



Empty



AC Connection



Battery Charge

The battery charge icon is displayed in the taskbar when the hand-held battery is being charged.



802.11 Radio Signal Quality

Increasing radio signal quality is represented by longer, filled bars within this icon.



Good
Reception



Weak
Reception



No Radio
Link



Tethered Devices

When a peripheral is attached to the tether port and activated, an associated icon appears in the taskbar.



Scanner



USB Device



RFID



Serial Device



Docking Device

When a hand-held is inserted in a docking station, charger or cradle, an associated icon appears in the taskbar.



Gang Charger, Combo Charger &
Combo Docking Station



Quad Docking Station



Power Cradle



Portable Docking
Module (PDM)



Bluetooth Radio


This icon displayed in the taskbar represents the installed *Bluetooth* radio.




Security Level

Security levels can be set to limit user access. In addition, applications can be restricted to prevent inadvertent changes.

3.5.3 Audio Indicators

The beeper provides a variety of sounds and can be configured to emit a sound when a key is pressed, a keyboard character is rejected, scan input is accepted or rejected, an operator's entry does not match in a match field or the battery is low. The volume function keys are located in the top row of the keyboard. The increase volume key is labelled with a plus symbol 



and the decrease volume function key is labelled with a minus symbol. 

3.5.3.1 Adjusting The Beeper Volume

On 58-key and 63-key keyboards, the volume function keys are accessed by pressing [BLUE] [F5] and [F6].

On 36-key and 37-key keyboards, the volume function keys are accessed by pressing [BLUE] [F3] and [F4].

To adjust the beeper volume:

- Press the [BLUE] key twice to lock the key 'on' and then, press the increase volume function key 
- or the decrease volume 
- function key until the volume meets your requirements.
- Remember to press the [BLUE] key again to turn it 'off'.

3.6 Internal Scanners



Important: For detailed scanner specifications and decode zone tables, refer to “*Internal Scanners and Imagers*” on page 202.

The 7545 supports a wide range of scanner options to address a variety of user application requirements. The scanner installed in your unit can be configured using the *Scanner Settings* dialog box in the Control Panel (see page 135) and the *Manage Triggers* application (see page 113). External, non-decoded scanners are also configured through the *Scanner Settings* and *Manage Triggers* applications.

However, external decoded scanners must be configured by scanning special configuration bar codes. In these cases, the scanner manufacturer provides programming manuals for configuration purposes.

- For Symbol decoded scanners, refer to the *LS3408 Programming Guide*
- For Symbol non-decoded scanners, refer to the *LS3200 Programming Guide*.
- For PowerScan® (PSC) decoded and non-decoded scanners, refer to the *PowerScan Programming Guide (PSC)*.

Scanner types include:

- Advanced Long Range: reads very large 1D bar codes (60 mil+) at very long distances (up to 14m).
- Long Range: reads large 1D bar codes (55 mil) at long distances (up to 3m).
- High Performance: reads 1D linear bar codes (5 - 55 mil) at medium distances (up to 1m).
- Extended Range: reads regular 1D bar codes (5 - 55mil) at short to medium distances (1m), as well as large 1D bar codes (e.g. 55 mil) at long distances.
- RFID: The RD7950 UHF RFID Reader is an EPC-compliant 900MHz RFID reader which can be integrated with laser bar code scanning or imaging.
- Fuzzy Logic: reads damaged or low contrast regular 1D bar codes (5 - 55mil) at medium distances (up to 1m).
- PDF Raster Laser: reads 2D PDF bar codes or regular 1D bar codes at short to medium distances.
- 2D Imager: reads regular 1D and all 2D bar codes at short to medium distances.
- 1D Imager: reads regular 1D and PDF417 bar codes at short to medium distances.

It is critical that you review the “Laser Warnings” in the *7545 Hand-Held Computer Regulatory & Warranty Guide (PN 8000191)* before using any of the scanners described in this

chapter. “Scanning Techniques” on page 59 outlines the mechanics of a successful scan. In addition, review “Scan LED Indicators” on page 59 to better understand how to interpret whether or not a bar code has been successfully scanned. Finally, “Troubleshooting” on page 60 provides some helpful suggestions should the scan fail.

3.6.1 Scanning Techniques



Note: The scanning techniques described here apply to internal and external scanners.

- Hold the scanner at an angle. Do not hold it perpendicular to the bar code.
- Do not hold the scanner directly over the bar code. In this position, light can reflect back into the scanner’s exit window and prevent a successful decode.
- Scan the entire bar code. If you are using a 1D or PDF laser scanner, make certain that the scan beam crosses every bar and space on the bar code, including the margins on either end of the symbol.
- If you are using a 2D imaging scanner, make certain the red, oval shaped framing mark is centered within the bar code you want to scan.
- When using imaging scanners, do not move the scanner while decoding the bar code. Movement blurs the image.
- Hold the scanner farther away for larger bar codes.
- Hold the scanner closer for bar codes with bars that are close together.

3.6.2 Scan LED Indicators

The scanner LED (the lower-left LED) indicates whether or not your scan is successful. The LED behaves as follows:

- Scan In Progress: scan LED displays solid red colour.
- Successful Scan: scan LED displays solid green colour and turns off when the scan is ended.
- Unsuccessful scan: scan LED flashes red.

A bar code icon appears on the screen during a scan. While the scanner beam is active, the onscreen message states: SCANNING. If you want to turn off the onscreen message, disable “Scan Indication” in the Options tab of the Scanner Settings menu in the Control Panel

When the scan is successful, the bar code data is displayed on the screen until the scan button (or pistol trigger) is released, but only if “Scan Result” is turned on in the Options tab of the Scanner Settings menu in the Control Panel.

3.6.3 Troubleshooting

If the scanner is not working, investigate the following:

- Is the unit on?
- Check that the bar code symbology being scanned is enabled for the hand-held you are using. Check any other parameters that affect the scanning procedure or the bar code.
- Check the bar code to make sure it is not damaged. Try scanning a different bar code to verify that the problem is not with the bar code.
- Check that the bar code is within the proper range.
- Does the hand-held display the warning without scanning? This suggests a hardware problem in the hand-held.
- Is the laser beam scanning across the bar code?
- Once the scan beam has stopped, check the scanner window for dirt or fogging.

3.6.4 Operating One Dimensional (1D) Internal Laser Scanners

- Turn the hand-held on. Wait until the unit has booted up completely.



Important: *If an aiming dot is available on the installed scanner, the dot will be enabled for a configurable time period (including off), after which normal scanning begins. Refer to “Dot Time (msec)” on page C-8 for details.*

Double-clicking the trigger will override the aiming delay and initiate an immediate scan. Note that the aiming dot is standard on long-range and high visibility internal scanners.

- Aim at the bar code and press the scan key or the trigger. A scan beam and a warning indicator appear until a successful decode is achieved or six seconds have elapsed.

3.6.5 Operating Internal PDF Laser Scanners

This scanner decodes PDF417 two-dimensional bar codes.

- Turn the hand-held on. Wait until the unit has booted up completely.
- Aim at the bar code and press the scan key or the trigger. The beam expands into a rectangle covering the bar code to properly scan it. The scan beam and a warning indicator are visible until a successful decode is achieved or three seconds have elapsed.

3.6.6 Operating Internal Two Dimensional (2D) Imager Scanners

An imager scanner takes a snap shot of a single bar code or multiple bar codes (at one time). It can find a bar code regardless of its orientation—that is, even a bar code printed at a 45 degree angle to the hand-held will be decoded successfully.



*Note: When scanning **multiple** bar codes, ensure that all of the desired bar codes are within the field of view of the scanner. It is possible that even when all bar codes are within the field of view, not all of them will be decoded. Only successfully decoded bar codes are passed to the application program. The application program then issues a warning, asking that you scan the missing bar codes.*

*When scanning a **single** bar code, ensure that only the desired bar code is within the field of view of the scanner.*

Because imager scanners generally have a shorter depth of field than laser scanners, some practise may be required to find the optimal distance from the types of bar codes being scanned. Although the imager includes illumination LEDs, ambient light will help the imager decode the bar codes, especially if the bar code is far from the hand-held.



Important: *Keep in mind that the imager scanner is a camera, and the LED illumination is a flash. Glare can be an issue on reflective media such as plastic coated bar codes, just as glare is an issue for photographers. When pointing at a shiny surface, either shift the bar code to the side or top, or angle the bar code so that the glare reflects away from the imager scanner.*

Most imagers take several ‘snap shots’ of the bar code in order to decode it. It is normal for the LEDs to flash two or three times. Hold the unit steady between flashes to improve decode performance.

- Turn the hand-held computer on. Wait until the unit has booted up completely.
- Aim at the bar code and press the scan key or the trigger. Hold the trigger until a successful or failed scan result is obtained.
- When the scan button or trigger is pressed, a red, oval shaped light (the framing marker) is displayed. Centre the framing marker in the field—either in the centre of the bar code you want to scan or in the centre of the area in which multiple bar codes are to be scanned.

The illumination LEDs will flash (typically several times) and a picture of the bar code(s) is taken.

3.9 Uploading Data In A Docking Station

The Combo Docking and Quad Docking peripherals allow your hand-held to link to an Ethernet network. They are typically used to upload transaction data to a server computer when a radio link is not available. When a 7545 is properly inserted in a docking station, a dock icon is displayed in the taskbar at the bottom of the unit screen. The hand-held also detects the presence of the Ethernet network. Review the documentation provided with the user application installed in your 7545 before performing data uploads.

3.10 General Maintenance

3.10.1 Caring For The Touchscreen

The touchscreen is covered with a thin, flexible polyester plastic sheet with a conductive coating on the inside. The polyester can be permanently damaged by harsh chemicals and is susceptible to abrasions and scratches. Using sharp objects on the touchscreen can scratch or cut the plastic, or crack the internal conductive coating. The chemicals listed below must not come into contact with the touchscreen:

- mustard, ketchup
- sodium hydroxide,
- concentrated caustic solutions,
- benzyl alcohol, and
- concentrated acids.

If the touchscreen is used in harsh environments, consider applying a disposable screen protector (P/N HU6110). These covers reduce the clarity of the display slightly but will dramatically extend the useful life of the touchscreen. When they become scratched and abraded, they are easily removed and replaced.

3.10.2 Cleaning The 7545



Important: Do not immerse the unit in water. Dampen a soft cloth with mild detergent to wipe the unit clean.

To prevent damage to the touchscreen, use only the stylus (pen) supplied with your 7545.

- Use only mild detergent or soapy water to clean the hand-held unit.

Preliminary Draft 3

Chapter 3: Getting To Know Your 7545
Cleaning The 7545

- Avoid abrasive cleaners, solvents or strong chemicals for cleaning. The 7545 has a plastic case that is susceptible to harsh chemicals. The plastic is partially soluble in oils, mineral spirits and gasoline. The plastic slowly decomposes in strong alkaline solutions.
- To clean ink marks from the keypad and touchscreen, use isopropyl alcohol.

Preliminary Draft 3

WINDOWS EMBEDDED CE 5.0

4

4.1 Navigating In Windows CE And Applications.	69
4.1.1 Navigating Using A Touchscreen And Stylus	69
4.1.2 Navigating Using The Keyboard.	69
4.2 Working With Files, Folders And Programs	71
4.3 The Startup Desktop	71
4.3.1 The Desktop Icons	72
4.3.2 The Taskbar.	73
4.3.2.1 Using The Taskbar	74
4.3.2.2 Customizing The Taskbar	74
4.4 The Start Menu	75
4.4.1 The Desktop	76
4.4.2 Security Settings	76
4.4.3 Programs	78
4.4.4 Shortcuts	79
4.4.5 Settings	81
4.4.6 Run	82
4.4.7 Shutdown.	82
4.5 Using A Dialog Box	83

Preliminary Draft 3

4.1 Navigating In Windows CE And Applications



Note: In order to access many of the menus discussed in this chapter, the security level must be set to 'Supervisor' (see "Security Settings" on page 76).

Graphic user interfaces like Windows CE for portable devices and desktop Windows (2000, XP, etc.) utilize 'point and click' navigation. An equivalent keyboard shortcut is also available for every 'point and click' action.

Windows CE supports the same 'point and click' user interface and keyboard shortcuts as desktop Windows with one difference—the 'point and click' action is accomplished using a touchscreen rather than a mouse. Actions can be performed using any combination of keyboard shortcuts or touchscreen tapping.

4.1.1 Navigating Using A Touchscreen And Stylus



Note: If the touchscreen is not registering your screen taps accurately, the touchscreen may need recalibration. Refer to "Calibrating The Touchscreen" on page 51.

A touchscreen is an optional feature on 7545s. A hand-held equipped with a touchscreen comes equipped with a stylus—a pointing tool that looks like a pen—stored in a slot at the top of the unit. The stylus is used to select objects on the touchscreen.



Note: To prevent damage to the touchscreen, use only the stylus (pen) supplied with your 7545.

To choose an icon, open a file, launch an applet or open a folder:

- Double-tap the stylus on the appropriate icon.

4.1.2 Navigating Using The Keyboard

If your 7545 has a standard screen (rather than a touchscreen), choosing icons and navigating dialog boxes, displaying the desktop, and so on requires keyed input. If your unit has already been fully configured and your application is launched at startup, you'll have little need for keyboard navigation, but you can refer to Table 4.1: "Keyboard Navigation" on page 70 for a description of the navigation keys.

Preliminary Draft 3


Table 4.1 Keyboard Navigation

Operation	Key or Key Combination
Switch between active applications	[ALT] [TAB]
Open task manager	[ALT] [ESC]
Move the cursor	Arrow keys
Open file, folder or icon	[ENTER]
Exit & Save	[ENTER]
Close/Exit & Do Not Save	[ESC]
Navigate Dialog Boxes	[TAB] To move cursor up [SHIFT] [TAB] To display the contents of the next 'tab' in a dialog box [CTRL] [TAB]
Select Radio Button/Press Button	[SPACE]
Go to Start Menu	[BLUE][0]

Keep in mind that unlike a desktop computer, the 7545 does not support key chording (pressing two keys at the same time). You must press one key followed by the next in sequence. Refer to “Working With Files, Folders And Programs” on page 71 for additional details about keyboard navigation.

4.2 Working With Files, Folders And Programs

Figure 4.1 Working With Windows Icons

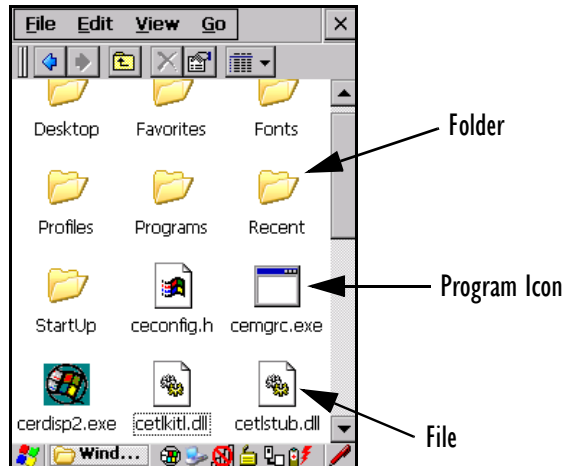

- Double-tap on the appropriate icon—either a folder icon, a program icon or a file icon—to open or launch your selection.

If you're using the keyboard:

- Use the arrow keys to highlight the icon you want to open or launch.
- Press [ENTER].


4.3 The Startup Desktop

When the 7545 boots up, the startup desktop (shell) is displayed. Any applications stored in the Startup folder start up immediately.



Note: The startup folder is located in \Windows\StartUp and \Flash Disk\StartUp.

Figure 4.2 The 7545 Startup Desktop

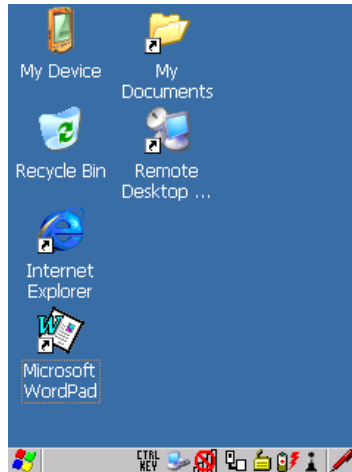

To access desktop icons:

- Double-tap on the icon to open a window or, in the case of an application icon, launch an application.

On the keyboard:

- Use the arrow keys to highlight the icon, and press [ENTER] to launch the highlighted icon.



Note: If the arrow keys do not highlight the desktop icons, the desktop may not be selected. Press [BLUE] 0 (zero) to display the Start Menu, and select Desktop. Now the desktop will be “in focus” and the arrow keys will highlight the icons.

4.3.1 The Desktop Icons

The icons displayed in the startup desktop operate in much the same way as those displayed on any standard PC desktop that is running Windows.

My Device

Choosing this icon displays the contents of your 7545 computer. If you're not sure how to work with the files, folders and programs displayed, refer to “Working With Files, Folders And Programs” on page 71.

Recycle Bin

This option temporarily stores items that were deleted, allowing you to either permanently delete or restore these items.


Internet Explorer

Choosing this icon launches Internet Explorer—a standard Windows CE version. Keep in mind that your supervisor will need to set up access using the *Internet Options* and the *Network and Dial-up Connections* icons in the *Control Panel*.

Remote Desktop Connection

This option allows your 7545 to communicate with a remote desktop PC. “Remote Connect” on page 89 provides a website with step-by-step instructions.

4.3.2 The Taskbar

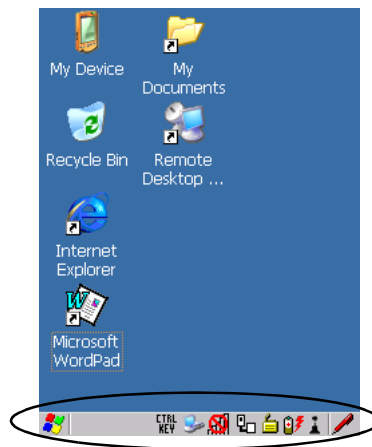

The 7545 is equipped with a taskbar at the bottom of the screen. It displays icons through which you can view the battery capacity and radio signal quality of your unit. If the handheld is attached to a charger, cradle, docking station or PDM, an associated icon is displayed. In addition, the taskbar displays the application(s) currently running on your unit and the security level assigned to your 7545.

The taskbar also displays active modifier keys: [SHIFT], [ALT], [CTRL], [BLUE] and [ORANGE]. Keys that have been locked “on” are displayed in uppercase letters. For example, if you have set the [CTRL] key Lock to “on” in the Keyboard menu and you press the key, it is displayed as CTRL KEY in the taskbar. (For detailed information on modifier keys and keyboard options, see “The Keyboard” on page 43).

4.3.2.1 Using The Taskbar

A tooltip is displayed as each taskbar icon is highlighted. The tooltip provides the status of each icon.

If you're using the touchscreen:

- Tap and hold the stylus on an icon to display the icon's tooltip. Double-tap the icon to open the Control Panel dialog box associated with the icon. For example, double-tap the battery icon to display a dialog box listing the current battery capacity information.

On the keyboard:

- Press [BLUE] [0] to display the *Start Menu*.
- Choose **Shortcuts** from the *Start Menu*, and then press the [RIGHT] arrow key to display the sub-menu.
- Choose **System Tray** in the sub-menu.
- Use the arrow keys to highlight the icon in the taskbar about which you'd like more information.
- Press [ENTER] to display the appropriate dialog box.

4.3.2.2 Customizing The Taskbar


To customize the taskbar so that it displays only those icons you require:

- In the *Start Menu*, choose **Settings**, and then **Taskbar**.

If you're using the keyboard:

- Press [BLUE] [0] (zero) to display the *Start Menu*.
- Highlight the **Settings** option, highlight **Taskbar** in the sub-menu, and press [ENTER].

The *Taskbar and Start Menu* dialog box is displayed.

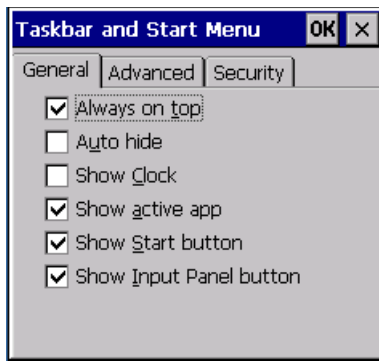

- Tap the stylus on the items you want to activate or deactivate. The check mark indicates active items.

If you're using the keyboard:

- Highlight the options you want to activate, and press the [SPACE] key to select them. A check mark indicates active items.

4.4 The Start Menu




Note: Some of the Start Menu items may be disabled based on the current 7545 security settings.

The *Start Menu* lists the operations you can access and work with. It is available from the startup desktop or from within any application.

To display the menu:

- Press [BLUE] [0] (zero).

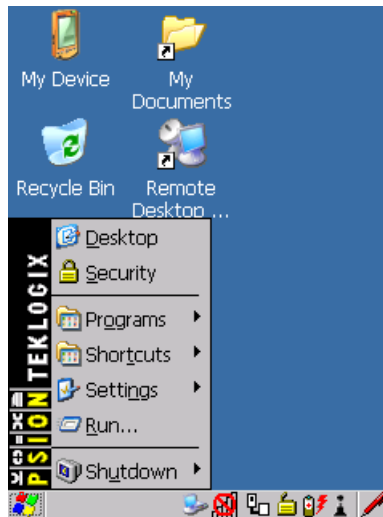

Note: Tap on the item in the menu with which you want to work.

If you're using the keyboard:


- Use the arrow keys to highlight a menu item, and press [ENTER], or

If the menu item has an underlined character:

- Type the underlined alpha character. For example, to display the *Security* dialog box, type the letter ‘s’.


4.4.1 The Desktop

Choosing the *Desktop* option from the *Start Menu* displays the 7545 desktop.

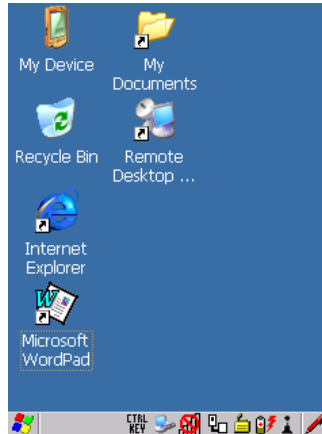

4.4.2 Security Settings

Choosing the *Security* option from the *Start Menu* displays a dialog box in which you can define the access level for the 7545: Supervisor or User.

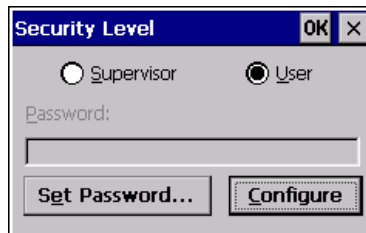

Assigning The Supervisor Security Level

The security level is represented by an icon in the shape of a lock in the taskbar. The security levels define the options accessible to the operator in the *Start Menu* and the *taskbar*. By default, the security level is set to *User*, restricting access to only the most basic *Start Menu* items.

To allow access to all the *Start Menu* and *taskbar* options:

- In the *Security Level* dialog box, select the radio button next to Supervisor.
- In the *Password* field, type the Supervisor level password. The default password is 123456.
- Select **OK**. You can now access all menu items in the *Start Menu* along with the icons in the taskbar.

Changing A Password



Note: Keep in mind that this is the same password as that assigned through the Password control panel applet. Refer to “Control Panel Icons” on page 90.

To assign a password:


- Choose a **security level**, and enter the **existing password** in the *Password* field
- Select the Set Password button.

A dialog box labelled Password Properties is displayed.

- Type the new password in the Password: text box (all keyboard characters are valid).
- In the Confirm Password: text box, retype the new password.

Configuring Security

Choosing the *Configure* button displays the *Configure Security* dialog box.

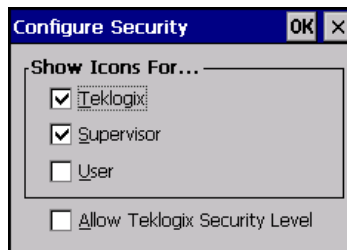


This dialog box allows you to determine which security levels will have an associated icon displayed in the taskbar. By default, a security icon is not displayed for user-level security.

4.4.3 Programs

- Choose **Programs** to display a sub-menu of options.

Figure 4.3 Program Sub-Menu

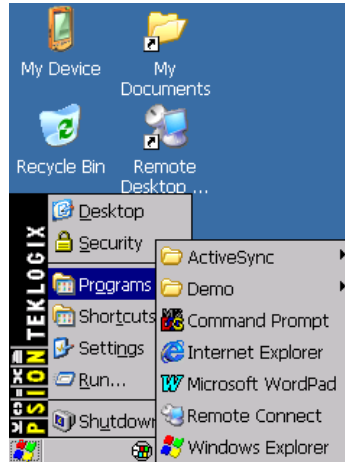

This sub-menu allows you to choose *ActiveSync* and *Command Prompt*, and you can access the *Internet Explorer*, installed applications (e.g., Microsoft WordPad), *Remote Connect* or *Windows Explorer*.

ActiveSync®

This option allows you to connect to another device using ActiveSync.

Demo

This folder contains the Demo Imager, Demo Scanner, and Demo Signature applications. Demo Imager is used for simple image-capturing purposes and for displaying bar code data and bar code statistics on the same screen with image data and information. Demo Scanner can be used to test how the hand-held reads and writes RFID tags. Demo Signature allows you to capture a signature written on the screen with your stylus and save it to a file.

Command Prompt

Command Prompt is used to access the DOS command prompt. At the prompt, you can type DOS commands such as *dir* to display all the directories in the drive.

Internet Explorer

The 7545 is equipped with Microsoft Internet Explorer for Windows CE. You can access the *Internet Options* icon through the *Start Menu* under *Settings, Control Panel* or by double-tapping on the desktop icon *My Device* and then, double-tapping on the *Control Panel* icon.

Remote Connect


Remote Connect is a 7545 application used to connect to a Windows Terminal Server so that you can run a “session” on the Server machine using the 7545 (Windows CE device). “Remote Connect” on page 89 provides a website with details about this option.

Windows Explorer

The Windows Explorer installed on your 7545 is consistent with all Windows CE devices. You can access this option from the *Start Menu* under *Programs, Windows Explorer*.

4.4.4 Shortcuts

Figure 4.4 Shortcuts Sub-Menu

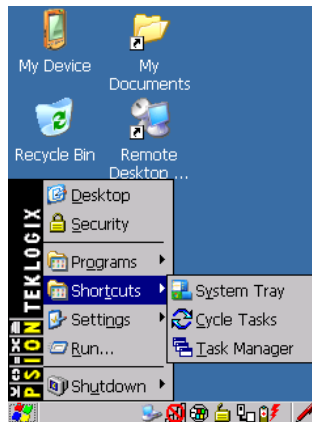

System Tray

If your touchscreen is not enabled, you can use the *System Tray* option to access the icons in the taskbar at the bottom of the screen. The taskbar displays indicators such as a radio signal icon and the security level. These indicators are attached to dialog boxes that provide additional information.

- Choose **Shortcuts, System Tray**.

When *System Tray* is chosen, the taskbar icons become accessible. To display the dialog box attached to an icon:

Preliminary Draft 3

Shortcuts

- Use the arrow keys to highlight an icon, for example, the security icon.
- Press [ENTER] to display the security level dialog box.

Cycle Tasks

When *Cycle Tasks* is selected (and the Task Manager is not open), you can cycle through active applications.

To cycle through your active applications:

- Choose **Shortcuts, Cycle Tasks**, or
- Press [ALT] [TAB].

Task Manager

The *Task Manager* allows you to switch to another task or to end an active task. To display the task manager window:


- Tap on **Shortcuts, Task Manager**, or
- Press [ALT] [ESC].



4.4.5 Settings

The **Settings** sub-menu includes the following settings: *Control Panel*, *Network and Dial-up Connections* and *Taskbar and Start Menu*.

Figure 4.5 Settings Sub-Menu

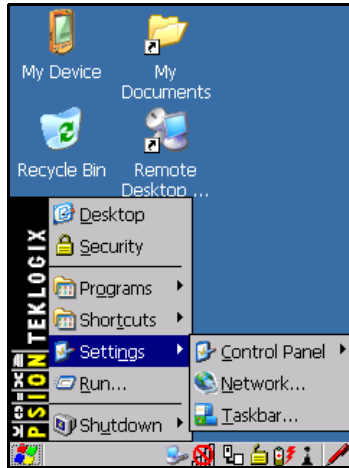

Control Panel

The *Control Panel* contains applets used to configure hardware, the operating system and the shell. If your 7545 is running with the Psion Teklogix TekTerm application or another application, additional configuration applets may appear in the *Control Panel*.

Network And Dial-Up Connections

The *Network and Dial-up Connections* window allows you to configure the 7545 radio or execute an existing configuration. Refer to “Configuring Your Radio” on page 19 for radio setup details.

Taskbar And Start Menu


The *Taskbar and Start Menu* option displays a dialog box in which you can customize the taskbar, choosing which options will be displayed. Refer to “Customizing The Taskbar” on page 74 for additional details about this option.

Preliminary Draft 3

Run

4.4.6 Run

Choosing the *Run* option from the *Start Menu* displays a dialog box in which you can enter the name of the program, folder or document you want to open or launch.

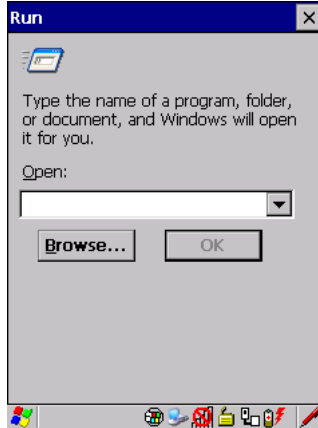

4.4.7 Shutdown

The *Shutdown* menu includes these options: *Suspend*, *Warm Reset* and *Cold Reset*.



*Note: This menu varies slightly depending on the security level chosen. When the 7545 is set to **User level**, the *Shutdown* option is replaced by **Suspend**. A sub-menu is not available.*

Suspend

The *Suspend* option suspends the 7545 immediately. This is equivalent to turning the hand-held off.

Warm Reset

The *Warm Reset* option resets the 7545, leaving all saved files and (registry) settings intact. Any unsaved data is lost.


Cold Reset

The *Cold Reset* option resets the 7545 (see page 35). Any files not stored in permanent memory are lost; however, the registry settings are saved.

4.5 Using A Dialog Box

A dialog box (like the samples in Figure 4.6) appears when you need to make selections and enter further information. You can move between dialog items by tapping on them with your stylus, or by pressing the arrow keys and the [TAB] key ([SHIFT] [TAB] moves the cursor backwards).

Figure 4.6 Dialog Boxes

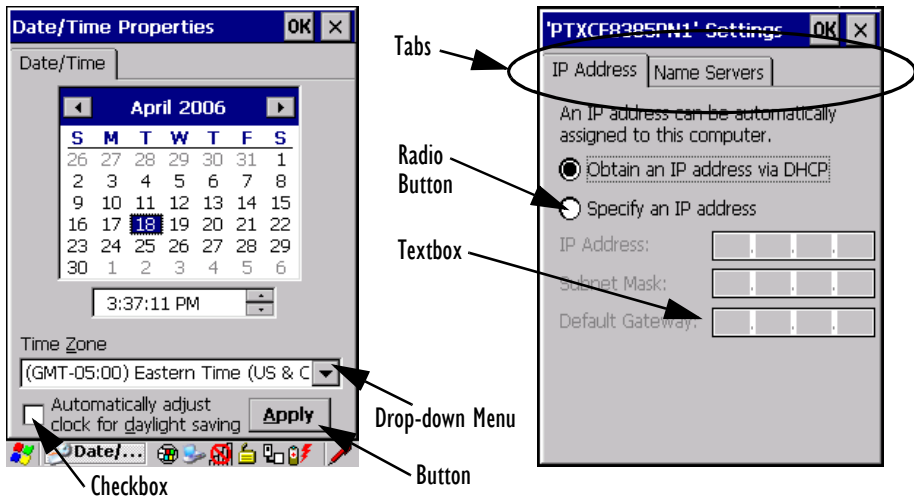

Note: You can use the stylus to tap on an element in a dialog box to select or deselect it, display drop-down menu items, save your selections, and so on.

Preliminary Draft 3

Dialog boxes contain one or more of the following elements:

Tab: A tab separates different elements of a dialog box. Press the [TAB] key until a tab in the dialog box is highlighted. To display adjoining tabs, press the [RIGHT] or [LEFT] arrow key. To display the information in the next tab from anywhere in the window, press [CTRL] [TAB].

Textbox: A textbox requires that you type information. Press the [TAB] key to highlight the textbox and then type the appropriate information.

Drop-down: This type of menu is identified by up and down arrows next to the drop-down menu to indicate that additional options are available. Press the [TAB] key to highlight the menu, and use the arrow keys on your keyboard to cycle through the options.

Checkbox: This box allows you to select or deselect an option. To select or deselect a checkbox, press the [TAB] key to highlight the checkbox, and press the [SPACE] key to select or deselect it.

Radio buttons: These buttons allow you to choose from a number of options. For example, in the sample screen in Figure 4.6 on page 83 you can choose to *Obtain an IP address via DHCP* or *Specify an IP address*. Press the [TAB] key to highlight a radio button option, and then select a radio button by pressing the arrow keys to highlight the appropriate option.

Buttons: This type of button allows you to *Save*, *Delete* and so on the options you've chosen in a dialog box. Use the [TAB] key to highlight the button you want to use. Press the [ENTER] key to activate it.

Saving Your Choices: Once you've made all your changes, press the [ENTER] key to save your changes and exit the window.



Note: A dialog box item that is displayed in grey text indicates that it is not currently available.

CONFIGURATION

5

5.1 Remote Connect	89
5.2 The TekTerm Application	89
5.3 Pocket PC Compatibility	89
5.4 The Control Panel	89
5.5 Control Panel Icons.	90
5.6 Control Panel Applications: Basic Setup.	94
5.6.1 App Launch Keys	94
5.6.2 Certificates	96
5.6.3 Display Properties	97
5.6.3.1 Background	98
5.6.3.2 Appearance	98
5.6.3.3 Backlight	99
5.6.3.4 Contrast	100
5.6.4 Input Panel	101
5.6.5 Keyboard Properties	102
5.6.5.1 Key Repeat	103
5.6.5.2 Keyboard Backlight	104
5.6.5.3 Keyboard One Shot Modes	105
5.6.5.4 Keyboard Macro Keys	106
5.6.5.5 Unicode Mapping	108
5.6.5.6 Scancode Remapping	109
5.6.5.7 Lock Sequence	112
5.6.6 Manage Triggers	113
5.6.6.1 Trigger Mappings	114
5.6.6.2 Add And Edit Trigger Mapping.	115
5.6.7 Power Management Properties.	117
5.6.7.1 Battery Capacity.	117
5.6.7.2 Power Saving Suspend	118
5.6.7.3 Suspend Threshold And Estimated Battery Backup	119
5.6.7.4 Calibrate.	120
5.6.7.5 Advanced	121
5.6.7.6 Devices	122

Preliminary Draft 3

5.6.7.7 Built In Devices	122
5.6.8 Stylus Properties.	122
5.6.8.1 Double-Tap.	123
5.6.8.2 Calibration	123
5.6.8.3 Touch.	124
5.6.9 Volume And Sounds Properties	124
5.6.9.1 Volume Adjustments	124
5.6.9.2 Sound Adjustments.	124
5.7 Bluetooth Setup	124
5.7.1 Devices	125
5.7.2 Headset	129
5.7.3 Servers.	130
5.7.4 Outgoing.	131
5.7.5 Active Conn.	132
5.7.6 Properties	133
5.7.7 Search For	134
5.8 Error Reporting	134
5.9 IPv6 Support.	134
5.10 Scanner Settings	135
5.10.1 Bar Codes	136
5.10.1.1 Scanner	136
5.10.1.2 Restoring Default Settings	137
5.10.2 Options.	138
5.10.2.1 Double Click Parameters	138
5.10.2.2 Display Parameters	139
5.10.3 Translations	140
5.10.3.1 Case Rules	142
5.10.4 Ports	143
5.10.4.1 Tether Port (COM1)	144
5.10.4.2 Console Port (COM3)	145
5.10.4.3 Port Replicator Tether (COM6).	146
5.10.4.4 Port Replicator Port A (COM5)	147
5.11 SNMP (Simple Network Management Protocol) Setup	148
5.11.1 Contact	148
5.11.2 Communities	149
5.11.2.1 Adding A Community	150
5.11.2.2 Modifying A Community Setting.	150

Preliminary Draft 3

5.11.2.3 Removing An Existing Community	150
5.11.3 Trap Destination.	151
5.11.3.1 Enabling Authentication TRAPS	151
5.11.3.2 Adding A Destination	151
5.11.3.3 Changing A Destination	152
5.11.3.4 Removing A Trap Destination	152
5.11.4 Permitted Hosts	153
5.11.4.1 Adding A Host	153
5.11.4.2 Changing A Host.	153
5.12 The Storage Manager	154
5.12.1 Formatting A Memory Card	154
5.12.2 Creating Partitions	155
5.12.3 Partition Management.	156
5.13 Teklogix Error Handling Service	158
5.13.1 ErrorLogInfo	158
5.13.2 NetLog	159
5.14 Teklogix Imagers	160
5.15 Total Recall	161
5.15.1 Creating A Backup Profile	161
5.15.2 Restoring A Profile	165
5.16 TweakIT Settings	166
5.16.1 Advanced	166
5.16.1.1 Advanced Interface And Network.	166
5.16.1.2 Advanced Services Settings	167
5.16.1.3 Advanced Intermediate Driver.	168
5.16.1.4 Radio Features	169
5.16.2 User	170
5.16.2.1 Internet Explorer Settings	170
5.16.2.2 User Display Settings	170
5.16.2.3 User System Settings	171
5.16.3 Registry Editor	172

Preliminary Draft 3

5.1 Remote Connect

Remote Connect is a 7545 application used to connect to a Windows Terminal Server so that you can run a “session” on the Server machine, using the 7545 (Windows CE device).

Refer to the following website for step-by-step information about setting up this connection: <http://www.microsoft.com/WindowsXP/pro/using/howto/gomobile/remotedesktop/default.asp>, or contact Psion Teklogix support services.

5.2 The TekTerm Application

TekTerm is a powerful emulation application ideally suited for real time data transaction applications associated with mainframes and servers. The 7545 includes unique features that support TekTerm—a Psion Teklogix application that has the ability to maintain multiple simultaneous sessions with a variety of host computers. For detailed information, please refer to the *TekTerm Software User Manual*, P/N 8000073.

5.3 Pocket PC Compatibility

The 7545 supports the AYGShell API set that allows Pocket PC-compatible applications to run on the hand-held. Windows CE includes application programming interface (API) compatibility support for the Microsoft Windows Powered Pocket PC 2002 shell in units running Windows CE.

The website listed below describes the APIs exposed through AYGShell and the application compatibility between Windows Powered Pocket PC 2002-based applications and Windows CE-based devices:

http://msdn.microsoft.com/library/default.asp?url=/library/en-us/dncenet/html/WINCENET_CEPC App.asp

5.4 The Control Panel

The Windows CE *Control Panel* provides a group of applications through which you can set a variety of system-wide properties, such as mouse sensitivity, network configuration and the desktop color scheme.



Note: If you are uncertain how to move around a dialog box and make selections, review “Using A Dialog Box” on page 83.

When the 7545 boots up, the startup desktop (shell) is displayed, and any applications stored in the Startup folder start up immediately.

To access the *Control Panel*:

- Press [BLUE] [0] to display the *Start Menu*.


- Use the stylus to tap on **Settings>Control Panel**.

If you're using the keyboard:

- Press [BLUE] [0] to display the *Start Menu*.
- Highlight **Settings** in *Start Menu*, and press the [RIGHT] arrow key to highlight the *Control Panel*.
- Press the [ENTER] key.

The *Control Panel* folder contains icons used in the setup of your 7545.

Figure 5.1 Control Panel Icons

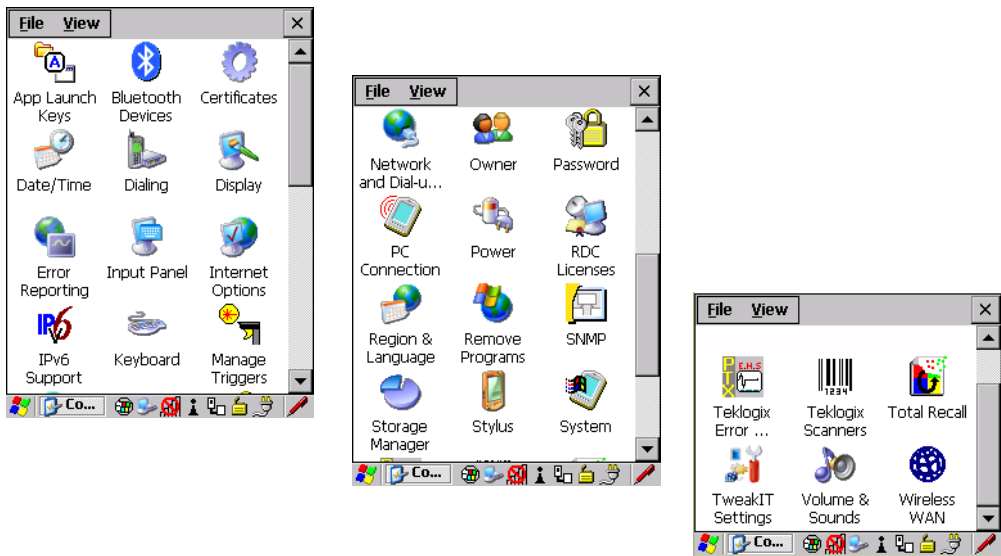

5.5 Control Panel Icons

The *Control Panel* provides a group of applications that allow you to customize and adjust settings on your 7545. This section shows the related icons in the Control Panel and gives a

brief description of each. Section 5.6: “Control Panel Applications: Basic Setup” describes the basic configuration for these applications.



App Launch Keys

By mapping keys to applications using this program, you can then launch those applications from a single key-press.



Bluetooth Devices

Provides options for *Bluetooth* radio setup. It also provides the capability to use a *Bluetooth*-enabled cellular phone as a data modem to exchange information with other *Bluetooth* devices and provide network access.



Certificates

A public key is transmitted as part of a certificate. The certificate assigned through this icon is used to ensure that the submitted public key is, in fact, the public key that belongs to the submitter. The client checks that the certificate has been digitally signed by a certification authority that the client explicitly trusts. “Certificates” on page 96 directs you to the appropriate setup information.



Date/Time

Allows you to set the current Month, Date, Time, and Time Zone on your unit.



Dialing

Specifies dialing settings, including area code, country code, dial type and the code to disable call waiting. You can store multiple patterns—for example, ‘Work’, ‘Home’, and so on using this dialog box.



Display

Changes the appearance (window colour scheme) on the unit desktop.



Error Reporting

Allows you to enable or disable Microsoft error reporting prompts.



Input Panel

Provides the framework for a Soft Input Panel (SIP) should you need to design your own SIP, or change some soft keyboard options.



Internet
Options

Internet Options

Provides options to configure your Internet browser. You can determine items such as the default and search page that the browser applies when connecting to the Internet, the cache size, the Internet connection options, and the security level that is applied when browsing.



IPv6
Support

IPv6 Support

Refers to a new Internet Protocol specification (version 6) that has been published to use 128-bit IP addresses (replacing version 4).



Keyboard

Keyboard

Toggles character repeat on and off and specifies delay and rate for repeated characters. It also allows you to adjust the keyboard backlight threshold and intensity.



Manage
Triggers

Manage Triggers

Allows multiple-scanner trigger management, including the ability to configure each of the trigger buttons. You can configure the trigger ID for each trigger button for both single- and double-click, and the double-click time.



Network
and Dial-u...

Network And Dial-up Connections

Displays a network window from which the 7545 802.11g radio can be configured and an existing configuration can be executed. Refer to “Configuring Your Radio” on page 19 for details.



Owner

Owner

Provides fields in which you can specify owner information. A *Notes* tab allows additional information to be entered and displayed when the unit is powered up. *Network ID* tab information is used to access network resources. (This information should be provided by your System Administrator.)



Password

Password

Allows you to assign a password to restrict access to elements of the unit. Once assigned, password access cannot be circumvented so it is important that you write down your password and keep it in a safe place. Refer to “Security Settings” on page 76 for details.



PC
Connection

PC Connection

Enables direct connections to a desktop computer. Selecting the *Change Connection* button allows you to change the type of direct connect to your PC.



Power

Power

Displays battery pack power status. (Alternately, battery status can be accessed through the taskbar.) Additional tabs allow you to determine suspend states, specify a suspend threshold and, when seated in either the Combo Dock or Quad Dock, determine whether or not a battery that requires it can be recalibrated. This dialog box also allows you to activate card slots. (Refer to “Devices” on page 122 for details.)



RDC
Licenses

RDC Licenses

The Terminal Services license server stores all license tokens that have been installed for a group of terminal servers and tracks licenses issued. The Remote Desktop Licenses (RDC) application displays license ‘tokens’ for devices that connect to a Terminal Server.



Region &
Language

Region & Language

Allows you to specify the local language that is to be displayed on the hand-held screen along with the format of numbers, currency, time and date for your region.



Remove
Programs

Remove Programs

Lists the programs that can be removed from your unit. To remove a program, select it and then click on the **Remove** button.



SNMP

SNMP

SNMP (Simple Network Management Protocol) is the protocol used to monitor and manage devices attached to a TCP/IP network.



Storage
Manager

Storage Manager

Allows you to view information about the storage devices that are present, such as SD-MMC flash cards. For details, see page 154.



Stylus

Stylus

Adjusts how Windows CE recognizes your double-tap (as slow or rapid successive taps). In the *Calibration* tab, you can recalibrate your touchscreen by tapping on the **Recalibrate** button and following the directions on the screen.



System

System

Displays system and memory properties. In the *Memory* tab, you can allocate memory between storage memory and program memory.



Teklogix
Error ...

Teklogix Error Handling Service

Is an error diagnostic tool that enables you to log error messages to report to Psion Teklogix.



Teklogix
Scanners

Teklogix Scanners

Provides scanner parameters and the bar code symbologies that the 7545 scanner will successfully read.



Teklogix
Imagers

Teklogix Imagers

The Teklogix Imagers applet is used to create, modify, delete, and activate imager settings. This icon is only present when the appropriate imager is installed. For detailed information, see Appendix D: “Teklogix Imagers Applet”.



Total Recall

Total Recall

Provides access to a backup and restore utility to maintain applications and settings over cold reboots.



TweakIT
Settings

TweakIT Settings

Allows you to change Advanced System Settings (interface, network, and servers), User System Settings (display font size), and provides the Registry Editor.



Volume &
Sounds

Volume & Sounds

Allows you to adjust the volume of the sound emitted to indicate events like warnings, key clicks and screen taps.



Wireless
WAN

Wireless WAN

When the appropriate radio is available, provides access to technology like GSM/GPRS, which allows wide area networking capability such as internet browsing.

5.6 Control Panel Applications: Basic Setup

5.6.1 App Launch Keys

The *App Launch Keys* icon allows you to map a key to an application so that you can then launch the application from a single key-press.

- In the *Control Panel*, choose the **App Launch Keys** icon.




To assign an application key:

- Tap the **Add** button.



- Press the key you want to use to launch an application. (If an unsupported key is pressed, a message appears on this screen letting you know.)

The cursor moves to the *App* field and a new screen is displayed where you can choose the application to which you want to assign the application key. If you need to, you can *Browse* through the information in your 7545 until you locate the application you want to launch.

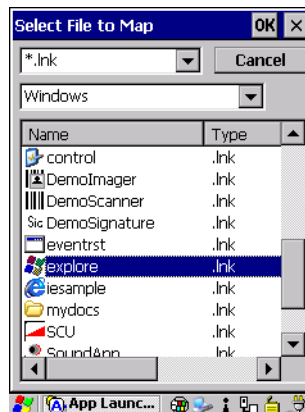


- Once you've selected the file you want to map, tap on **OK**.

Preliminary Draft 3

The cursor moves to the *Data* field. You can use this field if you need to define special parameters to your application launch key. If you don't want to assign any parameters, you can leave the *Data* field blank. If, for example, you want to assign an application launch key to launch the *WordPad* application, you can leave this field blank. If you want to assign an application launch key that will open a specific document in the *WordPad* application, you need to browse to and choose that document while the cursor is in the *Data* field.

- Tap on **OK**.

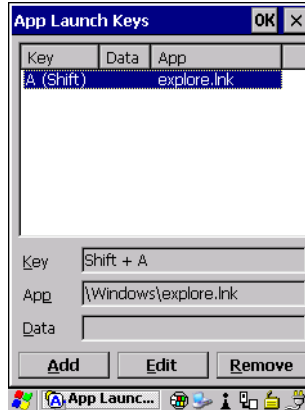

- If you need to Edit, Remove or Add another *App Launch Key*, you can do it from this final screen. Otherwise, tap on **OK** to save your *Application Launch Key*.
- To launch the application you chose, press the application key you assigned.

5.6.2 Certificates

A public key is transmitted as part of a certificate. The certificates listed in the *Certificates* tabs ensure that the submitted public key is, in fact, the public key that belongs to the submitter. The 7545 checks that the certificate has been digitally signed by a certification authority that the 7545 explicitly trusts. This option is used in conjunction with 802.1x authentication to enhance 7545 security.

- In the *Control Panel*, choose the **Certificates** icon.



Your 7545 has certificates already preinstalled in the computer. *My Certificates* establish your identity, *Other Authorities* certificates identify intermediate certification authorities,

and *Trusted Authorities* certificates establish the identity of the servers with which you can connect.




You can import or remove certificates, and view certificate information for any listing, including names, dates, serial numbers, etc.



Note: When importing certificates, the 7545 only recognizes .cer files.

5.6.3 Display Properties


- In the *Control Panel*, choose the **Display** icon.

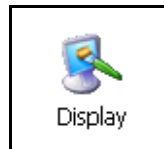

Preliminary Draft 3

5.6.3.1 Background


- In the *Display Properties* dialog box, open the **Background** tab.

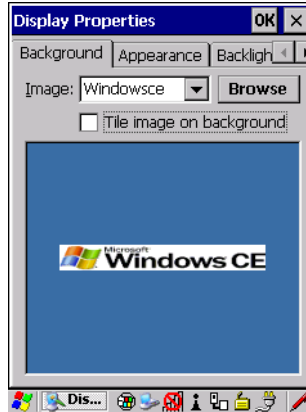

This dialog box allows you to customize your background image.

5.6.3.2 Appearance

- In the *Display Properties* dialog box, open the **Appearance** tab.

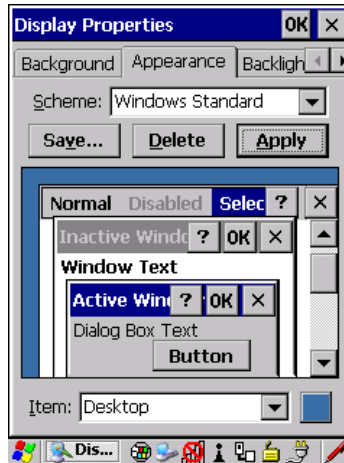

This dialog box allows you to customize the display colour scheme.


5.6.3.3 Backlight

The backlight is activated for a configurable amount of time if the ambient light is below a specified threshold and if the 7545 is in use (key press, scanner trigger). The *Display Properties* dialog box in the *Control Panel* allows you to specify the intensity of the backlight along with how the backlight behaves in low-light conditions and when the unit is not in use.



Note: Keep in mind that this option may be restricted to supervisory use only.

- In the *Display Properties* dialog box, open the **Backlight** tab.

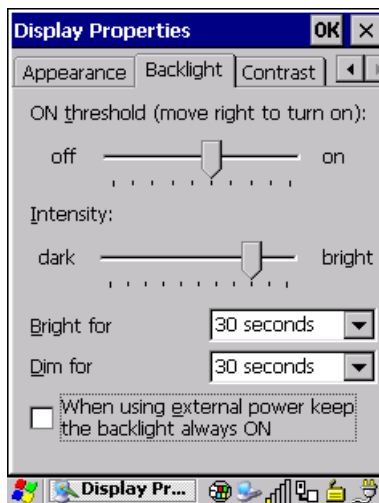

Note: Backlight changes take effect immediately. You do not need to reset the unit.

To maximize battery run time, keep the display backlight brightness and active durations as low as possible.

ON Threshold

The 7545 is equipped with an ambient light sensor. This sliding bar allows you to determine how dark the ambient light needs to be before the backlight turns on.

Intensity

This parameter is used to adjust the light intensity of the 7545 backlight. Sliding the bar to the left lowers the light intensity, and sliding it to the right raises the intensity.

Bright For

The value chosen from this drop-down menu determines the duration of time that the backlight stays on at the configured intensity after the last user action (keypress, scan trigger).

Dim For

The value chosen from this drop-down menu determines the duration of time that the backlight stays on at half the configured intensity (dimmed backlight) after expiration of the Bright For delay and as long as no user action takes place (such as a keypress or scan trigger). At the expiration of the Dim For duration, the display backlight shuts off.


External Power Checkbox

When you select the checkbox next to *When using external power keep the backlight always ON*, the backlight remains ON at the configured intensity when the 7545 is operating with external power (not battery power). If the 7545 is drawing power from its battery, this option is ignored and the other parameters defined in *Display Properties* dialog box take affect.

5.6.3.4 Contrast

The *Contrast* tab allows you to adjust the display contrast to suit the environment in which you are using the 7545. The contrast control can also be used to reduce display flickering that can occur with colour displays in certain lighting conditions.


- In the *Display Properties* dialog box, open the **Contrast** tab.

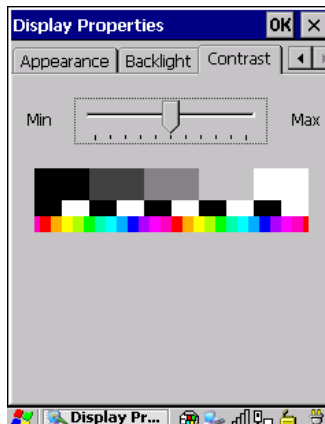

- Slide the bar in the *Contrast* tab to the *left* to decrease or darken the display contrast.
- Slide the bar to the *right* to increase or *lighten* the display contrast.

5.6.4 Input Panel

The 7545 is equipped with at Soft Input Panel (SIP).

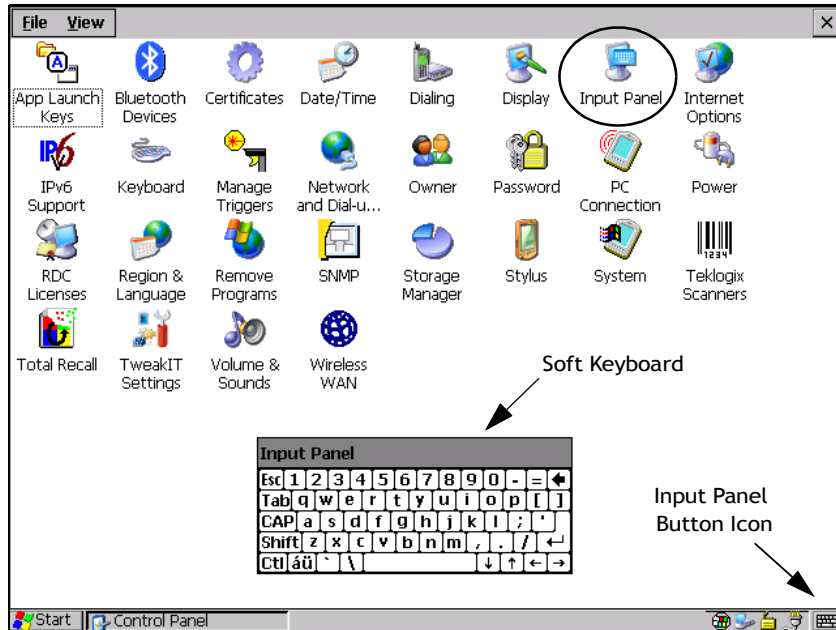

Tapping on the *Input Panel* button displays a soft input panel (soft keyboard) that can be customized using the *Input Panel* dialog box.




Important: *If the Input Panel button icon is not visible in the taskbar, from the ‘Start’ menu, tap on Settings>Taskbar and Start Menu. Tap the checkbox next to ‘Show Input Panel Button’. To remove this icon from the taskbar, tap in the checkbox to erase the check mark.*

The soft keyboard operates just like a standard keyboard except that rather than pressing a key, you tap on letters, numbers, modifier keys, etc. on the 7545 screen.

To customize the appearance and behaviour of the soft keyboard:

- Tap on the **Input Panel** icon in the *Control Panel*.

Figure 5.2 Input Panel Properties

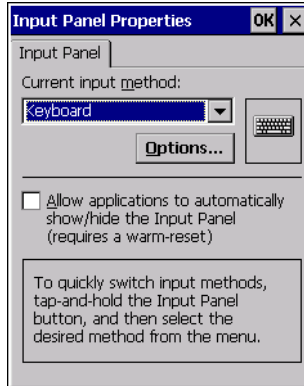


- Tap on the **Options** button to change the appearance of your soft keyboard.



Note: You can also display this dialog box by double-tapping on the Input icon in the far-right corner of the taskbar.

Figure 5.3 Soft Keyboard Options

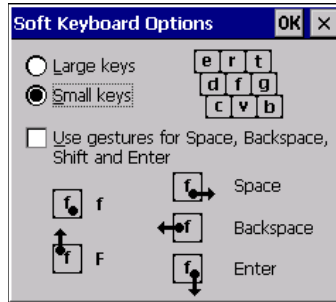

5.6.5 Keyboard Properties

This icon displays the *Keyboard Properties* dialog box in which you can adjust the repeat rate of the keys, the intensity of the keyboard backlight and the behaviour of the [BLUE] and [ORANGE] modifier keys. This dialog box also allows you to define macro keys and Unicode characters.

- In the *Control Panel*, choose the **Keyboard** icon.



5.6.5.1 Key Repeat



Note: These settings apply when a key is held down continuously.

- In the *Keyboard Properties* dialog box, open the **Repeat** tab.



Repeat Delay

The value assigned for this parameter determines the delay in milliseconds between repeat characters. Sliding the *Repeat Delay* bar to the left increases the delay between key repeats, and sliding the bar to the right shortens the repeat delay time.

Repeat Rate


The value assigned for the *Repeat Rate* parameter determines how quickly the key you press repeats and is measured in characters per second (cps). Sliding the bar to the left slows the repeat rate, and sliding the bar to the right increases the repeat rate.



Note: Use the field at the bottom of this dialog box to test the repeat delay and rate settings you've chosen.

5.6.5.2 Keyboard Backlight

- In the *Keyboard Properties* dialog box, open the **Backlight** tab.

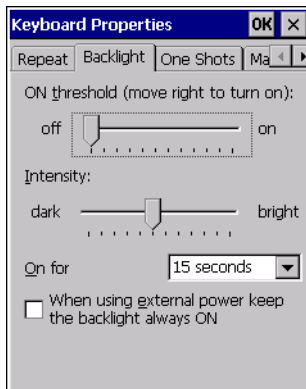

ON Threshold

The *ON Threshold* sliding bar allows you to determine how dark the ambient light needs to be before the keyboard backlight turns on.

Intensity

This parameter is used to adjust the light intensity of the 7545 keyboard backlight. Sliding the bar to the left darkens the keyboard backlight intensity, and sliding it to the right lightens the intensity.



Note: The keypad backlight maximum brightness will decrease over time as it ages. Use mid-range intensity settings when possible to extend the backlight lifespan. When the backlight starts to dim, use this parameter to make it brighter.

ON For


The value chosen from this drop-down menu determines the duration of time that the keyboard backlight stays on after the last user action (keypress or scan trigger).



Note: Tapping in the checkbox next to 'When using external power, keep the backlight always ON' forces the keypad backlight to remain on when the unit is operating with external power.

5.6.5.3 Keyboard One Shot Modes

- In the *Keyboard Properties* dialog box, open the **One Shots** tab.

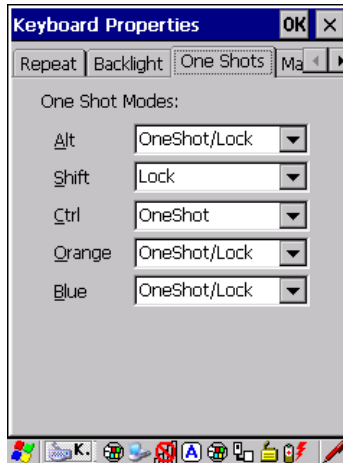

The options in this tab allow you to determine how modifier keys on your 7545 behave. For each modifier key—[ALT], [SHIFT], [CTRL], [ORANGE] and [BLUE]—you have the following options in the drop-down menu: *Lock*, *OneShot*, and *OneShot/Lock*.



*Note: Keep in mind that checking the taskbar lets you know whether or not these keys are locked on. For example, if the [ORANGE] key is locked 'on', the taskbar at the bottom of the screen displays it in uppercase characters, **ORANGE KEY**. If this key is displayed in lowercase characters in the taskbar, you'll know that the **orange key** is not locked. It will become inactive following a key press.*



Important: *Once you've assigned a One Shot mode to a modifier key, you need to tap on the OK button at the top of the tab to activate your selection.*

Lock

If you choose *Lock* from the drop-down menu, pressing a modifier key once locks it 'on' until you press the modifier key a second time to unlock or turn it off.

OneShot

If you choose *OneShot*, the modifier key remains active only until the next key is pressed.


OneShot/Lock

OneShot/Lock allows you to combine these functions. When you choose this option and you press the modifier key once, it remains active only until the next key is pressed.

If you press the modifier key twice, it is locked ‘on’, remaining active until the modifier key is pressed a third time to turn it ‘off’.

5.6.5.4 Keyboard Macro Keys

- In the *Keyboard Properties* dialog box, open the **Macros** tab.

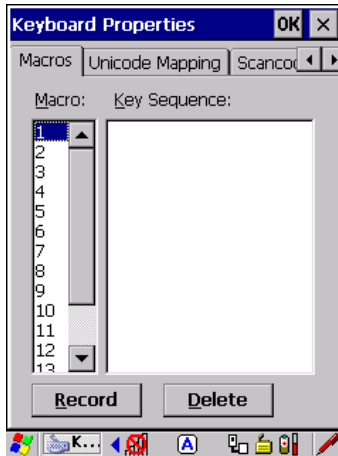

A macro has 200 programmable characters (or “positions”). The macro keys can be programmed to replace frequently used keystrokes, along with the function of executable keys including [ENTER], [BKSP] and [DEL] ([BLUE]-[BKSP]), function keys and arrow keys.

Recording And Saving A Macro

You can program up to 12 macro keys on a *58-key 7545*. On a *36-key 7545*, you can program a maximum of 6 macro keys.

- In the *Macro* menu highlight a macro key number, for example macro 1, to assign a macro to macro key [M1]. Choose the **Record** button.

A message screen is displayed instructing you to *Enter Key Strokes to Record*



- Type the macro sequence you want to assign to the Macro key. You can type text and numbers, and you can program the function of special keys into a macro.
- When you've finished recording your macro sequence, press the key sequence: [CTRL] [ALT] [ENTER], or choose the **Stop Recording** button.

A new screen called 'Verify Macro' displays the macro sequence you created. The *Save* button is highlighted.

- Press [ENTER] to save your macro, or highlight CANCEL and press [ENTER] to discard it.

Executing A Macro

To execute a macro:

- Press the macro key to which you've assigned the macro. For example, if you created a macro for *macro key 1*, press [M1] to execute the macro.

Deleting A Macro

To delete a macro:

- In the *Macros* tab, highlight the **macro number** you want to delete.
- Choose the **Delete** button.

5.6.5.5 Unicode Mapping

- In the *Keyboard Properties* dialog box, open the **Unicode Mapping** tab.



The *Unicode Mapping* tab is used to map combinations of virtual key values and [CTRL] and [SHIFT] states to Unicode™ values. This tab shows the configured Unicode character along with the Unicode value. For example, the sample screen above shows “a (U+0061)” indicating that the character “a” is represented by the Unicode value “0061”, and so on. Keep in mind that Unicode configurations are represented as hexadecimal rather than decimal values.


All user-defined Unicode mappings are listed in the *Unicode Mapping* tab in order of virtual key value, and then by order of the shift state. If a Unicode mapping is not listed, the Unicode mapping is mapped to the default Unicode value.

Adding And Changing Unicode Values



Important: *Changes to Unicode mappings are not saved until you exit the Keyboard Properties dialog box.*

- Choose the **Add/Change** button.

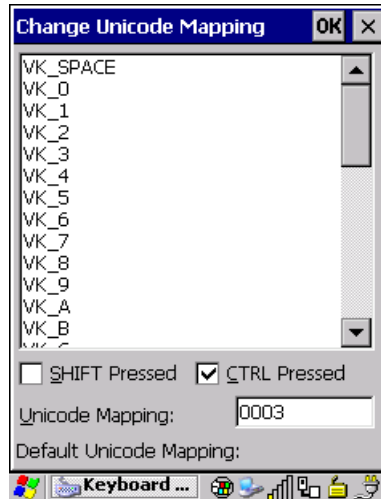

- Highlight a value in the Unicode mapping list. In the sample screen above, a value will be assigned to virtual key 0 (VK 0).
- Position the cursor in the *Unicode Mapping* field, and type a **Unicode value** for the highlighted key.



Note: To add a shifted state, [SHIFT] and/or [CTRL], press [TAB] to position the cursor in the checkbox next to 'SHIFT Pressed' and/or 'CTRL Pressed'. Press [SPACE] to select the shift state you want to assign.

Removing Unicode Values

- In the *Unicode Mapping* tab, highlight the item you want to delete, and choose the **Remove** button.


5.6.5.6 Scancode Remapping

A scancode is a number that is associated with a physical key on a keyboard. Every key has a unique scancode that is mapped to a virtual key, a function or a macro. *Scancode Remapping* allows you to change the functionality of any key on the keyboard. A key can be remapped to send a virtual key (e.g. VK_F represents the 'F' key; VK_RETURN represents the [ENTER/ON] key, etc.), perform a function (e.g. turn the scanner on, change volume/contrast, etc.) or run a macro.

There are three different tables of scancode mappings: the *Normal* table, the *Blue* table and the *Orange* table. The *Normal* table defines unmodified key presses; the *Blue* table defines

Preliminary Draft 3

key presses that occur when the [BLUE] modifier is on; the *Orange* table defines key presses that occur when the [ORANGE] modifier is on. The default mappings of these scan-codes can be overwritten for each of these three tables using the *Scancode Remapping* tab accessed from the *Keyboard Properties* dialog box.

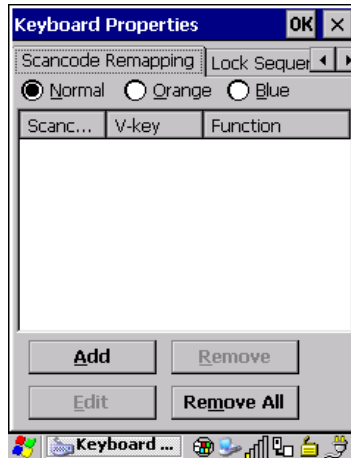

The first column in the *Scancode Remapping* tab displays the scancodes in hexadecimal. If the scancode is remapped to a virtual key, that virtual key is displayed in the next column labelled 'V-Key'. A virtual key that is 'Shifted' or 'Unshifted' is displayed in the third column labelled 'Function'.


If the scancode is remapped to a function or a macro, the first and second columns remain blank while the third column contains the function name or macro key number (e.g., Macro 2).

Adding A Remap

To add a new remapping:

- Choose the **Add** button at the bottom of the dialog box.

The *Remap Scancode* dialog box is displayed.

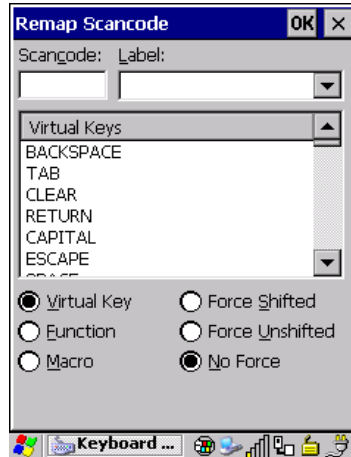

- Type the scan code in hexadecimal in the field labelled *Scancode*



Note: The Label field displays the default function of the scancode you are remapping.

Virtual Key, Function And Macro

The radio buttons at the bottom of the dialog box allow you to define to what the scan code will be remapped: Virtual Key, Function or Macro.

When *Virtual Key* is selected, you can choose to force [SHIFT] to be *on* or *off* when the virtual key is sent. If *No Force* is selected, the shift state is dependent on whether the shift state is on or off at the time the virtual key is sent.

When *Function* is selected, a list of valid functions appears in the dialog box.

When *Macro* is selected, the macro keys available on your unit are listed in the dialog box.

- Choose **Virtual Key**, **Function** or **Macro**.
- Choose a function from the *Function* list in the dialog box, and tap on **OK**.

Editing A Scancode Remap

To edit a scancode:

- In the *Scancode Remapping* tab, tap the stylus on the remap you want to edit.
- Tap on the **Edit** button, and make the appropriate changes.
- Tap on **OK** to save your changes.


Removing A Remap

To delete a remap:

- In the *Scancode Remapping* tab, highlight the scancode you want to delete, and tap on the **Remove** button.
- Tap on **OK**.

5.6.5.7 Lock Sequence

The *Lock Sequence* menu allows you to lock the 7545 keyboard to prevent keys from being pressed accidentally when, for example, the unit is inserted in a holster.

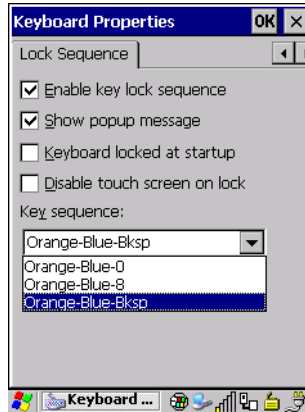

- To lock the keyboard, tap in the checkbox next to *Enable key lock sequence*.
- Tap in the checkbox next to *Keyboard locked at startup*.
- In the *Key sequence* drop-down menu, choose the key sequence you will need to type to unlock the keyboard.



Note: It is useful to leave the 'Show popup message' enabled (default) so that anyone attempting to use the keyboard will see the key sequence they will need to enter to unlock the keyboard displayed on the screen.

A *locked keyboard* icon is displayed in the softkey bar when the keyboard is locked.



- Type the key sequence to unlock the keyboard.

5.6.6 Manage Triggers


Allows users to configure how bar code scanners and other devices such as RFID readers are triggered. You can configure the trigger ID for each trigger button for both single- and double-click, and the double-click time.

- In the *Control Panel*, choose the **Manage Triggers** icon.



Preliminary Draft 3

- In the *Manage Triggers* screen you'll see a list of trigger mappings.

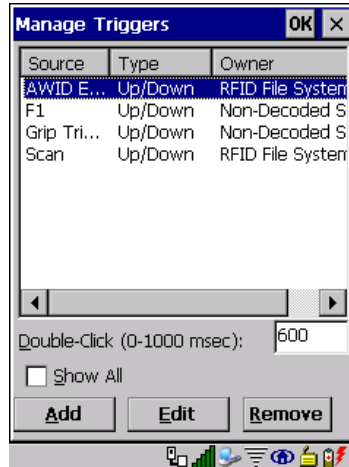

5.6.6.1 Trigger Mappings

A trigger mapping is an association between a particular key on the keyboard and a driver or application, the module(s)—sometimes referred to as “trigger consumer(s)” —of the trigger source. Along with keyboard keys, the external trigger (scan button) is software-based. When the specified key is pressed, the owner (for example, a decoded scanner) is sent a message.



Important: *It is not possible to have two or more identical mappings—for example [F1] cannot be mapped to the Non-Decoded Scanner twice—even if the trigger type is different.*

A keyboard key that is used as a trigger source will no longer generate key data, or perform its normal function. For example, if the space button is used as a trigger source, it will not be able to send space characters to applications.

Double-Click

When a key is pressed and released, then pressed again within the configured time (between 0 to 1000 milliseconds), a double-click occurs. See also “Trigger-Press Type” on page 116.

Show All Modules

By default, the trigger mapping list only shows active mappings. Mappings for drivers or applications that are not currently active are not normally displayed. By checking this checkbox, all mappings, both active and inactive, are displayed.

Add

Tapping this button brings up the *Add Mapping* dialog (see page 115), so that you can add new trigger mappings.

Edit

Tapping this button brings up the *Edit Mapping* dialog (see page 115), so that you can edit existing trigger mappings.

Remove



Tapping this button removes an existing mapping.

OK

The *OK* button in the top right of the *Manage Triggers* screen saves all changes made. If the cancel button *X* is tapped instead, or the [ESC] key is pressed, all changes made will be discarded.

5.6.6.2 Add And Edit Trigger Mapping

These dialogs allow you to add and edit trigger mappings.

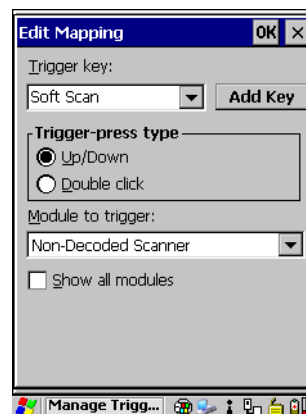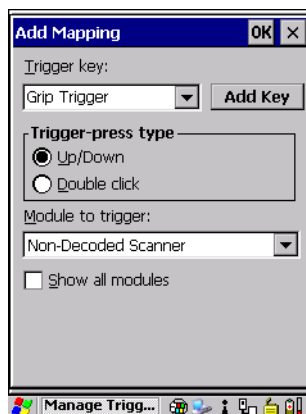

Preliminary Draft 3

Trigger Key

This drop-down list allows you to specify the source of the trigger events, such as the *Soft Scan*, *Left Scan*, etc., for the trigger module selected.



Note: It is possible to map the same source to different modules (trigger consumers)—for example, to both the Imager and Non-Decoded Scanner. If so, both devices/operations will occur simultaneously. This is not recommended in most cases, especially with devices such as Imagers or RFID Readers.

It is also possible to map different sources to the same module (trigger consumer)—for example, two different trigger keys can be mapped to the RFID File System.

Add Key

Only existing trigger sources are shown in the Source combo-box. To add a new source to this list, tap on the **Add Key** button. A dialog will pop up and allow you to select the keyboard key to use as a trigger source.



Trigger-Press Type

You can enable either an *Up/Down* or *Double Click* response to a trigger press. Normally, when a trigger (keyboard key, etc.) is pressed and released, a “trigger down” event is sent to the “owner”—that is, the application receiving the trigger press information—followed by a “trigger up”. If *Double Click* is chosen in this menu, when the trigger is pressed, released, and then pressed again, a “double-click” event will have occurred. If a mapping with the type *Up/Down* has also been configured for the same source, it will only receive the first set of trigger events.

Module Trigger

This identifies the driver or application receiving the trigger presses.

Show All Modules

By default, inactive owners are not shown. By checking this checkbox, all owners, both active and inactive, are displayed.

5.6.7 Power Management Properties


This icon displays a Power Properties dialog box that indicates the unit's battery capacity and allows you to manage battery use.

- In the *Control Panel*, choose the **Power** icon.




5.6.7.1 Battery Capacity

- In the *Power Properties* dialog box, open the **Battery** tab to view battery details.

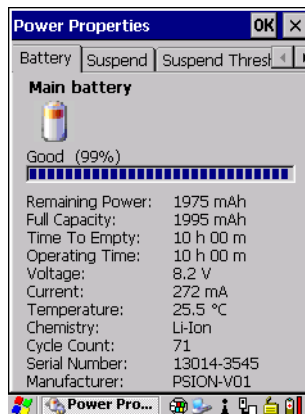

5.6.7.2 Power Saving Suspend

- In the *Power Properties* dialog box, open the **Suspend** tab.

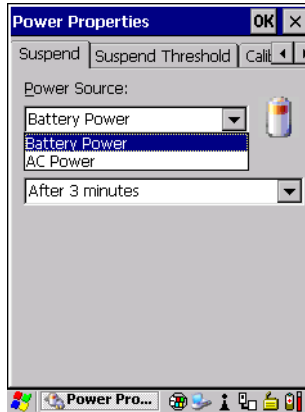

Power Source

This drop-down menu allows you to specify whether the unit is using *AC Power* or *Battery Power*.

Suspend Timeout




Important: *Psion Teklogix recommends setting the Suspend value to 10 minutes. To further reduce power consumption, carefully consider the duration of time that the display backlight is ‘on’ (see “Backlight” on page 99).*

When the 7545 is idle—not receiving any user input (a key touch, a scan, and so on) or system activity (serial data, an activity initiated by an application, and so on)—the hand-held uses the value assigned in the *Suspend Timeout* field to determine when the unit will go to sleep (appear to be off).

When the time in the *Suspend Timeout* field elapses without any activity, the unit enters *suspend* state. In suspend state, the 7545 CPU enters a sleep state, and the radio is shut off. The state of the device (RAM contents) is preserved. Pressing [ENTER] wakes the system from suspend state. When the 7545 is in suspend state, the network connection will not be broken immediately. If the connection is dropped, you must re-establish the network connection.

5.6.7.3 Suspend Threshold And Estimated Battery Backup

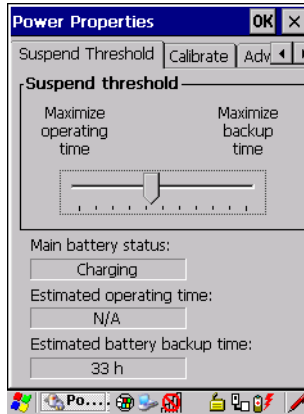

The *Suspend Threshold* adjustment tells the system when to shut down when the battery drains. If you choose *Maximum Operating Time*, the unit will run until the battery is completely empty; the RAM is only backed up for a short period of time. If you choose *Maximum Backup Time*, the hand-held shuts off with more energy left in the battery so RAM can be backed up for a longer period of time.



Important: *Selecting Maximum backup time will reserve approximately 20% of the battery capacity for memory backup. Once the battery is drained, the system RAM memory is lost and the unit must cold boot.*

In most real-time transaction environments this is not a problem (it only takes a few seconds to cold boot). Batch transaction environments, where data is not saved to a non-volatile memory (such as an SD FLASH card), may need to pay particular attention to this parameter. Psion Teklogix does not recommend the storage of any valuable data in system RAM.

The 7545 Windows CE 5.0 environment does not store any critical data in RAM (such as the registry or file system).

If your application does not save data to RAM, Psion Teklogix recommends keeping the Suspend Threshold setting as low as possible to maximize battery run time.

The *Estimated Battery Backup* is the amount of battery power that has been reserved or set aside to protect data until a charged battery can be installed in the 7545. When the battery capacity is depleted up to the *Estimated Battery Backup* reserve specified in the *Suspend Threshold* menu, the 7545 shuts off automatically and uses the reserve power to preserve the

Preliminary Draft 3

data stored on the computer. Once the 7545 shuts down, it cannot be switched on until a fresh battery is installed, or the unit is inserted in a docking station or cradle.


- Slide the **Suspend Threshold** button to the right to increase the battery capacity reserved for backup purposes. Data will be preserved to a maximum of 124 hours.
- Slide the **Suspend Threshold** button to the left to decrease the power reserved for backup purposes; this increases the 7545 operating time—the amount of time the unit will operate before shutting down—but reduces the power reserved for backup purposes to a minimum of 24 hours.

Internal super-capacitors will protect the data stored in the 7545 while the battery is swapped for a fully charged one.




Important: *Once the battery is removed, the super-capacitors will preserve the data stored on the 7545 for approximately 5 minutes. It is critical that you install a charged battery before this time elapses.*

5.6.7.4 Calibrate

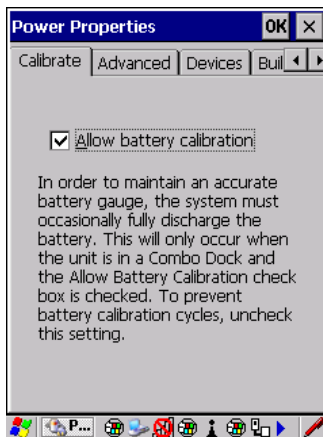

Tapping in the checkbox next to *Allow Battery Calibration* allows the battery to be recalibrated only when necessary if the unit is inserted in a Combo Docking station.

5.6.7.5 Advanced

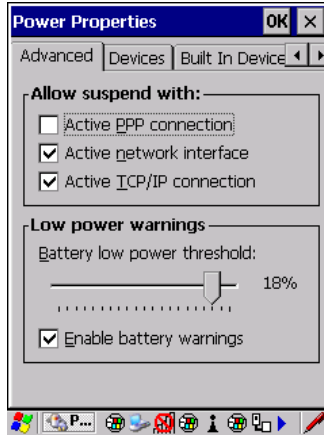

Allow Suspend With:

This tab allows you to specify whether or not your unit will enter Suspend state while it is operating with an active PPP connection, network interface, or active TCP/IP connection.


Low Power Warnings

The sliding scale at the bottom of this tab allows you to specify the remaining battery capacity at which a warning message is displayed on the 7545 screen, from 0% to 20%.

Preliminary Draft 3


5.6.7.6 Devices

This tab controls power to individual CF and SDIO slots. Enable or disable the checkboxes as needed, then tap on **OK** to save your changes.

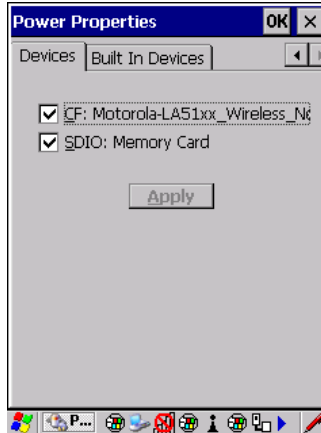

5.6.7.7 Built In Devices

This tab controls power to built-in devices such as *Bluetooth*. Enable or disable the checkboxes as needed, then tap on **OK** to save your changes.

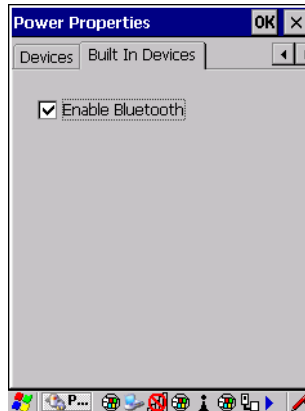


5.6.8 Stylus Properties



Note: Touchscreen calibration may not be enabled on your unit. If your screen appears to require recalibration, contact your supervisor.

- In the *Control Panel*, choose the **Stylus** icon.

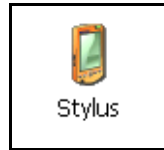

5.6.8.1 Double-Tap


- In the *Double-Tap* menu, follow the directions to tailor the sensitivity of the stylus when you tap on the touchscreen.



5.6.8.2 Calibration

Touchscreens rarely require recalibration. However, if your touchscreen has never been calibrated or if you find that the stylus pointer is not accurate when you tap on an item, follow the directions below.

- Choose the **Calibration** tab, and then tap on the **Recalibrate** button.

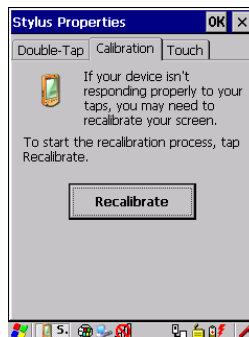

- Follow the directions in the *Calibration* tab to recalibrate the screen.


5.6.8.3 Touch

This tab allows you to disable the touchscreen.


- Choose the **Touch** tab. Select the checkbox next to *Disable the touch panel*.

5.6.9 Volume And Sounds Properties

- In the *Control Panel*, choose the **Volume & Sounds** icon.

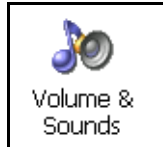

5.6.9.1 Volume Adjustments

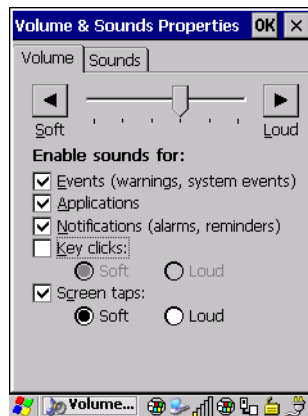

- Slide the volume button to the left to lower the beeper volume or to the right to increase the beeper volume.
- Under the heading *Enable sounds for*, enable the conditions under which you want the 7545 to emit a beep.

5.6.9.2 Sound Adjustments

The 7545 computer is equipped with a beeper rather than a sound port. The options under this tab are not available for this hand-held.

5.7 Bluetooth Setup

Bluetooth is a global standard for wireless connectivity for digital devices and is intended for Personal Area Networks (PAN). The technology is based on a short-range radio link that

operates in the ISM band at 2.4 GHz. Because *Bluetooth* utilizes a radio-based link, it does not require a line-of-sight connection in order to communicate.



Note: The **Bluetooth** radio uses an internal antenna.

The *Bluetooth* radio is disabled by default. Before you begin the setup process:

- In the *Control Panel*, tap on the **Power** icon.
- Tap on the *Built In Devices* tab, and tap in the checkbox next to *Enable Bluetooth*. Tap on **OK**.


When the radio is enabled, a *Bluetooth* icon appears the taskbar at the bottom of the screen. It is ready for setup.

- In the *Control Panel*, choose the **Bluetooth Devices** icon to display the **Bluetooth Manager** screen.



The **Bluetooth Manager** dialog box displays the other *Bluetooth* devices with which you can communicate.

5.7.1 Devices

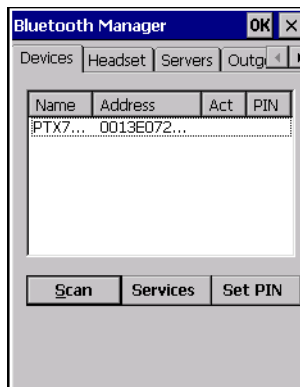

If you intend to pair devices (a scanner or printer for example), power on and bring the devices within 5 m (16.4 ft.) of the 7545 before proceeding with the discovery process described below.

Pairing A Device

To pair devices:

- Follow the manufacturer's instructions to place the device you want to pair in pairing mode
- Choose the *Devices* tab and **Scan** for devices in your area.
- When the scan is complete, highlight the device you want to pair with and either double-click or press the **Services** button.
- If a PIN dialog box appears, type your PIN and tap on **OK**.


After entering the device PIN number, the *Services* dialog appears with a list of services available on that device.

- To select a service, double-click on the service you want, or highlight the service and press the space bar.
- In the drop-down list of options available, choose **Active** to pair the device.

A COM/BSP port name will appear next to the service for this device. Your device is now paired.

Scan

- Click on the **Scan** button to list available devices.

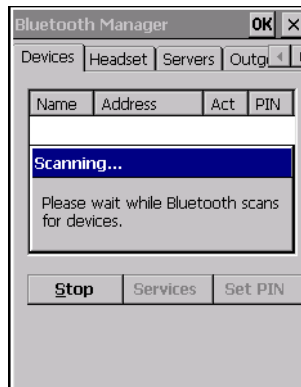

Wait for the 7545 to complete its scan (approximately 20 seconds). When scanning starts, the *Scan* button will change to *Stop*—if necessary, you can tap on this button to stop the process. Once scanning is complete, all discovered devices will be displayed in the list box, with *Name*, *Address*, *Active* status, and *PIN* information.



*Note: During the scanning process, addresses are located first, followed by names. Only the names of devices that are within the **Bluetooth** radio coverage range will be retrieved.*

The *Active* column indicates whether any service is activated for that device. When a service is activated, the device is displayed in the list even when it is not detected during the scan.

The *PIN* column indicates whether you have a PIN (password) set for the device.

At this point you can either query for services or set the PIN for each device. Once you highlight a device in the list box, both the *Services* and *Set PIN* buttons become available.

Services

A discovered device may display several service profiles that it can use to communicate, and you will want to activate the type you need. Supported profiles that can be activated include: *DUN* (Dial-Up Networking service), *Printer* (serial service), and *LANPPP* (LANAccessUs-PPPP service). *ASync* (ActiveSync) is another available profile.

- To start the service scan, highlight a device in the *Devices* menu list, and then click on the **Services** button or double-click on the device entry.



*Note: If the remote device is out of reach or turned off, it can take a considerable amount of time for the *Services* dialog box to appear—it may appear to be frozen.*

Once the device's service profiles are displayed in the *Services* list box:

- Highlight the service to be activated.
- Press [SPACE] or right-click to display the *Activation* menu.

The *Activation* menu contains four options: *Activate*, *Authenticate*, *Outgoing*, and *Encrypt*.

Once the service is successfully activated, the assigned port (if applicable) will appear in the *Port* column of the *Services* list box. You can choose to use *BSP* or *COM* as the port name. *BSP* is the latest Microsoft *Bluetooth* stack standard, but older applications assume serial ports are *COM*. When using *COM* as the port name, the *Bluetooth* manager will try to find and use a free port between *COM7* and *COM9*. When using *BSP* as the port name, *BSP2* to *BSP9* are available for use. The port is available as soon as it is activated.



*Note: The **CH** column shows the *RFCOMM* channel of the service **if** the service is *RFCOMM*-based. This information is not generally needed except for debugging purposes.*

Preliminary Draft 3

To add a service to the *Outgoing* port, an active service must first be deactivated. Then you can choose the **Outgoing** option from the *Activation* menu (highlight a service, right-click or press the [SPACE] bar to display the Activation menu).

The *Authentication* and *Encryption* options can be changed only before activation. To change these after activation, deactivate the service first, then change the options.

Once a service is activated, all the information regarding the service, including the RFCOMM channel number, is saved in the registry. (Some remote devices may change their RFCOMM channel numbers when they reboot, so your saved setting may not work when the remote device is rebooted. In that case, you must deactivate the service and reactivate it to detect the current RFCOMM channel.)

Set PIN

PINs can be set for each device by pressing the **Set PIN** button in the *Devices* menu, or you can skip this step and try to connect to the device first.



Important: The remote device must have authentication enabled, otherwise the PIN authentication will fail.

- Highlight a device, click on the **Set Pin** button, and type the PIN.

You will receive a message, either that the PIN has been successfully validated or that it has been rejected.

If the PIN has been validated, an asterisk (*) appears in the PIN column in the *Devices* list box, indicating that this device has a PIN set. Once a PIN is entered, it is saved in the registry.


To remove the PIN:

- Choose **Set PIN**, and press [ENTER].

If the 7545 attempts to connect to a remote device that has Authentication enabled and does not have a required PIN set, an *Authentication Request* dialog box appears.

- Enter the PIN, and tap on **OK** to connect the devices.

5.7.2 Headset

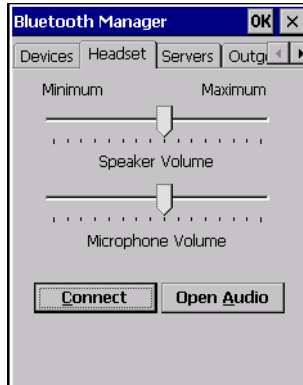

To pair a headset with your 7545:

- Place your headset in *Discoverable* mode. You can do this by following the manufacturer's instructions in your headset's user guide.
- Search and discover your headset. Choose the **Devices** tab in *Bluetooth Manager* and scan for devices in your area. (Note that if this is your first time pairing, the device scan occurs automatically—you do not need to tap on the *Scan* button to perform a scan.)

When the scan is complete, a list of discovered devices is listed.

- Search for your device's services. You can do this by double-clicking on the **headset** or you can highlight **headset** and tap on the **Services** button.
- If the headset has authentication enabled, a dialog box appears requesting that you enter a PIN number. Enter the **PIN number** and tap on **OK**.
- Select a service to which you want to connect. You can do this by pressing and holding the stylus over the desired service. Once the pop-up menu has appeared, choose **Active**.

Your headset is now paired. A COM/BSP port name will now appear beside the service for this device. An asterisk will appear under the *Active* list in the *Services* screen.


Connect

Tap on **Connect** to establish a data connection between the 7545 and the *Bluetooth* headset.

Open Audio

Tap on **Open Audio** to establish the audio connection between the 7545 and the *Bluetooth* headset. The headset is then able to change the volume of the speaker and microphone on the computer. In order to open the audio streams, you will first have to *Connect*.

5.7.3 Servers

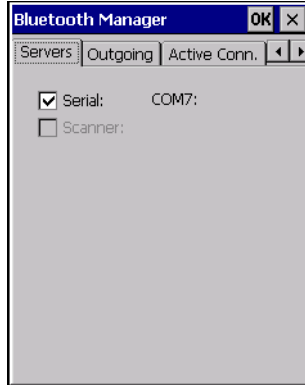

When the *Bluetooth* connection is initiated from your 7545 to the remote device, the 7545 is called the ‘client’ and the remote is called the ‘server’. The *Servers* menu displays the server profiles that can be activated in your 7545. There are currently two server profiles available: Serial and Scanner.

- Tap on the checkbox to activate the server, and it will display the associated port name beside the server name.

Once you activate a server profile, it is recommended that the 7545 be rebooted before you try to bond from a server.



Note: You do not need to reboot if you are deactivating a server.

5.7.4 Outgoing



Outgoing Port acts as a serial port that can be used to connect to a list of *Bluetooth* devices (one at a time), but you have the freedom to switch on-the-fly.

The *Outgoing Port* checkbox allows you to create the Outgoing port. When the port is created, the Outgoing tab lists the port name.

The *Outgoing* list dialog box displays a list of services marked as ‘Outgoing’. The * column indicates the currently selected service. You can tap on *Unselect* to reset the current selection, or you can tap on *Select* to make a selection. The *Remove* button deletes the service from the outgoing list.

The *Prompt* menu determines the behaviour of the pop-up Selection menu. Choosing *Every-time* causes the Selection menu to be displayed each time an outgoing port is created. If you choose *Once*, the menu is displayed only when a partner service is not selected.

To display the *Selection* menu at any time:


- Press [CTRL] [ALT] [F1], and switch the partner *Bluetooth* device.

If a connection to a partner device already exists, the connection is dropped and another connection to the newly selected device is created instantly without disrupting the application that has opened the outgoing port.



Note: To add a service to the Outgoing port, an active service must first be deactivated. Then you can choose the ‘Outgoing’ option from the Activation menu (highlight a service, right-click or press the [SPACE] bar to display the Activation menu).

5.7.5 Active Conn.

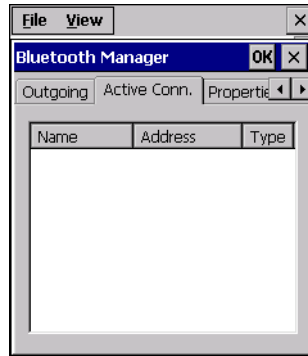

The *Active Conn.* menu lists the *Name*, *Address*, and *Type* of the currently active connections. The table is periodically updated, but it can take a few seconds before it reflects the actual list of connections. The *Type* column of the table shows ‘ACL’ or ‘SCO’. The Connection list table shows the connections for scanning as well as the service connections.



Note: You can change the device-name and description of your radio by clicking on the **System** icon in Control Panel, which will open the System Properties dialog box. Click on the **Device Name** tab to access the menu and change your settings. Then click on **OK**.

Although the name will have changed in the Properties menu in **Bluetooth** Controls, the radio only reads it on boot-up. For the changes to take effect, you must cold reset the 7545 (for cold reset instructions, see “Cold Reset” on page 35).

5.7.6 Properties



The *Properties* menu displays information about your 7545, and provides some port options.

The *Device Name* field shows the device name of your 7545. This name can be changed (see the Note on the previous page for details).

Device Class shows the Class of Device (e.g. desktop, hand-held), which is always set to *Handheld*.

Local Bluetooth Address shows the address of your 7545 radio.

Port Prefix is used to set the port name to either *BSP* or *COM*. When the name is set to *BSP*, BSP2 to BSP9 are available for activated services (including the server). When *COM* is chosen, COM7 to COM9 are available.


NQuery Retry (Name Query Retry) governs the number of times the hand-held will attempt to query the names of other *Bluetooth* devices if the first attempt fails. (When the 7545 scans for other devices, it sometimes fails to scan names.)



Note: Keep in mind that setting this parameter to a higher value will lengthen the scan time.

The option *Hide this device from others* prevents other devices from connecting to your 7545.

5.7.7 Search For

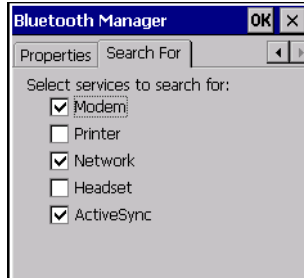

The *Search For* menu allows you to specify the services for which the *Bluetooth* radio will scan.

5.8 Error Reporting

Error Reporting allows you to enable or disable Microsoft error reporting prompts.

- Tap on **Start>Settings>Control Panel>Error Reporting** icon to access your options.




5.9 IPv6 Support

The *IPv6 Support* icon in the *Control Panel* allows you to activate IPv6 network support on your unit if your network setup requires this. This internet protocol specification (version 6) supports 128-bit IP addresses, replacing version 4.



- Choose the **IPv6 Support** icon to display the associated dialog box.

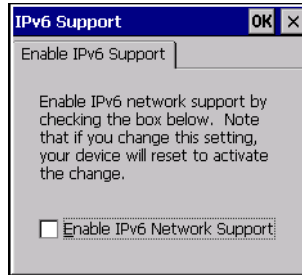

- Choose the checkbox next to *Enable IPv6 Network Support* to enable this internet protocol.


5.10 Scanner Settings

The *Teklogix Scanners* icon in the *Control Panel* provides dialog boxes in which you can tailor bar code options and choose the bar codes your scanner will recognize. The parameters are preset with the default settings of the decoded scanner installed in the unit.



For a listing of available scanners and their specifications, please refer to Chapter 7: "Specifications".

5.10.1 Bar Codes

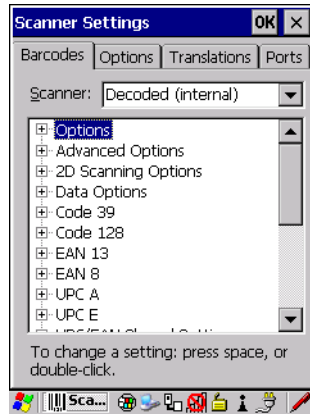

5.10.1.1 Scanner

The drop-down menu to the right of the *Scanner* option allows you to choose configurations for one of the following scanner types, depending on what is installed in/on your hand-held: *Decoded (internal)*, *Decoded (Intermec ISCP)*, *Imager* and *Non-decoded*.

The symbologies listed in the *Barcodes* tab change to reflect the scanner you choose and the bar codes it supports. Always defer to your bar code scanner's programming manual when in doubt about the availability or settings for any parameter.



*Note: Your 7545 comes preconfigured from the factory for internal scanner types. The type of scanner installed can be determined from the **System** icon in the Control Panel, under the System Properties tab.*



Important: *To improve the decode speed and performance, enable (set to 'on') only those codes that are required by the application.*

For information on configuring the bar code symbologies, see Appendix C: "Bar Code Settings".

Keep in mind that some bar code types are only available when an internal imaging scanner is installed. All internal scanners can be configured using these dialog boxes. External, non-decoded scanners are also configured through the *Scanner Properties* dialog box.


However, external decoded scanners must be configured by scanning special configuration bar codes. In these cases, the scanner manufacturer provides programming manuals for configuration purposes.

- For the Symbol LS3408 decoded scanner, refer to the programming guide supplied with your scanner.
- For PowerScan® (PSC) decoded scanners, refer to the *PowerScan Programming Guide*.

5.10.1.2 Restoring Default Settings

If you want to restore the factory defaults after making changes, the defaults can be applied to a selected parameter, sub-tree of parameters or all scanner parameters.

- Press and hold the stylus on a symbology (e.g., Code 128) to display a pop up a menu.

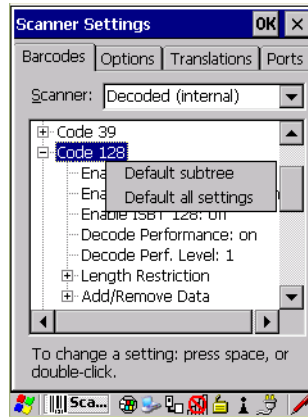


- Choose **Default subtree** to reset only the parameters in the symbology you selected, or choose **Default all settings** to reset all scanner parameters to default settings.

To reset a single parameter to its default setting:

Preliminary Draft 3


- Press and hold the stylus on the parameter you want to reset.

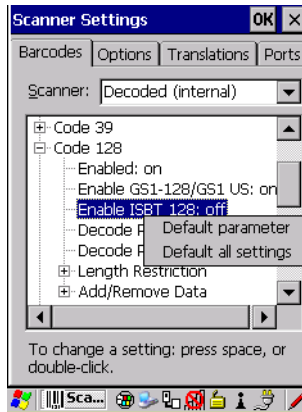

- Choose **Default parameter** to reset the parameter to the default setting.

5.10.2 Options

This tab allows you to tailor the double-click parameters and the display options associated with your scanner.

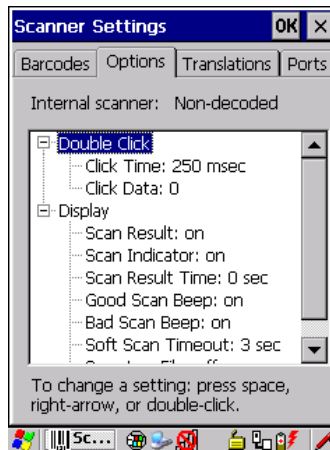

5.10.2.1 Double Click Parameters

Click Time (msec)

This parameter controls the maximum gap time (in milliseconds) for a double-click. If the time between the first and second clicks of the scanner trigger is within this time, it is con-

sidered a double-click. The allowable range is 0 to 1000. A value of zero disables this feature.

A double-click produces different results depending on whether or not a value is assigned in the “Click Data” parameter. When a value is not assigned for the “Click Data”, double-clicking the scanner trigger overrides the target dot delay set in the “Dot Time” parameter and initiates a normal scan sweep. If a value is assigned for the “Click Data” parameter, double-clicking the scanner trigger inserts the “Click Data” value rather than initiating a scan.

Click Data

For both integrated and external scanners, this parameter determines which character is sent to the application installed in your 7545 following a double-click. A dialog box appears, asking that you press the key you want to insert. The ASCII/Unicode key value of the key-press is displayed.

Pressing the [ESC] key in this dialog box resets the data to zero.

5.10.2.2 Display Parameters

Scan Result

When this parameter is enabled, the type of bar code and the result of the scan appear on the screen. Note that this information is only displayed after a successful decode and is visible only while the scanner trigger is pressed. When the trigger is released, this information is cleared from the screen.

Scan Indicator

When this parameter is enabled, the laser warning logo appears on the display whenever the scanner is activated.

Scan Result Time (sec)

The value assigned to the *Scan Result Time* parameter determines how long the scan results of a successful scan are displayed on the screen. Time is measured in seconds, and a value of 0 (zero) disables the parameter. When you choose this option, a dialog box appears where you can enter a value.



Note: To remove the scan result from the screen before the “Result Time” has expired, point the scanner away from the bar code and press the trigger.

Good Scan Beep And Bad Scan Beep

These parameters determine whether or not the 7545 emits an audible scanner ‘beep’ when a good (successful) scan or a bad (unsuccessful) scan is performed. Set these parameters to either **on** to enable the beeper or **off** to disable it.

Soft Scan Timeout


This parameter is used by the SDK “Scan” function (soft-scan: starting a scan session via the SDK function, instead of a physical user trigger press). The value assigned to this parameter determines the soft-scan timeout from 1 to 10 sec (default is 3 sec).

Scan Log File


If this parameter is enabled, the input bar code and the modified/translated output bar code are logged in the file `\Flash Disk\ScanLog.txt`. Keep in mind that if *Scan Log File* is enabled, there is a slight performance reduction when performing multiple scans since the log file is written to persistent storage.

5.10.3 Translations



The *Translations* menu allows you to define up to 10 cases, each consisting of up to 10 rules in sequential order. Only one case will be applied to a bar code and a case will only be applied if all rules specified in the case are successful—if a rule within a case fails, the entire case fails.

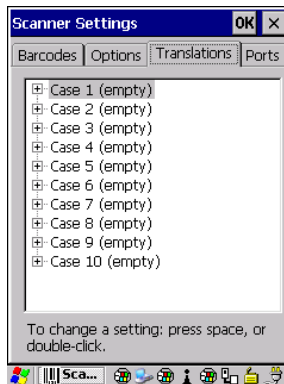

- In the *Translation* menu, tap on the **Case #** to create rules.

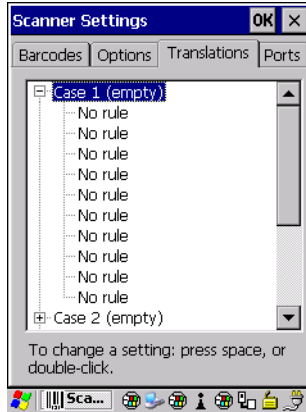

- Tap on the **No rule** drop-down menu to display the rules.

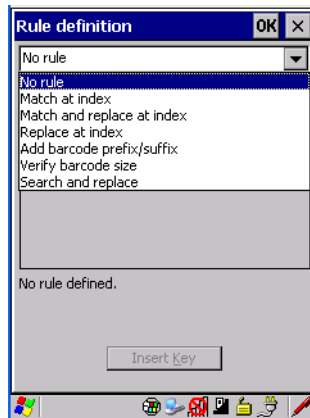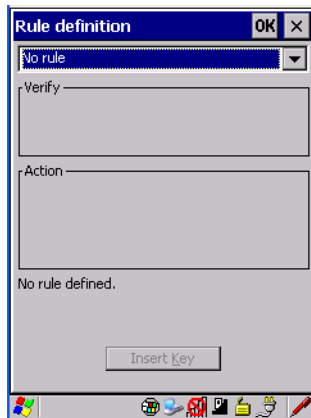

Preliminary Draft 3

When you choose a rule, an associated screen is displayed in which you can define the rule.



5.10.3.1 Case Rules

The case rules are defined as follows:

- *No rule*—ignored.
- *Search and replace*—replaces all instances of the match string. (Note that this rule cannot fail.)
- *Match at index*—matches the match string at a specified index.
- *Match and replace at index*—matches the match string at a specified index and replaces/changes it.
- *Replace at index*—replaces/changes unspecified data in a given range.
- *Add barcode prefix/suffix*—adds a global prefix or suffix.
- *Verify barcode size*—verifies the bar code size. This rule should generally be assigned first, before creating subsequent rules.




Note: Keep in mind that the effects of previously applied rules must be taken into account when creating subsequent rules. For example, if the bar code size is important, it should be checked before any rules that might change the size are applied.

Translation information about the status of each case/rule is displayed in the scan log file (see “Scan Log File” on page 140) when enabled. This is useful if a case fails, and you are trying to determine why a rule is failing.

5.10.4 Ports


Figure 5.4 Tether, Console, and Port Replicator Port Settings

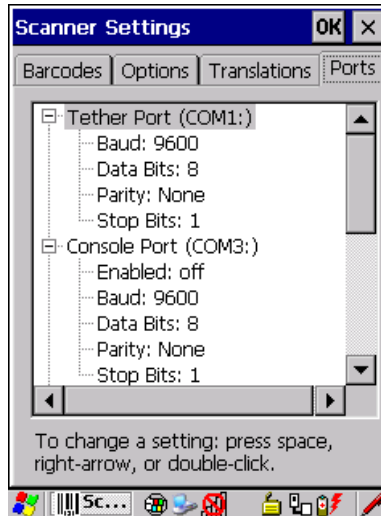

While you cannot configure the scanner, you can configure communications with a serial decoded scanner using the options in this tab.

Use these settings to ensure that the communication ports on the 7545 match the settings of the serial devices to which they are connected. If the settings do not match exactly, the devices may not function. Note that some devices can auto-detect serial port settings (such as baud rate), and in this case the 7545 will dictate the settings. Baud rates often have a direct impact on performance—they should be set as high as possible while still ensuring reliable communication.

5.10.4.1 Tether Port (COM1)

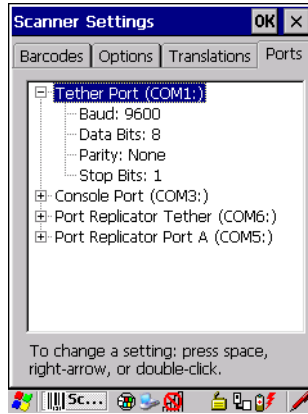


Note: RS-232 serial communication is one of the modes available on the tether port, located on the side of the 7545.

These parameters refer only to external decoded scanner communications. They have no effect if the generic serial device tether cable is plugged in.

Baud

Double-tapping on this parameter displays a pop-up window in which you can choose an appropriate rate of data transfer.

Figure 5.5 Tether Port Baud Rates

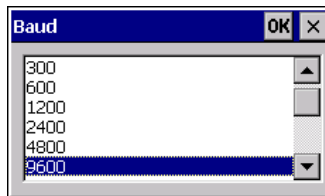


Data Bits

This parameter determines the number of data bits included in each asynchronous data byte. Most devices use 8-bit data bytes. Double-tapping on this option displays a pop-up window in which you can choose either 7 or 8 data bits.

Parity

This parameter determines the type of parity checking used on the data going through the tether port. Double-tapping on this option displays a pop-up window in which you can choose the appropriate Parity.

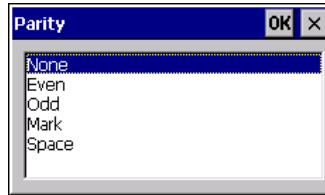


Stop Bits

This parameter specifies the number of stop bits—1, 1.5 or 2—used for asynchronous communication.

5.10.4.2 Console Port (COM3)

The console port is accessed via the docking connector on the bottom of the 7545. Only the Portable Docking Module (PDM) provides access to the console port through a DE-9 interface.

Figure 5.6 Console Port Settings

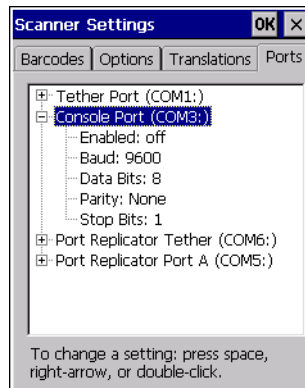

Enabled

This parameter must be set to **on** in order for the 7545 to recognize the attached device as a decoded bar code scanner.

Baud

Refer to page 144 for details.

Data Bits

Refer to page 144 for details about this parameter.

Parity

For details, refer to page 145.


Stop Bits

Refer to page 145 for details about *Stop Bits*.

5.10.4.3 Port Replicator Tether (COM6)

The port replicator tether is a duplicate tether port located on the port replicator module of the 7545 cradles.

Figure 5.7 Port Replicator Tether Settings

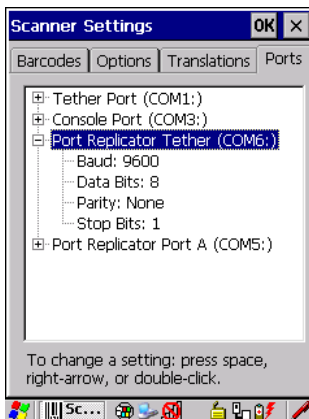

Baud

Refer to page 144 for details.

Data Bits

Refer to page 144 for details about this parameter.

Parity


For details, refer to page 145.

Stop Bits

Refer to page 145 for details about *Stop Bits*.

5.10.4.4 Port Replicator Port A (COM5)

Port Replicator Port A (COM5) is the standard RS-232 DE-9 DTE port on the 7545 port replicator module, available on certain cradle types.

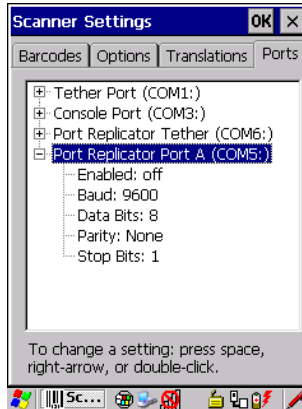

Enabled

This parameter must be set to ON in order for the 7545 to recognize the device connected to the Port Replicator 9-pin (COM5).

Baud

Refer to page 144 for details.

Data Bits

Refer to page 144 for details about this parameter.

Parity

For details, refer to page 145.

Stop Bits

Refer to page 145 for details about *Stop Bits*.

5.11 SNMP (Simple Network Management Protocol) Setup

Simple Network Management Protocol (SNMP) is the protocol used to monitor and manage devices attached to a TCP/IP network (providing they support SNMP).

SNMP uses Management Information Bases (MIBs) that define the variables an SNMP Network Management Station can access. Each product has a defined set of MIBs that determine how SNMP operates, the type of access allowed and so on.

All Psion Teklogix products support the TEKLOGIX-GENERIC-MIB—a MIB that defines some common features across Psion Teklogix products.


All devices also support MIB-II, a management information base that defines the common features of TCP/IP networks. The SNMP Agent software embedded in the 7545 product supports SNMPv1 (RFC 1157).

- In the *Control Panel*, choose the **SNMP** icon.



5.11.1 Contact

The *SNMP* dialog box is displayed.

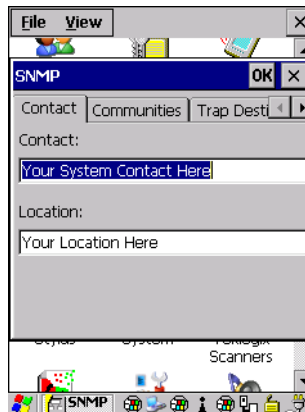


Contact

This field identifies the contact person for this managed node along with information about how to get in touch with this person. The content of this parameter is accessible through MIB-II's sysContact object.

Location

This parameter is used to identify the physical location of this node (e.g., Warehouse A: Pillar 32B). The content of this parameter is accessible through MIB-II's sysLocation object.

5.11.2 Communities

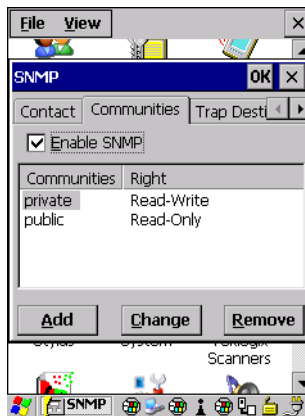

The Communities tab allows you to limit access to SNMP-managed devices to those SNMP Managers with matching “community names”, as specified by RFC 1157.

Enable SNMP

Tapping the checkbox *Enable SNMP* allows the device to respond to SNMP queries and to send Traps. After enabling this option and rebooting the device, the SNMP Agent will automatically start up. To disable this feature, remove the checkmark from the checkbox.

5.11.2.1 Adding A Community

- Choose the **Add** button to add a new ‘community’.



Name

The value assigned here is the name assigned by the network administrator to the set of devices to which this managed node belongs.

Rights

This menu allows you to specify access, that is, ‘Read-Only’ or Read-Write’

5.11.2.2 Modifying A Community Setting

To modify an existing community:

- Highlight the community you want to alter.
- Choose the **Change** button.



A *Modify Community* dialog box is displayed, listing the community you highlighted.

- Edit the **Name** and/or **Rights**, and press [ENTER] to save your changes.

5.11.2.3 Removing An Existing Community

To remove an item:


- Highlight the community you want to remove in the *Communities* tab and then choose the **Remove** button.

A *Delete Confirmation* screen is displayed.

- To remove a community, choose the **Yes** button, *or*
If you decide not to remove the community, choose the **No** button.

5.11.3 Trap Destination

A trap is an unsolicited report sent to SNMP Managers by the SNMP Agent running on the managed node. This option allows you to define where the report will be sent.

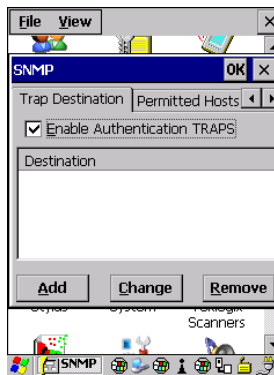

5.11.3.1 Enabling Authentication TRAPS

Enabling *Enable Authentication TRAPS* allows authorization traps to be sent when a failure is detected (e.g., an SNMP message received with a bad community name).

5.11.3.2 Adding A Destination

To add a new destination:

Preliminary Draft 3

- Choose the **Add** button.



- Type a destination in the text box provided, and press [ENTER].

5.11.3.3 Changing A Destination

To change an existing trap destination:

- Highlight the destination you want to alter in the *Trap Destination* tab, and then choose the **Change** button.

A dialog box like the one displayed when you add a destination is displayed.



- Make the changes to the destination, and press [ENTER] to save the changes.

5.11.3.4 Removing A Trap Destination

To remove a trap destination:


- In the *Trap Destination* tab, highlight the destination you want to delete.
- Choose the **Remove** button.

A *Delete Confirmation* screen is displayed.

- To remove a destination, choose the **Yes** button, or
If you decide not to remove the destination, choose the **No** button.

5.11.4 Permitted Hosts


For security reasons, the Network Administrator may want to restrict SNMP-node access to a known sub-set of SNMP Managers. This tab lists the IP addresses of all the SNMP Managers which are allowed to monitor and manage this device. If no entries are listed, the device will accept SNMP queries from any host.

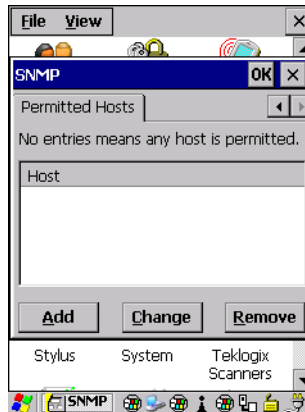

5.11.4.1 Adding A Host

To add a new host:

- Highlight the **Add** button, and press [ENTER].

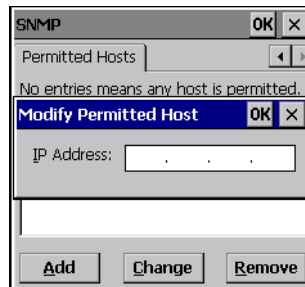

- Type a new host IP address in the text box provided, and press [ENTER].

5.11.4.2 Changing A Host

To change an existing host IP address:

- Highlight the IP address you want to alter in the *Permitted Hosts* tab, and then choose the **Change** button.

A dialog box like the one displayed when you add a host is displayed.

- Make the necessary changes, and press [ENTER].

5.12 The Storage Manager

The Storage Manager allows you to view information about the storage devices that are present in the 7545, such as SD-MMC flash cards and Compact Flash cards.




5.12.1 Formatting A Memory Card

Formatting a memory card bulk-erases it. Once a card is erased, partitions may be created in it, similarly to those on a hard drive. Memory-card devices are normally 'mounted' (made available to the system) automatically when they are inserted. They must be dismounted before they can be formatted.

To format an entire memory card:

1. Select **Start> Settings>Control Panel**.
2. In Control Panel, double-click on the **Storage Manager** icon. The Storage Manager menu opens:

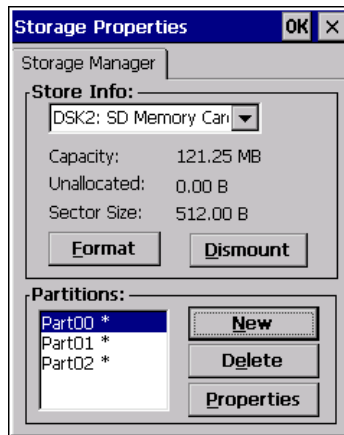

3. Select the memory card from the drop-down list.


4. Press the **Dismount** button to dismount the memory card. All partitions on the card will be dismounted.
5. Press the **Format** button to format the memory card.
All partitions and information on the card will be erased during the formatting process.

5.12.2 Creating Partitions

Once the card is formatted, new partitions can be created in it. The default is to create one partition that occupies the whole card, but a card can be divided into more than one partition if desired. Each partition appears as a separate folder in Windows Explorer.

To create new partitions:


1. Press the **New** button next to the *Partitions* list box. The Create New Partition dialog box appears:

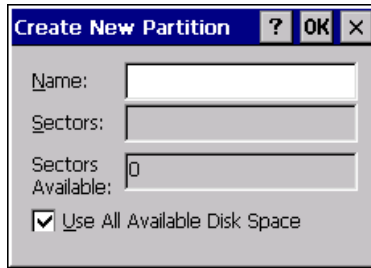

2. Type a name for the partition.
3. If more than one partition is desired, uncheck the *Use All Available Diskspace* checkbox, then specify the desired number of sectors to be used by the partition.

Preliminary Draft 3


4. Press **OK**. The new partition appears in the *Partitions* list:

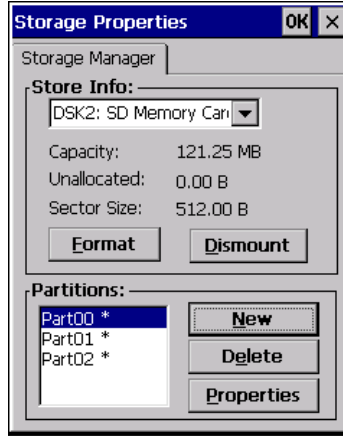

The new partition is automatically mounted. This is indicated by an asterisk (*) next to its name in the partition list. Any unallocated space on the card is indicated at the left, and additional partitions can be created in it.

5.12.3 Partition Management

Partitions can be individually dismantled, mounted, deleted, or formatted as well. These and additional tasks are available from the *Partition Properties* dialog:

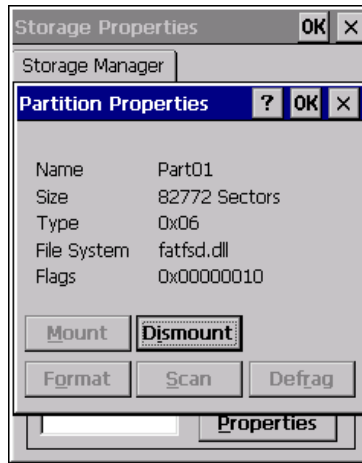

To dismantle a partition:

1. Choose the desired partition.


2. Tap the **Properties** button. The *Partition Properties* dialog appears.
3. Tap the **Dismount** button. The partition is dismounted. The asterisk disappears next to its name in the partitions list.

To delete a partition:

1. Select the desired partition.
2. Tap the **Delete** button. A warning dialog appears.
3. Tap the **OK** button. The partition is deleted.

To format a partition:

1. Choose the desired partition.
2. Tap the **Properties** button. The *Partition Properties* dialog appears.
3. Tap the **Dismount** button. The partition is dismounted. The asterisk disappears next to its name in the partitions list.
4. Tap the **Format** button. The *Format* dialog appears:

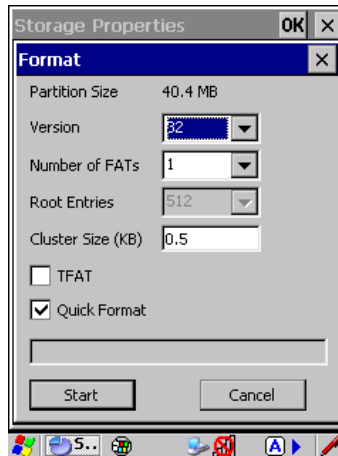

5. Choose your format options. These options include:
 - Version of file system (FAT-16, for devices holding up to 4 GB; or FAT-32, for devices containing up to 32 GB).
 - Number of FATs (File-Allocation Tables).
 - Number of entries allowed in the root directory.
 - Cluster size (.5 KB to 64 KB).

There are also two checkboxes, which govern:

Preliminary Draft 3

- Whether to use the transaction-safe FAT file system (TFAT). This file system keeps multiple copies of the file-allocation table, changing one while maintaining another as a backup.
 - Whether to perform a quick format. Quick formatting removes all reference to data in the partition without erasing the actual partition. The partition will be treated as empty, and new data will overwrite it.
6. Tap **Start**. The partition is formatted.

To mount a partition:

1. Choose the desired partition.
2. Tap the **Properties** button. The *Partition Properties* dialog appears.
3. Tap the **Mount** button. The partition is mounted. The asterisk appears next to its name in the partitions list.

The Partition Properties dialog has buttons for additional functions. Partitions can be defragmented, and their file structure can be scanned.

5.13 Teklogix Error Handling Service

Teklogix Error Handling Service is an error diagnostic tool that allows Psion Teklogix to deliver more reliable software. When an error occurs, information about that error is saved in a file which can be sent to Psion Teklogix support personnel to help diagnose the problem.


- Tap on **Start>Settings>Control Panel**. Tap on the **Teklogix Error Handling Service** icon.



On the *Status* tab, tapping in the checkbox *Enable error reporting* enables this service.

5.13.1 ErrorLogInfo


- To log an error, tap on the **ErrorLogInfo** tab.

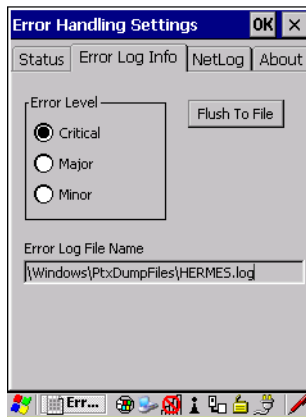

- Choose an **Error Level**, and tap on **FlushToFile** to log the information file.

5.13.2 NetLog

The NetLog option is used to log network traffic. When you tap in the checkbox to the left of *Enable NetLog Debug Capturing*, debug data is collected so that, if necessary, it can be forwarded to a Psion Teklogix technician for evaluation. You can also define where you want the data stored and the maximum size of the file.

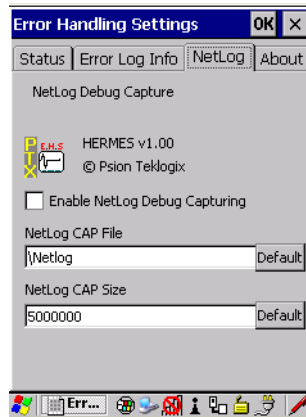

5.14 Teklogix Imagers

The Teklogix Imagers applet is used to create, modify, delete, and activate imager settings. The principle uses of the applet are to decode bar codes and to capture images. A PTSI Imager demo applet is also provided to illustrate how the imager works.


Refer to Appendix D: “Teklogix Imagers Applet” for configuration details.

To launch this applet:

- In the *Control Panel*, choose the **Teklogix Imagers** icon.



Note: This icon is only displayed when the appropriate imager is installed in your 7545.

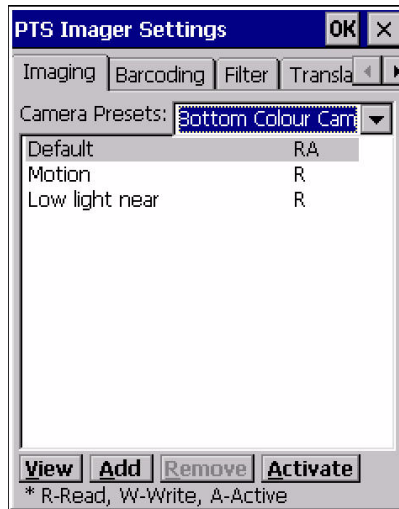


5.15 Total Recall

Total Recall is a Psion Teklogix utility developed to maintain applications and settings during a cold boot. This utility is based on a backup and restore concept. This utility is based on a backup and restore concept

- In the *Control Panel*, choose the **Total Recall** icon.




5.15.1 Creating A Backup Profile

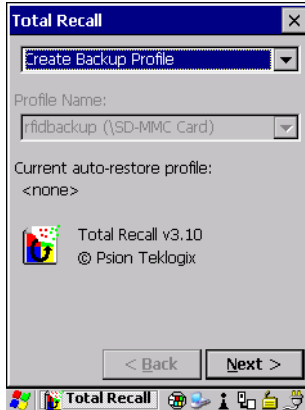

In the drop-down menu, you can choose from four options: *Create Backup Profile*, *View Selected Profile Data*, *Restore Selected Profile* and *Delete Selected Profile*. Keep in mind however that until a profile is created, the only available option is *Create Backup Profile*.

- Choose the **Next** button to begin the process.


Profile Information

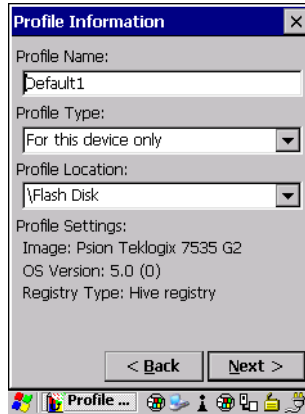

This dialog box lists the possible storage destinations for the profile file.

1. To begin, type a name for the profile in the field labelled *Profile Name*.
2. Choose the *Profile Type* you want to create:
 - For this device only*—creates a backup that is manually restored by the operator.
 - AutoRestore for this device only*—creates a profile that automatically restores itself following a restart.
 - AutoRestore for this and other devices*—creates a profile that automatically restores after resuming from a restart, but it will not contain the touchscreen calibration coordinates or the Wireless radio settings.
3. Finally, choose the *Profile Location*: \\Flash Disk.
4. Tap on the **Next** button to display the next dialog box *Add Files*.


Add Files

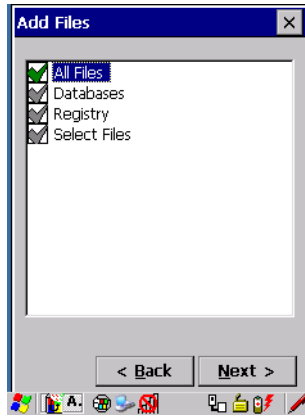

By default, *All Files* is selected so that all installed or copied files, database entries, and the Registry will be saved. You can, however, limit the backup to databases, and/or the registry only. By tapping the checkbox next to these items, you can add or remove a check mark to enable or disable the option.

The *Select Files* option allows you to select predefined file types.


- Remove the check mark next to *All Files*. You'll notice the checkbox next to *Select Files* changes to , indicating that additional options are available.
- Choose this icon next to *Select Files* to view your options.

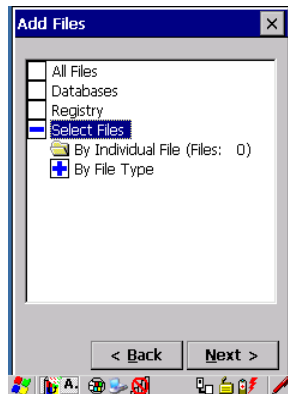

Choosing *By Individual File* displays a pop-up menu where you can tailor the list of files you want to back up.

Preliminary Draft 3

To add a file to your backup list:

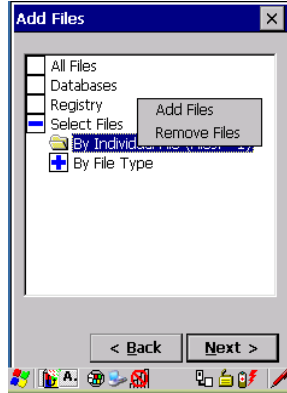


- Choose **Add Files**. Browse to and choose the files you want to add to your list.

To remove a file from your backup list:


- Choose **Remove Files**—a dialog box is displayed listing the files that will be backed up.
- Highlight the item you want to remove from the list, and tap on the **Remove** button.

Choosing *By File Type* allows you to select the file types that you want backed up.

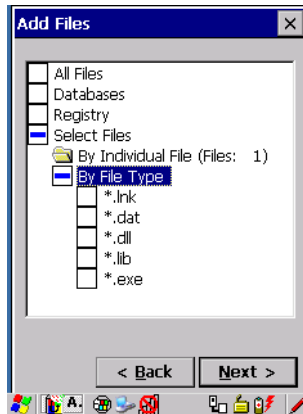


View Selections

Depending on what you have selected for inclusion in your profile, you can view a list of the selected files, databases and/or registry.

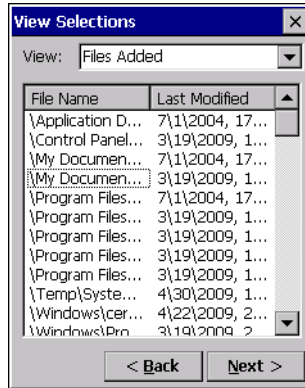

- Choose the **Next** button to perform the operation.

Perform The Operation

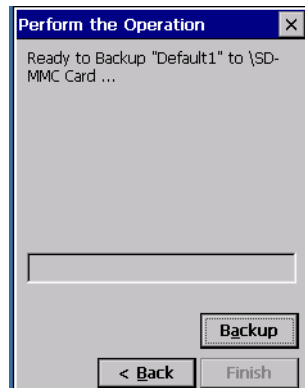

- Choose the **Backup** button to start the process, and create a profile.

5.15.2 Restoring A Profile

To manually restore a profile:

- Choose **Restore Selected Profile** from the drop-down menu, and choose the **Profile Name** displayed in the drop down box.



Note: You can also manually restore an auto restore profile located in flash or a storage device.


5.16 TweakIT Settings



This utility allows you to ‘tweak’ or adjust *Advanced* system settings (interface, network, servers, driver, and radio), *User* settings (Internet Explorer settings, font size, and docking port message), and provides a *Registry Editor*.

5.16.1 Advanced

5.16.1.1 Advanced Interface And Network

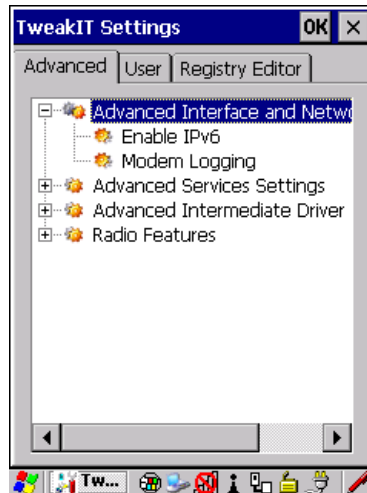


Enable IPv6

This option allows you to enable Internet Protocol specification, version 6, that has been published to use 128-bit IP address (replacing version 4).

Modem Logging

When this option is enabled, the 7545 logs AT commands (e.g., dial-out information, password string, etc.) that the administrator can monitor for debugging purposes. Modem commands are stored in: \MdmLog.txt.

5.16.1.2 Advanced Services Settings

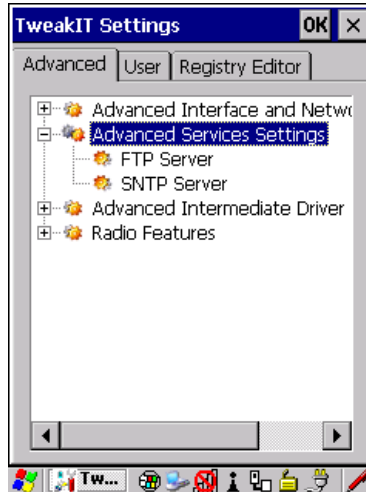

FTP Server


This option is enabled by default to allow file transfers. Keep in mind that data transfer in either direction is restricted to the Temp folder—that is, data are always loaded from the *FTP Server* to the *Temp* folder and from the *Temp* folder to the *FTP Server*.

If this option is disabled, a warm reset must be performed to accept the change.

SNTP (Simple Network Time Protocol) Server

The *SNTP Server Name* typed in this dialog box is used to synchronize 7545 time with the time server time. A warm reset must be performed once the server name as been entered.

5.16.1.3 Advanced Intermediate Driver

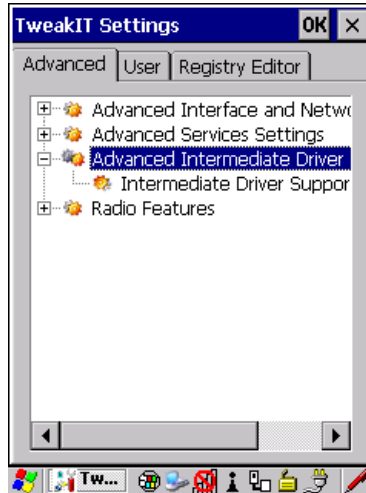


Intermediate Driver Support

The 7545 employs a custom intermediate driver that is used to indicate radio transmission and reception on its LEDs. As well, the intermediate driver is employed to support the Psion Teklogix 802.IQ v1 protocol. This TweakIt option is included to allow the driver to be disabled in cases where it interferes with third party drivers or security supplicants. By disabling the intermediate driver the Rx/Tx LEDs will no longer illuminate.



Important: If 802.IQ v1 is required, this driver must not be disabled.

5.16.1.4 Radio Features

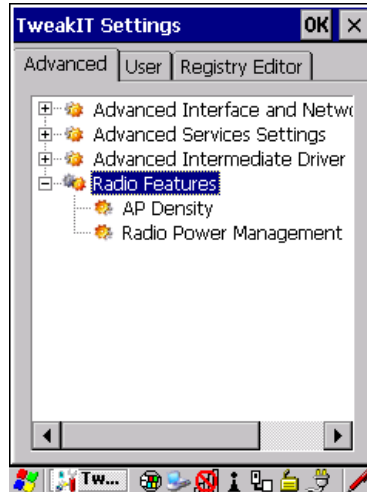

AP Density

This option allows you to determine the signal strength at which the 7545 radio will begin searching for a new Access Point (AP): High, Medium or Low. If, for example, this option is set to *High*, the radio will begin searching for a new Access Point while still at a fairly strong signal strength. Setting AP Density to *Low* will cause the radio to wait until the signal strength is significantly low before attempting to connect to another Access Point.

Depending on your site configuration—for example, the shelving, the Access Point coverage, etc.—a higher setting may improve through-put, increase and maintain signal strength, and reduce missed transmissions.


Radio Power Management

When this option is enabled, access points that support it will use *Radio Power Management* guidelines to control the client (7545) radio. Access points determine how often the 7545 radio enters sleep mode when no activity is detected to reduce power consumption on the client side. Another benefit is that when *Radio Power Management* is enabled, even when no activity is detected, the access point does not disassociate the 7545 (client).


5.16.2 User

5.16.2.1 Internet Explorer Settings

This option allows you to customize how your Internet Explorer is displayed and how the tabbing functions.

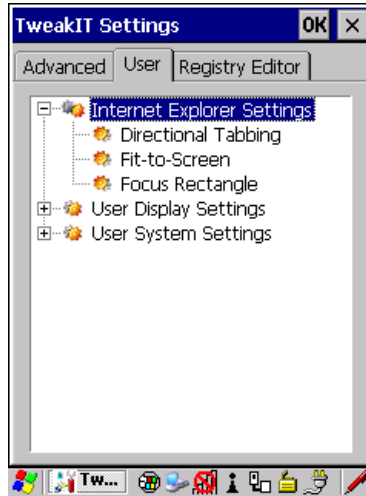


5.16.2.2 User Display Settings

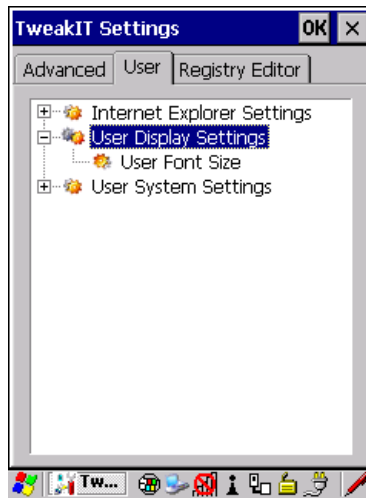

User Font Size

This option allows you to adjust the size of the font used the 7545 display: Large, Normal or Small.


5.16.2.3 User System Settings

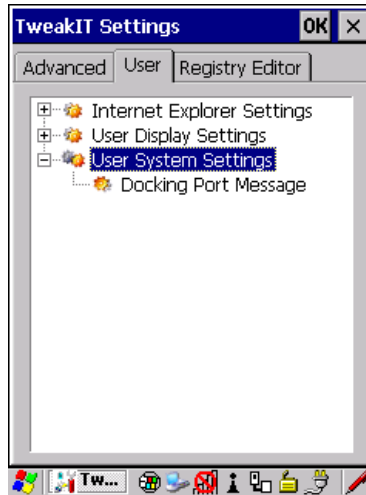

Docking Port Message

Checking this box blocks the message that normally pops up on the display when the 7545 is docked.

5.16.3 Registry Editor

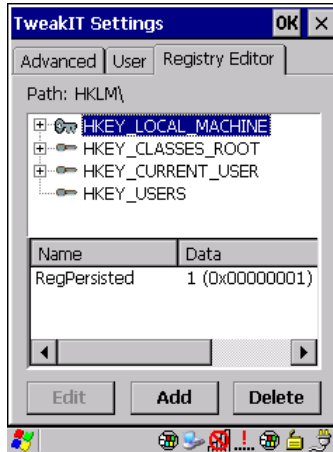

This option is reserved for senior administrators who have a strong understanding of registry keys and values. Careless registry editing can cause irreversible damage to the 7545.

SPECIFICATIONS

7

7.1 7545 Hand-Held Computer Specifications.	197
7.1.1 Hardware	197
7.1.2 Software	199
7.1.3 Approvals.	200
7.2 Murata Radio Specifications	200
7.3 Internal Scanner Port	201
7.6 Internal Scanners and Imagers	
7.6.1 SE1224HP - High Performance	

Preliminary Draft 3

7.9 HU3000 - 1900 mAh Lithium-ion Battery Pack 220

7.1 7545 Hand-Held Computer Specifications



Note: Performance specifications are nominal and subject to change without notice.

7.1.1 Hardware

Physical Dimensions

- 102mm width x 62.5mm depth x 260mm (4.0 in x 2.5 in x 10.2 in) length.
- Keypad area: 75.5mm width x 36mm (3 in x 1.4 in) depth.

Weight

- With battery 647g (22.83 oz.)
- With pistol grip add 86.4g (3.05 oz.)

User Interface

Color Touchscreen Display:	8.9 cm (3.5 in.) diagonal. 1/4 VGA 240x320 resolution. Transflective, portrait mode TFT. Automatic Backlight and Contrast control. Sunlight readable (for outdoor use). High-reliability white LED backlight (1.5 ft-L). 256K displayable colours. Passive stylus or finger operation. Integral stylus holder.
Keyboards:	Numeric. Alphanumeric. Numeric with Phone (option only in countries with GPRS availability). Ergonomically enhanced for ambidextrous, one-hand operation. Backlit, high durability hard-capped keys.

Preliminary Draft 3

Indicators And Controls: Multi-colour LEDs indicate battery status, application, and radio transmit/receive, user applications.
Internal 95dB beeper with volume control.

Power

- 7.4V @ 1900mAh Li-ion rechargeable battery.
- Intelligent fast charge.
- 8-hour battery operation (5 scans, transmit & receive/min.).
- Built-in gas gauge & performance monitor.
- Quick swap battery packs.
- Built-in fast charger (2 hour typical recharge).
- Self-guiding & latching battery pack design.
- System backup (up to 20 minutes) during battery swap.
- Adjustable battery allocation between system backup and runtime.
- 1 week real-time clock backup.

Communication

Ports:

One docking station port with:

- Power in, 15 VDC nominal, 10 VDC to 19 VDC, 3.5 A maximum
- Power out, 5 VDC +/- 5% @ 1.0 A nominal, 1.5 A peak

Environmental

Guaranteed Operating:	-10°C to +50°C (14°F to 122°F)
Temperature Range:	Long exposure to temperatures below -40°C (-40°F) may damage the screen and main battery. Prolonged exposure to temperatures above +60°C (+140°F) will damage the main battery and temperatures above +70°C (+158°F) may damage the unit.
Storage Temperature:	-25°C to +60°C (-13°F to 140°F)
Rain And Dust Resistance:	IEC 529, classification IP65.
Humidity:	5% - 95% RH non-condensing
Drop Durability:	Multiple 1.8m (6 ft.) drops or 26 drops from 1.5m (5 ft.) to concrete while powered on and configured with accessories such as WiFi radio, scanner/imager, and pistol grip. <i>Cradle shock:</i> IEC 60068-2-27: Test Ea, 300 m/s ² , 11ms, half-sine, 3 shocks in each of 6 directions. <i>Cradle vibration:</i> IEC 60068-2-64: Test Fh, Random, 3 axis, 100 min/axis; 5.0 m ² /s ³ ASD, 10 - 200 Hz; 1.0 m ² /s ³ ASD, 200 - 500 Hz.

7.1.2 Software

Processor And Memory

- XScale PXA270 @ 520 MHz Processor.
- RAM: 128MB SDRAM standard.
- Flash ROM: 64MB FLASH standard.

Operating System

- Microsoft Windows Embedded CE 5.0

7.1.3 Approvals

Safety:	IEC 60950-1
EMC:	FCC Part 15 Class B EN 55022 EN 55024 EN 301 489
Laser:	IEC 60825-1 Ed. 2.0, Class 1, Class 2 FDA 21 CFR 1040.10 1040.11 Class I, Class II
<i>Bluetooth</i> :	2.0
RF:	<i>Bluetooth</i> and 802.11b/g: EN300 328, Part 15.247
RoHS compliant:	EU Directive 2002/95/EC

7.2 Murata Radio Specifications

802.11b/g Radio: Direct Sequence Spread Spectrum (DSSS)

Form factor	Embedded surface mount module, 8.2 x 8.4 mm
Antenna port	U.FL jack
Transmit Power	802.11b/g: 50mW typical (+17 dBm)
Frequency Range	2.400 - 2.4835 GHz
Channels	This radio supports 802.11d. The radio will associate with any 802.11d compliant AP, regardless of what channel is in use.
RX Sensitivity	-86dBm typ @ 11Mbps -82dBm @ 6Mbps, -69dBm @ 54Mbps
Data Rates	802.11g: 6, 9, 12, 18, 24, 36, 48, 54Mbps 802.11b: 1, 2, 5.5, 11 Mbps
EVM	802.11b: -28 dB typ (16%) 802.11g: -29 dB typ (13%)
<i>Bluetooth</i> Co-existent	2-line hardware handshake with <i>Bluetooth</i> radio

Murata Bluetooth Radio

Form Factor	Embedded (920 kbps serial interface)
Bluetooth Version	Ver 2 compliant - features Adaptive Frequency Hopping (AFH) for better co-existence with 802.11 radio and Enhanced Data Rate (EDR) for up to 3Mbps data rate.
Antenna Type	Ceramic chip PIFA
Antenna Gain	1 dBi peak
Transmit Power	-3 dBm (0.5mW) minimum, +4 dBm (2.5mW) max
Frequency Range	2.400–2.4835 GHz
RX Sensitivity (BER<0.1%)	-80 dBm max
Data Rate	V1.2 = 732.2 kbps and 57.6 kbps asymmetric, 433.9 kbps symmetric V2.0 = 2 & 3 Mbps
802.11 Co-existent	2-line hardware handshake with 802.11 radio

7.3 Internal Scanner Port

Compatibility

1D Laser Scanners:

SE1224HP decoded, fuzzy logic, enhanced standard range

7.6.8 SE1223LR - Long Range (decoded)

Parameter	SE1223LR
Light Source	Visible Laser Diode 650 nm
Scan Rate	35 (\pm 5) scans/sec (bi-directional)
Scan Angle	23° \pm 2°
Scan Patterns	Linear
Minimum Print Contrast	Minimum 40% absolute dark/light reflectance measured at 650 nm.
Symbologies Supported	UPC/EAN, Code 128, Code 39, Code 93, I 2 of 5, Discrete 2 of 5, Codabar, MSI, UCC/EAN 128, TriOptic Code 39.
Programmable Parameters	Laser On Time, Aim Duration, Power Mode, Trigger Mode, Bi-directional Redundancy, Symbology types/lengths, Data formatting, Serial Parameters, Beeper Tone.
Ambient Light:	Artificial: 450 ft. candles (4,844 Lux). Sunlight: 8,000 ft. candles (86,112 Lux).
Power	Input Voltage: 5.0 VDC \pm 10% Input Current: 115 mA typical Standby Current: 70 μ A max.
Laser Classification	Intended for use in CDRH Class II and IEC Class 2 devices
Electrical Safety	UL, VDE, and CUL recognized component laser
Environmental	RoHS-compliant


7.6.9 SE1224HP - High Performance

Parameter	SE1224HP
Type	Laser Class 2
Light Source	Visible Laser Diode 650 nm
Scan Rate	35 (\pm 5) scans/sec (bi-directional)
Scan Angle/Field of View	42° (typical), 30° (narrow)
Scan Patterns	Linear

Preliminary Draft 3

Parameter	SE1224HP
Minimum Print Contrast	Minimum 25% absolute dark/light reflectance measured at 650 nm.
Symbologies	UPC/EAN, Code 128, UCC/EAN 128, RSS, Code 39, Code 93, I 2 of 5, Discrete 2 of 5, Codabar, MSI.
Programmable Parameters	Laser On Time, Aim Duration, Power Mode, Trigger Mode, Bi-directional Redundancy, Symbology types/lengths, Data formatting.
Ambient Light	Artificial: 450 ft. candles (4844 Lux). Sunlight: 8000 ft. candles (86112 Lux).
Laser Output Power (peak)	1.35mW

7.6.9.1 SE1224HP Decode Zones

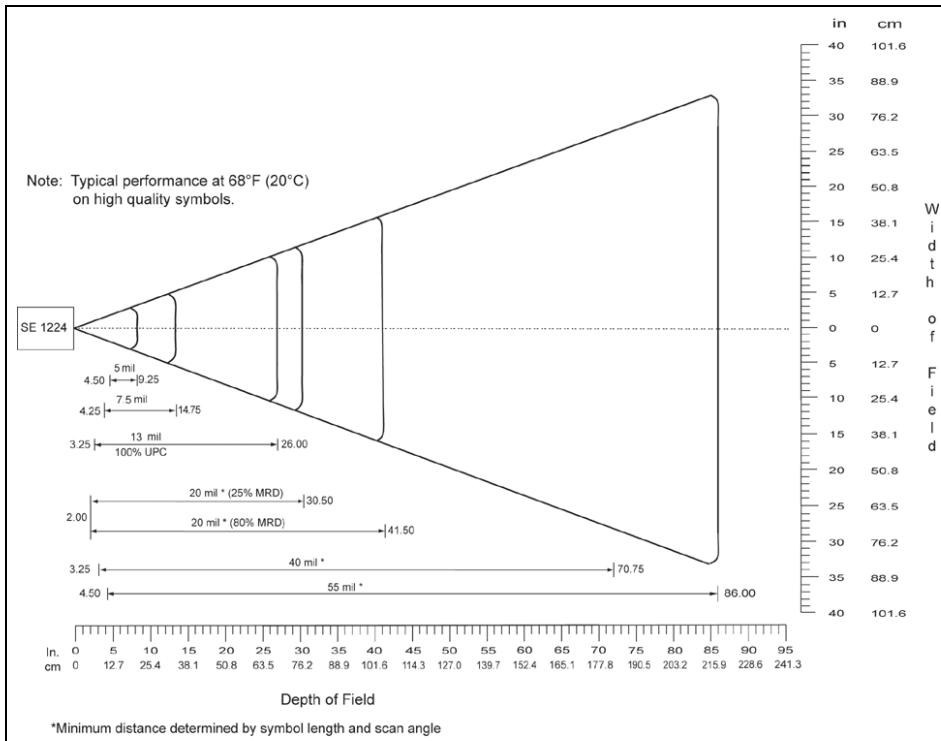

Preliminary Draft 3

APPENDIX B

SCU FOR 802.11B/G RADIO

B.1 SCU Tabs	3
B.1.1 Main	3
B.1.2 Profile.	4
B.1.3 Status	9
B.1.4 Diags	9
B.1.2.1 SCU Security Capabilities.	6
B.1.2.2 SCU EAP Types.	7
B.1.2.3 EAP Credentials	7
B.1.2.4 ThirdPartyConfig	8
B.1.5 Global.	10

Preliminary Draft 3

B.1 SCU Tabs

This appendix provides details about each tab in the Summit Client Utility (SCU). For quick, step-by-step setup instructions, refer to “Summit Client Utility (SCU) For 802.11b/g Radio” on page 28.

The following sections provide a detailed description of each of the tabs available in the SCU—*Main* (below), *Profile* (page B-4), *Status* (page B-9), *Diags* (page B-9), and *Global* (page B-10).

B.1.1 Main

The Main tab is displayed when you tap on the *Start>Programs>SCU* icon.



- **Enable/Disable Radio:** Enables or disables the radio. This is a toggle button; when the radio is enabled, this button reads *Disable Radio*, and when the radio is disabled, the button reads *Enable Radio*.
- **Active Profile:** Lists the name(s) of the active configuration profile(s). When a *profile* is chosen from the *Active Profile* drop-down menu, the settings for that profile become active.

If *ThirdPartyConfig* is selected, after the 7545 goes through a power cycle, WZC is used for configuration of the radio. See “ThirdPartyConfig” on page B-8 for details.

- **Radio Type:** Indicates the type of radio installed in the device, e.g. “ABG” when an 802.11a/b/g radio is installed.
- **Reg. Domain:** Indicates the regulatory domain (e.g. ETSI, FCC or TELEC) for which the radio is configured. “Worldwide” means that the radio can be used in any domain.
- **Status:** Indicates if the radio is associated to an access point. If this is not the case, *Status* indicates the radio status.


Preliminary Draft 3

- **Driver** and **SCU**: These fields display the version of the device driver and the SCU that are running on the 7545.
- **About SCU**: This box provides details about the SCU software.

B.1.2 Profile

The *Profile* tab allows you to define radio and security settings that are stored in the registry as part of the configuration profile.

The *profile* you create and save is listed in the *Active Profile* drop-down menu in the *Main* tab. You can define up to 20 *profiles*.

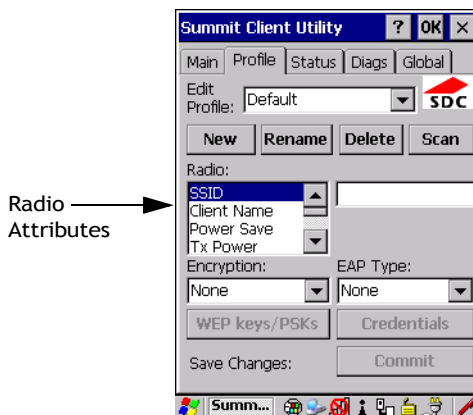

- **Edit Profile**: Used to choose the *profile* to be viewed or edited. If *ThirdPartyConfig* is chosen, after the 7545 goes through a power cycle, WZC is used for configuration of the radio.
- **New**: Allows you to create a new *profile* with default settings and assign it a name.
- **Rename**: Allows you to assign a *profile* name.
- **Delete**: Deletes the *profile* unless it is currently active.
- **Scan**: Opens a new window which displays a list of available access points with their respective SSIDs, Signal Strength (RSSI value) and Security Status. Selecting an AP returns you to the profile page and populates a new profile with the information available from the scan to simplify setting up a new profile.
- **Radio**: Lists radio attributes. These attributes can be individually chosen from this menu. When an attribute is chosen, an associated list of options is displayed where you can assign new settings or view existing settings.
- **Commit**: Saves all changes.

Preliminary Draft 3

The following table describes the options in the *Radio* attributes, *Encryption*, and *EAP Type* drop-down menus:

Table B.1 Radio, Encryption, And EAP Menus

Radio Attribute	Description	Value	Default
SSID	Service set identifier (SSID) for WLAN to which the radio connects.	Maximum of 32 characters.	None
Client Name	Name assigned to radio & 7545 into which it is installed.	Maximum of 16 characters.	None
Power Save	Power save mode for radio.	CAM: Constantly awake. Maximum: Maximum power savings. Fast: Fast power save mode.	Fast
Tx Power	Maximum transmit power.	Max: Maximum defined for current regulatory domain. Measured in mW: 50,30,10, 1.	Max
Bit Rate	Used by radio when interacting with WLAN access point.	Auto: Rate automatically negotiated with access point. Rates in Mbps: 1, 2, 5.5, 6.9 11, 12, 18, 24, 36, 48, 54.	Auto
Radio Mode	Used by 802.11g when interacting with access point.	B rates only: 1, 2, 5.5, & 11 Mbps. G rates only: 6, 9, 12, 18, 24, 36, 48, and 54 Mbps. BG rates full: All B and G rates. BG rates optimized: 1, 2, 5.5, 6, 11, 24, 36 & 54 Mbps.	BG rates optimized
Auth Type	802.11 authentication type used when associating with access point.	Open, shared-key, or LEAP (Network-EAP).	Open
EAP Type	Extensible Authentication Protocol type used for 802.1X authentication to access point.	None, LEAP, EAP-FAST, PEAP-MSCHAP – To use EAP-TLS, you must use WZC.	None

Preliminary Draft 3

Table B.1 Radio, Encryption, And EAP Menus

Radio Attribute	Description	Value	Default
Credentials	Authentication credentials for the selected EAP type. Refer to “EAP Credentials” on page B-7.	User: Username or Domain/Username (up to 64 characters). Password: up to 64 characters. For PEAP: CA Cert–CA server certificate filename.	None
Encryption	Type of encryption used to protect transmitted data.	None, Manual WEP, Auto WEP (generated during EAP authentication), WPA PSK, WPA TKIP, WPA2 PSK, WPA2 TKIP, WPA2 AES, CCKM TKIP. For Manual WEP: Up to four static WEP keys. For PSK: ASCII passphrase or hex PSK.	None

- **EAP-Type & Encryption:** Security settings. These settings allow you to enhance the security of data across the wireless LAN. Refer to “EAP Credentials” on page B-7 and ‘SCU Security Capabilities’ below, for details about these settings.

B.1.2.1 SCU Security Capabilities

The SCU provides integrated security to protect transmitted data as well as the 7545 and wireless WAN infrastructure that transmit and receive data.

A foundational element of the IEEE 802.11i WLAN security standard is IEEE 802.1X and a critical application on a mobile device is an 802.1X supplicant. This supplicant provides an interface between the radio and the operating system and supports the authentication and encryption elements required for 802.11i, also known as Wi-Fi Protected Access 2 (WPA2), as well as predecessors such as WPA and WEP. Summit software includes an integrated supplicant that supports a broad range of security capabilities, including:

- 802.1X authentication using pre-shared keys or an EAP type, required for WPA2 and WPA.
- Data encryption and decryption using WPA2 AES, WPA TKIP or WEP.

Common EAP types include:

- **EAP-TLS:** Uses the same technology as a follow-on to Secure Socket Layer (SSL). It provides strong security, but relies on client certificates for user authentication.

- **PEAP:** Provides secure user authentication by using a TLS tunnel to encrypt EAP traffic. Two different inner methods are used with PEAP:
 - EAP-MSCHAPV2, resulting in PEAP-MSCHAP: This is appropriate for use against Windows Active Directory and domains.
 - EAP-GTC, resulting in PEAP-GTC: This is for authentication with one-time passwords (OTPs) against OTP databases such as SecureID.
- **LEAP:** Is an authentication method for use with Cisco WLAN access points. LEAP does not require the use of server or client certificates. LEAP supports Windows Active Directory and domains but requires the use of strong passwords to avoid vulnerability to offline dictionary attacks.
- **EAP-FAST:** Is a successor to LEAP and does not require strong passwords to protect against offline dictionary attacks. Like LEAP, EAP-FAST does not require the use of server or client certificates and supports Windows Active Directory and domains.



Note: PEAP and EAP-TLS require the use of Windows facilities for the configuration of digital certificates.

B.1.2.2 SCU EAP Types

The following EAP types are supported by the integrated supplicant and can be configured in SCU: *PEAP-MSCHAP*, *PEAP-GTC*, *LEAP* and *EAP-FAST*. With each of these four types, if authentication credentials are not stored in the profile, you will be prompted to enter credentials the first time the radio attempts to associate to an access point that supports 802.1X (EAP).

Consider the following when configuring one of the EAP types:

- **PEAP-GTC:** SCU supports static (login) passwords only.
- **LEAP:** Strong passwords are recommended.
- **EAP-FAST:** SCU supports automatic, not manual, PAC provisioning.

EAP-TLS will work with an 802.11a/b/g radio module when *Windows Zero Config (WZC)* rather than the SCU is used to configure the type. With WZC, the native *Windows supplicant* instead of the *SCU integrated supplicant* is used.

B.1.2.3 EAP Credentials

Keep the following in mind when defining security settings:

- If the credentials specified in the profile are incorrect and that profile is used, the authentication fails without an error message; you will not be prompted to enter correct credentials.

Preliminary Draft 3

- If the credentials are not specified in the profile, when the radio tries to associate using that profile, you will be prompted to enter the credentials.
- When prompted, you can enter valid credentials, enter invalid credentials, or cancel the operation.
 - If you enter valid credentials and tap **OK**, the radio will associate and authenticate.
 - If you enter invalid credentials and tap on **OK**, the radio will associate but will not authenticate; you will be prompted again to enter credentials.
 - If you tap on **Cancel** or clear the credentials fields and tap on **OK**, the radio will not attempt to associate with that profile until you perform one of the following actions (while the profile is the active profile):
 - Cause the 7545 to go through a power cycle or suspend/resume.
 - Disable and enable the radio, or tap the **Reconnect** button on the *Diags* windows.
 - Modify the *Profile*, and tap on **Commit**.

Alternatively, you can choose another profile as the active profile and then switch back to the profile for which EAP authentication was cancelled.


B.1.2.4 ThirdPartyConfig

If you choose to configure *ThirdPartyConfig*, the SCU will work with the operating system's *Windows Zero Config* (WZC) to configure radio and security settings for the CF radio installed in the unit.


Choosing this profile means that *WZC* must be used to define the following radio and security options: *SSID*, *Auth Type*, *EAP Type*, and *Encryption*. The SCU settings for *ThirdPartyConfig* include: *Client Name*, *Power Save*, *Tx Power*, *Bit Rate*, and *Radio Mode*. These SCU settings along with SCU global settings and the *WZC* settings will be applied to the radio module.

B.1.3 Status

The *Status* tab provides status information including IP address and MAC address for the client radio, IP address and MAC address for the AP, signal strength, channel, transmit power and data rate.

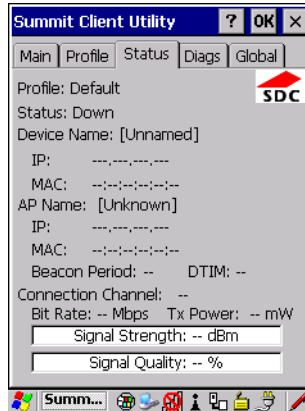

B.1.4 Diags

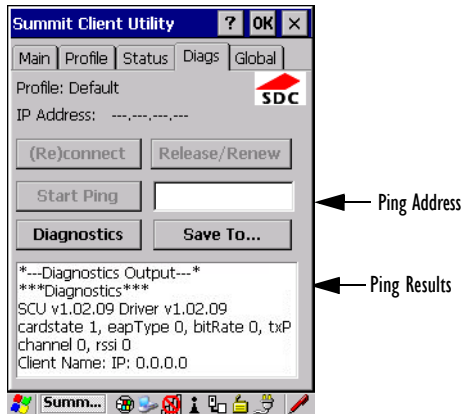

Use the *Diags* tab as a troubleshooting tool. The functions are as follows:


- **(Re)Connect:** Enables/Disables the radio, applies/reapplies current profile and tries to associate and authenticate to the wireless LAN, logging all activity in the output area at bottom of the dialog box.

Preliminary Draft 3

Global

- **Release/Renew:** Obtains a new IP address through DHCP and logs all activity in the output area.
- **Start Ping:** Starts a continuous ping to the address in the text box next to this button. This is a toggle button so when you tap on it, it changes to *Stop Ping*. Closing this window or tapping on another button also stops the ping.
- **Diagnostics:** Attempts to connect or reconnect to an AP, and provides a more detailed dump of data than if you used *(Re)connect*. The dump includes the radio state, profile settings, global settings and BSSID list of APs. The SCU is saved to a file called *_sdc_diag.txt* in the Windows directory.

B.1.5 Global

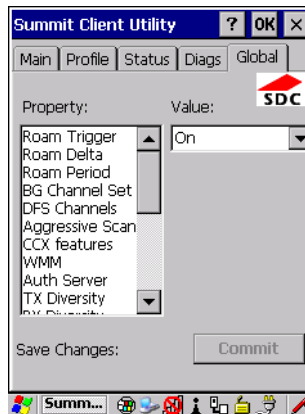

The *Global* settings tab allows you to define radio and security settings that apply to all profiles, along with settings that apply specifically to the SCU. The *Global* settings in Table B.2 can be edited in SCU.

Table B.2 Global Tab

Global Setting	Description	Value	Default
Roam Trigger	If RSSI from AP is less than roam trigger value, radio performs roam scan or probes for an AP with stronger signal.	dBm: -50, -55, -60, -65, -70, -75, Custom	-75
Roam Delta	Amount by which second AP's RSSI must exceed the moving average RSSI for the current AP before the radio will attempt to roam to a second AP.	dBm: 5, 10, 15, 20, 25, 30, 35, Custom	10
Roam Period	Following an association or roam scan (with no roam), the number of seconds the radio collects RSSI scan data before considering roaming.	Seconds: 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, 60, Custom	10
BG Channel Set	Defines the 2.4 GHz channels to be scanned when the radio is set to roam and needs to determine what APs are available.	Full (all channels) 1, 6, 11 1, 7, 13 Custom	Full
DFS Channels	Reserved	Off, On	Off
Aggressive Scan	When this setting is On and the current connection to an AP becomes unreliable, the radio scans for available APs more aggressively. Aggressive scanning complements and works in conjunction with the standard scanning that is configured through the Roam Trigger, Roam Delta, and Roam Period settings. It is recommended that Aggressive Scan is left On unless there is significant co-channel interference because of overlapping coverage from APs on the same channel.	Off, On	On
CCX features	Activates three CCX features: AP-assisted roaming, AP-specified maximum transmit power and radio management.	Optimized, Full, Off	Optimized

Preliminary Draft 3

Table B.2 Global Tab

Global Setting	Description	Value	Default
WMM	Use Wi-Fi Multimedia Extensions, also known as WMM.	On, Off	Off
TX Diversity	Defines how to handle antenna diversity when transmitting data to AP.	-Main only: Use main antenna only. -Aux only: Use auxiliary antenna only. -On: Use diversity.	Main only
RX Diversity	Defines how to handle antenna diversity when receiving data from AP.	-On-Start on Main: On startup, use main antenna. -On-Start on Aux: On startup, use auxiliary antenna. -Main only: Use main antenna only. -Aux only: Use auxiliary antenna only.	On-Start on Main
Frag Thresh	Packet is fragmented when packet size (in bytes) exceeds threshold.	Integer from 256 to 2346.	2346
RTS Thresh	Packet size above which RTS/CTS is required on link.	An integer from 0 to 2347.	2347
LED	Available only with MCF10G.	On, Off	Off
Tray Icon	Enables the System Tray icon.	Off, On	Off
Hide Passwords	On - SCU as well as EAP authentication dialog boxes hide passwords, WEP keys and other sensitive information.	On, Off	Off
Admin Password	Password that must be specified when Admin Login button is pressed.	A string of up to 64 characters.	SUMMIT

Preliminary Draft 3

Table B.2 Global Tab

Global Setting	Description	Value	Default
Auth Timeout	Specifies the number of seconds that the software will wait for an EAP authentication request to succeed or fail. If authentication credentials are specified in the active profile and the authentication times out, then association will fail. If authentication credentials are not specified in the active profile and the authentication times out, then you will be re-prompted to enter authentication credentials.	An integer from 3 to 60.	8
Certs Path	Directory where certificates for EAP authentication are stored.	Valid directory path up to 64 characters.	Dependent on device.
Ping Payload	Amount of data to be transmitted on a ping.	Bytes: 32, 64, 128, 256, 512, 1024	32
Ping Timeout ms	Amount of time in milliseconds that passes without a response before ping request is considered a failure.	Integer from 0 to 30000.	5000
Ping Delay ms	Amount of time in milliseconds between successive ping requests.	Integer from 0 to 7200000.	1000

Preliminary Draft 3

BAR CODE SETTINGS

C.1 Bar Code Settings	5
C.1.1 Scanner Options	5
C.1.2 Restoring Default Settings	6
C.2 Decoded (Internal) Scanners	7
C.2.1 Options	7
C.2.2 Decoded (Internal) Advanced Options	8
C.2.3 Decoded (Internal) 2D Scanning Options	10
C.2.4 Decoded (Internal) Data Options	11
C.2.5 Code 39	12
C.2.6 Code 128	15
C.2.7 EAN 13	16
C.2.8 EAN 8	16
C.2.9 UPC A	16
C.2.10 UPC E	17
C.2.11 UPC/EAN Shared Settings	18
C.2.12 Code 93	19
C.2.13 Codabar	19
C.2.14 MSI Plessey	20
C.2.15 Interleaved 2 of 5	21
C.2.16 Discrete 2 of 5	22
C.2.17 RSS Code (Reduced Space Symbology)	22
C.2.18 Composite	23
C.2.19 PDF-417	24
C.2.20 Micro PDF-417	24
C.3 Decoded (Intermec ISCP)	25
C.3.1 Decoded (ISCP) Options	25
C.3.2 Decoded (ISCP) Advanced Options	25
C.3.3 Code 39	26
C.3.4 Code 128	28

Preliminary Draft 3

C.3.5 EAN 13	29
C.3.6 EAN 8	30
C.3.7 UPC A	30
C.3.8 UPC E Settings	31
C.3.9 UPC/EAN Shared Settings	31
C.3.10 Code 93.	32
C.3.11 Codabar.	33
C.3.12 MSI Plessey	34
C.3.13 Code 11.	35
C.3.14 Interleaved 2 of 5.	35
C.3.15 Matrix 2 of 5	36
C.3.16 Discrete 2 of 5	37
C.3.17 Telepen	37
C.3.18 RSS Code (Reduced Space Symbology).	38
C.3.19 Composite	39
C.3.20 TLC-39.	39
C.3.21 PDF-417	40
C.3.22 Micro PDF-417.	40
C.3.23 Codablock	41
C.4 Imager	41
C.4.1 Imager Options	41
C.4.2 Imager Advanced Options.	43
C.4.3 Code 39	45
C.4.4 Code 128.	46
C.4.5 EAN 13	46
C.4.6 EAN 8	47
C.4.7 UPC A	47
C.4.8 UPC E	47
C.4.9 Code 93	48
C.4.10 Codabar.	48
C.4.11 Interleaved 2 of 5.	48
C.4.12 RSS Code (Reduced Space Symbology).	49
C.4.13 Composite	49
C.4.14 PDF-417	49
C.4.15 Micro PDF-417.	50
C.4.16 2D Data Matrix.	50

C.4.17 2D QR Code	50
C.4.18 2D Maxicode	51
C.4.19 2D Aztec	51
C.4.20 Postal: PlaNET	51
C.4.21 Postal: PostNET	52
C.4.22 Postal: Australian	52
C.4.23 Postal: Japanese	52
C.4.24 Postal: Korean	53
C.4.25 Postal: Royal	53
C.4.26 Postal: Kix	53
C.4.27 Postal: Canadian	53
C.5 Non-Decoded Scanners	54
C.5.1 Options	55
C.5.2 Code 39	55
C.5.3 Code 128	57
C.5.4 EAN 13	58
C.5.5 EAN 8	59
C.5.6 UPC A	59
C.5.7 UPC E	60
C.5.8 Codabar	61
C.5.9 Code 93	61
C.5.10 Code 11	62
C.5.11 Interleaved 2 of 5	63
C.5.12 MSI Plessey	63
C.5.13 Discrete 2 of 5	64
C.5.14 IATA 2 of 5	65

Preliminary Draft 3

C.1 Bar Code Settings


The *Teklogix Scanners* icon in the *Control Panel* provides dialog boxes in which you can tailor bar code options and choose the bar codes your scanner will recognize.



The parameters are preset with the default settings of the decoded scanner installed in the unit. For a listing of available scanners and their specifications, please refer to Chapter 7: “Specifications”.

C.1.1 Scanner Options

The drop-down menu to the right of the *Scanner* option allows you to choose configurations for one of the following scanner types, depending on what is installed in/on your hand-held: *Decoded* (internal), *Decoded* (Intermec ISCP), *Imager*, and *Non-decoded*.

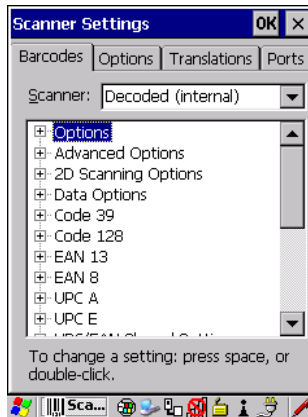

The symbologies listed change to reflect the scanner you choose and the bar codes it supports. Always defer to your bar code scanner’s programming manual when in doubt about the availability or settings for any parameter.



*Note: Your 7545 comes preconfigured from the factory for internal scanner types. The type of scanner installed can be determined from the **System** icon in the Control Panel, under the System Properties tab.*

Preliminary Draft 3



Important: To improve the decode speed and performance, enable (set to ‘on’) only those codes that are required by the application.

Keep in mind that some bar code types are only available when an internal imaging scanner is installed. All internal scanners can be configured using these dialog boxes. External, non-decoded scanners are also configured through the *Scanner Properties* dialog box.


However, external decoded scanners must be configured by scanning special configuration bar codes. In these cases, the scanner manufacturer provides programming manuals for configuration purposes.

- For the Symbol LS3408 decoded scanner, refer to the programming guide supplied with your scanner.
- For PowerScan[®] (PSC) decoded scanners, refer to the *PowerScan Programming Guide*

C.1.2 Restoring Default Settings

If you want to restore the factory defaults after making changes, the defaults can be applied to a selected parameter, sub-tree of parameters, or all scanner parameters.


- Press and hold the stylus on a symbology (e.g., Code 128) to display a pop up a menu.

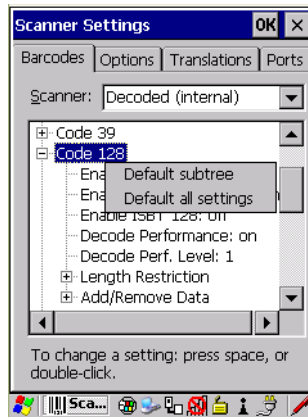

- Choose **Default subtree** to reset only the parameters in the symbology you selected, or choose **Default all settings** to reset all scanner parameters to default settings.


To reset a single parameter to its default setting:

- Press and hold the stylus on the parameter you want to reset.

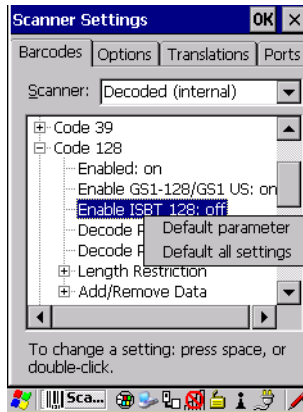

- Choose **Default parameter** to reset the parameter to the default setting.

C.2 Decoded (Internal) Scanners

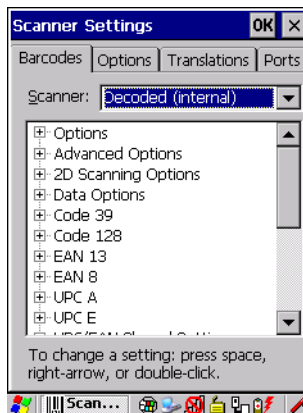

- Tap on the **Scanner** drop-down menu, and choose **Decoded (internal)**.

C.2.1 Options



Note: Some options are available only for specific scanners. Refer to the option names in this section for scanner model identification.

Dot Time (msec)

The value selected for Dot Time (msec) determines (in milliseconds) how long the targeting dot remains on before the scanner switches to a normal scan sweep. When you double-tap on this parameter, a dialog box is displayed in which you can enter a value of *0 msec*, *200 msec* or *400 msec*. A value of **0** (zero) disables the target dot.

Aim Duration

This parameter determines the total time the aiming pattern appears before the scanner laser begins sweeping. When you double-tap on this parameter, a dialog box is displayed in which you can enter a value from *0* to *30* (0 to 3 sec.). A value of **0** (zero) disables the aiming-dot.

Laser On Time

The value assigned to this parameter determines how long the laser will remain on when the scan button or trigger is pressed.

Double-tapping on this parameter displays a dialog box in which you can enter a value between *5* and *99*, each number representing 0.1 seconds.

C.2.2 Decoded (Internal) Advanced Options

Continuous Scan Mode

Setting this parameter to **on** keeps the laser on and continuously decoding as long as the scanner button is pressed and held down.

Minimum Cancel Time

The value assigned to this parameter determines the time delay before the scanner is turned off, once the scanner trigger or button is released. This gives the scanner a minimum amount of time to complete its current decode before the scan is cancelled when you quickly trigger on/off.

Power Mode

This parameter is a power-saving option. Tapping on it displays a screen listing two power mode options: *Continuous Power* and *Low Power*.

In *Continuous Power* mode, the scanner is always on, waiting for a trigger pull or a serial communication.

In *Low Power* mode, the scanner is in a standby state, drawing minimal power until a trigger pull or serial communication wakes it. Keep in mind that while this option is more suitable

for battery powered applications, there will be a slight delay while the scanner powers up to scan a bar code.

Low Power Timeout

To extend laser life, you can select the time the scanner remains active following a successful decode. The scanner wakes from low power mode when a bar code is scanned—a successful decode restores normal blinking.

This is only used if the unit's *Trigger Mode* has been changed to *Continuous On*. If the unit is used in a fixed mount this parameter might be used, but not if the unit is used as a hand-held.

When you double-tap on this parameter, a dialog box is displayed in which you can choose a value of *30 sec.*, *1 min.*, *2 min.* or *3 min.*



Note: This parameter is only used if the Trigger Mode has been set to Continuous On and the 7545 is mounted in a fixed position; otherwise, 'Low Power Timeout' is not used.

Parameter Scanning

Setting this parameter to **on** enables decoding of parameter bar codes.

Linear Security Level

This parameter allows you to select the security level appropriate for your bar code quality. There are four levels of decode security for linear code types (e.g., Code 39, Interleaved 2 of 5). Higher security levels should be selected for decreasing levels of bar code quality. As security levels increase, the scanner's decode speed decreases.

Double-tapping on this parameter displays a dialog box in which you can enter a value from **1** to **4**.

Linear security level 1 specifies that the following code types must be successfully read twice before being decoded:

Code Type	Length
Codabar	All
MSI Plessey	4 or less
D 5 of 5	8 or less
I 2 of 5	8 or less

Linear security level 2 specifies that all types of codes must be successfully read twice before being decoded.

Preliminary Draft 3

Linear security level 3 specifies that code types other than the following must be successfully read twice before being decoded. The following codes must be read three times:

Code Type	Length
MSI Plessey	4 or less
D 2 of 5	8 or less
I 2 of 5	8 or less

Linear security level 4 requires that all code types be successfully read three times before being decoded.

Bi-Direction Redundancy



Note: This parameter is only valid if a "Linear Security Level" is enabled.

When this parameter is enabled, a bar code must be successfully scanned in both directions (forward and reverse) before being decoded.

Scan Angle

This option allows you to choose from two scan angles: *Normal Angle* or *Alternate Angle*. Choosing *Normal Angle* allows the normal operation for scanning long range and short range. Choosing *Alternate Angle* widens the beam to allow scanning of long bar codes at short range but at the cost of long range scanning.

C.2.3 Decoded (Internal) 2D Scanning Options

Scanning Mode

When you double-tap on this parameter, a dialog box is displayed in which you can choose one of the following scanning modes: *Smart Raster*, *Always Raster*, *Programmable Raster*, *Slab Pattern*, *Cyclone Pattern*, or *Semi-Omni Pattern*.

Raster Height And Raster Expand Rate

These parameters determine the laser pattern's height and rate of expansion.



Note: These parameters are only used when either Programmable Raster or Always Raster is assigned to the "2D Scanning Mode" parameter. "2D Raster Height" and "2D Raster Expand Rate" are intended for very specific applications and are usually not required for normal scanning purposes.

Double-tapping on these parameters displays dialog boxes in which you can enter a value from **1** to **15**.

C.2.4 Decoded (Internal) Data Options

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

When you double-tap on this parameter, a dialog box is displayed in which you can choose a transmit code: *None*, *AIM* or *Symbol*.

Scan Data Format

This parameter allows you to change the scan data transmission format.

Double-tapping on **Scan Data Format** displays the following options from which you can choose a data format: *data (as-is)*, *data [S1]*, *data [S2]*, *data [S1][S2]*, *[P] data*, *[P] data [S1]*, *[P] data [S2]* and *[P] data [S1][S2]*.

Prefix [P], Suffix [S1] And Suffix [S2]

A prefix and/or one or two suffixes may be appended to scan data for use in data editing. When you double-tap on these parameters, dialog boxes are displayed in which you can enter a value from **0** to **255**.

Delete Char Set ECIs

Setting this parameter to **on** enables the scanner to delete any escape sequences representing Character Set ECIs (Extended Channel Interpretations [also known as GLIs]) from its buffer before transmission.

When this parameter is enabled, the scanner transmits data from PDF417 and MicroPDF417 bar codes containing Character Set ECIs, even when the ECI Protocol is disabled.

ECI Decoder

Setting this parameter to **on** enables the scanner to interpret any Extended Channel Interpretations (ECIs) supported by the scanner. This parameter has no effect on symbols that were not encoded using ECIs.

If this parameter is set to **off** and a symbol that was encoded using an ECI escape is scanned, the scanner transmits the ECI escape followed by the uninterpreted data.

C.2.5 Code 39

Enabled

Setting this parameter to **on** enables “Code 39”.

Enable Trioptic Code 39



Note: “Trioptic Code 39” and “Full ASCII” should not be enabled simultaneously. The scanner does not automatically discriminate between these two symbologies.

Trioptic Code 39 symbols always contain six characters. Setting this parameter to **on** allows this type of symbology to be recognized.

Convert To Code 32



Note: “Code 39” must be enabled in order for this parameter to function.

Setting this parameter to **on** allows the scanner to convert the bar code from “Code 39” to “Code 32”.

Code 32 Prefix




Note: “Convert to Code 32” must be enabled in order for this parameter to function.

When this parameter is enabled, the prefix character “A” is added to all “Code 32” bar codes.

Set Length L1 And Set Length L2

Lengths for “Code 39” can be set for *Any length*, *Length within a range*, *One discrete length* or *Two discrete lengths*. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on these parameters displays dialog boxes labelled *Set Code Lengths* where you can define the code length that will be decoded by your scanner.

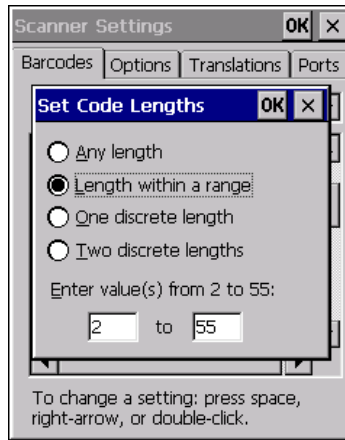

Choosing *One discrete length* allows you to decode only those codes containing a selected length. Choosing *Two discrete lengths* allows you to decode only those codes containing two selected lengths. *Length within a range* allows you to decode a code type within a specified range from **2** to **55**.

Check Digit Verification

When this parameter is enabled, the integrity of a “Code 39” symbol is checked to ensure that it complies with specified algorithms.



Note: Only those “Code 39” symbols that include a MOD 43 check digit are decoded when this parameter is enabled.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Full ASCII

If this parameter is enabled, the characters +, %, and / are used as escape characters. The combination of an escape character and the next character is converted to an equivalent ASCII character.

Decode Performance

If this parameter is enabled, one of three decode levels can be chosen in the *Decode Performance Level* parameter.

Decode Perf. Level

This parameter provides three levels of decode performance or “aggressiveness” for Code 39 symbols. Increasing the performance level reduces the amount of required bar code orientation—this is useful when scanning very long and/or truncated bar codes. Keep in mind that increased levels reduce decode security.

When you double-tap on this parameter, a dialog box is displayed in which you can enter a decode performance level of between **1** and **3**.

Length Restriction

The parameters in this sub-menu allow you to define the length of the bar codes that will be decoded using either the *Field Size* parameter or the *Minimum Size* and *Maximum Size* parameters (see below). The order of operation to either match the *Field Size* or determine if the length falls between the *Minimum Size* and *Maximum Size* is as follows:

- Strip the leading and trailing characters.
- Add the prefix and suffix characters.
- Count the number of characters remaining to either match the field size or determine if the length falls between the minimum and maximum size.

Field Size

When a value is assigned for this parameter, only bar codes that match the field size exactly can be transmitted. If a value is assigned to this parameter, a *Minimum Size* and *Maximum Size* value is not required.

Minimum Size And Maximum Size

When a value is assigned to these parameters, only bar code lengths that fall between the minimum and maximum value can be decoded. If values are assigned to these parameters, a *Field Size* value is not required.

Add/Remove Data

Prefix Char

This character, if non-zero, is added before a successfully decoded bar code. Press the key you want to insert in the dialog box attached to this parameter. The ASCII/Unicode key value of the keypress is displayed.

Suffix Char

This character, if non-zero, is added after a successfully decoded bar code. Press the key you want to insert in the dialog box attached to this parameter. The ASCII/Unicode key value of the keypress is displayed.

Strip Leading

This parameter determines the number of characters that will be removed from the beginning of the bar code before the prefix character is added.



*Note: For Code 39 bar codes, the “ALAG Strip” is performed **before** the “Strip Leading”.*

Strip Trailing

The value entered in this parameter determines the number of characters that will be removed from the end of the bar code before the suffix character is added.

C.2.6 Code 128

Enabled

Set this parameter to **on** to enable “Code 128”.

Enable GS1-128/GS1 US

Previously UPC/EAN and UCC, the GS1-128/GS1 US types of bar code include group separators and start codes.

Enable ISBT 128

To successfully scan this type of bar code, this option must be set to **on**.

Decode Performance

If this parameter is set to **on**, one of three decode levels assigned to the *Decode Performance Level* parameter can be selected.

Decode Perf. Level

This parameter provides three levels of decode performance or “aggressiveness” for Code 128 symbols. Increasing the performance level reduces the amount of required bar code orientation, allowing you to scan at an angle horizontal to the bar code. This is useful when scanning very long and/or truncated bar codes. Keep in mind that increased levels reduce decode security. There is a limitation that it can only be used with one fixed length.

When you double-tap on this parameter, a dialog box is displayed in which you can enter a decode performance level of between **1** and **3**.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.7 EAN 13

Enabled

Set this parameter to **on** to enable “EAN 13”.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.8 EAN 8

Enabled

Set this parameter to **on** to enable “EAN 8”.

EAN-8 Zero Extend

When this parameter is enabled, five leading zeros are added to decoded EAN-8 symbols, making them compatible in format to EAN-13 symbols. Disabling this parameter returns EAN-8 symbols to their normal format.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.9 UPC A

Enabled

Set this parameter to **on** to enable “UPC A”.

UPC-A, Check Digit

If you enable this parameter, the check digit is included with the decoded bar code data.

UPC-A, Preamble

When you double-tap on this parameter, a dialog box is displayed where you can choose one of three options for lead-in characters for UPC-A symbols transmitted to the host device:

System Char—system character transmitted with the data,

Country Code and System Char—both the country code (“0” for USA) and system character are transmitted with the data, or

None—no preamble is transmitted. The lead-in characters are considered part of the symbol.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.10 UPC E

Enabled UPC-E

Set this parameter to **on** to allow “UPC E” bar code scans.

Enabled UPC-E1

Set this parameter to **on** to allow “UPC-E1” (zero suppressed) bar code scans.

UPC-E And UPC-E1 Check Digit

If you enable one or both of these parameters, a check digit is included with the decoded bar code data.

UPC-E And UPC-E1 Preamble

When you double-tap on one of these parameters, a dialog box is displayed where you can choose one of three options for lead-in characters for UPC-E and UPC-E1 symbols transmitted to the host device:

System Char—system character transmitted with the data,

Country Code and System Char—both the country code (“0” for USA) and system character are transmitted with the data, or

None—no preamble is transmitted. The lead-in characters are considered part of the symbol.

Conv. UPC-E To UPC-A

This parameter converts UPC-E (zero suppressed) decoded data to UPC-A format before transmission. After conversion, data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Conv. UPC-E1 To UPC-A

This parameter converts UPC-E1 (zero suppressed) decoded data to UPC-A format before transmission. After conversion, data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.11 UPC/EAN Shared Settings

The parameters you set here are shared across all available UPC and EAN bar codes.

Enable Bookland EAN

Setting this parameter to **on** allows your scanner to recognize Bookland EAN bar codes.

Supplementals

Supplementals are additionally appended characters (2 or 5).

Double-tapping this parameter displays a list of options. If Ignore is chosen, UPC/EAN is decoded and the supplemental characters are ignored. If Decode is chosen, UPC/EAN symbols are decoded with supplementals. Autodiscriminate works in conjunction with the *Supp. Redundancy* parameter.

Supp. Redundancy

With “Autodiscriminate” selected in the *Supplementals* parameter, *Supp. Redundancy* adjusts the number of times a symbol without supplementals is decoded before transmission.

When you double-tap on this parameter, a dialog is displayed in which you can enter a value between **2** and **20**. A value of 5 or above is recommended when Autodiscriminate is selected and you are decoding a mix of UPC/EAN symbols with and without supplementals.

Security Level

This parameter controls the tolerance for decoding edge-to-edge UPC/EAN bar codes. Double-tapping on this parameter displays a dialog box in which you can choose a level from **0** to **3**. Lower values have a lower tolerance for misreads, but they also increase the time it takes to decode the bar code.

Linear Decode (Model SE2223)

Linear Decode applies to code types containing two adjacent blocks (e.g., UPC-A, EAN-8, EAN-13). When enabled (set to **on**), a bar code is transmitted only when both the left and right blocks are successfully decoded within one laser scan. This option should be enabled when bar codes are in proximity to each other.

2D UPC Half Block Stitching (Model SE2223)

Setting this parameter to **on** enables “UPC Half Block Stitching” for the SE2223 omnidirectional engine only.

C.2.12 Code 93

Enabled

Set this parameter to **on** to enable “Code 93”, or **off** to disable it.

Set Length L1 And Set Length L2

Lengths for “Code 93” can be set for *Any Length*, *Length within a range*, *One discrete length* or *Two discrete lengths*. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on this parameter displays a dialog box labelled *Set Code Lengths* where you can define the code length that will be recognized by your scanner.

Choosing *One discrete length* allows you to decode only those codes containing a selected length. Choosing *Two discrete lengths* allows you to decode only those codes containing two selected lengths. *Length within a range* allows you to decode a code type within a specified range from **4** to **55**.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.13 Codabar

Enabled

Set this parameter to **on** to enable “Codabar”.

Set Length L1 And Set Length L2

Lengths for “Codabar” can be set for *Any length*, *Length within a range*, *One discrete length* or *Two discrete lengths*. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on this parameter displays a dialog box labelled *Set Code Lengths* where you can define the code length that will be recognized by your scanner.

Choosing *One discrete length* allows you to decode only those codes containing a selected length. Choosing *Two discrete lengths* allows you to decode only those codes containing two selected lengths. *Length within a range* allows you to decode a code type within a specified range from **5** to **55**.

CLSI Editing

When enabled, this parameter strips the start and stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar symbol.



Note: Symbol length does not include start and stop characters.

NOTIS Editing

When enabled, this parameter strips the start and stop characters from decoded Codabar symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.14 MSI Plessey

Enabled

Set this parameter to **on** to enable “MSI Plessey”.

Set Length L1 And Set Length L2

Lengths for “MSI Plessey” can be set for *Any length*, *Length within a range*, *One discrete length* or *Two discrete lengths*. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on this parameter displays a dialog box labelled *Set Code Lengths* where you can define the code length that will be recognized by your scanner.

Choosing *One discrete length* allows you to decode only those codes containing a selected length. Choosing *Two discrete lengths* allows you to decode only those codes containing two selected lengths. *Length within a range* allows you to decode a code type within a specified range from **6** to **55**.

Check Digits

Double-tapping on this parameter displays a dialog box in which you can choose *One* or *Two* check digit(s).

If this parameter is set to *One*, it is assumed that the last digit is a check digit. If “Check Digits” is set to *Two*, it is assumed that the last two digits are check digits.



*Note: If **Two check digits** is selected, an MSI Plessey “Check Digit Algorithm” must also be selected. See below for details.*

Transmit Check Digit

If this parameter is enabled, the check digit is included with the bar code data.

Check Digit Algorithm

When the *Two MSI Plessey* check digits option is selected, an additional verification is required to ensure integrity. Double-tapping on this parameter displays a dialog box in which you can choose the algorithm to be used: *MOD 10/MOD 11* or *MOD 10/MOD 10*.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.15 Interleaved 2 of 5

Enabled

Set this parameter to **on** to enable “Interleaved 2 of 5”.

Set Length L1 And Set Length L2

Lengths for “Interleaved 2 of 5” can be set for *Any length*, *Length within a range*, *One discrete length* or *Two discrete lengths*. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on this parameter displays a dialog box labelled *Set Code Lengths* where you can define the code length that will be recognized by your scanner.

Choosing *One discrete length* allows you to decode only those codes containing a selected length. Choosing *Two discrete lengths* allows you to decode only those codes containing two selected lengths. *Length within a range* allows you to decode a code type within a specified range from **4** to **14**.

Check Digit Verification

When enabled, this parameter checks the integrity of an I 2 of 5 symbol to ensure it complies with a specified algorithm: either USS (Uniform Symbology Specification) or OPCC (Optical Product Code Council).

Transmit Check Digit

If this parameter is enabled, the check digit is included with the bar code data.

Convert To EAN 13

If this parameter is enabled, an I 2 of 5 bar code is converted to EAN 13.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.16 Discrete 2 of 5

Enabled

Set this parameter to **on** to enable “Discrete 2 of 5”.

Set Length L1 And Set Length L2

Lengths for “Discrete 2 of 5” can be set for *Any length*, *Length within a range*, *One discrete length* or *Two discrete lengths*. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on this parameter displays a dialog box labelled *Set Code Lengths* where you can define the code length that will be recognized by your scanner.

Choosing *One discrete length* allows you to decode only those codes containing a selected length. Choosing *Two discrete lengths* allows you to decode only those codes containing two selected lengths. *Length within a range* allows you to decode a code type within a specified range from **1** to **12**.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.17 RSS Code (Reduced Space Symbology)

Enable

Setting any of these parameters to **on** enables “2D RSS Code” scanning capability.

Enable RSS-14 (Reduced Space Symbology)

RSS-14 code can be either purely linear or split in half with one half stacked on top of the other half. Stacking the code reduces the bar code length, and providing the nominal height of the code is maintained, it can be omni-directionally scanned.

Enable RSS Limited

“RSS-Limited” is restricted, in that it can only encode 14 digit GTINs (global trade item number) that begin with either a *0* or a *1*. It is not stackable and is not designed to be read omni-directionally.

Enable RSS Expanded

“RSS Expanded” uses the same application identifiers as UCC/EAN-128 codes but it can be split into sections and stacked several rows high, reducing the length of the symbol, while increasing the capacity of data that can be stored. “RSS Expanded” code can be omni-directionally scanned.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.18 Composite



Important: To successfully read this type of bar code, the two types of symbologies included in a composite bar code must be enabled. In addition, “Center Bar Code Only” must be disabled (see page C-42).

A composite symbol includes multi-row 2D components making it compatible with linear and area CCD scanners along with linear and rastering laser scanners. The options available for this parameter represent multi-level components of a composite symbol.

Enable CC-C And Enable CC-AB

To activate these components, set the parameters to **on**.

Enable TLC-39

This composite component integrates MicroPDF417 with the linear code. Setting this parameter to **on** enables this parameter.

C.2.19 PDF-417

Enabled

Setting this parameter to **on** enables PDF-417 two dimensional (2D) coding.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.2.20 Micro PDF-417

Enabled

Setting this parameter to **on** enables “2D Micro PDF-417” bar code scanning. Micro PDF-417 is a multi-row symbology that is useful for applications requiring greater area efficiency but lower data capacity than PDF-417.

Code 128 Emulation

When this parameter is enabled, the scanner transmits data from certain Micro PDF-417 symbols as if it was encoded in Code 128 symbols.

If Code 128 Emulation is enabled, the following Micro PDF-417 symbols are transmitted with one of the following prefixes:

JC1 if the first codeword is 903-907, 912, 914, 915

JC2 if the first codeword is 908 or 909

JC0 if the first codeword is 910 or 911

If Code 128 Emulation is set to off, the Micro PDF-417 symbols are transmitted with one of the following prefixes:

JL3 if the first codeword is 903-907, 912, 914, 915

JL4 if the first codeword is 908 or 909

JL5 if the first codeword is 910 or 911


Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3 Decoded (Intermec ISCP)

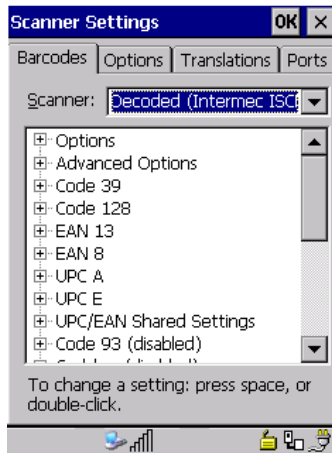

- Tap on the **Scanner** drop-down menu, and choose **Decoded (Intermec ISCP)**.

C.3.1 Decoded (ISCP) Options

Laser On Time

The value assigned to this parameter determines how long the laser will remain on when the scan button or trigger is pressed.

Double-tapping on this parameter displays a dialog box in which you can enter a value between **1** and **10** seconds.

C.3.2 Decoded (ISCP) Advanced Options

Continuous Scan Mode

Setting this parameter to **on** keeps the laser on and continuously decoding as long as the scanner button is pressed and held down.

Minimum Cancel Time

The value assigned to this parameter determines the time delay before the scanner is turned off, once the scanner trigger or button is released. This gives the scanner a minimum amount of time to complete its current decode before the scan is cancelled when you quickly trigger on/off.

Low Power Timeout

To extend laser life, you can select the time the scanner remains active following a successful decode. The scanner wakes from low power mode when a bar code is scanned—a successful decode restores normal blinking.

When you double-tap on this parameter, a dialog box is displayed in which you can choose a value of *30 sec*, *1 min*, *2 min*, or *3 min*.



*Note: This parameter is only used if the Trigger Mode has been set to **Continuous On** and the unit is mounted in a fixed position; otherwise, 'Low Power Timeout' is not used.*

Parameter Scanning

Setting this parameter to **Enabled** allows decoding of parameter bar codes.

Same Read Validate

The data is only transmitted after repeated reads give the same result. The value assigned at this parameter determines the number of reads required, from *0* to *10* times.

Same Read Timeout

Prevents the same bar code from being read more than once. The value assigned determines after what time period the scanner will timeout, from *0* to *2550 msec*.

Diff Read Timeout

Prevents unwanted reading of other bar codes on the same label. The value assigned determines after what time period the scanner will timeout, from *0* to *2550 msec*.

Add AIM ID Prefix

The *AIM ID* (Association for Automatic Identification and Mobility) is an international bar code identifier. When this parameter is enabled, the *AIM ID* is inserted at the beginning of the decoded bar code.

C.3.3 Code 39

Enable

Setting this parameter to **on** enables “Code 39”.

Full ASCII

If this parameter is enabled, the characters +, %, and / are used as escape characters. The combination of an escape character and the next character is converted to an equivalent ASCII character.

Reading Range

Determines the reading distance from which a bar code can be successfully scanned. The default setting, *Extended*, allows for increased reading distance.

Start/Stop Transmit

Setting this parameter to **on** enables the transmission of start and stop characters, which are usually not transmitted. Code 39 can start and end with either a * or a \$ character (see also the next parameter).

Accepted Start Char

This parameter allows you the option of using one of the two start/stop characters or both (\$ char, * char, \$ and * char).

Check Digit Verification

Uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted. The available options are: *Disabled*, *MOD 43 Check*, *French CIP*, or *Italian CIP*.



Note: French CIP (French pharmaceutical) is only used with bar codes containing 7 characters.

Italian CIP (Italian pharmaceutical) is also known as Code 32. It is transmitted as a standard Code 39 if checksum is not validated.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Minimum Length

Minimum lengths for the bar code can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.4 Code 128

Enabled

Setting this parameter to **on** enables “Code 128”.

GS1-128

“GS1-128” is the GS1 implementation of the Code 128 barcode specification. The former correct name was UCC/EAN-128.

GS1-128 Identifier

“GS1-128 Identifier” allows the AIM ID "]C1" for EAN 128 to be transmitted or removed. By default, this identifier is transmitted if EAN 128 is enabled.

GTIN Compliant

GTIN (global trade item number) processing transmits EAN 128 as the 14-character EAN/UCC GTIN. To use GTIN processing, you must activate the EAN 128 symbology.



Important: When EAN 128 and GTIN processing are both activated, it is not possible to read normal EAN 128 Codes.

FNC1 Conversion

“FNC1 Conversion” allows the FNC1 character to be converted to another character for applications that cannot use the default <GS> Group Separator or hex (1d).

Double-tapping on this option displays a dialog box listing the allowable range: 0 to 255.

Enable ISBT 128

To successfully scan this type of bar code (International Society of Blood Transfusion), this option must be set to **on**. If you enable this type of bar code, Code 128/EAN 128 is deactivated to avoid any confusion.

ISBT Concat Transmit

The codes are not concatenated by default. You need to choose one of the options provided for this parameter to send concatenated code. Choosing *Only Concatenated Codes* transmits only concatenated codes—single codes will not be transmitted. Choosing *Concatenated or Single* transmits single codes or concatenated codes. If only one code of a pair is read, that

code will be transmitted as a single code. If both codes in a pair are detected, they will be concatenated provided that “ISBT Concat Any Pair” (see below) is enabled.

ISBT Concat Any Pair

Enabling this parameter causes all code pairs that can be, to be concatenated even if they do not comply with Section 4.1 of the “ISBT 128 Bar Code Symbology and Application Specification for Labeling of Whole Blood and Blood Components” (June 2000, Version 1.2.1).

Reading Range

Determines the reading distance from which a bar code can be successfully scanned. The default setting, *Extended*, allows for increased reading distance.

Check Digit Verification

The available options for this parameter are *Disabled* or *French CIP*. This parameter uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted.



Note: French CIP (French pharmaceutical) is only used with bar codes containing 7 characters.

Minimum Length

Minimum lengths for the bar code can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.5 EAN 13

Enabled

Set this parameter to **on** to enable “EAN 13”.

ISBN Conversion

When this parameter (International Standard Book Number) is enabled, the first 3 characters (‘978’) are ignored and the checksum (0.9, ‘X’) is calculated on the remaining characters.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.6 EAN 8

Enabled

Set this parameter to **on** to enable “EAN 8”.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Convert To EAN 13

If this parameter is enabled, an EAN 8 bar code is converted to EAN 13.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.7 UPC A

Enabled

Set this parameter to **on** to enable “UPC A” bar code scanning recognition.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Transmit Number System

If this parameter is enabled, the number system digit is transmitted with the decoded bar code data.

Convert To EAN 13

If this parameter is enabled, a UPC A bar code is converted to EAN 13.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.8 UPC E Settings

Enabled

Set this parameter to **on** to enable “UPC E”.

Enable UPC-E1

Set this parameter to **on** to allow “UPC-E1” (zero suppressed) bar code scans.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Transmit Number System

If this parameter is enabled, the number system digit is transmitted with the decoded bar code data.

Convert To UPC-A

This parameter converts UPC E (zero suppressed) decoded data to UPC A format before transmission. After conversion, data follows UPC A format and is affected by UPC A programming selections (e.g. Check Digit).

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.9 UPC/EAN Shared Settings

The setting assigned to the “Addendum” parameter associated with this option is shared across all UPC and EAN bar codes.

Addendum

An addendum is a separate bar code, supplementary to the main bar code. This parameter provides two options: *Not Required but Transmitted if Read* or *Required and Transmitted*.

- Double-tap on **Addendum** to display a dialog box listing your options.
- Highlight an item, and tap on **OK**.

When “Addendum” is set to *Not Required but Transmitted if Read*, the scanner searches for an addendum and if one exists, appends it to the main bar code. When the parameter is set to *Required and Transmitted*, the scanner does not accept the main bar code without an addendum.

Addendum Add-on 2 And Addendum Add-on 5

Enabling these parameters sets the length of the addendum bar code to either 2 or 5 characters.

Addendum Security

If you tap on “Addendum Security”, a dialog box is displayed in which you can define the security level of add-on 2 or add-on 5 with a value from 0 to 100. As security levels increase, the scanner decode speed decreases.

GTIN Compliant

GTIN (global trade item number) processing transmits EAN 128 as the 14-character EAN/UCC GTIN. To use GTIN processing, you must activate the EAN 128 symbology.



Important: When EAN 128 and GTIN processing are both activated, it is not possible to read normal EAN 128 Codes.

Reading Range

This parameter determines the reading distance from which a bar code can be successfully scanned. The default setting, *Extended*, allows for increased reading distance.

C.3.10 Code 93

Enabled

Set this parameter to **on** to enable “Code 93”.

Minimum Length

Minimum lengths for the bar code can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.11 Codabar

Enabled

Set this parameter to **on** to enable “Codabar”.

Start/Stop Transmit

Codabar can use the following sets of characters as start and stop characters:

a, b, c, d

A, B, C, D

a, b, c, d, /, t, n, *, e

DC1, DC2, DC3, DC4

Thus, when a set is chosen, the first and last digits of a Codabar message must be one of those characters and the body of the message should not contain these characters. Setting this parameter to *Not Transmitted* strips the start and stop characters from this bar code.

CLSI Library System

When enabled, spaces are inserted after characters 1, 5, 10 in the 14-character label (used in the USA by libraries using the CLSI system).

Check Digit Verification

When enabled, this parameter checks the integrity of a symbol to ensure it complies with a specified algorithm—either USS (Uniform Symbology Specification) or OPCC (Optical Product Code Council).

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Set Length L1, Set Length L2, And Set Length L3

Lengths for “Codabar” can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on these parameters displays dialog boxes where you can define the code length that will be recognized by your scanner.

Length Mode

You can choose to set L1 as *Minimum Length* or L1,L2,L3 as *Fixed Length*.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.12 MSI Plessey

Enabled

Set this parameter to **on** to enable “MSI”.

Enable Plessey

Set this parameter to **on** to enable “Plessey”.

Check Digit Verification

The available options for this parameter are MOD 10 Check and Double MOD 10 Check. This parameter uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Plessey Transmit Check Digit

If the check digit is to be transmitted with the Plessey data, this parameter must be enabled.

Minimum Length

Minimum lengths for the bar code can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Plessey Minimum Length

Minimum lengths for the Plessey bar code can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.13 Code 11

Enabled

Set this parameter to **on** to enable “Code 11”.

Check Digit Verification

The available options for this parameter are *MOD 10 Check* and *Double MOD 10 Check*. This parameter uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Minimum Length

Minimum lengths for the bar code can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.14 Interleaved 2 of 5

Enabled

Set this parameter to **on** to enable “Interleaved 2 of 5”.

Reading Range

This parameter determines the reading distance from which a bar code can be successfully scanned. The default setting, *Extended*, allows for increased reading distance.

Check Digit Verification

The available options for this parameter are *Disabled*, *MOD 10 Check* and *French CIP*. “Check Digit Verification” uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted.



Note: French CIP (French pharmaceutical) is only used with bar codes containing 7 characters.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Set Length L1, Set Length L2, And Set Length L3

Lengths for “Interleaved 2 of 5” can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on these parameters displays dialog boxes where you can define the code length that will be recognized by your scanner.

Length Mode

You can chose to set L1 as *Minimum Length* or L1,L2,L3 as *Fixed Length*.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.15 Matrix 2 of 5

Enabled

Set this parameter to **on** to enable “Matrix 2 of 5”.

Minimum Length

Minimum lengths for the bar code can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.16 Discrete 2 of 5

Enabled

Set this parameter to **on** to enable “Discrete 2 of 5”.

Standard 2 of 5 Format

This parameter allows you to choose a standard format – either *Identicon* (6 start/stop bars) or *Computer Identics* (4 start/stop bars).

Check Digit Verification

The available options for this parameter are *Disabled* and *MOD 10 Check*. “Check Digit Verification” uses the specified algorithm of the option you've chosen to ensure the integrity of the symbol data before transmitting. If the data does not contain that algorithm, the data is not transmitted.

Transmit Check Digit

If the check digit is to be transmitted with the data, this parameter must be enabled.

Set Length L1, Set Length L2, And Set Length L3

Lengths for “Discrete 2 of 5” can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Double-tapping on these parameters displays dialog boxes where you can define the code length that will be recognized by your scanner.

Length Mode

You can chose to set L1 as *Minimum Length* or L1,L2,L3 as *Fixed Length*.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.17 Telepen

Enabled

Set this parameter to **on** to enable “Telepen”.

Format

This parameter allows you to set the bar code character format to either *ASCII* or *Numeric*.

Minimum Length

Minimum lengths for the bar code can be set from 0 to 255. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s).

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.18 RSS Code (Reduced Space Symbology)

Enable

Setting this parameter to **on** enables “RSS Code” scanning capability.

Enable RSS-14

RSS-14 code can be either purely linear or split in half with one half stacked on top of the other half. Stacking the code reduces the bar code length, and providing the nominal height of the code is maintained, it can be omni-directionally scanned.

Enable RSS Limited

“RSS-Limited” is restricted, in that it can only encode 14 digit GTINs (global trade item numbers) that begin with either 0 or 1. It is not stackable and is not designed to be read omni-directionally.

Enable RSS Expanded

“RSS Expanded” uses the same application identifiers as UCC/EAN-128 codes but they can be split into sections and stacked several rows high, reducing the length of the symbol, while increasing the capacity of data that can be stored. “RSS Expanded” code can be omni-directionally scanned.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.19 Composite



Important: *To successfully read this type of bar code, the two types of symbologies included in a composite bar code must be enabled. In addition, “Center Bar Code Only” must be disabled (see page C-42).*

A composite symbol includes multi-row 2D components making it compatible with linear and area CCD scanners along with linear and rastering laser scanners.

The options available for this parameter represent multi-level components of a composite symbol.

Enable CC-C And Enable CC-AB

To activate these components, set these parameters to **on**.

Linear Transmission Only

When *Linear Transmission Only* is enabled, only the linear code portion of the composite bar code is transmitted when scanned.

UPC-EAN Composite Message

This option allows you to choose how UPC-EAN shared bar codes are transmitted: *Always Linked*, *Never Linked* or *Auto-discriminate*.

C.3.20 TLC-39

Enabled

This composite component integrates MicroPDF417 with the linear Code 39 symbol. Setting this parameter to **on** enables this parameter.

Linear Transmission Only

When *Linear Transmission Only* is enabled, only the linear portion of the composite bar code is transmitted when scanned.

Security Level

This parameter is used to differentiate between TLC-39 and standard Code 39. Tapping on *Security Level* displays a dialog box in which you can assign a value from 0 to 100. The higher the value assigned, the lower the decode rate.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.21 PDF-417

Enabled

Set this parameter to **on** to enable “2D PDF-417”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.22 Micro PDF-417

Enabled

Set this parameter to **on** to enable “2D Micro PDF-417”.

Code 128 Emulation

When this parameter is enabled, the scanner transmits data from certain Micro PDF-417 symbols as if it was encoded in Code 128 symbols.

If Code 128 Emulation is enabled, the following Micro PDF-417 symbols are transmitted with one of the following prefixes:

]C1 if the first codeword is 903-907, 912, 914, 915

]C2 if the first codeword is 908 or 909

]C0 if the first codeword is 910 or 911

If Code 128 Emulation is set to **off**, the Micro PDF-417 symbols are transmitted with one of the following prefixes:

]L3 if the first codeword is 903-907, 912, 914, 915

]L4 if the first codeword is 908 or 909

]L5 if the first codeword is 910 or 911

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.3.23 Codablock

Enable Codablock A

Set this parameter to **on** to enable “Codablock type A”.

Enable Codablock F

Set this parameter to **on** to enable “Codablock type F”.


Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4 Imager

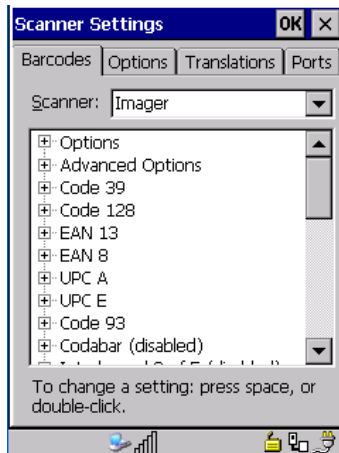

- Tap on the **Scanner** drop-down menu, and choose **Imager**.

C.4.1 Imager Options

TekImager Enabled

Setting this option to **on** enables the imager installed in your hand-held.

Continuous Scan Mode

Setting this parameter to **on** keeps image capture active and continuously decoding as long as the scanner button is pressed and held down.

Center Barcode Only



Note: This parameter must be disabled when reading Composite bar codes.

When more than one bar code is visible in a single snap shot, this parameter allows you to specify that only the centre image within the imager framing marker be read. When this parameter is set to **on**, the target dot is pointed at the centre image and only that image is returned.

Max Number Barcodes

Specifies the maximum number of bar codes the imager attempts to decode in an image. A maximum of 6 bar codes can be decoded at one time.

Barcodes Must Decode

This parameter specifies the minimum number of bar codes that the imager must decode in order to report success.



Note: This number must be less than the number of bar codes assigned to Max Number Barcodes. The driver validates and reassigns the value if necessary.

Window Width

“Window Width” determines the width of the captured image in pixels.



Note: The driver will validate and reassign the value assigned to this parameter, if necessary; the driver will also use the Window Width value to horizontally center the image in the field of view.

Window Height

This parameter determines the height of the captured image in pixels.



Note: The driver will validate and reassign the value assigned to this parameter, if necessary; the driver will also use Window Height value to vertically center the image in the field of view.

Dot Time (msec)

The value selected for “Dot Time (msec)” determines (in milliseconds) how long the targeting dot remains on before the scanner begins capturing images. When you double-tap on this parameter, a dialog box is displayed in which you can enter a value of between 0 and 3000. A value of 0 disables the target dot.

C.4.2 Imager Advanced Options



Important: *Do not adjust the advanced options without first consulting Psion Teklogix technical support.*

Factory Defaults On Reboot

The value assigned to this parameter determines whether or not the driver will restore the factory defaults to the imager device on the next reboot.



Note: The driver will default the imager device on a ‘clean’ reset, regardless of the value of this parameter.

Min Scan Duration

This parameter defines the minimum amount of time in seconds that the imager will scan when the trigger is pressed and held down without successful decode.



Note: The actual scan duration when the trigger is pressed relies on the value assigned to “Captures Per HW Trigger”, below.

Captures Per HW Trigger

The value assigned to this parameter determines the number of captures the imager device will take while the imager's internal hardware trigger is held down.



Note: This parameter, together with “Min Scan Duration”, determines the actual scan duration. When the scan trigger is pressed and held down, the driver starts a timer based on the value of “Min Scan Duration” and also sends a command to emulate the hardware trigger. When completed, if the time has not yet expired, it will send another command to the imager device, forcing the imager to flash again using the value assigned to “Captures Per HW Trigger”.

Auto Exposure



Important: *This parameter value should only be changed by qualified Psion Teklogix personnel. It should be left at the default value: on.*

Setting this parameter to **on** allows the imager to make automatic gain, integration and illumination adjustments based on ambient light before capturing the bar code. If the adjustment is insufficient, further adjustments are made automatically before another image is captured.

Fast Converge



Note: *“Auto Exposure” must be set to **on** in order for this parameter to function. Keep in mind that while this parameter can improve imager performance, “Fast Converge” increases battery power consumption.*

Setting this parameter to **on** speeds the “Auto Exposure” process. It allows the imager to rapidly snap a number of bar code capture attempts while finding ideal values for gain, integration and illumination.

Max Gain, Max Integration And Max Illumination



Important: *These parameter values should only be changed by qualified Psion Teklogix personnel.*

These parameters represent internal values used by the 2D imager. The “Auto Exposure” parameter automatically adjusts the *Max Gain*, *Max Integration* and *Max Illumination* parameters to produce the best bar code read. Keep in mind that “Auto Exposure” must be set to **on** in order for these parameter values to be automatically adjusted.

Double-tapping on any of these parameters displays an associated dialog box in which an allowable range is displayed: *Max Gain* – 357 to 7920, *Max Integration* – 0 to 65535, *Max Illumination* – 0 to 7.

Decoder Timeout

The decoder is a set of algorithms that examine the image and attempt to find the bar codes, and then turn the pixels into data that the computer can use—this process takes time. “Decoder Timeout” limits the amount of time the decoder will spend attempting to decode an image, and forces it to stop and grab a new image, which will probably be easier to decode.



Note: When decoding multiple bar codes in one image, the value assigned to 'Decoder Timeout' should be increased to 200ms/extra bar code after the first.

Adaptive Windowing

“Adaptive Windowing” is an advanced technique used to speed up bar code recognition in certain applications. This parameter automatically reduces the size of the window to the user-programmed window size when it successfully decodes (which reduces decode time the next time it is used), but increases it to the full size window on a failed decode.



Note: This feature assumes that you have reached an understanding about how the device operates in your application, and that, after a learning period, operators will get used to using the imager in one particular way. It also assumes that a trained operator will usually only have near miss scenarios.

Constant Illumination

“Constant Illumination” is used to reduce the intrusiveness of the device’s illumination on the observer. Instead of the illumination turning on and off every time the device attempts a decode (2-4 times per second), the illumination stays on from the time the trigger is pulled until a decode is successful. This feature is useful in low light environments, since it will also reduce the distraction that the illumination can have on nearby co-workers.

C.4.3 Code 39

Enabled

Set this parameter to **on** to enable “Code 39”.

Full ASCII

If this parameter is enabled, the characters +, %, and / are used as escape characters. The combination of an escape character and the next character is converted to an equivalent ASCII character.

Check Digit Verification

When this parameter is enabled, the integrity of a “Code 39” symbol is checked to ensure that it complies with specified algorithms.



Note: Only those “Code 39” symbols that include a MOD 43 check digit are decoded when this parameter is enabled.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.4 Code 128

Enabled

Set this parameter to **on** to enable “Code 128.”

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.5 EAN 13

Enabled

Set this parameter to **on** to enable “EAN 13”.

Addendum

An addendum is a separate bar code, supplementary to the main bar code. This parameter provides three options: *Disabled*, *Optional* and *Required*. Depending on the value chosen for this parameter, an addendum is recognized or ignored.

- Double-tap on **Addendum** to display a dialog box listing your options.
- Highlight an item, and tap on **OK**.

When “Addendum” is set to *Disabled*, the scanner does not recognize an addendum. If this parameter is set to *Optional*, the scanner searches for an addendum and if one exists, appends it to the main bar code. When the parameter is set to *Required*, the scanner does not accept the main bar code without an addendum.



Note: Setting “Addendum” to ‘Optional’ reduces performance. It should only be chosen if at least some of the bar codes being read have addendums.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.6 EAN 8

Enabled

Set this parameter to **on** to enable “EAN 8”.

Addendum

Refer to “Addendum” on page 46.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.7 UPC A

Enabled

Set this parameter to **on** to enable “UPC A”.

Addendum

Refer to “Addendum” on page 46.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.8 UPC E

Enabled

Set this parameter to **on** to enable “UPC E”.

Addendum

Refer to “Addendum” on page 46.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.9 Code 93

Enabled

Set this parameter to **on** to enable “Code 93”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.10 Codabar

Enabled

Set this parameter to **on** to enable “Codabar”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.11 Interleaved 2 of 5

Enabled

Set this parameter to **on** to enable “Interleaved 2 of 5”.

Check Digit Verification

When enabled, this parameter checks the integrity of an I 2 of 5 symbol to ensure it complies with a specified algorithm – either USS (Uniform Symbology Specification) or OPCC (Optical Product Code Council).

Include Check

If this parameter is enabled, the check digit is transmitted along with the I 2 of 5 symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.12 RSS Code (Reduced Space Symbology)

Enable

Setting this parameter to *on* enables “RSS Code” scanning capability.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.13 Composite

A composite symbol includes multi-row 2D components making it compatible with linear and area CCD scanners along with linear and rastering laser scanners.

Enabled

Set this parameter to **on** to enable “Composite” bar code scanner.



Important: *To successfully read this type of bar code, the two types of symbologies included in the composite must be enabled. In addition, “Center Barcode Only” must be disabled (see page C-42).*

C.4.14 PDF-417

Enabled

Setting this parameter to **on** enables PDF-417 two dimensional (2D) coding.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.15 Micro PDF-417

Enabled

Setting this parameter to *on* enables “Micro PDF-417” bar code scanning. Micro PDF-417 is a multi-row symbology that is useful for applications requiring greater area efficiency but lower data capacity than PDF-417.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.16 2D Data Matrix

Enabled

Set this parameter to **on** to enable “2D Data Matrix”.

Inverse Video Mode

Enabling this parameter allows the imager to read inverse bar codes—white symbols presented on a black background.

Rectangular

Enabling this parameter allows the imager to recognize rectangular (as opposed to square) symbols.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.17 2D QR Code

Enabled

Set this parameter to **on** to enable “2D QR Code”.

Inverse Video Mode

Enabling this parameter allows the imager to read inverse bar codes—white symbols presented on a black background.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.18 2D Maxicode

Enabled

Set this parameter to **on** to enable “2D Maxicode”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.19 2D Aztec

Enabled

Set this parameter to **on** to enable “Aztec”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.20 Postal: PlaNET

Enabled

Set this parameter to **on** to enable “Postal: PlaNET”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.21 Postal: PostNET

Enabled

Set this parameter to **on** to enable “Postal: PostNET”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.22 Postal: Australian

Enabled

Set this parameter to **on** to enable “Postal: Australian”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.23 Postal: Japanese

Enabled

Set this parameter to **on** to enable “Postal: Japanese”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.24 **Postal: Korean**

Enabled

Set this parameter to **on** to enable “Postal: Korean”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.25 **Postal: Royal**

Enabled

Set this parameter to **on** to enable “Postal: Royal”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.26 **Postal: Kix**

Enabled

Set this parameter to **on** to enable “Postal: Kix”.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.4.27 **Postal: Canadian**

Enabled

Set this parameter to **on** to enable “Postal: Canadian”.

Length Restriction


Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5 Non-Decoded Scanners

Figure C.1 Non-Decoded Scanner Options

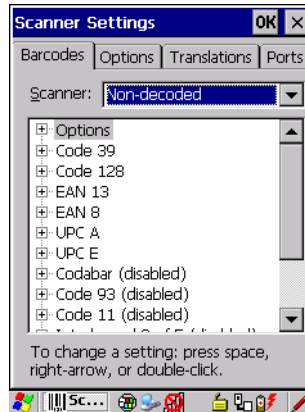

- Tap on the **Scanner** drop-down menu, and choose *Non-decoded*.

All the available bar code symbologies for this type of scanner can be selected in this tab.

A ‘plus’ sign (+) to the left of the menu item indicates that a sub-menu of parameters is attached.

- Tap the stylus on the + sign to display the sub-menu.
- To change a parameter value, double-tap on the parameter. If you need to type a value, a dialog box is displayed in which you can type a new value. If you need to change a yes or no value, double-tapping on the parameter toggles between yes and no.

If you’re using the keyboard:

- Highlight the bar code you want to work with, and press the [RIGHT] arrow key to display the sub-menu.
- Use the [UP] and [DOWN] arrow keys to highlight a parameter.
- To change a parameter value, press [SPACE] or the [RIGHT] arrow key. If a field requires text entry, a text box is displayed in which you can enter the appropriate value.

C.5.1 Options

- Tap the stylus on the + sign next to *Options* to display these parameters.

Dot Time (msec)

The value selected for “Dot Time (msec)” determines (in milliseconds) how long the targeting dot remains on before the scanner switches to a normal scan sweep. When you double-tap on this parameter, a dialog box is displayed in which you can enter a value from 0 to 3000. A value of 0 (zero) disables the target dot.

Short Code

When enabled, this parameter allows scanning of short 1 2 of 5 bar codes (2 characters). When disabled, these short bar codes are rejected.

Enabling “Short Code” may reduce the robustness of the decoding since the hand-held must decode more potential bar codes; it is therefore not recommended for general-purpose bar codes with 4 or more characters.

Verify

The value entered for this parameter determines the number of correct additional decodes required after the initial decode, prior to a bar code being accepted. Higher values significantly increase the time it takes to decode a bar code but also improve the reliability of the decoded bar code.

Security

This parameter controls the tolerance for decoding edge-to-edge bar codes (Code 93, Code 128, UPC/EAN). Lower values have a lower tolerance for misreads, but they also increase the time it takes to decode the bar code. The default value of 30 is generally a good compromise setting.

C.5.2 Code 39

Enabled

Set this parameter to **on** to enable “Code 39” or **off** to disable it.

Full ASCII

If this parameter is enabled, the characters +, %, and / are used as escape characters. The combination of an escape character and the next character is converted to an equivalent ASCII character.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

AIAG Strip

If this parameter is enabled, the AIAG data identifier is removed from each decoded Code 39 label. The data identifier occurs in the first position next to the Code 39 start character. It can be a single alphabetic character or a series of numeric digits followed by an alphabetic character. This identifier defines the general category or specific use of the data contained in the rest of the bar code.



Note: If your unit is operating with the Psion Teklogix TESS application, this parameter should not be used in conjunction with the TESS AIAG feature. This is because the hand-held performs the strip function before it processes the data through the AIAG feature; if the prefix is stripped, the data is not identified as AIAG.

Error Accept

If the “Err Accept” and “AIAG Strip” parameters are enabled, all label data without an AIAG identifier character is accepted. If the “Err Accept” parameter is disabled and the “AIAG Strip” parameter is enabled, the label data is not accepted.

MOD Checks

This parameter allows you to choose the check digit calculated: *MOD 43 Check*, *MOD 10 Check* or *None*.

- Double-tap on **MOD Checks** to display your options.
- Tap on a check digit to highlight it, and tap on **OK**.

If you choose *None*, a check is not executed.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.3 Code 128

Enabled

Set this parameter to **on** to enable “Code 128” or **off** to disable it.

Include Sym

Setting “Include Sym” to **on** causes the group separator(s) and start code contained in this type of bar code to be displayed on the screen.



Note: This option is available only when ‘EAN/UCC 128’ is selected.

Variations

When using Code 128, you can choose the bar code variation the scanner will recognize. The options available are Standard, UCC 128 and EAN/UCC 128.

- Double-tap on **Variations** to display a dialog box listing your options.
- Tap on a variation to highlight it, and then tap on **OK**.

If you choose *None*, a check is not executed.

Standard

Enable *Standard* if “Code 128” is desired.

UCC 128

UCC 128 is a variation of “Code 128”.

EAN/UCC 128

To successfully scan this type of bar code, “EAN/UCC 128” must be enabled. “EAN/UCC” bar codes include group separators and start codes.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.4 EAN 13

Enabled

Set this parameter to **on** to enable “EAN 13” or **off** to disable it.

Enable Bookland EAN

Setting this parameter to **on** allows your scanner to recognize Bookland EAN bar codes.

Include Country

If this parameter is enabled, the country code is included with the decoded bar code data.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Addendum



Important: Before “Addendum” can take effect, the “Short Code” parameter (see page C-55) must be enabled.

An addendum is a separate bar code, supplementary to the main bar code. This parameter provides three options: Disabled, Optional and Required. Depending on the value chosen for this parameter, an addendum is recognized or ignored.

- Double-tap on **Addendum** to display a dialog box listing your options.
- Highlight an item, and tap on **OK**.

When “Addendum” is set to *Disabled* the scanner does not recognize an addendum. If this parameter is set to *Optional* the scanner searches for an addendum and if one exists, appends it to the main bar code. When the parameter is set to *Required* the scanner does not accept the main bar code without an addendum.



Note: Setting Addendum to Optional will reduce performance. This value should only be used if some bar codes actually have addendums.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.5 EAN 8

Enabled

Set this parameter to **on** to enable “EAN 8” or **off** to disable it.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Addendum



***Important:** Before “Addendum” can take effect, the “Short Code” parameter (see page C-55) must be enabled.*

See “Addendum” on page C-58.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.6 UPC A

Enabled

Set this parameter to **on** to enable “UPC A”.

Include Number Sys

If this parameter is enabled, the number system digit is included with the decoded bar code data.

Include Check

If this parameter is enabled, the check digit will be included with the decoded bar code data.

Addendum



Important: Before “Addendum” can take effect, the “Short Code” parameter (see page C-55) must be enabled.

Refer to “Addendum” on page C-58.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.7 UPC E

Enabled

Set this parameter to **on** to enable “UPC E”.

Convert to UPC-A

Setting this parameter to **on** results in a non-standard decoding that returns 12 digits from the 6 digit UPC E bar code.

Include Number Sys

If this parameter is enabled, the number system digit is included with the decoded bar code data.

Include Check

When enabled, the check digit is included with the decoded bar code data.

Addendum



Important: Before “Addendum” can take effect, the “Short Code” parameter (see page C-55) must be enabled.

Refer to “Addendum” on page C-58.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.8 Codabar

Enabled

Set this parameter to **on** to enable “Codabar” or **off** to disable it.

Strip Start/Stop Chars

Codabar uses the characters A, B, C, and D as start and stop characters. Thus, the first and last digits of a Codabar message must be A, B, C, or D, and the body of the message should not contain these characters. Setting this parameter to **on** strips the start and stop characters from this bar code.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.9 Code 93

Enabled

Set this parameter to **on** to enable “Code 93”.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.10 Code 11

Enabled

Set this parameter to **on** to enable “Code 11”.

Include Check

If “Include Check” is enabled, the check digit is included with the decoded bar code data.

Check Digits

This parameter can be set to None, One Check Digit or Two Check Digits.

- Double-tap on this parameter to display a dialog box listing your options.
- Highlight the check digit you want to use, and tap on **OK**.

If this parameter set to *One Check Digit*, it is assumed that the last digit is a check digit.

If this parameter is set to *Two Check Digits*, it is assumed that the last two digits are check digits.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.11 Interleaved 2 of 5

Enabled

Set this parameter to **on** to enable “Interleaved 2 of 5”.

MOD 10 Check

If this parameter is enabled, the “MOD 10” check digit is calculated. This calculation is the same as the Code 39 MOD 10 check digit.

ITF Check

If this parameter is enabled, the ITF-14/16 MOD 10 check digit is calculated.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.12 MSI Plessey

Enabled

Set this parameter to **on** to enable “MSI Plessey”.

One Check Digit

If this parameter is enabled, it is assumed that the last digit is a check digit.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.13 Discrete 2 of 5

Enabled

Set this parameter to **on** to enable “Discrete 2 of 5”.

MOD 10 Check

If this parameter is enabled, the MOD 10 check digit is calculated. This calculation is the same as the Code 39 MOD 10 check digit.

ITF Check

If this parameter is enabled, the ITF-14/16 MOD 10 check digit is calculated.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

C.5.14 IATA 2 of 5

Enabled

Set this parameter to **on** to enable “IATA 2 of 5”.

MOD 10 Check

If this parameter is enabled, the MOD 10 check digit is calculated.

ITF Check

If this parameter is enabled, the ITF-14/16 MOD 10 check digit is calculated.

Include Check

If this parameter is enabled, the check digit is included with the decoded bar code data.

Transmit Code ID Char

A code ID character identifies the scanned bar code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

Length Restriction

Refer to “Length Restriction” on page C-14 for details.

Add/Remove Data

Refer to “Add/Remove Data” on page C-14 for details.

Preliminary Draft 3

Preliminary Draft 3