





QCT-7000/QCT-7200 Network Interface Unit User's Guide

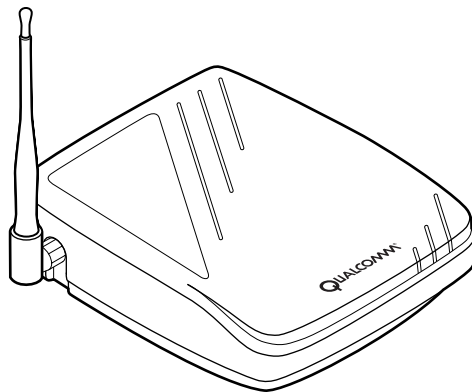

QUALCOMM[®]

QUALCOMM Incorporated
6455 Lusk Boulevard, San Diego, California 92121-2779
<http://www.qualcomm.com/cdma>





QUALCOMM reserves the right to make changes in technical and product specifications without prior notice.

The Products/Equipment described in the attached documentation are manufactured under one or more of the following U.S. Patents:

4,658,096,	4,901,307,	5,056,109,	5,099,204,	5,101,501,	5,103,459,
5,107,225,	5,109,390,	5,193,094,	5,228,054,	5,257,283,	5,265,119,
5,267,261,	5,267,262,	5,280,472,	5,283,536,	5,289,527,	5,307,405,
5,309,474,	5,337,338,	5,339,046,	5,341,456,	5,383,219,	5,392,287,
5,396,516,	D356,560,	5,408,697,	5,414,728,	5,414,796,	5,416,797,
5,426,392,	5,437,055,	D361,065,	5,442,322,	5,442,627,	5,452,473,
5,461,639,	5,469,115,	5,469,471,	5,471,497,	5,475,870,	5,479,475,
5,483,696,	5,485,486,	5,487,175,	5,490,165,	5,497,395,	5,499,280,
5,504,773,	5,506,865,	5,509,015,	5,509,035,	5,511,067,	5,511,073,
5,513,176,	5,515,177,	5,517,323,	5,519,761,	5,528,593,	5,530,928,
5,533,011,	5,535,239,	5,539,531,	5,544,196,	5,544,223,	5,546,459,
5,548,812,	5,559,881,	5,559,865,	5,561,618,	5,564,083,	5,566,000,
5,566,206,	5,566,357,	5,568,483,	5,574,773,	5,574,987,	D375,740,
5,576,662,	5,577,022,	5,577,265,	D375,937,	5,588,043,	D376,804,
5,589,756,	5,590,069,	5,590,406,	5,590,408,	5,592,548,	5,594,718,
5,596,570,	5,600,754,	5,602,834,	5,602,833,	5,603,096,	5,604,730,
5,604,459,	5,604,730,	5,608,722,	5,614,806,	5,617,060,	5,621,752,
5,621,784,	5,621,853,	5,625,876,	5,627,857,	5,629,955,	5,629,975,
5,638,412,	5,640,414,	5,642,398,	5,644,591,	5,644,596,	5,646,991,
5,652,814,	5,654,979,	5,655,220,	5,657,420,	5,659,569,	5,663,807,

Other patents pending.

QUALCOMM and DIGITAL by QUALCOMM are registered trademarks and QCT-7000/QCT-7200 and PureVoice are trademarks of QUALCOMM Incorporated. Other product and brand names may be trademarks or registered trademarks of their respective owners.

Important Information

FCC/IC Notice

This computer peripheral complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation. This receiver complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Caution

The user is cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the warranty and user's authority to operate the equipment.

Warning

Use only QUALCOMM-approved accessories with QUALCOMM phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone. The use of any other type will invalidate the warranty and may be hazardous.


Customer Service


Your service provider's customer support department should be able to answer all of your questions. If they are unable to assist you, then please call 619-651-4028 or toll-free (USA) at 800-349-4478 for QUALCOMM Customer Service.

Copyright © 1999 QUALCOMM Incorporated. All rights reserved.

Printed in the United States of America.

80-67736-1 Rev. X1




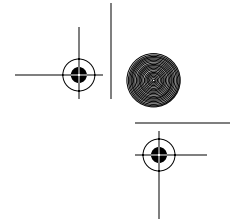

QUICK START: CONNECTING UNIT

① Connect your phone to the Network Interface Unit (NIU).

- Slide connector panel cover (not shown) off back of NIU.
- Plug your telephone connector into one of the telephone jacks on the NIU. Be sure the phone is set for touchtone dialing. (See the "Uses of Your NIU" section.)
- Plug the other end of the connector into your touchtone telephone.

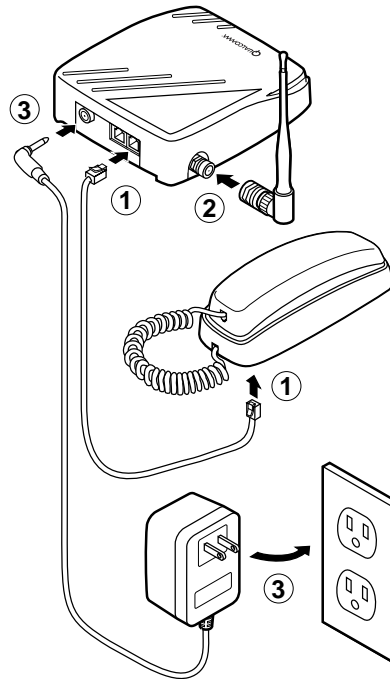

② Connect the antenna.



- Align the nut on the antenna with the thread on the NIU.
- Thread the antenna onto the NIU's antenna connector and hand-tighten.
- Position the antenna vertically for optimal reception.


③ Attach the power source.

- Insert the small plug on the AC adaptor into the DC jack on the back of the NIU.
- Plug the AC adaptor into any available AC wall outlet.

Make a call


- Lift the handset.
- Listen for a dial tone. (If dial tone is not present, see the "Troubleshooting" section.)
- Press the appropriate digit keys to dial the desired phone number.
- Replace the handset in the cradle to end the call.

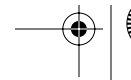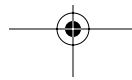


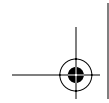

QUICK START: USING FEATURES

Task	Dialing Code	Page
Dialing a speed dial number	<speed dial>* Note: <speed dial> = 1–20	8
Storing a speed dial number	#10<speed dial location> <phone number># Notes: <speed dial location> = 1–20 Enter a zero when storing locations 1 through 9; for example, 01 or 03.	8
Storing a hotline number	#20<phone number>#	10
Canceling a hotline number	#200#	10
Setting an occasional alarm	#16<hhmm># Note: <hhmm> = time in hours and minutes based on a 24-hour clock format.	10
Canceling an occasional alarm	#17<hhmm>#	11
Setting a standing alarm	#19<hhmm>#	11
Canceling a standing alarm	#190#	11
Voice mail retrieval	99* (reserved speed-dial number if supported by your service provider)	13
Making a data call	#3282<phone number>#	15
Making a fax call	#329<phone number>#	15
Resetting to default values	#9190 0000#	18

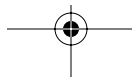

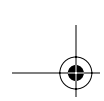



IMPORTANT SAFETY INFORMATION


When using your Network Interface Unit (NIU), follow these safety precautions to reduce the risk of fire, electrical shock, and injury.



Caution

- Never spill liquid onto the NIU. Do not use it near water (a bathtub, sink, wet basement, or swimming pool) or during an electrical storm.
- Do not use the NIU to report a gas leak if you are in the vicinity of the gas leak.
- Do not overload wall outlets and extension cords. This can result in risk of fire or electric shock.
- Never push objects of any kind through slots in the casing. They could contact dangerous voltage points or short out parts, resulting in risk of fire or electric shock.
- Slots and other openings in the NIU are provided for ventilation. To protect it from overheating, do not block or cover these openings. Do not place the product on a rug, sofa, or similar surface that could obstruct these openings.
- Do not place the NIU near or over a radiator or other heat source.
- Use caution when handling a damaged or leaking battery. Do not dispose of batteries in a fire, as they may explode.
- Do not open or mutilate the batteries. Use only proper QUALCOMM charging accessories. Unapproved charging equipment may cause batteries to explode or leak corrosive electrolyte.



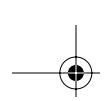

- Dispose of batteries in accordance with local codes. In many areas the disposal of batteries in household or business trash receptacles may be prohibited. You can help preserve our environment by returning unwanted batteries to the nearest qualified recycling center.
- The NIU emits radio frequency (RF) energy. While no health risks have been shown to be caused by this energy, maintain at least 20 cm (8 inches) between the user and the antenna during normal operation.


QUALCOMM-Approved Accessories


Use only the AC adaptor, battery, and antenna supplied or approved by QUALCOMM. Unauthorized power supplies, batteries, antennas, modifications, or attachments could violate local regulations, damage your equipment, and void your warranty.

Repair

Do not disassemble this product. Take it to a qualified service technician under the following conditions:


- If the NIU does not operate normally when used in accordance with the operating instructions.
- If liquid was spilled into the NIU or it was exposed to rain.
- If the NIU has been physically damaged.






Contents


- Quick Start: Connecting Unit iii
- Quick Start: Using Features iv
- Important Safety Information v
- Introduction 1
 - NIU Package Contents 2
 - Parts of the NIU 3
 - Optional Equipment 5
- Uses of Your NIU 6
 - Connecting equipment directly to the NIU 6
 - Connecting a single phone 6
 - Connecting additional telephone devices 7
 - Connecting devices in other rooms 7
- Using Basic Features 8
 - Making a call 8
 - Speed dialing 8
 - Storing a speed-dial number 8
 - Dialing a speed-dial number 9
 - Canceling a speed-dial number 9
 - Hotline phone number 9
 - Storing a hotline number 10
 - Canceling the stored hotline number 10
 - User-programmable alarms 10
 - Occasional alarms 10
 - Standing alarms 11
- Using Network Services 12
 - Call forwarding 12
 - Call waiting 12
 - Three-way calling 12
 - Initiating a three-way call 13
 - Ending a three-way call 13
 - Voice mail 13
 - Caller ID 13
 - Data features 14
 - Connecting data equipment 14
 - Making a data call 15
 - Making a fax call 15
 - Receiving a data call or fax call 15





- Using Advanced Features..... 17
 - Customizing features 17
 - Adjusting earpiece volume 17
 - Adjusting send time 17
 - Checking signal strength 17
 - Resetting defaults..... 18
 - Call Restriction..... 18
 - Call restriction levels 18
 - Setting the call restriction password 19
 - Changing the call restriction password 19
 - Setting the call restriction level 19
 - Storing a restriction override number 21
 - Blocked numbers 21
- Connecting Accessories 23
 - Connecting the internal battery to the NIU 23
 - Connecting the external BBPS to the NIU 24
 - Connecting the panel antenna to the NIU 24
- References 25
 - Specifications 25
 - QCT-7000 25
 - QCT-7200 25
 - QCT-7000/QCT-QCT-7200 25
 - Tested modems 26
- Troubleshooting 27
- Guidelines for Safe and Efficient Use
 - Local laws and regulations 29
 - Background 29
 - Exposure to radio frequency energy 29
 - For best performance 30
 - Antenna care 30
 - Cleaning 30
 - Electronic devices 30
 - Pacemakers 31
 - Hearing aids 31
 - Other medical devices 31
 - Vehicles 31
 - Posted facilities..... 31
 - Children 32
 - Blasting areas 32
 - Potentially explosive areas 32
 - Standards 32
 - Customer Service 33
- Index 35




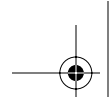


INTRODUCTION


QUALCOMM appreciates your business and is pleased that you have selected the QCT-7000/QCT-7200 Network Interface Unit (NIU). This easy-to-use, dependable wireless local loop terminal offers superior voice quality, advanced features, and caller privacy using QUALCOMM's advanced code division multiple access (CDMA) technology. It can operate multiple extensions of touchtone phones, modems, and fax machines on a single phone line. The QCT-7000/QCT-7200 also provides the following features:

- Support of custom calling options:
 - Call forwarding
 - Call waiting
 - Three-way calling
 - Caller ID presentation
 - Voice mail
- 20 speed-dial numbers
- Advanced call restriction with customizable restriction levels
- Six occasional (one-time) alarms and one standing alarm
- Support of 8K QCELP, 8K EVRC, or 13 kbps PureVoice™ Vocoder
- Desktop and wall-mount options
- Optional internal battery backup power supply with on/off switch







NIU Package Contents

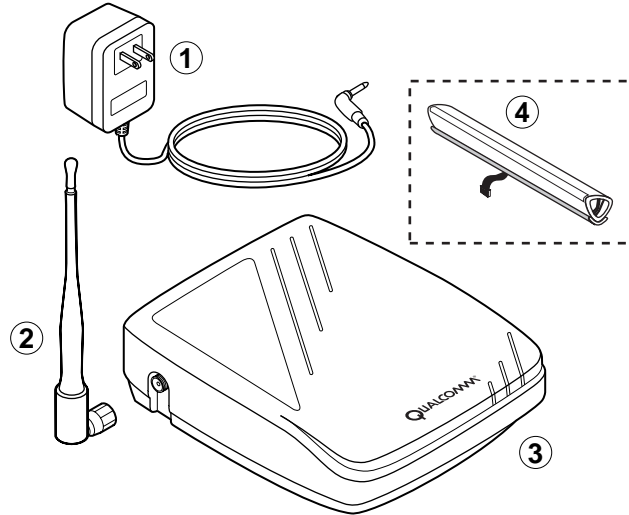


- | | |
|-----------------------------|---|
| ① AC adaptor | Provides power for the NIU. |
| ② Dipole antenna | Transmits and receives radio frequency signals. (Use it in the upright position.) |
| ③ NIU | QCT-7000/QCT-7200 Network Interface Unit. |
| ④ Optional internal battery | Provides temporary backup power in the event of a power outage. |

Not shown above:
User guide
Warranty card

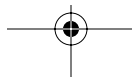

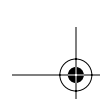

Parts of the NIU

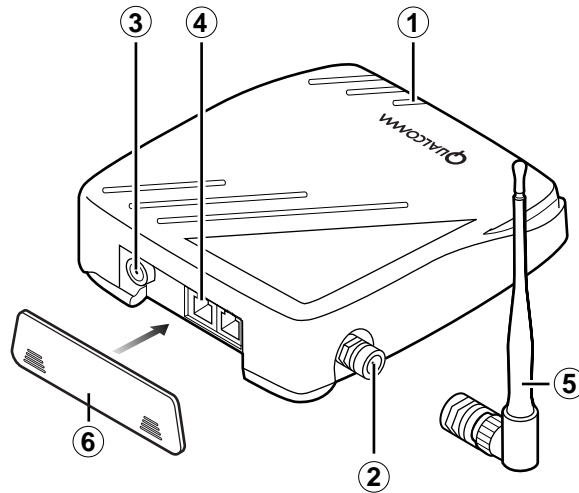

- ① Power light

When illuminated green or blue, indicates power is on.

When flashing green or blue, indicates NIU is operating from internal battery.

When flashing red, indicates NIU is operating from internal battery and battery power is low.



When illuminated red, indicates internal battery is charging.
- ② Antenna connection


Connects the dipole antenna or panel antenna cable to the NIU.
- ③ DC jack

Connects the AC adaptor to the NIU.
- ④ Telephone jacks (2)

Connect multiple devices (such as touchtone telephones, answering machine, fax machine, or modems) to the NIU simultaneously, up to a maximum total of 5 REN B (see pages 6 and 30).
- ⑤ Dipole antenna

Transmits and receives radio frequency signals. (Use it in the upright position.)

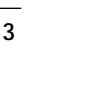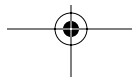

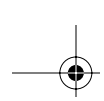

⑥ Connector panel cover

Covers the telephone jacks and DC jack.

On/off switch (shown on page 21)

Disables the automatic battery backup power source.

The NIU's power light will not be illuminated when the switch is set to the off (O) position, although the battery will still charge normally while the AC adaptor is plugged into a wall outlet.

NOTE



When taking the NIU out of service for an extended period of time, move the switch to the off (O) position. This avoids deeply discharging the battery and damaging its ability to retain a charge.

Not shown:
Wall mounting slots


Mate with a standard wall mounting plate or fit over the heads of screws placed in the wall.

NOTE

Mounting screws must be securely driven into wood or concrete/brick with appropriate anchors.

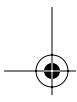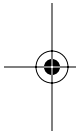

Optional Equipment

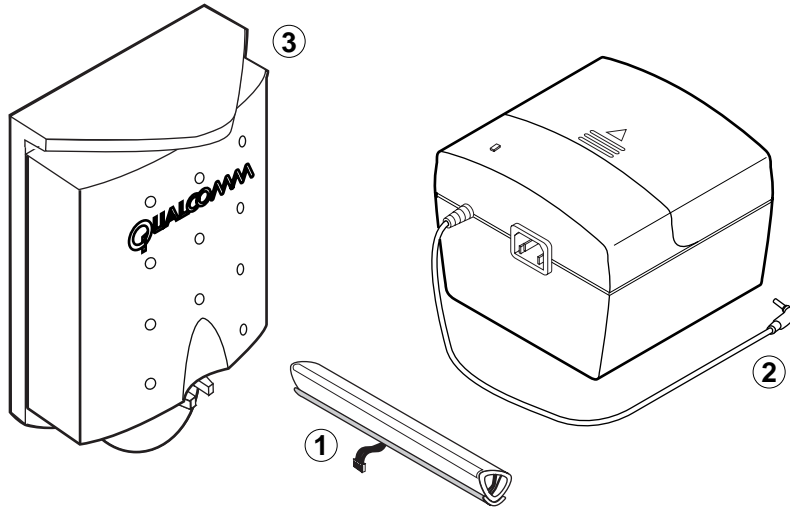

① Internal battery

Provides temporary backup power in the event of a power outage for up to 1 hour talk time and 8 hours standby.

② Battery Backed Power Supply (BBPS)

Provides temporary backup power in the event of a power outage for up to 6 hours talk time and 48 hours standby.

③ Indoor panel antenna

Improves transmission and reception. Use it in areas with marginal coverage.

NOTE

Use only QUALCOMM-authorized accessories. Use of any other accessories could void your warranty for this equipment. See page 21 for instructions on how to connect the internal battery, the indoor panel antenna, and the BBPS.

USES OF YOUR NIU

Connecting equipment directly to the NIU

You can connect devices directly to the NIU, through existing premises telephone wiring, or with jacks to equipment in other rooms. The NIU has two telephone jacks to connect multiple touchtone telephones approved for home use. Multiple devices (touchtone telephones, fax machine, etc.) can be connected, to a maximum sum of 5 REN B. Check the REN rating of your equipment to determine how many devices you can connect. The REN rating is typically located on the bottom of the phone or other device.


NOTE

The NIU does not support calls from a rotary or pulse dialing telephone. Refer to your touchtone telephone's user guide to set it to "tone" instead of "pulse."

Before connecting any fax or modem devices to the NIU, check with your service provider to be sure that these services are available.

Connecting a single phone

1. Remove the connector panel cover on the NIU by pressing down on the arrows and sliding the cover away from the unit.
2. Plug a touchtone phone connector into one of the telephone jacks on the NIU. Plug the other end of the connector into your touchtone telephone.

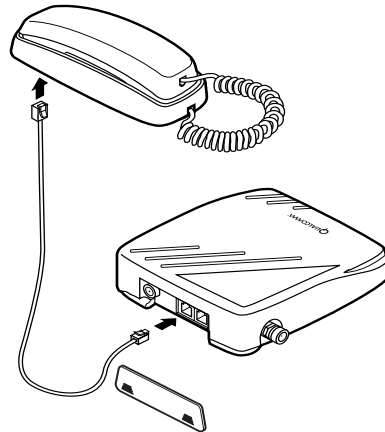


Connecting additional telephone devices

You can connect several telephone devices directly to the NIU.


NOTE

For best performance the NIU should be at least 1.3 meters (4 feet) away from any connected device.

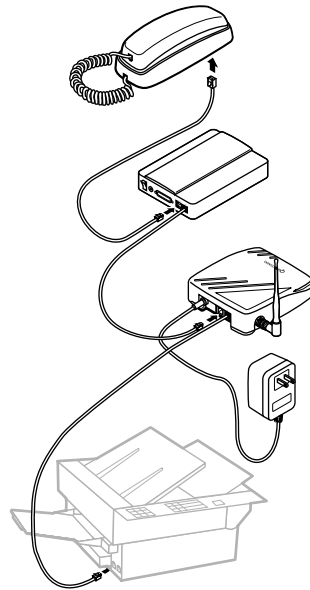


Connecting devices in other rooms

The NIU is designed to operate several devices throughout a home prewired for telephones (see caution below). Connect it to a telephone jack that is wired to telephone jacks in other rooms.

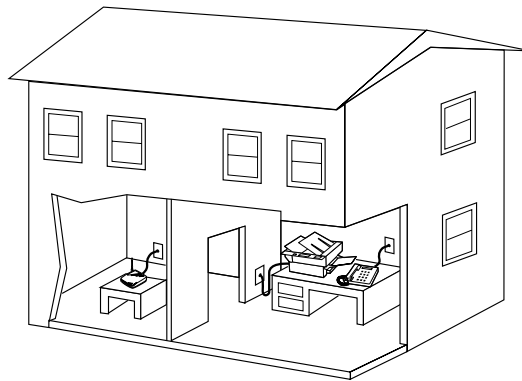

CAUTION

Do NOT connect the NIU to a live wireline phone jack. Damage could result. If you have standard wireline phone service (a physical phone line connection to your telephone company), contact a professional telephone installer for assistance before connecting the NIU to a telephone jack on the wall.

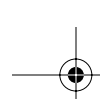

USING BASIC FEATURES

Speed dialing, setting a hotline number, and setting alarms are some of the basic features of the NIU.

Making a call

To make a call using a touchtone telephone connected to your NIU:

1. Lift the telephone handset.
2. Listen for the dial tone. (If you don't hear a dial tone, see "Troubleshooting" on page 24.)
3. Press the appropriate numbers on the telephone keypad to dial the desired phone number.

NOTE

When making an international call, you can accelerate the connection by pressing the # (pound) key after dialing the number (see page 16).

Speed dialing

The NIU can store up to 20 of your most frequently dialed phone numbers. Each stored phone number can contain up to 32 key presses.

Storing a speed-dial number

► Dial on your touchtone telephone:

<speed dial location> <phone number>


<speed dial location> = 1 through 20 for stored phone numbers
(Programming speed dial locations 1 through 9 requires a leading zero; that is, 01 through 09.)

<phone number> = phone number you want to store

You will hear a confirmation tone, and the dial tone will resume.

EXAMPLE

To store the local phone number 555-1212 in location 1 on your speed dialer, dial #10 01 555 1212#

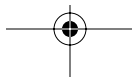


NOTE

Long distance calls require both 1 and the area code, except in areas where ten-digit dialing is available.

Dialing a speed-dial number

► Dial on your touchtone telephone:

<speed dial> 





<speed dial> = 1 through 20 for phone numbers stored. No leading zero is necessary for dialing single-digit codes.

EXAMPLE

*To speed dial the phone number that you stored, 555-1212, dial 1 **

Canceling a speed-dial number

► Dial on your touchtone telephone:

   <speed dial location> 

<speed dial location> = 1 through 20 for stored phone numbers (Erasing speed dial locations 1 through 9 requires a leading zero; that is, 01 through 09.)

You will hear a confirmation tone, and the dial tone will resume.

EXAMPLE

To erase the phone number 555-1212 that you stored in your speed dialer dial #10 01#

Hotline phone number

The hotline feature on the NIU allows you to set up a special hotline phone number. This number will be dialed automatically when the handset has been lifted from your telephone and no dialing has occurred for approximately 8 seconds.

NOTE

When using the hotline feature, do not take the handset off-hook to avoid receiving calls.

Storing a hotline number

- Dial on your touchtone telephone:

2 0 <phone number> **#**

<phone number> = the hotline phone number that you want stored

You will hear a confirmation tone, and the dial tone will resume.

EXAMPLE

*To program the local phone number 555-1212 as a hotline number, dial:
#20 555 1212 #*

Canceling the stored hotline number

- Dial on your touchtone telephone:

2 0 0

You will hear a confirmation tone, and the dial tone will resume.

User-programmable alarms

With the NIU you can set from one to six occasional alarms to sound within a 24-hour period. One standing alarm can also be set to ring for one minute at the same time every day.

Occasional alarms

An occasional alarm is a one-time setting. It causes the telephone to ring for one minute at the designated time and is automatically canceled when it is answered.

Setting an occasional alarm

- Dial on your touchtone telephone:

1 6 <hhmm> **#**

<hhmm> = desired time in hours and minutes based on a 24-hour clock format. For example, 11:24 p.m. would be 2324 and 11:24 a.m. would be 1124.

You will hear a confirmation tone, and the dial tone will resume.

EXAMPLE

To program an occasional alarm to go off at 8:30 a.m. dial #16 0830#

Canceling an occasional alarm

- Dial on your touchtone telephone:

1 7 <hhmm> **#**

You will hear a confirmation tone, and the dial tone will resume.

EXAMPLE

To cancel an occasional alarm programmed to go off at 8:30 a.m. dial #17 0830#

Canceling all occasional alarms

- Dial on your touchtone telephone:

1 8 0

You will hear a confirmation tone, and the dial tone will resume.

Standing alarms

The standing alarm is a recurring alarm that will cause the phone to ring for one minute at the same time every day. If the alarm sounds for a full minute and no one stops it, it will ring again five minutes later. To stop the ringing, momentarily lift the telephone handset. If you are on a call, the alarm will automatically be rescheduled to ring five minutes later.

Setting a standing alarm

- Dial on your touchtone telephone:

1 9 <hhmm> **#**

<hhmm> = desired time in hours and minutes based on a 24-hour clock format. For example, 11:24 p.m. would be 2324 and 11:24 a.m. would be 1124.

You will hear a confirmation tone, and the dial tone will resume.

EXAMPLE


To set a standing alarm for 10:15 p.m. dial: #19 2215#

Canceling a standing alarm

- Dial on your touchtone telephone:

1 9 0

You will hear a confirmation tone, and the dial tone will resume.

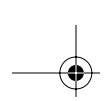

USING NETWORK SERVICES

The NIU supports call forwarding, call waiting, 3-way calling, voice mail, and data and fax services. You can use these features if they are offered by your service provider.

Call forwarding

The NIU is configured to support the following call forwarding features:

- Call Forwarding Unconditional (CFU) allows you to automatically reroute all incoming calls to a different number.
- Call Forwarding Busy (CFB) allows you to automatically reroute calls to a different number when you are in the middle of a call.
- Call Forwarding No Answer (CFNA) allows you to automatically reroute calls to a different number when you do not answer the phone.

NOTE

Call forwarding features are service provider-dependent. Check with your service provider for more information.

Call waiting

The NIU supports call waiting. Call waiting allows you to receive an incoming call without terminating a previous call that is still in progress.

- To put the first call on hold while answering the second call, momentarily press the hook switch or the flash key.
- To return to the first call, press the hook switch or flash key again.


Repeat this action to continue switching between calls.


NOTE

Pressing the hook switch momentarily (for less than 1.5 seconds) will activate this feature. Pressing it for more than 1.5 seconds will terminate the call. Very briefly pressing the hook switch will have no effect.

Three-way calling

The NIU supports three-way calling. This feature allows you to initiate a second call without terminating the one in progress, and to bring both calls together after the second call is established.

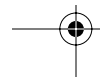

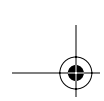

Initiating a three-way call

1. Momentarily press the hook switch or flash key on the telephone while in a two-way phone conversation.
2. When you hear the dial tone, dial the telephone number of the third party you wish to add.
3. When the connection is made with the third party, momentarily press the hook switch or flash key again to add the first party back into the conversation.

Ending a three-way call

- To end the three-way calling session and return to your original two-way call, simply press the hook switch again.
- To end the two-way or three-way calling session completely, simply place the handset on the hook switch.

NOTE

Pressing the hook switch momentarily (for less than 1.5 seconds) will activate this feature. Pressing it for more than 1.5 seconds will terminate the call. Very briefly pressing the hook switch will have no effect.



Voice mail

The NIU supports standard voice mail systems offered by your service provider.



A special stutter dial tone will be played if unheard messages are in your voice mail box. To access your voice mail, you must dial the appropriate number and codes given by your service provider, or if supported:

- Dial on your touchtone telephone:



Caller ID

If you have a telephone or display box that supports caller ID display capability, you can use caller ID with your NIU. Caller ID shows you the caller's telephone number after the first ring. The number will not appear if the caller has blocked delivery of the number, or if it is otherwise restricted.

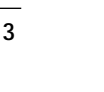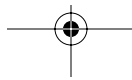

Data features

Making and receiving a data call is similar to the procedure for voice calls. As with all other network services, this data feature requires service provider support. Before you make a data call, you should have the required equipment and refer to your modem manual for optimal settings for your communication software.


Connecting data equipment

To use the data features, you must have the following equipment:

- Computer, with internal or external data modem (V. series or Bell protocol)
- Communication software or terminal program
- RJ-11 telephone cable

Connect the equipment as follows:

- ① Follow your modem instructions for correct installation of modem hardware and software.
- ② Connect one end of the telephone cable to the telephone jack labeled "line" on your modem. Connect the other end to a telephone jack on the back of your NIU.
- ③ (Optional) Connect the touchtone telephone to the modem.
- ④ Connect the AC adaptor to the NIU and plug it into the wall socket.

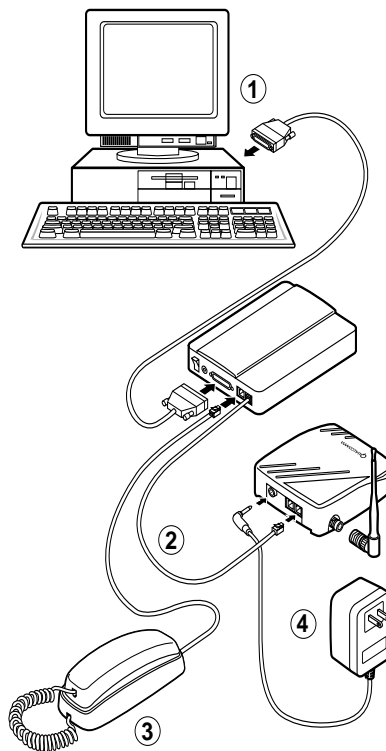

Making a data call

When making a data call, you must precede each data phone number with #3282 (#data) in order to cause the network to treat the call as a data transmission.

Once your modem is connected to the NIU and the communication software is configured on your computer, you are ready to make a data call.

- Open your communication software.
- On your computer, type:

3 2 8 2 <data phone number> **#**

- Start the software application, e-mail package, or web browser you want to use.

NOTE

If you are not able to make a data call, read the Troubleshooting section, page 25.

EXAMPLE

To call the local data phone number 555-1212 dial #3282 555 1212#

Making a fax call

When making a fax call, you must precede your data phone number with #329 (#fax) in order to cause the network to treat the call as a fax transmission.

Once the telephone connector on your fax machine is connected to one of the telephone jacks on the NIU, you are ready to make a fax call.

- On your fax machine, dial:

3 2 9 <fax phone number> **#**

- Send your document.

EXAMPLE

To call the local fax phone number 555-1212 dial #329 555 1212#

Receiving a data call or fax call

In order to receive an incoming data or fax call, you must first have the capability established on the NIU by your service provider. There are various options for classifying incoming calls as data, fax, or voice. These options include multiple stage dialing, alternate phone number dialing, prearrangement, and others. Your service provider may offer one of these.

Setting NIU prearrangement for incoming data or fax calls

This section is applicable only if your service provider supports prearrangement. Prearrangement establishes the desired classification of service with the network service provider for either the next call or all incoming calls until deactivated. To set the phone for prearrangement:

- Use either your computer's communication software or your touchtone telephone to dial:

8 2 3 <setting> **#**

There are five settings: 0, 1, 2, 3, and 4.


- 0 Receive only voice calls (This is the default setting.)
- 1 Receive incoming fax calls for 10 minutes
- 2 Receive only fax calls
- 3 Receive incoming data calls for 10 minutes
- 4 Receive only data calls

NOTE

*If the phone is set to receive only fax or data calls, you must reset the NIU to **#823 0#** to receive voice calls. If settings 1 or 3 above are selected, the NIU will revert to receiving only voice calls after 10 minutes.*

EXAMPLE

*To set the phone for prearrangement to receive a fax within the next 10 minutes, dial **#823 1 #***

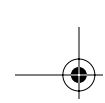

USING ADVANCED FEATURES

Customizing features

The following features enable you to change certain parameters that affect the standard settings of your touchtone telephone or NIU.

Adjusting earpiece volume

To adjust the volume level of the earpiece in the attached touchtone telephone devices:

- Lift the handset. Dial on your touchtone telephone:

9 1 9 1 <level> **#**

<level> = 1 (low) through 4 (high) (2 is the default)

NOTE

Level 2 is preferred for compatibility with devices connected to the NIU.

Adjusting send time

The NIU is programmed to initiate calls to "standard" telephone numbers immediately. The standard for your region's dialing scenario will be preset by your service provider. If certain types of calls, such as international calls, take longer than desired to connect, you can either press # at the end of your dialing string for immediate call initiation or you can adjust the NIU's send time for nonstandard calls. Changing the send time in this way should not affect calls within your region's dialing scenario.

- Lift the handset. Dial on your touchtone telephone:

9 1 9 4 <seconds> **#**


<seconds> = 4 through 9 (10 seconds is the default—set by dialing 0)


Checking signal strength

To check the network signal strength in the location of the NIU antenna:

- Lift the handset. Dial on your touchtone telephone:

9 1 9 5 1

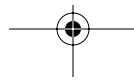

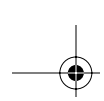

When you check the signal strength, a beeping indicates service. Faster beeping indicates greater signal strength. The phone will not beep if the signal strength is below a usable level.

Replace the handset to end the signal strength check.

Resetting defaults

To cancel the settings for the above customizing features and return them all to their default settings:

► Lift the handset. Dial on your touchtone telephone:

9 1 9 0 0 0 0 0

Call Restriction

Call restriction is an advanced feature that allows you to restrict your phone from making certain types of calls. Trying to make a restricted call will result in a rejection tone, followed by a dial tone.


On the NIU, you may choose a predefined call restriction level, or you may customize the call restriction level. Nine different levels are available.


Call restriction levels

Call restriction levels 0–6 are subject to change and are currently defined as follows for the U.S. market:

- 0 - All calls allowed (default setting)
- 1 - No 1(900)XXX-XXXX or 976-XXXX calls
- 2 - Level 1 plus no international long distance calls (011-XXX...)
- 3 - Level 2 plus no domestic long distance calls (1(XXX)XXX-XXXX and 0(XXX)XXX-XXXX)
- 4 - Level 3 plus no special services (X11, except 911)
- 5 - Level 4 plus no special features (*XX...)
- 6 - No calls except emergency calls (911)

Call restriction levels 7, 8, and 9 can be customized to serve your needs. These enable you to add or remove different types of restrictions, one at a time.

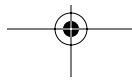

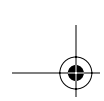

Setting the call restriction password

To control access to the call restriction feature, you must enter a password. Choose any four-digit password that you can remember. This password allows you to change call restrictions or override call-restricted numbers.

- Lift the handset. Dial on your touchtone telephone:

<four-digit password> <same four-digit password>

<four-digit password> = 0 through 9, with no # or *

EXAMPLE

To set **1234** as your password, dial **#23 1234 1234#**

NOTE

When creating or changing this password, you must enter the new four-digit password twice to avoid errors. If an error is made, the touchtone telephone will respond with an error tone, and no password will be saved until the password is set again.

Changing the call restriction password

- Lift the handset. Dial on your touchtone telephone:

<old password> <new password> <new password>

EXAMPLE

To replace the above password with **4321**, dial **#23 1234 4321 4321#**

Setting the call restriction level

Setting a predefined call restriction level

To set a predefined call restriction level, just select the level you need.



- Lift the handset. Dial on your touchtone telephone:


<four-digit password> <level>

level = A call restriction level from 0 through 6

EXAMPLE

To set call restriction level 1 (no 900/976 calls) using password **4321**, dial **#24 4321 1#**

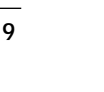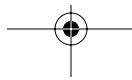

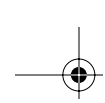

Setting a customizable call restriction level (7–9)

The following custom restriction types can be set in the U.S.

- 1 - No local calls
- 2 - No domestic long distance calls (1-XXX-...)
- 3 - No international calls (011-XXX...)
- 4 - No special features
- 5 - No special services
- 6 - No 900/976 calls
- 7 - No speed dials
- 8 - No 800/888 calls

NOTE

Since long distance calls can be made using the operator or alternate carriers (for example, 10288...dialing), long distance restrictions will also block 0, 00, and 10XXX...calls.

To set a custom call restriction level, first select a level and then assign a call restriction type to it.

- Lift the handset. Dial on your touchtone telephone:

2 4 <four-digit password> <level> **#**

level = A call restriction level from 7 through 9

- Dial on your touchtone telephone:

9 1 9 <level> <password> <type> **#**

<level> = the call restriction level entered above


<type> = restriction type from 1 through 8

EXAMPLE

To set call restriction level 7 to type 3 (no international calls) using password 4321, dial #24 4321 7# then dial #919 7 4321 3#

Canceling a customizable call restriction level (7–9)

To cancel a custom call restriction level that has been set on your NIU, first select the level you want to change and then assign call restriction type 0 to it.

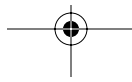

- Lift the handset. Dial on your touchtone telephone:

2 4 <four-digit password> <level> **#**

level = Call restriction level from 7 through 9 that you want to cancel

- Dial on your touchtone telephone:

9 1 9 <level> <password> **0 #**

<level> = the call restriction level entered above

EXAMPLE

To cancel call restriction level 7 using password 4321, dial **#24 4321 7#**
then dial **#919 7 4321 3 0#**

Storing a restriction override number

If you want to call one specific phone number that is blocked by the call restriction level you have set, you can store that phone number as a restriction override number. Once a restriction override number is stored, anyone with a password can speed dial that number, regardless of the level of call restriction in effect.

You can store up to five restriction override numbers in memory locations 21 through 25 on your NIU.


- Lift the handset. Dial on your touchtone telephone:

1 0 <speed dial location> <four-digit password>
<phone number> **#**

<speed dial location> = 21 through 25

Blocked numbers



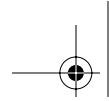

If you want to block calls to one specific phone number, you can store it as a blocked number. Once you have stored a blocked number, the NIU will not dial it, regardless of the level of call restriction in effect. A blocked number can be canceled only by a person who knows the password.



Storing a blocked number

You can store up to five blocked numbers in memory locations 26 through 30 on your NIU.

- Lift the handset. Dial on your touchtone telephone:



   <speed dial location> <password> <phone number> 

<speed dial location> = 26 through 30


Canceling a blocked number

To cancel a blocked number that has been set on your NIU, repeat the above dialing sequence but omit the phone number.

- Lift the handset. Dial on your touchtone telephone:


   <speed dial location> <password> 

<speed dial location> = 26 through 30

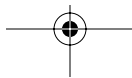

CONNECTING ACCESSORIES

Connecting the internal battery to the NIU

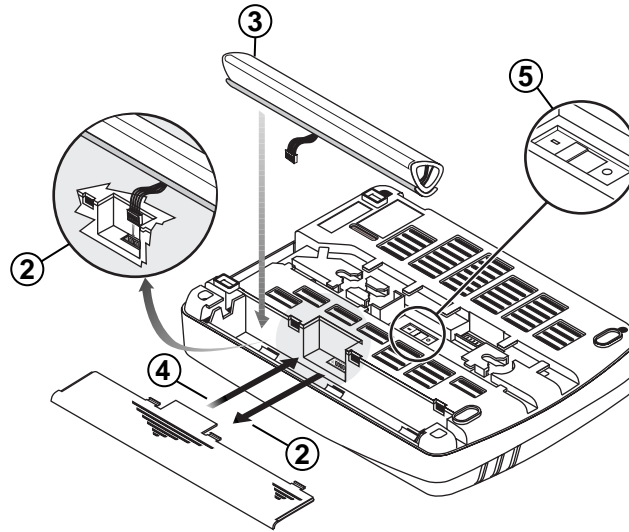


1. Remove the battery compartment cover by pressing down on both arrows and sliding the cover away from the NIU.
2. Line up the connector on the battery with the connector pins in the battery compartment. With your index finger, press the battery connector into place.
3. Place the battery into the compartment, foam side first, making sure that it fits securely.
4. Replace the battery compartment cover. If the cover jams, reorient and try again.
5. Set the on/off switch to the on (I) position to activate automatic internal battery backup.

Connecting the external BBPS to the NIU

NOTE

To assemble the BBPS, refer to the directions in the BBPS package.

1. Attach the BBPS connector to the NIU.
2. Attach the power cord to the BBPS.
3. Plug the power cord into the wall outlet.

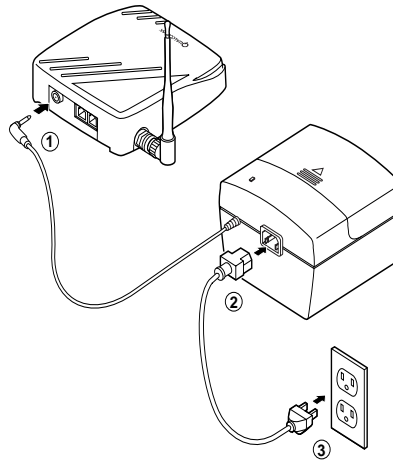

Connecting the panel antenna to the NIU


1. Attach one end of the coaxial cable into the indoor panel antenna.
2. Attach the other end of the coaxial cable to the NIU.
3. Connect the AC adaptor to the NIU.
4. Plug the AC adaptor into the wall outlet.


NOTE

QUALCOMM recommends use of high-quality coaxial cable (maximum cable loss of 3 dB) to avoid degrading signal strength.

Locate the NIU such that its antenna remains at least 20 cm (8 inches) from user.

To test for signal strength, see page 17.

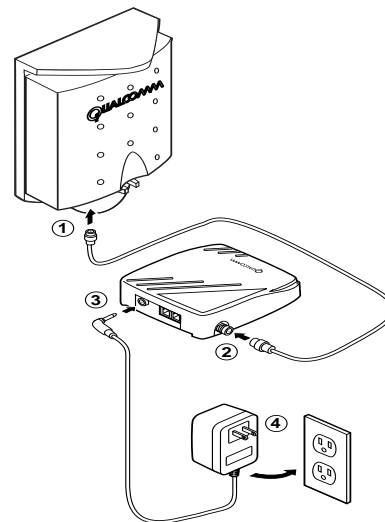

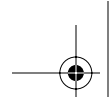

REFERENCES

Specifications

QCT-7000

Air Interface Standard	IS-95-A
Frequency Range	824.01 to 848.97 MHz Transmitter; 869.01 to 893.97 MHz Receiver


QCT-7200

Air Interface Standard	J-STD-008
Frequency Range	1850 to 1910 MHz Transmitter; 1930 to 1990 MHz Receiver

QCT-7000/QCT-7200

Channel	CDMA receiver 1.25 MHz
CDMA Transmit Power	500 mW ERP 800 mW EIRP with optional panel antenna
Vocoders	8k QCELP, 8k EVRC, and 13 kbps (PureVoice™)
Data Transmission Rate	Up to 14.4 kbps
Power Requirements	90 to 264 VAC 47 to 63 Hz
Talk Time	Up to 1 hour with optional internal battery pack Up to 6 hours with optional external battery backup
Standby Time	Up to 8 hours with optional internal battery pack Up to 48 hours with optional external battery backup
Size	L 188 mm x W 145 mm x H 40 mm; 7.4 in. x 5.7 in. x 1.55 in.
Weight	0.45 kg or 1 lb (1.3 lb with internal battery)
Operating Temperature	-22 to 122° F (-30 to +50 °C)
Humidity	0 to 95% non-condensing



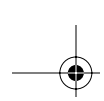


Tested modems

The QCT-7000/QCT-7200 is designed to operate with standard V. series modems, so it is set to support V. series modems by default. However, it can be set to operate with Bell protocol analog modems. To do so, follow the procedure in the Troubleshooting section. The popular data modems listed below have successfully passed QUALCOMM's interoperability testing.



- USR Sportster 28.8k, 33.6k and 56k models
- ZyXEL U-1496E (14.4k)
- Microcom DeskPorte 28.8P
- Diamond SupraExpress 336e
- Cardinal Connecta 33.6
- Global Village Teleport 56k
- Multitech Multimodem ZDX (33.6k)
- Motorola ModemSURFR 56k
- Zoom V.34X
- Maxtech NetPacer 33.6k
- Hayes Accura 33.6




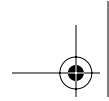

TROUBLESHOOTING

PROBLEM	SOLUTION
No dial tone	<ul style="list-style-type: none">• Verify that the telephone is plugged into the NIU.• Verify that the antenna is connected and not cross-threaded.• Verify that the power cables are properly connected.• Verify that the NIU is receiving a sufficiently strong signal from the service provider. Dial #91951# and adjust the position of the antenna or NIU to maximize the beep rate.• If none of these solutions solve the problem, contact your service provider.
Dialed telephone number does not connect	<ul style="list-style-type: none">• Check the dialed number again for misdialed or incorrect digits.• If there is a rejection tone, the call type is restricted.• If there is a busy tone, the network system may be busy. Wait a few minutes and dial again.
Data call or fax transmission is not successful	<ul style="list-style-type: none">• Verify services are available from your provider.• Recheck your hardware connections and software configuration.<ul style="list-style-type: none">– Is the correct modem port selected?– Is the baud rate set to 19200 or lower?• Was the phone number you dialed a data number?• Did you add #3282 (#DATA) to the data phone number?<ul style="list-style-type: none">– Try to call a known data number.• Did you add #329 (#FAX) to the fax phone number?

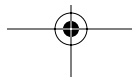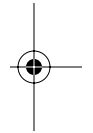

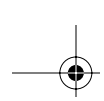

PROBLEM

SOLUTION

Data call or fax transmission is not successful

(continued)

- Try dialing the number from a touchtone telephone without the #3282 prefix. Did you hear a busy signal, voice, or modem tones?
 - If you heard a busy signal, call the number at a later time.
 - If you heard a voice, verify that the number you dialed is correct, or request that a data device (for example, a computer and modem) be turned on at the location you called.
 - If you heard modem tones, verify that your computer's communication software was properly installed and configured.
- Verify that the timeout of your modem hardware is greater than 90 seconds.
 - If the modem hardware timeout is less than 90 seconds, consult your modem user guide and adjust the modem timeout with AT commands.
- Verify that your modem operates with V. series protocol. If it operates with Bell protocol instead of V. series protocol, see "To change to Bell modem protocol" below.

To change to Bell modem protocol

- Pick up the handset of the attached phone, dial #62355 (#MBELL), and return the handset to the cradle. All data calls will use Bell mode.

To return to V. series mode


- Pick up the handset of the attached phone, dial #68737 (#MVSER), and return the handset to the cradle.


Call takes a long time to connect

- Adjust the send time (see page 16).

Unit will not turn off when unplugged

- Set internal battery backup power supply switch to off (O) (see page 21).

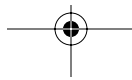

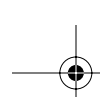

GUIDELINES FOR SAFE AND EFFICIENT USE

Important

Read this information before using your Network Interface Unit (NIU).

Local laws and regulations

Wireless telephones can interfere with their environment, so safety rules and regulations have been created. You should inquire about local regulations, particularly those concerning vehicles and aircraft, when you acquire a wireless telephone. If you wish to use your phone while traveling, you should find out what regulations apply in the state or country you are visiting.

Background



Your telephone is a radio transmitter and receiver. When it is on, it receives and sends out radio frequency (RF) energy. When you use your phone, the system handling your call controls the power level at which your phone transmits.


Exposure to radio frequency energy

In August 1996, the United States Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for wireless devices. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992) American National Standards Institute
- NCRP Report 86 (1986) National Council on Radiation Protection and Measurements
- ICNIRP (1996) International Commission on Non-Ionizing Radiation Protection

The design of your NIU complies with the FCC requirements and those standards.

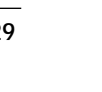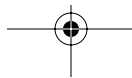

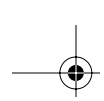

For best performance

To properly operate the phone and maintain safe and satisfactory service, follow these rules.

- Do not hold the NIU antenna at any time, as contact with the antenna affects call quality.
- Do not use the NIU if the antenna is damaged.
- Do not expose the NIU and accessories to rain or liquid spills. If the phone becomes wet, immediately unplug the AC adaptor. If the phone is inoperable after drying, return it to the dealer for service.
- Only authorized personnel should service the NIU and its accessories. Faulty installation or service may be hazardous and may invalidate the warranty.

Antenna care

Use only the antenna supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the NIU and may violate local and government regulations.


Cleaning

Before cleaning your NIU, unplug the AC adaptor. Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.

Electronic devices

Most modern electronic equipment is shielded against RF energy. However, certain electronic equipment may not be shielded against the RF signals from your NIU.



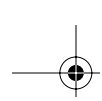

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches (15 cm) be maintained between a wireless device and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

- Always keep the NIU more than six inches (15 cm) from your pacemaker when it is turned on.
- If you have any reason to suspect that interference is taking place, unplug the AC adaptor immediately and set the on/off switch to the off (O) position.

Hearing aids

Digital wireless devices and antennas may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider or call the customer service line to discuss alternatives.

Other medical devices



If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.


Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Unplug the AC adaptor and set the on/off switch to the off (O) position in any facility where posted notices so require.

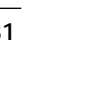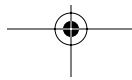

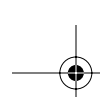

Children

Your NIU is not a toy. Children should not play with it. They could hurt themselves or others or damage the NIU.

Blasting areas

Unplug the AC adaptor and set the on/off switch to the off (O) position when you are in a blasting area or in any area posted "turn off two-way radio." Construction crews often use remote-control RF devices to set off explosives.

Potentially explosive areas


Unplug the AC adaptor, set the on/off switch to the off (O) position, and obey all signs and instructions when you are in an area with a potentially explosive atmosphere. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.


These areas are often, but not always, clearly marked. They include the following.

- Fueling areas such as gas stations
- Below deck on boats
- Fuel or chemical transfer or storage facilities
- Vehicles using liquefied petroleum gas (such as propane or butane)
- Areas where the air contains chemicals or particles, such as grain, dust, or metal powders
- Any other area where you would normally be advised to turn off your vehicle engine

Standards

Your wireless service provider may ask you for the Universal Service Order Code (USOC), which is xxxx. Be certain of the number of devices you may connect to your line, as determined by the REN. The REN is useful in determining the quantity of devices that you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most but not all areas, the sum of the REN ratings of all devices connected to one line should not exceed five (5.0).

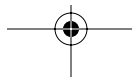

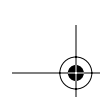





Customer Service


Your service provider's Customer Support representative should be able to answer all of your questions. If the service provider cannot assist you, please call the QUALCOMM Product Support hotline at 619-651-4028 (outside USA) or 1-888-236-2746 (in USA and Canada) with any questions. Our mailing address is:

QUALCOMM Technical Support
QUALCOMM Incorporated
6455 Lusk Blvd., San Diego, CA 92121-2779 USA

You may also reach us via the Internet at the following address.
<http://www.qualcomm.com>

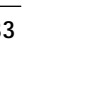

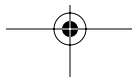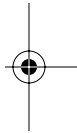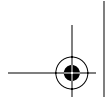



Index

A

AC adaptor 2
accessories vi
adjusting earpiece volume 17
alarms
 occasional 10
 standing 11
antenna iii, 2, 3, 5, 24, 27, 30

B

battery v, 5, 23
battery backed power supply
 (BBPS) 5, 24
blasting areas 32
blocked numbers 21

C

call forwarding 12
call restriction 18, 27
call waiting 12
caller ID 13
connecting accessories 23
connecting equipment 6
custom calling options 1, 12
customer service 33

D

data calls 14, 27
default settings 18

F

fax calls 15, 27

H

hearing aids 31
hotline feature 9

M

making a call 8
modems 26, 28
motor vehicles 31

O

on/off switch 4, 23, 31, 32
optional equipment 5

P

pacemakers 31
password 19
potentially explosive areas 32
power light 3
power source iii

R


regulations 29
REN rating 6, 32
resetting defaults 18
restriction override number 21
RF energy 30
RF exposure 29


S

safety precautions v, 29
send time 17, 28
signal strength 18, 27
specifications 25
speed dialing 8
switch 4, 23, 28

T

three-way calling 12
troubleshooting 27



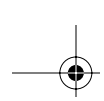

V

voice mail 13
volume level 17

W

wall mounting 4

